

Telematics SDK

Interface Specification

v1.46.14

80-PF458-2 Rev. H

September 8, 2022

All Qualcomm products mentioned herein are products of Qualcomm Technologies, Inc. and/or its subsidiaries.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. Other product and brand names may be trademarks or registered trademarks of their respective owners.

This technical data may be subject to U.S. and international export, re-export, or transfer ("export") laws. Diversion contrary to U.S. and international law is strictly prohibited.

Qualcomm Technologies, Inc.
5775 Morehouse Drive
San Diego, CA 92121
U.S.A.

Revision History

| Date | Description |
|----------|--|
| Sep 2017 | Initial release |
| Dec 2017 | Added subscription APIs and section on Versioning and API Status |
| Jun 2018 | Added Cellular Connection Management APIs |
| Oct 2018 | Addition of Network Selection and Serving System Management APIs and call flows |
| Nov 2018 | Addition of C-V2X APIs |
| Jan 2019 | Addition of Audio APIs and call flows |
| Mar 2019 | Addition of Thermal manager APIs and call flows |
| May 2019 | Addition of TCU Activity Management APIs and call flows |
| Jun 2019 | Addition of Audio APIs for play, capture, DTMF and related call flows |
| Jul 2019 | Updated the Location APIs and call flows |
| Jul 2019 | Addition of Thermal shutdown manager APIs and call flows |
| Sep 2019 | Addition of Remote SIM APIs and call flows |
| Sep 2019 | Addition of Audio APIs for Loopback, Tone Generator and related call flows |
| Sep 2019 | Addition of Audio APIs for compressed audio format playback and related call flows |
| Sep 2019 | Addition of modem config APIs and related call flows |
| Oct 2019 | Addition of Data Filter APIs and call flows |
| Oct 2019 | Addition of Location concurrent report APIs and call flows |
| Oct 2019 | Addition of Location constraint time uncertainty APIs and call flows |
| Nov 2019 | Addition of Audio Format Transcoding APIs and call flows |
| Nov 2019 | Addition of Data Networking APIs and call flows |
| Nov 2019 | Addition of Compressed audio format playback on voice paths APIs and call flows |
| Jan 2020 | Addition of Data software bridge management APIs and call flows |
| Jan 2020 | Addition of Socks Proxy to Data Networking APIs and call flows |
| Feb 2020 | Addition of Location Configurator APIs and call flows |
| Mar 2020 | Addition of Robust Location API in Location Configurator and call flows |
| Apr 2020 | Addition of Security section with SE-linux interface documentation |
| May 2020 | Addition of L2TP to Data Networking APIs and call flows |
| May 2020 | Addition of Public Logging API |
| Aug 2020 | Addition of Location Manager APIs, Location Configurator APIs and callflows |
| Nov 2020 | Addition of cv2x SE-linux interface documentation |
| Nov 2020 | Addition of Year of hardware and configure engine state APIs in location and callflows |
| Jan 2021 | Addition of terrestrial positioning APIs and callflows in location SDK |
| Jan 2021 | Addition of Audio Subsystem Restart Support |
| Feb 2021 | Addition of configure NMEA types in location SDK |
| Jan 2021 | Updated Data Subsystem Readiness flow for new methodology |
| Feb 2021 | Addition of new sub system Readiness APIs for Audio. |
| Mar 2021 | Addition of calibration init status API for audio. |
| Apr 2021 | Addition of Serving System Manager APIs for data. |
| Apr 2021 | Addition of documentation for sensor subsystem. |
| Jun 2021 | Addition of documentation for platform subsystem. |
| Aug 2021 | Added further EFS API related information for platform sub-system. |
| Dec 2021 | Addition of documentation for ECALL and OTA operation APIs |
| Mar 2022 | Addition of documentation for Call flow of control filesystem for ECALL operation |

Contents

| | | |
|----------|---|-----------|
| 1 | Introduction | 5 |
| 1.1 | Purpose | 5 |
| 1.2 | Scope | 5 |
| 1.3 | Conventions | 5 |
| 1.4 | SDK Versioning | 5 |
| 1.5 | Public API Status | 6 |
| 2 | Functional Overview | 7 |
| 2.1 | Overview | 7 |
| 2.2 | Features | 9 |
| 2.2.1 | Call Management | 9 |
| 2.2.2 | SMS | 9 |
| 2.2.3 | SIM Card Services | 10 |
| 2.2.4 | Phone Information | 10 |
| 2.2.5 | Location Services | 10 |
| 2.2.6 | Data Services | 11 |
| 2.2.7 | Network Selection and Serving System Management | 12 |
| 2.2.8 | C-V2X | 13 |
| 2.2.9 | Audio | 13 |
| 2.2.10 | Thermal Management | 16 |
| 2.2.11 | Thermal Shutdown Management | 16 |
| 2.2.12 | TCU Activity Management | 16 |
| 2.2.13 | Remote SIM | 16 |
| 2.2.14 | Modem Config Management | 17 |
| 2.2.15 | Sensors | 17 |
| 2.2.16 | Platform | 17 |
| 2.2.17 | Debug Logger | 18 |
| 2.3 | Security | 18 |
| 2.3.1 | SELinux | 18 |
| 3 | Call Flow Diagrams | 20 |
| 3.1 | Application initialization call flow | 20 |
| 3.1.1 | Phone manager initialization | 20 |
| 3.2 | Telephony | 21 |
| 3.2.1 | Dial call flow | 21 |
| 3.2.2 | ECall call flow | 22 |
| 3.2.3 | Signal strength call flow | 24 |
| 3.2.4 | Answer, Reject, RejectWithSMS call flow | 25 |
| 3.2.5 | Hold call flow | 26 |

| | | |
|---------|--|----|
| 3.2.6 | Hold, Conference, Swap call flow | 27 |
| 3.2.7 | SMS call flow | 29 |
| 3.2.8 | Radio and Service state call flow | 30 |
| 3.2.9 | Network Selection Manager call flow | 31 |
| 3.2.10 | Serving System Manager Call Flow | 33 |
| 3.3 | Card Services | 34 |
| 3.3.1 | Get applications call flow | 35 |
| 3.3.2 | Transmit APDU call flow | 36 |
| 3.3.2.1 | On logical channel | 36 |
| 3.3.2.2 | On basic channel | 37 |
| 3.3.3 | SAP card manager call flow | 37 |
| 3.3.3.1 | Request card reader status, Request ATR, Transmit APDU call flow | 38 |
| 3.3.3.2 | SIM Turn off, Turn on and Reset call flow | 40 |
| 3.3.4 | Subscription Call flow | 41 |
| 3.3.4.1 | Subscription initialization | 42 |
| 3.3.4.2 | Subscription call flow | 43 |
| 3.4 | Call flow for location services | 44 |
| 3.4.1 | Call flow to register/remove listener for generating basic reports | 44 |
| 3.4.2 | Call flow to register/remove listener for generating detailed reports | 46 |
| 3.4.3 | Call flow to register/remove listener for generating detailed engine reports | 48 |
| 3.4.4 | Call flow to register/remove listener for system info updates | 49 |
| 3.4.5 | Call flow to request energy consumed information | 50 |
| 3.4.6 | Call flow to get year of hardware information | 51 |
| 3.4.7 | Call flow to get terrestrial positioning information | 51 |
| 3.4.8 | Call flow to cancel terrestrial positioning information | 52 |
| 3.4.9 | Call flow to enable/disable constraint time uncertainty | 52 |
| 3.4.10 | Call flow to enable/disable PACE | 53 |
| 3.4.11 | Call flow to delete all aiding data | 53 |
| 3.4.12 | Call flow to configure lever arm parameters | 54 |
| 3.4.13 | Call flow to configure blacklisted constellations | 54 |
| 3.4.14 | Call flow to configure robust location | 55 |
| 3.4.15 | Call flow to configure min gps week | 55 |
| 3.4.16 | Call flow to request min gps week | 56 |
| 3.4.17 | Call flow to delete specified data | 56 |
| 3.4.18 | Call flow to configure min sv elevation | 57 |
| 3.4.19 | Call flow to request min sv elevation | 57 |
| 3.4.20 | Call flow to request robust location | 58 |
| 3.4.21 | Call flow to configure dead reckoning engine | 58 |
| 3.4.22 | Call flow to configure secondary band | 59 |
| 3.4.23 | Call flow to request secondary band | 59 |
| 3.4.24 | Call flow to configure engine state | 60 |
| 3.4.25 | Call flow to provide user consent for terrestrial positioning | 60 |
| 3.4.26 | Call flow to configure NMEA sentence type | 61 |
| 3.5 | Data Services | 61 |
| 3.5.1 | Start/Stop for data connection manager call flow | 62 |
| 3.5.2 | Request data profile list call flow | 64 |
| 3.5.3 | Data Serving System Manager Call Flow | 65 |
| 3.5.3.1 | Get Dedicated Radio Bearer Call Flow | 65 |
| 3.5.3.2 | Request Service Status Call Flow | 66 |

| | | | |
|-------|----------|---|-----|
| | 3.5.3.3 | Request Roaming Status Call Flow | 67 |
| 3.5.4 | | Data Filter Manager Call Flow | 67 |
| | 3.5.4.1 | Call flow to Set/Get data filter mode | 68 |
| | 3.5.4.2 | Call flow to Add data restrict filter | 69 |
| | 3.5.4.3 | Call flow to Remove data restrict filter | 70 |
| 3.5.5 | | Data Networking Call Flow | 71 |
| | 3.5.5.1 | Create VLAN and Bind it to PDN in data vlan manager call flow | 72 |
| | 3.5.5.2 | LAN-LAN VLAN Configuration from EAP usecase call flow | 73 |
| | 3.5.5.3 | LAN-LAN VLAN Configuration from A7 usecase call flow | 75 |
| | 3.5.5.4 | LAN-WAN VLAN Configuration from EAP usecase call flow | 76 |
| | 3.5.5.5 | LAN-WAN VLAN Configuration from A7 usecase call flow | 79 |
| | 3.5.5.6 | Create Static NAT entry in data Static NAT manager call flow | 81 |
| | 3.5.5.7 | Firewall Enablement in data Firewall manager call flow | 82 |
| | 3.5.5.8 | Add Firewall Entry in data Firewall manager call flow | 83 |
| | 3.5.5.9 | Set Firewall DMZ in data Firewall manager call flow | 84 |
| | 3.5.5.10 | Socks Enablement in data Socks manager call flow | 85 |
| | 3.5.5.11 | L2TP Enablement and Configuration in data L2TP manager call flow | 87 |
| | 3.5.5.12 | Call flow to add and enable software bridge | 89 |
| | 3.5.5.13 | Call flow to remove and disable software bridge | 90 |
| 3.6 | | C-V2X | 91 |
| | 3.6.1 | Retrieve/Update C-V2X configuration | 92 |
| | 3.6.2 | C-V2X radio manager initialization | 93 |
| | 3.6.3 | Get C-V2X status | 94 |
| | 3.6.4 | Start/Stop C-V2X Mode | 95 |
| | 3.6.5 | C-V2X radio Initialization | 96 |
| | 3.6.6 | C-V2X radio RX subscription | 97 |
| | 3.6.7 | C-V2X radio TX event flow | 98 |
| | 3.6.8 | C-V2X radio TX SPS flow | 99 |
| | 3.6.9 | C-V2X Throttle Manager Filer rate adjustment notification flow | 100 |
| | 3.6.10 | C-V2X Throttle Manager set verification load flow | 101 |
| 3.7 | | Audio | 101 |
| | 3.7.1 | Audio Manager API call flow | 102 |
| | 3.7.2 | Audio Voice Call Start/Stop call flow | 104 |
| | 3.7.3 | Audio Voice Call Device Switch call flow | 106 |
| | 3.7.4 | Audio Voice Call Volume/Mute control call flow | 108 |
| | 3.7.5 | Call flow to play DTMF tone | 111 |
| | 3.7.6 | Call flow to detect DTMF tones | 113 |
| | 3.7.7 | Audio Playback call flow | 115 |
| | 3.7.8 | Audio Capture call flow | 117 |
| | 3.7.9 | Audio Tone Generator call flow | 119 |
| | 3.7.10 | Audio Loopback call flow | 121 |
| | 3.7.11 | Compressed audio format playback call flow | 123 |
| | 3.7.12 | Audio Transcoding Operation Callflow | 125 |
| | 3.7.13 | Compressed audio format playback on Voice Paths Callflow | 127 |
| | 3.7.14 | Audio Subsystem Restart Callflow | 129 |
| | 3.7.15 | Audio calibration configuration status | 130 |
| 3.8 | | Thermal manager call flow | 131 |
| 3.9 | | Thermal shutdown management | 131 |
| | 3.9.1 | Call flow to register/remove listener for Thermal auto-shutdown mode updates. | 132 |

| | | |
|----------|--|------------|
| 3.9.2 | Call flow to set/get the Thermal auto-shutdown mode | 133 |
| 3.9.3 | Call flow to manage thermal auto-shutdown from an eCall application. | 134 |
| 3.10 | TCU Activity Management | 135 |
| 3.10.1 | Call flow to register/remove listener for TCU-activity manager | 136 |
| 3.10.2 | Call flow to set the TCU-activity state in ACTIVE mode | 137 |
| 3.10.3 | Call flow to set the TCU-activity state in PASSIVE mode | 138 |
| 3.11 | Remote SIM call flow | 139 |
| 3.12 | Modem Config Call Flow | 141 |
| 3.12.1 | Call flow to load and activate a modem config file. | 142 |
| 3.12.2 | Call flow to deactivate and delete a modem config file. | 143 |
| 3.12.3 | Call flow to set and get config auto selection mode | 144 |
| 3.13 | Sensor | 145 |
| 3.13.1 | Call flow for sensor sub-system start-up | 146 |
| 3.13.2 | Call flow for sensor data acquisition | 147 |
| 3.13.3 | Call flow for sensor reconfiguration | 148 |
| 3.13.4 | Call flow for sensor sub-system cleanup | 149 |
| 3.13.5 | Call flow for sensor power control | 150 |
| 3.13.6 | Call flow for sensor feature control | 151 |
| 3.14 | Platform | 151 |
| 3.14.1 | Call flow for EFS restore notification registration and handling | 152 |
| 3.14.2 | Call flow of control filesystem for ECALL operation | 154 |
| 3.14.3 | Call flow of control filesystem for OTA operation | 155 |
| 4 | Deprecated List | 157 |
| 5 | Interfaces | 162 |
| 5.1 | Telematics SDK APIs | 162 |
| 5.2 | tel | 163 |
| 5.3 | Phone Factory | 164 |
| 5.3.1 | Data Structure Documentation | 164 |
| 5.3.1.1 | class telux::tel::PhoneFactory | 164 |
| 5.4 | Phone | 170 |
| 5.4.1 | Data Structure Documentation | 170 |
| 5.4.1.1 | class telux::tel::GsmCellIdentity | 170 |
| 5.4.1.2 | class telux::tel::CdmaCellIdentity | 171 |
| 5.4.1.3 | class telux::tel::LteCellIdentity | 173 |
| 5.4.1.4 | class telux::tel::WcdmaCellIdentity | 174 |
| 5.4.1.5 | class telux::tel::TdscdmaCellIdentity | 176 |
| 5.4.1.6 | class telux::tel::Nr5gCellIdentity | 177 |
| 5.4.1.7 | class telux::tel::CellInfo | 179 |
| 5.4.1.8 | class telux::tel::GsmCellInfo | 180 |
| 5.4.1.9 | class telux::tel::CdmaCellInfo | 181 |
| 5.4.1.10 | class telux::tel::LteCellInfo | 182 |
| 5.4.1.11 | class telux::tel::WcdmaCellInfo | 183 |
| 5.4.1.12 | class telux::tel::TdscdmaCellInfo | 184 |
| 5.4.1.13 | class telux::tel::Nr5gCellInfo | 185 |
| 5.4.1.14 | struct telux::tel::ECallMsOptions | 186 |
| 5.4.1.15 | struct telux::tel::ECallMsControlBits | 186 |
| 5.4.1.16 | struct telux::tel::ECallVehicleIdentificationNumber | 186 |
| 5.4.1.17 | struct telux::tel::ECallVehiclePropulsionStorageType | 187 |

| | | |
|----------|---|-----|
| 5.4.1.18 | struct telux::tel::ECallVehicleLocation | 187 |
| 5.4.1.19 | struct telux::tel::ECallVehicleLocationDelta | 187 |
| 5.4.1.20 | struct telux::tel::ECallOptionalPdu | 188 |
| 5.4.1.21 | struct telux::tel::ECallMsdData | 188 |
| 5.4.1.22 | struct telux::tel::ECallModeInfo | 189 |
| 5.4.1.23 | struct telux::tel::ECallHlapTimerStatus | 189 |
| 5.4.1.24 | struct telux::tel::ECallHlapTimerEvents | 189 |
| 5.4.1.25 | class telux::tel::IPhone | 190 |
| 5.4.1.26 | class telux::tel::ISignalStrengthCallback | 194 |
| 5.4.1.27 | class telux::tel::IVoiceServiceStateCallback | 195 |
| 5.4.1.28 | struct telux::tel::SimRatCapability | 195 |
| 5.4.1.29 | struct telux::tel::CellularCapabilityInfo | 196 |
| 5.4.1.30 | class telux::tel::IPhoneListener | 196 |
| 5.4.1.31 | class telux::tel::IPhoneManager | 199 |
| 5.4.1.32 | class telux::tel::ICellularCapabilityCallback | 202 |
| 5.4.1.33 | class telux::tel::IOperatingModeCallback | 203 |
| 5.4.1.34 | class telux::tel::SignalStrength | 204 |
| 5.4.1.35 | class telux::tel::LteSignalStrengthInfo | 206 |
| 5.4.1.36 | class telux::tel::GsmSignalStrengthInfo | 208 |
| 5.4.1.37 | class telux::tel::CdmaSignalStrengthInfo | 209 |
| 5.4.1.38 | class telux::tel::WcdmaSignalStrengthInfo | 211 |
| 5.4.1.39 | class telux::tel::TdscdmaSignalStrengthInfo | 212 |
| 5.4.1.40 | class telux::tel::Nr5gSignalStrengthInfo | 212 |
| 5.4.1.41 | class telux::tel::VoiceServiceInfo | 213 |
| 5.4.2 | Enumeration Type Documentation | 215 |
| 5.4.2.1 | CellType | 215 |
| 5.4.2.2 | ECallVariant | 215 |
| 5.4.2.3 | EmergencyCallType | 215 |
| 5.4.2.4 | ECallMsdTransmissionStatus | 215 |
| 5.4.2.5 | ECallCategory | 216 |
| 5.4.2.6 | ECallVehicleType | 216 |
| 5.4.2.7 | ECallOptionalDataType | 216 |
| 5.4.2.8 | ECallMode | 217 |
| 5.4.2.9 | ECallModeReason | 217 |
| 5.4.2.10 | HlapTimerStatus | 217 |
| 5.4.2.11 | HlapTimerEvent | 217 |
| 5.4.2.12 | RadioState | 217 |
| 5.4.2.13 | ServiceState | 218 |
| 5.4.2.14 | RadioTechnology | 218 |
| 5.4.2.15 | RATCapability | 218 |
| 5.4.2.16 | VoiceServiceTechnology | 219 |
| 5.4.2.17 | OperatingMode | 219 |
| 5.4.2.18 | EcbMode | 219 |
| 5.4.2.19 | SignalStrengthLevel | 219 |
| 5.4.2.20 | VoiceServiceState | 220 |
| 5.4.2.21 | VoiceServiceDenialCause | 220 |
| 5.5 | Call | 222 |
| 5.5.1 | Data Structure Documentation | 222 |
| 5.5.1.1 | class telux::tel::ICall | 222 |
| 5.5.1.2 | class telux::tel::ICallListener | 228 |

| | | | |
|-------|----------|---|-----|
| | 5.5.1.3 | class telux::tel::ICallManager | 231 |
| | 5.5.1.4 | class telux::tel::IMakeCallCallback | 243 |
| 5.5.2 | | Enumeration Type Documentation | 243 |
| | 5.5.2.1 | CallDirection | 244 |
| | 5.5.2.2 | CallState | 244 |
| | 5.5.2.3 | CallEndCause | 244 |
| 5.6 | | SMS | 246 |
| | 5.6.1 | Data Structure Documentation | 246 |
| | 5.6.1.1 | struct telux::tel::MessageAttributes | 246 |
| | 5.6.1.2 | class telux::tel::SmsMessage | 246 |
| | 5.6.1.3 | class telux::tel::ISmsManager | 248 |
| | 5.6.1.4 | class telux::tel::ISmsListener | 251 |
| | 5.6.1.5 | class telux::tel::ISmscAddressCallback | 251 |
| | 5.6.2 | Enumeration Type Documentation | 252 |
| | 5.6.2.1 | SmsEncoding | 252 |
| 5.7 | | SIM Card Services | 253 |
| | 5.7.1 | Data Structure Documentation | 253 |
| | 5.7.1.1 | class telux::tel::ICardApp | 253 |
| | 5.7.1.2 | struct telux::tel::IccResult | 255 |
| | 5.7.1.3 | class telux::tel::ICardManager | 256 |
| | 5.7.1.4 | class telux::tel::ICard | 259 |
| | 5.7.1.5 | class telux::tel::ICardChannelCallback | 263 |
| | 5.7.1.6 | class telux::tel::ICardCommandCallback | 264 |
| | 5.7.1.7 | class telux::tel::ICardListener | 264 |
| | 5.7.1.8 | struct telux::tel::CardReaderStatus | 265 |
| | 5.7.1.9 | class telux::tel::ISapCardManager | 265 |
| | 5.7.1.10 | class telux::tel::IAtrResponseCallback | 271 |
| | 5.7.1.11 | class telux::tel::ISapCardCommandCallback | 271 |
| | 5.7.1.12 | class telux::tel::ICardReaderCallback | 272 |
| | 5.7.1.13 | class telux::tel::ISapCardListener | 272 |
| | 5.7.2 | Enumeration Type Documentation | 273 |
| | 5.7.2.1 | CardState | 273 |
| | 5.7.2.2 | CardError | 273 |
| | 5.7.2.3 | CardLockType | 273 |
| | 5.7.2.4 | AppType | 273 |
| | 5.7.2.5 | AppState | 274 |
| | 5.7.2.6 | SapState | 274 |
| | 5.7.2.7 | SapCondition | 274 |
| 5.8 | | Cell Broadcast | 275 |
| | 5.8.1 | Data Structure Documentation | 275 |
| | 5.8.1.1 | struct telux::tel::CellBroadcastFilter | 275 |
| | 5.8.1.2 | struct telux::tel::Point | 275 |
| | 5.8.1.3 | class telux::tel::Polygon | 275 |
| | 5.8.1.4 | class telux::tel::Circle | 276 |
| | 5.8.1.5 | class telux::tel::Geometry | 277 |
| | 5.8.1.6 | class telux::tel::WarningAreaInfo | 278 |
| | 5.8.1.7 | class telux::tel::EtwsInfo | 279 |
| | 5.8.1.8 | class telux::tel::CmasInfo | 283 |
| | 5.8.1.9 | class telux::tel::CellBroadcastMessage | 286 |
| | 5.8.1.10 | class telux::tel::ICellBroadcastManager | 287 |

| | | |
|----------|---|-----|
| 5.8.1.11 | class telux::tel::ICellBroadcastListener | 291 |
| 5.8.2 | Enumeration Type Documentation | 292 |
| 5.8.2.1 | GeographicalScope | 292 |
| 5.8.2.2 | MessagePriority | 292 |
| 5.8.2.3 | MessageType | 292 |
| 5.8.2.4 | EtwsWarningType | 292 |
| 5.8.2.5 | CmasMessageClass | 292 |
| 5.8.2.6 | CmasSeverity | 293 |
| 5.8.2.7 | CmasUrgency | 293 |
| 5.8.2.8 | CmasCertainty | 293 |
| 5.8.2.9 | GeometryType | 293 |
| 5.9 | IMS Settings | 295 |
| 5.9.1 | Data Structure Documentation | 295 |
| 5.9.1.1 | struct telux::tel::ImsServiceConfig | 295 |
| 5.9.1.2 | class telux::tel::IImSettingsManager | 295 |
| 5.9.1.3 | class telux::tel::IImSettingsListener | 297 |
| 5.9.2 | Enumeration Type Documentation | 299 |
| 5.9.2.1 | ImsServiceConfigType | 299 |
| 5.10 | Multi SIM | 300 |
| 5.10.1 | Data Structure Documentation | 300 |
| 5.10.1.1 | struct telux::tel::SlotStatus | 300 |
| 5.10.1.2 | class telux::tel::IMultiSimManager | 300 |
| 5.10.1.3 | class telux::tel::IMultiSimListener | 303 |
| 5.10.2 | Enumeration Type Documentation | 304 |
| 5.10.2.1 | SlotState | 304 |
| 5.11 | Subscription Management | 305 |
| 5.11.1 | Data Structure Documentation | 305 |
| 5.11.1.1 | class telux::tel::ISubscription | 305 |
| 5.11.1.2 | class telux::tel::ISubscriptionListener | 308 |
| 5.11.1.3 | class telux::tel::ISubscriptionManager | 309 |
| 5.12 | Network Selection | 312 |
| 5.12.1 | Data Structure Documentation | 312 |
| 5.12.1.1 | struct telux::tel::PreferredNetworkInfo | 312 |
| 5.12.1.2 | struct telux::tel::OperatorStatus | 312 |
| 5.12.1.3 | struct telux::tel::NetworkScanInfo | 312 |
| 5.12.1.4 | class telux::tel::INetworkSelectionManager | 312 |
| 5.12.1.5 | class telux::tel::OperatorInfo | 317 |
| 5.12.1.6 | class telux::tel::INetworkSelectionListener | 319 |
| 5.12.2 | Enumeration Type Documentation | 320 |
| 5.12.2.1 | RatType | 320 |
| 5.12.2.2 | NetworkScanStatus | 320 |
| 5.12.2.3 | NetworkSelectionMode | 320 |
| 5.12.2.4 | InUseStatus | 320 |
| 5.12.2.5 | RoamingStatus | 321 |
| 5.12.2.6 | ForbiddenStatus | 321 |
| 5.12.2.7 | PreferredStatus | 321 |
| 5.12.2.8 | NetworkScanType | 321 |
| 5.13 | Serving System | 322 |
| 5.13.1 | Data Structure Documentation | 322 |
| 5.13.1.1 | struct telux::tel::DcStatus | 322 |

| | | | |
|--------|-----------|--|-----|
| | 5.13.1.2 | class telux::tel::IServingSystemManager | 322 |
| | 5.13.1.3 | class telux::tel::IServingSystemListener | 326 |
| 5.13.2 | | Enumeration Type Documentation | 327 |
| | 5.13.2.1 | ServiceDomainPreference | 327 |
| | 5.13.2.2 | RatPrefType | 327 |
| | 5.13.2.3 | EndcAvailability | 327 |
| | 5.13.2.4 | DcnrRestriction | 327 |
| 5.14 | | Remote SIM Provisioning | 329 |
| | 5.14.1 | Data Structure Documentation | 329 |
| | 5.14.1.1 | struct telux::tel::CustomHeader | 329 |
| | 5.14.1.2 | class telux::tel::IHttpTransactionListener | 329 |
| | 5.14.1.3 | class telux::tel::IHttpTransactionManager | 330 |
| | 5.14.1.4 | class telux::tel::SimProfile | 332 |
| | 5.14.1.5 | class telux::tel::ISimProfileListener | 335 |
| | 5.14.1.6 | class telux::tel::ISimProfileManager | 337 |
| | 5.14.2 | Enumeration Type Documentation | 343 |
| | 5.14.2.1 | HttpResult | 343 |
| | 5.14.2.2 | ProfileType | 343 |
| | 5.14.2.3 | IconType | 343 |
| | 5.14.2.4 | ProfileClass | 344 |
| | 5.14.2.5 | DownloadStatus | 344 |
| | 5.14.2.6 | DownloadErrorCause | 344 |
| | 5.14.2.7 | UserConsentReasonType | 344 |
| | 5.14.2.8 | PolicyRuleType | 344 |
| | 5.14.2.9 | ResetOption | 345 |
| 5.15 | | Remote SIM | 346 |
| | 5.15.1 | Data Structure Documentation | 346 |
| | 5.15.1.1 | class telux::tel::IRemoteSimListener | 346 |
| | 5.15.1.2 | class telux::tel::IRemoteSimManager | 347 |
| | 5.15.2 | Enumeration Type Documentation | 352 |
| | 5.15.2.1 | CardErrorCause | 352 |
| 5.16 | | loc | 353 |
| 5.17 | | Location Services | 354 |
| | 5.17.1 | Data Structure Documentation | 354 |
| | 5.17.1.1 | class telux::loc::IDgnssStatusListener | 354 |
| | 5.17.1.2 | class telux::loc::IDgnssManager | 354 |
| | 5.17.1.3 | class telux::loc::ILocationConfigurator | 357 |
| | 5.17.1.4 | struct telux::loc::GnssKinematicsData | 369 |
| | 5.17.1.5 | struct telux::loc::LLAInfo | 370 |
| | 5.17.1.6 | struct telux::loc::TimeInfo | 370 |
| | 5.17.1.7 | struct telux::loc::GlonassTimeInfo | 371 |
| | 5.17.1.8 | union telux::loc::SystemTimeInfo | 371 |
| | 5.17.1.9 | struct telux::loc::SystemTime | 371 |
| | 5.17.1.10 | struct telux::loc::GnssMeasurementInfo | 372 |
| | 5.17.1.11 | struct telux::loc::SvUsedInPosition | 372 |
| | 5.17.1.12 | struct telux::loc::GnssData | 373 |
| | 5.17.1.13 | struct telux::loc::SvBlackListInfo | 373 |
| | 5.17.1.14 | struct telux::loc::LeverArmParams | 374 |
| | 5.17.1.15 | struct telux::loc::GnssMeasurementsData | 374 |
| | 5.17.1.16 | struct telux::loc::GnssMeasurementsClock | 375 |

| | | |
|-----------|--|-----|
| 5.17.1.17 | struct telux::loc::GnssMeasurements | 376 |
| 5.17.1.18 | struct telux::loc::LeapSecondChangeInfo | 376 |
| 5.17.1.19 | struct telux::loc::LeapSecondInfo | 376 |
| 5.17.1.20 | struct telux::loc::LocationSystemInfo | 377 |
| 5.17.1.21 | struct telux::loc::GnssEnergyConsumedInfo | 377 |
| 5.17.1.22 | struct telux::loc::RobustLocationVersion | 377 |
| 5.17.1.23 | struct telux::loc::RobustLocationConfiguration | 378 |
| 5.17.1.24 | struct telux::loc::BodyToSensorMountParams | 378 |
| 5.17.1.25 | struct telux::loc::DREngineConfiguration | 379 |
| 5.17.1.26 | class telux::loc::ILocationInfoBase | 379 |
| 5.17.1.27 | class telux::loc::ILocationInfoEx | 382 |
| 5.17.1.28 | class telux::loc::ISVInfo | 391 |
| 5.17.1.29 | class telux::loc::IGnssSVInfo | 394 |
| 5.17.1.30 | class telux::loc::IGnssSignalInfo | 395 |
| 5.17.1.31 | class telux::loc::LocationFactory | 395 |
| 5.17.1.32 | class telux::loc::ILocationListener | 397 |
| 5.17.1.33 | class telux::loc::ILocationSystemInfoListener | 399 |
| 5.17.1.34 | class telux::loc::ILocationManager | 400 |
| 5.17.2 | Enumeration Type Documentation | 409 |
| 5.17.2.1 | DgnssDataFormat | 409 |
| 5.17.2.2 | DgnssStatus | 409 |
| 5.17.2.3 | HorizontalAccuracyLevel | 410 |
| 5.17.2.4 | LocationReliability | 410 |
| 5.17.2.5 | SbasCorrectionType | 410 |
| 5.17.2.6 | AltitudeType | 411 |
| 5.17.2.7 | GnssConstellationType | 411 |
| 5.17.2.8 | SVHealthStatus | 411 |
| 5.17.2.9 | SVStatus | 411 |
| 5.17.2.10 | SVInfoAvailability | 412 |
| 5.17.2.11 | GnssPositionTechType | 412 |
| 5.17.2.12 | KinematicDataValidityType | 412 |
| 5.17.2.13 | GnssSystem | 413 |
| 5.17.2.14 | GnssTimeValidityType | 413 |
| 5.17.2.15 | GlonassTimeValidity | 413 |
| 5.17.2.16 | GnssSignalType | 413 |
| 5.17.2.17 | LocationTechnologyType | 414 |
| 5.17.2.18 | LocationValidityType | 414 |
| 5.17.2.19 | LocationInfoExValidityType | 415 |
| 5.17.2.20 | GnssDataSignalTypes | 416 |
| 5.17.2.21 | GnssDataValidityType | 416 |
| 5.17.2.22 | DrCalibrationStatusType | 416 |
| 5.17.2.23 | LocReqEngineType | 417 |
| 5.17.2.24 | LocationAggregationType | 417 |
| 5.17.2.25 | PositioningEngineType | 417 |
| 5.17.2.26 | LeverArmType | 417 |
| 5.17.2.27 | GnssMeasurementsDataValidityType | 418 |
| 5.17.2.28 | GnssMeasurementsStateValidityType | 418 |
| 5.17.2.29 | GnssMeasurementsAdrStateValidityType | 419 |
| 5.17.2.30 | GnssMeasurementsMultipathIndicator | 419 |
| 5.17.2.31 | GnssMeasurementsClockValidityType | 419 |

| | | |
|-----------|--|-----|
| 5.17.2.32 | LeapSecondInfoValidityType | 419 |
| 5.17.2.33 | LocationSystemInfoValidityType | 420 |
| 5.17.2.34 | GnssEnergyConsumedInfoValidityType | 420 |
| 5.17.2.35 | AidingDataType | 420 |
| 5.17.2.36 | TerrestrialTechnologyType | 420 |
| 5.17.2.37 | NmeaSentenceType | 420 |
| 5.17.2.38 | RobustLocationConfigType | 421 |
| 5.17.2.39 | DRConfigValidityType | 421 |
| 5.17.2.40 | GnssReportType | 421 |
| 5.17.2.41 | EngineType | 421 |
| 5.17.2.42 | LocationEngineRunState | 422 |
| 5.17.2.43 | ReportStatus | 422 |
| 5.17.3 | Variable Documentation | 422 |
| 5.17.3.1 | UNKNOWN_CARRIER_FREQ | 422 |
| 5.17.3.2 | UNKNOWN_SIGNAL_MASK | 422 |
| 5.17.3.3 | UNKNOWN_TIMESTAMP | 422 |
| 5.17.3.4 | DEFAULT_TUNC_THRESHOLD | 422 |
| 5.17.3.5 | DEFAULT_TUNC_ENERGY_THRESHOLD | 422 |
| 5.17.3.6 | INVALID_ENERGY_CONSUMED | 422 |
| 5.17.3.7 | DEFAULT_GNSS_REPORT | 423 |
| 5.18 | common | 424 |
| 5.18.1 | Data Structure Documentation | 424 |
| 5.18.1.1 | class telux::common::ICommandCallback | 424 |
| 5.18.1.2 | class telux::common::ICommandResponseCallback | 424 |
| 5.18.1.3 | class telux::common::DeviceConfig | 425 |
| 5.18.1.4 | class telux::common::Log | 425 |
| 5.18.1.5 | struct telux::common::SdkVersion | 425 |
| 5.18.1.6 | class telux::common::Version | 425 |
| 5.18.2 | Enumeration Type Documentation | 426 |
| 5.18.2.1 | Status | 426 |
| 5.18.2.2 | ErrorCode | 427 |
| 5.18.2.3 | ServiceStatus | 431 |
| 5.18.2.4 | ProcType | 432 |
| 5.18.2.5 | LogLevel | 432 |
| 5.19 | C APIs | 433 |
| 5.20 | C Common APIs | 434 |
| 5.20.1 | Data Structure Documentation | 434 |
| 5.20.1.1 | struct v2x_api_ver_t | 434 |
| 5.20.2 | Enumeration Type Documentation | 434 |
| 5.20.2.1 | v2x_status_enum_type | 434 |
| 5.21 | C Kinematics APIs | 435 |
| 5.21.1 | Define Documentation | 435 |
| 5.21.1.1 | V2X_KINEMATICS_HANDLE_BAD | 435 |
| 5.21.2 | Data Structure Documentation | 435 |
| 5.21.2.1 | struct v2x_GNSSstatus_t | 435 |
| 5.21.2.2 | struct v2x_gnss_fix_rates_supported_list_t | 436 |
| 5.21.2.3 | struct v2x_init_t | 436 |
| 5.21.2.4 | struct v2x_kinematics_capabilities_t_feature_flags_t | 437 |
| 5.21.2.5 | struct v2x_rates_t | 438 |
| 5.21.2.6 | struct v2x_kinematics_capabilities_t | 438 |

| | | |
|-----------|--|-----|
| 5.21.2.7 | struct v2x_location_fix_t | 439 |
| 5.21.3 | Enumeration Type Documentation | 442 |
| 5.21.3.1 | v2x_fix_mode_t | 442 |
| 5.21.4 | Function Documentation | 442 |
| 5.21.4.1 | v2x_kinematics_api_version(void) | 442 |
| 5.21.4.2 | v2x_kinematics_init(v2x_init_t *param, v2x_kinematics_init_↔ callback_t cb, void *context) | 443 |
| 5.21.4.3 | v2x_kinematics_start_rate_notification(v2x_kinematics_handle_↔ _t handle, v2x_kinematics_rate_notification_listener_t cb, void *context) | 444 |
| 5.21.4.4 | v2x_kinematics_set_rate(v2x_kinematics_handle_t handle, v2x_↔ _rates_t *rate, v2x_kinematics_set_rate_callback_t cb, void *context)445 | 445 |
| 5.21.4.5 | v2x_kinematics_register_listener(v2x_kinematics_handle_t handle, v2x_kinematics_newfix_listener_t listener, void *context) | 446 |
| 5.21.4.6 | v2x_kinematics_deregister_listener(v2x_kinematics_handle_↔ t handle, v2x_kinematics_deregister_callback_t cb, void *context) 447 | 447 |
| 5.21.4.7 | v2x_kinematics_final(v2x_kinematics_handle_t handle, v2x_↔ kinematics_final_callback_t cb, void *context) | 448 |
| 5.21.4.8 | v2x_kinematics_enable_fixes(v2x_kinematics_handle_t handle) 449 | 449 |
| 5.21.4.9 | v2x_kinematics_disable_fixes(v2x_kinematics_handle_t handle) 449 | 449 |
| 5.22 | C Radio APIs | 450 |
| 5.22.1 | Define Documentation | 450 |
| 5.22.1.1 | V2X_RADIO_HANDLE_BAD | 450 |
| 5.22.1.2 | V2X_MAX_RADIO_SESSIONS | 450 |
| 5.22.1.3 | V2X_RX_WILDCARD_PORTNUM | 450 |
| 5.22.1.4 | MAX_POOL_IDS_LIST_LEN | 450 |
| 5.22.1.5 | MAX_MALICIOUS_IDS_LIST_LEN | 450 |
| 5.22.1.6 | MAX_TRUSTED_IDS_LIST_LEN | 450 |
| 5.22.1.7 | MAX_SUBSCRIBE_SIDS_LIST_LEN | 450 |
| 5.22.1.8 | MAX_FILTER_IDS_LIST_LEN | 450 |
| 5.22.1.9 | V2X_MAX_ANTENNAS_SUPPORTED | 450 |
| 5.22.1.10 | V2X_MAX_TX_POOL_NUM | 451 |
| 5.22.1.11 | V2X_MAX_RX_POOL_NUM | 451 |
| 5.22.2 | Data Structure Documentation | 451 |
| 5.22.2.1 | struct v2x_status_info_t | 451 |
| 5.22.2.2 | struct v2x_radio_status_t | 451 |
| 5.22.2.3 | struct v2x_pool_status_t | 451 |
| 5.22.2.4 | struct v2x_radio_status_ex_t | 451 |
| 5.22.2.5 | struct trusted_ue_info_t | 452 |
| 5.22.2.6 | struct tx_pool_id_info_t | 452 |
| 5.22.2.7 | struct v2x_iface_capabilities_t | 453 |
| 5.22.2.8 | struct v2x_tx_bandwidth_reservation_t | 455 |
| 5.22.2.9 | struct v2x_chan_meas_params_t | 456 |
| 5.22.2.10 | struct v2x_chan_measurements_t | 456 |
| 5.22.2.11 | struct v2x_radio_calls_t | 457 |
| 5.22.2.12 | struct v2x_sps_mac_details_t | 460 |
| 5.22.2.13 | struct v2x_per_sps_reservation_calls_t | 461 |
| 5.22.2.14 | struct v2x_tx_flow_info_t | 463 |
| 5.22.2.15 | struct v2x_sock_info_t | 463 |
| 5.22.2.16 | struct v2x_sid_list_t | 464 |

| | | |
|-----------|---|-----|
| 5.22.2.17 | struct v2x_tx_sps_flow_info_t | 464 |
| 5.22.2.18 | struct socket_info_t | 464 |
| 5.22.2.19 | struct src_l2_filter_info_t | 464 |
| 5.22.2.20 | struct v2x_rf_tx_info_t | 465 |
| 5.22.2.21 | struct v2x_tx_status_report_t | 465 |
| 5.22.3 | Enumeration Type Documentation | 465 |
| 5.22.3.1 | v2x_concurrency_sel_t | 465 |
| 5.22.3.2 | v2x_event_t | 466 |
| 5.22.3.3 | v2x_priority_et | 467 |
| 5.22.3.4 | v2x_service_status_t | 467 |
| 5.22.3.5 | v2x_radio_status_type_t | 467 |
| 5.22.3.6 | v2x_radio_cause_type_t | 467 |
| 5.22.3.7 | v2x_auto_retransmit_policy_t | 468 |
| 5.22.3.8 | traffic_ip_type_t | 468 |
| 5.22.3.9 | rf_status_t | 469 |
| 5.22.3.10 | v2x_segment_type_t | 469 |
| 5.22.3.11 | v2x_tx_type_t | 469 |
| 5.22.4 | Function Documentation | 469 |
| 5.22.4.1 | v2x_convert_priority_to_traffic_class(v2x_priority_et priority) | 469 |
| 5.22.4.2 | v2x_convert_traffic_class_to_priority(uint16_t traffic_class) | 471 |
| 5.22.4.3 | v2x_radio_api_version() | 471 |
| 5.22.4.4 | v2x_radio_query_parameters(const char *iface_name, v2x_↔ iface_capabilities_t *caps) | 472 |
| 5.22.4.5 | v2x_radio_deinit(v2x_radio_handle_t handle) | 472 |
| 5.22.4.6 | v2x_radio_rx_sock_create_and_bind(v2x_radio_handle_t han- dle, int *sock, struct sockaddr_in6 *rx_sockaddr) | 473 |
| 5.22.4.7 | v2x_radio_rx_sock_create_and_bind_v2(v2x_radio_handle_↔ t handle, int id_ist_len, uint32_t *id_list, int *sock, struct sockaddr_↔ _in6 *rx_sockaddr) | 474 |
| 5.22.4.8 | v2x_radio_rx_sock_create_and_bind_v3(v2x_radio_handle_↔ t handle, uint16_t port_num, int id_ist_len, uint32_t *id_list, int *sock, struct sockaddr_in6 *rx_sockaddr) | 476 |
| 5.22.4.9 | v2x_radio_enable_rx_meta_data(v2x_radio_handle_t handle, bool enable, int id_list_len, uint32_t *id_list) | 478 |
| 5.22.4.10 | v2x_radio_sock_create_and_bind(v2x_radio_handle_t handle, v2x_tx_sps_flow_info_t *tx_flow_info, v2x_per_sps_reservation_↔ _calls_t *calls, int tx_sps_portnum, int tx_event_portnum, int rx_↔ _portnum, v2x_sid_list_t *rx_id_list, v2x_sock_info_t *tx_sps_↔ _sock, v2x_sock_info_t *tx_event_sock, v2x_sock_info_t *rx_↔ sock) | 478 |
| 5.22.4.11 | v2x_radio_tx_sps_sock_create_and_bind(v2x_radio_handle_t handle, v2x_tx_bandwidth_reservation_t *res, v2x_per_sps_↔ reservation_calls_t *calls, int sps_portnum, int event_portnum, int *sps_sock, struct sockaddr_in6 *sps_sockaddr, int *event_↔ _sock, struct sockaddr_in6 *event_sockaddr) | 481 |
| 5.22.4.12 | v2x_radio_tx_sps_only_create(v2x_radio_handle_t handle, v2x_↔ _tx_bandwidth_reservation_t *res, v2x_per_sps_reservation_↔ calls_t *calls, int sps_portnum, int *sps_sock, struct sockaddr_↔ _in6 *sps_sockaddr) | 483 |

| | | |
|-----------|--|-----|
| 5.22.4.13 | v2x_radio_tx_reservation_change(int *sps_sock, v2x_tx_bandwidth↔ _reservation_t *updated_reservation) | 485 |
| 5.22.4.14 | v2x_radio_tx_event_sock_create_and_bind(const char *interface, int v2x_id, int event_portnum, struct sockaddr_in6 *event_sock↔ _addr, int *sock) | 486 |
| 5.22.4.15 | v2x_radio_start_measurements(v2x_radio_handle_t handle, v2x↔ _chan_meas_params_t *measure_this_way) | 487 |
| 5.22.4.16 | v2x_radio_stop_measurements(v2x_radio_handle_t handle) | 488 |
| 5.22.4.17 | v2x_radio_sock_close(int *sock_fd) | 489 |
| 5.22.4.18 | v2x_radio_set_log_level(int new_level, int use_syslog) | 490 |
| 5.22.4.19 | cv2x_status_poll(uint64_t *status_age_useconds) | 490 |
| 5.22.4.20 | v2x_radio_trigger_l2_update(v2x_radio_handle_t handle) | 491 |
| 5.22.4.21 | v2x_radio_update_trusted_ue_list(unsigned int malicious_list↔ _len, unsigned int malicious_list[MAX_MALICIOUS_IDS_LIST↔ _LEN], unsigned int trusted_list_len, trusted_ue_info_t trusted↔ _list[MAX_TRUSTED_IDS_LIST_LEN]) | 492 |
| 5.22.4.22 | v2x_radio_tx_sps_sock_create_and_bind_v2(v2x_radio_handle↔ _t handle, v2x_tx_sps_flow_info_t *sps_flow_info, v2x_per↔ _sps_reservation_calls_t *calls, int sps_portnum, int event_portnum, int *sps_sock, struct sockaddr_in6 *sps_sockaddr, int *event↔ _sock, struct sockaddr_in6 *event_sockaddr) | 493 |
| 5.22.4.23 | v2x_radio_tx_sps_only_create_v2(v2x_radio_handle_t handle, v2x_tx_sps_flow_info_t *sps_flow_info, v2x_per_sps_reservation↔ _calls_t *calls, int sps_portnum, int *sps_sock, struct sockaddr↔ _in6 *sps_sockaddr) | 495 |
| 5.22.4.24 | v2x_radio_tx_reservation_change_v2(int *sps_sock, v2x_tx↔ _sps_flow_info_t *updated_flow_info) | 497 |
| 5.22.4.25 | v2x_radio_tx_event_flow_info_change(int *sock, v2x_tx_flow↔ _info_t *updated_flow_info) | 498 |
| 5.22.4.26 | start_v2x_mode() | 499 |
| 5.22.4.27 | stop_v2x_mode() | 499 |
| 5.22.4.28 | v2x_radio_init_v2(traffic_ip_type_t ip_type, v2x_concurrency↔ _sel_t mode, v2x_radio_calls_t *callbacks_p, void *ctx_p) | 500 |
| 5.22.4.29 | v2x_radio_init_v3(v2x_concurrency_sel_t mode, v2x_radio↔ _calls_t *callbacks_p, void *ctx_p, v2x_radio_handle_t *ip_handle↔ _p, v2x_radio_handle_t *non_ip_handle_p) | 501 |
| 5.22.4.30 | v2x_radio_tx_event_sock_create_and_bind_v3(traffic_ip_type↔ _t ip_type, int v2x_id, int event_portnum, v2x_tx_flow_info↔ _t *event_flow_info, struct sockaddr_in6 *event_sockaddr, int *sock)↔ | 502 |
| 5.22.4.31 | get_iface_name(traffic_ip_type_t ip_type, char *iface_name, size↔ _t buffer_len) | 503 |
| 5.22.4.32 | v2x_radio_tcp_sock_create_and_bind(v2x_radio_handle_t han↔ _dle, const v2x_tx_flow_info_t *event_info, const socket_info_t *sock_info, int *sock_fd, struct sockaddr_in6 *sockaddr) | 504 |
| 5.22.4.33 | v2x_set_peak_tx_power(int8_t txPower) | 506 |
| 5.22.4.34 | v2x_set_l2_filters(uint32_t list_len, src_l2_filter_info *list_array) | 506 |
| 5.22.4.35 | v2x_remove_l2_filters(uint32_t list_len, uint32_t *l2_id_list) | 506 |
| 5.22.4.36 | v2x_register_tx_status_report_listener(uint16_t port, v2x_tx↔ _status_report_listener callback) | 506 |
| 5.22.4.37 | v2x_deregister_tx_status_report_listener(uint16_t port) | 507 |

| | | | |
|------|--------------------------|---|-----|
| | 5.22.4.38 | v2x_set_global_IPaddr(uint8_t prefix_len, uint8_t *ipv6_addr) . . . | 509 |
| | 5.22.4.39 | v2x_set_ip_routing_info(uint8_t *dest_mac_addr) | 509 |
| | 5.22.4.40 | v2x_get_ext_radio_status(v2x_radio_status_ex_t *status) | 509 |
| | 5.22.4.41 | v2x_register_ext_radio_status_listener(v2x_ext_radio_status↔ _listener callback) | 510 |
| 5.23 | C Vehicle APIs | | 511 |
| | 5.23.1 | Define Documentation | 511 |
| | 5.23.1.1 | V2X_VDATA_HANDLE_BAD | 511 |
| | 5.23.1.2 | V2X_J2735_TRACTION_CONTROL_MAX | 511 |
| | 5.23.1.3 | V2X_TRACTION_CTRL_MAX | 511 |
| | 5.23.1.4 | J2735_ABS_MAX | 511 |
| | 5.23.1.5 | V2X_STABILITY_CONTROL_MAX | 511 |
| | 5.23.1.6 | V2X_AUX_BRAKE_MAX | 511 |
| | 5.23.2 | Data Structure Documentation | 512 |
| | 5.23.2.1 | union v2x_control_status_ut | 512 |
| | 5.23.2.2 | struct v2x_control_status_ut.bits | 512 |
| | 5.23.2.3 | union vehicleEventFlags_ut | 513 |
| | 5.23.2.4 | struct vehicleEventFlags_ut.bits | 514 |
| | 5.23.2.5 | union ExteriorLights_ut | 515 |
| | 5.23.2.6 | struct ExteriorLights_ut.bits | 515 |
| | 5.23.2.7 | struct high_resolution_motion_t | 516 |
| | 5.23.2.8 | struct current_dynamic_vehicle_state_t | 517 |
| | 5.23.2.9 | struct static_vehicle_parameters_t | 517 |
| | 5.23.3 | Enumeration Type Documentation | 519 |
| | 5.23.3.1 | v2x_transmission_state_enum_type | 519 |
| | 5.23.3.2 | v2x_BrakeBoostApplied_enum_type | 519 |
| | 5.23.3.3 | v2x_TractionControlStatus_enum_type | 519 |
| | 5.23.3.4 | v2x_AntiLockBrakeStatus_enum_type | 520 |
| | 5.23.3.5 | v2x_StabilityControlStatus_enum_type | 520 |
| | 5.23.3.6 | v2x_AuxBrakeStatus_enum_type | 520 |
| | 5.23.4 | Function Documentation | 521 |
| | 5.23.4.1 | v2x_vehicle_api_version(void) | 521 |
| | 5.23.4.2 | v2x_vehicle_get_static_params(static_vehicle_parameters_t *parameters)521 | |
| | 5.23.4.3 | v2x_high_res_motion_register_listener(v2x_high_res_motion↔ _listener_t cb) | 522 |
| | 5.23.4.4 | v2x_high_res_motion_deregister_listener(v2x_motion_data ↔ handle_t handle) | 522 |
| | 5.23.4.5 | v2x_vehicle_register_listener(v2x_vehicle_event_listener_t cb, void *context) | 523 |
| | 5.23.4.6 | v2x_vehicle_deregister_for_callback(v2x_vehicle_handle_t han- dle) | 523 |
| 5.24 | C Config APIs | | 524 |
| | 5.24.1 | Data Structure Documentation | 524 |
| | 5.24.1.1 | struct v2x_config_event_info_t | 524 |
| | 5.24.2 | Enumeration Type Documentation | 525 |
| | 5.24.2.1 | v2x_config_soure_t | 525 |
| | 5.24.2.2 | v2x_config_event_t | 525 |
| | 5.24.3 | Function Documentation | 525 |
| | 5.24.3.1 | v2x_register_for_config_change_ind(cv2x_config_event_listener callback) | 525 |

| | | | |
|--------|------------------------------|---|-----|
| | 5.24.3.2 | v2x_update_configuration(const char *config_file_path) | 527 |
| | 5.24.3.3 | v2x_retrieve_configuration(const char *config_file_path) | 528 |
| 5.25 | C Packet APIs | | 529 |
| 5.25.1 | Define Documentation | | 529 |
| | 5.25.1.1 | META_DATA_MASK_SFN | 529 |
| | 5.25.1.2 | META_DATA_MASK_SUB_CHANNEL_INDEX | 529 |
| | 5.25.1.3 | META_DATA_MASK_SUB_CHANNEL_NUM | 529 |
| | 5.25.1.4 | META_DATA_MASK_PRX_RSSI | 529 |
| | 5.25.1.5 | META_DATA_MASK_DRX_RSSI | 529 |
| | 5.25.1.6 | META_DATA_MASK_L2_DEST | 529 |
| | 5.25.1.7 | META_DATA_MASK_SCI_FORMAT1 | 529 |
| | 5.25.1.8 | META_DATA_MASK_DELAY_ESTI | 529 |
| 5.25.2 | Data Structure Documentation | | 529 |
| | 5.25.2.1 | struct rx_packet_meta_data_t | 529 |
| 5.25.3 | Function Documentation | | 530 |
| | 5.25.3.1 | v2x_parse_rx_meta_data(const uint8_t *payload, uint32_t length, rx_packet_meta_data_t *meta_data, size_t *num, size_t *meta_data_len) | 530 |
| 5.26 | CPP APIs | | 531 |
| 5.26.1 | Data Structure Documentation | | 531 |
| | 5.26.1.1 | class telux::cv2x::ICv2xConfigListener | 531 |
| | 5.26.1.2 | class telux::cv2x::ICv2xConfig | 531 |
| | 5.26.1.3 | class telux::cv2x::Cv2xFactory | 534 |
| | 5.26.1.4 | class telux::cv2x::ICv2xRadio | 535 |
| | 5.26.1.5 | class telux::cv2x::ICv2xRadioListener | 547 |
| | 5.26.1.6 | class telux::cv2x::ICv2xRadioManager | 549 |
| | 5.26.1.7 | struct telux::cv2x::SocketInfo | 554 |
| | 5.26.1.8 | struct telux::cv2x::Cv2xStatus | 554 |
| | 5.26.1.9 | struct telux::cv2x::Cv2xPoolStatus | 554 |
| | 5.26.1.10 | struct telux::cv2x::Cv2xStatusEx | 554 |
| | 5.26.1.11 | struct telux::cv2x::TxPoolIdInfo | 555 |
| | 5.26.1.12 | struct telux::cv2x::EventFlowInfo | 555 |
| | 5.26.1.13 | struct telux::cv2x::SpsFlowInfo | 556 |
| | 5.26.1.14 | struct telux::cv2x::Cv2xRadioCapabilities | 557 |
| | 5.26.1.15 | struct telux::cv2x::MacDetails | 558 |
| | 5.26.1.16 | struct telux::cv2x::SpsSchedulingInfo | 558 |
| | 5.26.1.17 | struct telux::cv2x::TrustedUEInfo | 558 |
| | 5.26.1.18 | struct telux::cv2x::TrustedUEInfoList | 559 |
| | 5.26.1.19 | struct telux::cv2x::IPv6Address | 559 |
| | 5.26.1.20 | struct telux::cv2x::DataSessionSettings | 559 |
| | 5.26.1.21 | struct telux::cv2x::ConfigEventInfo | 560 |
| | 5.26.1.22 | struct telux::cv2x::L2FilterInfo | 560 |
| | 5.26.1.23 | struct telux::cv2x::RFTxInfo | 560 |
| | 5.26.1.24 | struct telux::cv2x::TxStatusReport | 561 |
| | 5.26.1.25 | struct telux::cv2x::IPv6AddrType | 561 |
| | 5.26.1.26 | struct telux::cv2x::GlobalIPUnicastRoutingInfo | 561 |
| | 5.26.1.27 | struct telux::cv2x::RxPacketMetaDataReport | 562 |
| | 5.26.1.28 | class telux::cv2x::Cv2xRxMetaDataHelper | 562 |
| | 5.26.1.29 | class telux::cv2x::ICv2xRxSubscription | 563 |
| | 5.26.1.30 | class telux::cv2x::ICv2xThrottleManagerListener | 564 |

| | | | |
|--------|--------------|--|-----|
| | 5.26.1.31 | class telux::cv2x::ICv2xThrottleManager | 566 |
| | 5.26.1.32 | class telux::cv2x::ICv2xTxFlow | 567 |
| | 5.26.1.33 | class telux::cv2x::ICv2xTxRxSocket | 569 |
| | 5.26.1.34 | class telux::cv2x::ICv2xTxStatusReportListener | 570 |
| | 5.26.1.35 | class telux::cv2x::Cv2xUtil | 571 |
| 5.26.2 | | Enumeration Type Documentation | 572 |
| | 5.26.2.1 | TrafficCategory | 572 |
| | 5.26.2.2 | Cv2xStatusType | 572 |
| | 5.26.2.3 | Cv2xCauseType | 572 |
| | 5.26.2.4 | TrafficIpType | 573 |
| | 5.26.2.5 | RadioConcurrencyMode | 573 |
| | 5.26.2.6 | Cv2xEvent | 573 |
| | 5.26.2.7 | Priority | 573 |
| | 5.26.2.8 | Periodicity | 574 |
| | 5.26.2.9 | ConfigSourceType | 574 |
| | 5.26.2.10 | ConfigEvent | 574 |
| | 5.26.2.11 | RFTxStatus | 574 |
| | 5.26.2.12 | SegmentType | 575 |
| | 5.26.2.13 | TxType | 575 |
| | 5.26.2.14 | RxMetaDataValidityType | 575 |
| 5.26.3 | | Variable Documentation | 575 |
| | 5.26.3.1 | MAX_ANTENNAS_SUPPORTED | 575 |
| 5.27 | audio | | 576 |
| 5.28 | Audio Stream | | 577 |
| 5.28.1 | | Data Structure Documentation | 577 |
| | 5.28.1.1 | struct telux::audio::FormatParams | 577 |
| | 5.28.1.2 | struct telux::audio::AmrwbpParams | 577 |
| | 5.28.1.3 | struct telux::audio::StreamConfig | 577 |
| | 5.28.1.4 | struct telux::audio::FormatInfo | 578 |
| | 5.28.1.5 | struct telux::audio::ChannelVolume | 578 |
| | 5.28.1.6 | struct telux::audio::StreamVolume | 578 |
| | 5.28.1.7 | struct telux::audio::StreamMute | 579 |
| | 5.28.1.8 | struct telux::audio::StreamBuffer | 579 |
| | 5.28.1.9 | struct telux::audio::DtmfTone | 579 |
| | 5.28.1.10 | class telux::audio::AudioFactory | 579 |
| | 5.28.1.11 | class telux::audio::IVoiceListener | 580 |
| | 5.28.1.12 | class telux::audio::IPlayListener | 581 |
| | 5.28.1.13 | class telux::audio::ITranscodeListener | 581 |
| | 5.28.1.14 | class telux::audio::IAudioListener | 582 |
| | 5.28.1.15 | class telux::audio::IAudioBuffer | 582 |
| | 5.28.1.16 | class telux::audio::IStreamBuffer | 583 |
| | 5.28.1.17 | class telux::audio::IAudioManager | 584 |
| | 5.28.1.18 | class telux::audio::IAudioDevice | 588 |
| | 5.28.1.19 | class telux::audio::IAudioStream | 588 |
| | 5.28.1.20 | class telux::audio::IAudioVoiceStream | 591 |
| | 5.28.1.21 | class telux::audio::IAudioPlayStream | 593 |
| | 5.28.1.22 | class telux::audio::IAudioCaptureStream | 595 |
| | 5.28.1.23 | class telux::audio::IAudioLoopbackStream | 596 |
| | 5.28.1.24 | class telux::audio::IAudioToneGeneratorStream | 597 |
| | 5.28.1.25 | class telux::audio::ITranscoder | 598 |

| | | |
|-----------|--|-----|
| 5.28.2 | Enumeration Type Documentation | 601 |
| 5.28.2.1 | DeviceType | 601 |
| 5.28.2.2 | DeviceDirection | 601 |
| 5.28.2.3 | Direction | 601 |
| 5.28.2.4 | StreamType | 601 |
| 5.28.2.5 | StreamDirection | 601 |
| 5.28.2.6 | ChannelType | 602 |
| 5.28.2.7 | AudioFormat | 602 |
| 5.28.2.8 | DtmfLowFreq | 602 |
| 5.28.2.9 | DtmfHighFreq | 602 |
| 5.28.2.10 | AmrwbpFrameFormat | 602 |
| 5.28.2.11 | StopType | 603 |
| 5.28.2.12 | EcnrMode | 603 |
| 5.28.2.13 | CalibrationInitStatus | 603 |
| 5.29 | therm | 604 |
| 5.30 | Thermal Management | 605 |
| 5.30.1 | Data Structure Documentation | 605 |
| 5.30.1.1 | class telux::therm::ThermalFactory | 605 |
| 5.30.1.2 | struct telux::therm::BoundCoolingDevice | 606 |
| 5.30.1.3 | class telux::therm::IThermalManager | 606 |
| 5.30.1.4 | class telux::therm::ITripPoint | 607 |
| 5.30.1.5 | class telux::therm::IThermalZone | 608 |
| 5.30.1.6 | class telux::therm::ICoolingDevice | 610 |
| 5.30.2 | Enumeration Type Documentation | 611 |
| 5.30.2.1 | AutoShutdownMode | 611 |
| 5.30.2.2 | TripType | 611 |
| 5.30.3 | Variable Documentation | 612 |
| 5.30.3.1 | DEFAULT_TIMEOUT | 612 |
| 5.31 | Thermal Shutdown Management | 613 |
| 5.31.1 | Data Structure Documentation | 613 |
| 5.31.1.1 | class telux::therm::IThermalShutdownListener | 613 |
| 5.31.1.2 | class telux::therm::IThermalShutdownManager | 614 |
| 5.32 | power | 617 |
| 5.33 | TCU Activity Manager | 618 |
| 5.33.1 | Data Structure Documentation | 618 |
| 5.33.1.1 | class telux::power::PowerFactory | 618 |
| 5.33.1.2 | class telux::power::ITcuActivityListener | 619 |
| 5.33.1.3 | class telux::power::ITcuActivityManager | 620 |
| 5.33.2 | Enumeration Type Documentation | 623 |
| 5.33.2.1 | TcuActivityState | 623 |
| 5.33.2.2 | TcuActivityStateAck | 624 |
| 5.33.2.3 | ClientType | 624 |
| 5.34 | config | 625 |
| 5.35 | Modem Config | 626 |
| 5.35.1 | Data Structure Documentation | 626 |
| 5.35.1.1 | class telux::config::ConfigFactory | 626 |
| 5.35.1.2 | struct telux::config::ConfigInfo | 626 |
| 5.35.1.3 | class telux::config::IModemConfigListener | 627 |
| 5.35.1.4 | class telux::config::IModemConfigManager | 627 |
| 5.35.2 | Enumeration Type Documentation | 632 |

| | | | |
|------|------------------------|--|-----|
| | 5.35.2.1 | ConfigType | 632 |
| | 5.35.2.2 | AutoSelectionMode | 632 |
| | 5.35.2.3 | ConfigUpdateStatus | 632 |
| 5.36 | sensor | | 633 |
| 5.37 | Sensor service | | 634 |
| | 5.37.1 | Data Structure Documentation | 634 |
| | 5.37.1.1 | struct telux::sensor::SensorInfo | 634 |
| | 5.37.1.2 | struct telux::sensor::SensorConfiguration | 634 |
| | 5.37.1.3 | struct telux::sensor::MotionSensorData | 637 |
| | 5.37.1.4 | struct telux::sensor::UncalibratedMotionSensorData | 637 |
| | 5.37.1.5 | struct telux::sensor::SensorEvent | 637 |
| | 5.37.1.6 | struct telux::sensor::SensorFeature | 637 |
| | 5.37.1.7 | struct telux::sensor::SensorFeatureEvent | 638 |
| | 5.37.1.8 | class telux::sensor::SensorFactory | 638 |
| | 5.37.1.9 | union telux::sensor::SensorEvent.__unnamed__ | 640 |
| | 5.37.2 | Enumeration Type Documentation | 640 |
| | 5.37.2.1 | SensorType | 640 |
| | 5.37.2.2 | SensorConfigParams | 640 |
| 5.38 | Sensor control | | 641 |
| | 5.38.1 | Data Structure Documentation | 641 |
| | 5.38.1.1 | class telux::sensor::ISensorEventListener | 641 |
| | 5.38.1.2 | class telux::sensor::ISensor | 642 |
| | 5.38.1.3 | class telux::sensor::ISensorManager | 646 |
| 5.39 | Sensor feature control | | 648 |
| | 5.39.1 | Data Structure Documentation | 648 |
| | 5.39.1.1 | class telux::sensor::ISensorFeatureEventListener | 648 |
| | 5.39.1.2 | class telux::sensor::ISensorFeatureManager | 648 |
| 5.40 | platform | | 652 |
| | 5.40.1 | Data Structure Documentation | 652 |
| | 5.40.1.1 | class telux::platform::PlatformFactory | 652 |
| 5.41 | Filesystem | | 654 |
| | 5.41.1 | Data Structure Documentation | 654 |
| | 5.41.1.1 | struct telux::platform::EfsEventInfo | 654 |
| | 5.41.1.2 | class telux::platform::IFsListener | 654 |
| | 5.41.1.3 | class telux::platform::IFsManager | 655 |
| | 5.41.2 | Enumeration Type Documentation | 660 |
| | 5.41.2.1 | EfsEvent | 660 |
| | 5.41.2.2 | OperationStatus | 660 |
| | 5.41.2.3 | OtaOperation | 660 |
| 5.42 | data | | 661 |
| | 5.42.1 | Define Documentation | 661 |
| | 5.42.1.1 | PROFILE_ID_MAX | 661 |
| | 5.42.1.2 | MAX_QOS_FILTERS | 661 |
| | 5.42.1.3 | IP_PROT_UNKNOWN | 661 |
| | 5.42.2 | Data Structure Documentation | 661 |
| | 5.42.2.1 | struct telux::data::IpFamilyInfo | 661 |
| | 5.42.2.2 | struct telux::data::QosFilterRule | 661 |
| | 5.42.2.3 | struct telux::data::TrafficFlowTemplate | 662 |
| | 5.42.2.4 | struct telux::data::TftChangelInfo | 662 |
| | 5.42.2.5 | struct telux::data::BitRateInfo | 662 |

| | | |
|-----------|--|-----|
| 5.42.2.6 | class telux::data::IDataConnectionManager | 663 |
| 5.42.2.7 | class telux::data::IDataCall | 667 |
| 5.42.2.8 | class telux::data::IDataConnectionListener | 671 |
| 5.42.2.9 | struct telux::data::DataRestrictMode | 673 |
| 5.42.2.10 | struct telux::data::PortInfo | 673 |
| 5.42.2.11 | struct telux::data::ProfileParams | 673 |
| 5.42.2.12 | struct telux::data::DataCallStats | 674 |
| 5.42.2.13 | struct telux::data::IpAddrInfo | 674 |
| 5.42.2.14 | struct telux::data::DataCallEndReason | 674 |
| 5.42.2.15 | struct telux::data::VlanConfig | 675 |
| 5.42.2.16 | struct telux::data::FlowDataRate | 675 |
| 5.42.2.17 | struct telux::data::QosIPFlowInfo | 675 |
| 5.42.2.18 | class telux::data::DataFactory | 675 |
| 5.42.2.19 | class telux::data::IDataFilterListener | 680 |
| 5.42.2.20 | class telux::data::IDataFilterManager | 681 |
| 5.42.2.21 | class telux::data::DataProfile | 686 |
| 5.42.2.22 | class telux::data::IDataProfileListener | 688 |
| 5.42.2.23 | class telux::data::IDataProfileManager | 689 |
| 5.42.2.24 | class telux::data::IDataCreateProfileCallback | 693 |
| 5.42.2.25 | class telux::data::IDataProfileListCallback | 694 |
| 5.42.2.26 | class telux::data::IDataProfileCallback | 694 |
| 5.42.2.27 | struct telux::data::IPv4Info | 695 |
| 5.42.2.28 | struct telux::data::IPv6Info | 695 |
| 5.42.2.29 | struct telux::data::UdpInfo | 696 |
| 5.42.2.30 | struct telux::data::TcpInfo | 696 |
| 5.42.2.31 | struct telux::data::IcmpInfo | 696 |
| 5.42.2.32 | struct telux::data::EspInfo | 696 |
| 5.42.2.33 | class telux::data::IipFilter | 697 |
| 5.42.2.34 | class telux::data::IUdpFilter | 698 |
| 5.42.2.35 | class telux::data::ITcpFilter | 699 |
| 5.42.2.36 | class telux::data::IicmpFilter | 700 |
| 5.42.2.37 | class telux::data::IEspFilter | 701 |
| 5.42.2.38 | struct telux::data::RoamingStatus | 702 |
| 5.42.2.39 | struct telux::data::ServiceStatus | 702 |
| 5.42.2.40 | class telux::data::IServingSystemManager | 702 |
| 5.42.2.41 | class telux::data::IServingSystemListener | 705 |
| 5.42.2.42 | union telux::data::DataCallEndReason.__unnamed__ | 706 |
| 5.42.3 | Enumeration Type Documentation | 707 |
| 5.42.3.1 | IpFamilyType | 707 |
| 5.42.3.2 | TechPreference | 707 |
| 5.42.3.3 | AuthProtocolType | 707 |
| 5.42.3.4 | DataRestrictModeType | 708 |
| 5.42.3.5 | DataCallStatus | 708 |
| 5.42.3.6 | DataBearerTechnology | 708 |
| 5.42.3.7 | EndReasonType | 709 |
| 5.42.3.8 | MobileIpReasonCode | 709 |
| 5.42.3.9 | InternalReasonCode | 710 |
| 5.42.3.10 | CallManagerReasonCode | 711 |
| 5.42.3.11 | SpecReasonCode | 715 |
| 5.42.3.12 | PPPReasonCode | 716 |

| | | |
|-----------|--|------------|
| 5.42.3.13 | EHRPDReasonCode | 716 |
| 5.42.3.14 | Ipv6ReasonCode | 717 |
| 5.42.3.15 | HandoffReasonCode | 717 |
| 5.42.3.16 | ProfileChangeEvent | 717 |
| 5.42.3.17 | OperationType | 717 |
| 5.42.3.18 | Direction | 717 |
| 5.42.3.19 | InterfaceType | 718 |
| 5.42.3.20 | ServiceState | 718 |
| 5.42.3.21 | QosFlowStateChangeEvent | 718 |
| 5.42.3.22 | IpTrafficClassType | 718 |
| 5.42.3.23 | QosIPFlowMaskType | 718 |
| 5.42.3.24 | QosFlowMaskType | 719 |
| 5.42.3.25 | DrbStatus | 719 |
| 5.42.3.26 | RoamingType | 719 |
| 5.42.3.27 | DataServiceState | 719 |
| 5.42.3.28 | NetworkRat | 719 |
| 5.43 | net | 721 |
| 5.43.1 | Data Structure Documentation | 721 |
| 5.43.1.1 | struct telux::data::net::BridgeInfo | 721 |
| 5.43.1.2 | class telux::data::net::IBridgeManager | 721 |
| 5.43.1.3 | class telux::data::net::IBridgeListener | 724 |
| 5.43.1.4 | class telux::data::net::IFirewallManager | 725 |
| 5.43.1.5 | class telux::data::net::IFirewallEntry | 730 |
| 5.43.1.6 | class telux::data::net::IFirewallListener | 731 |
| 5.43.1.7 | struct telux::data::net::L2tpSessionConfig | 732 |
| 5.43.1.8 | struct telux::data::net::L2tpTunnelConfig | 732 |
| 5.43.1.9 | struct telux::data::net::L2tpSysConfig | 733 |
| 5.43.1.10 | class telux::data::net::IL2tpManager | 733 |
| 5.43.1.11 | class telux::data::net::IL2tpListener | 736 |
| 5.43.1.12 | struct telux::data::net::NatConfig | 737 |
| 5.43.1.13 | class telux::data::net::INatManager | 737 |
| 5.43.1.14 | class telux::data::net::INatListener | 741 |
| 5.43.1.15 | class telux::data::net::ISocksManager | 741 |
| 5.43.1.16 | class telux::data::net::ISocksListener | 744 |
| 5.43.1.17 | class telux::data::net::IVlanManager | 745 |
| 5.43.1.18 | class telux::data::net::IVlanListener | 749 |
| 5.43.2 | Enumeration Type Documentation | 750 |
| 5.43.2.1 | BridgeIFaceType | 750 |
| 5.43.2.2 | L2tpProtocol | 750 |
| 5.44 | cv2x | 751 |
| 6 | Namespace Documentation | 752 |
| 6.1 | telux Namespace Reference | 752 |
| 6.2 | telux::audio Namespace Reference | 752 |
| 6.2.1 | Variable Documentation | 754 |
| 6.2.1.1 | INFINITE_DTMF_DURATION | 754 |
| 6.2.1.2 | INFINITE_TONE_DURATION | 754 |
| 6.3 | telux::common Namespace Reference | 754 |
| 6.3.1 | Typedef Documentation | 754 |
| 6.3.1.1 | ResponseCallback | 754 |

| | | |
|----------|--|------------|
| 6.3.1.2 | InitResponseCb | 755 |
| 6.4 | telux::config Namespace Reference | 755 |
| 6.5 | telux::cv2x Namespace Reference | 755 |
| 6.5.1 | Typedef Documentation | 757 |
| 6.5.1.1 | CreateRxSubscriptionCallback | 757 |
| 6.5.1.2 | CreateTxSpsFlowCallback | 757 |
| 6.5.1.3 | CreateTxEventFlowCallback | 757 |
| 6.5.1.4 | CloseTxFlowCallback | 758 |
| 6.5.1.5 | CloseRxSubscriptionCallback | 758 |
| 6.5.1.6 | ChangeSpsFlowInfoCallback | 758 |
| 6.5.1.7 | RequestSpsFlowInfoCallback | 759 |
| 6.5.1.8 | ChangeEventFlowInfoCallback | 759 |
| 6.5.1.9 | RequestCapabilitiesCallback | 759 |
| 6.5.1.10 | RequestDataSessionSettingsCallback | 759 |
| 6.5.1.11 | UpdateTrustedUEListCallback | 760 |
| 6.5.1.12 | UpdateSrcL2InfoCallback | 760 |
| 6.5.1.13 | CreateTcpSocketCallback | 760 |
| 6.5.1.14 | CloseTcpSocketCallback | 761 |
| 6.5.1.15 | StartCv2xCallback | 761 |
| 6.5.1.16 | StopCv2xCallback | 761 |
| 6.5.1.17 | RequestCv2xStatusCallback | 761 |
| 6.5.1.18 | RequestCv2xStatusCallbackEx | 762 |
| 6.5.1.19 | UpdateConfigurationCallback | 762 |
| 6.6 | telux::data Namespace Reference | 762 |
| 6.7 | telux::data::net Namespace Reference | 764 |
| 6.8 | telux::loc Namespace Reference | 766 |
| 6.9 | telux::platform Namespace Reference | 767 |
| 6.10 | telux::power Namespace Reference | 768 |
| 6.11 | telux::sensor Namespace Reference | 768 |
| 6.12 | telux::tel Namespace Reference | 769 |
| 6.12.1 | Data Structure Documentation | 774 |
| 6.12.1.1 | struct telux::tel::lmsRegistrationInfo | 774 |
| 6.12.2 | Typedef Documentation | 775 |
| 6.12.2.1 | ImsRegistrationInfoCb | 775 |
| 6.12.2.2 | RatMask | 775 |
| 6.12.2.3 | SelectionModeResponseCallback | 775 |
| 6.12.2.4 | PreferredNetworksCallback | 775 |
| 6.12.2.5 | NetworkScanCallback | 776 |
| 6.12.3 | Enumeration Type Documentation | 776 |
| 6.12.3.1 | RegistrationStatus | 776 |
| 6.13 | telux::therm Namespace Reference | 776 |
| 7 | Data Structure Documentation | 778 |
| 7.1 | telux::cv2x::ICv2xListener Class Reference | 778 |
| 7.1.1 | Constructors and Destructors | 778 |
| 7.1.1.1 | ~ICv2xListener() | 778 |
| 7.1.2 | Member Function Documentation | 778 |
| 7.1.2.1 | onStatusChanged(Cv2xStatus status) | 778 |
| 7.1.2.2 | onStatusChanged(Cv2xStatusEx status) | 778 |
| 7.2 | telux::tel::lmsServingSystemListener Class Reference | 779 |

| | | |
|---------|---|-----|
| 7.2.1 | Constructors and Destructors | 779 |
| 7.2.1.1 | ~IIm-servingSystemListener() | 779 |
| 7.2.2 | Member Function Documentation | 779 |
| 7.2.2.1 | onServiceStatusChange(telux::common::ServiceStatus status) | 779 |
| 7.2.2.2 | onImsRegStatusChange(ImsRegistrationInfo status) | 780 |
| 7.3 | telux::tel::IIm-servingSystemManager Class Reference | 780 |
| 7.3.1 | Constructors and Destructors | 780 |
| 7.3.1.1 | ~IIm-servingSystemManager() | 780 |
| 7.3.2 | Member Function Documentation | 780 |
| 7.3.2.1 | getServiceStatus()=0 | 781 |
| 7.3.2.2 | requestRegistrationInfo(ImsRegistrationInfoCb callback)=0 | 781 |
| 7.3.2.3 | registerListener(std::weak_ptr< telux::tel::IIm-servingSystemListener > listener)=0 | 781 |
| 7.3.2.4 | deregisterListener(std::weak_ptr< telux::tel::IIm-servingSystemListener > listener)=0 | 782 |
| 7.4 | telux::common::IServiceStatusListener Class Reference | 782 |
| 7.4.1 | Constructors and Destructors | 782 |
| 7.4.1.1 | ~IServiceStatusListener() | 782 |
| 7.4.2 | Member Function Documentation | 782 |
| 7.4.2.1 | onServiceStatusChange(ServiceStatus status) | 782 |

List of Figures

| | | |
|------|--|----|
| 2-1 | SDK-Overview | 7 |
| 3-1 | Phone manager initialization | 20 |
| 3-2 | Dial call flow | 21 |
| 3-3 | ECall call flow | 22 |
| 3-4 | Signal strength call flow | 24 |
| 3-5 | Answer, Reject, RejectWithSMS call flow | 25 |
| 3-6 | Hold call flow | 26 |
| 3-7 | Hold, Conference, Swap call flow | 27 |
| 3-8 | SMS call flow | 29 |
| 3-9 | Radio and Service state call flow | 30 |
| 3-10 | Network selection manager call flow | 31 |
| 3-11 | Serving System Manager Call Flow | 33 |
| 3-12 | Get applications call flow | 35 |
| 3-13 | On logical channel | 36 |
| 3-14 | On basic channel | 37 |
| 3-15 | Request card reader status, Request ATR, Transmit APDU call flow | 38 |
| 3-16 | SIM Turn off, Turn on and Reset call flow | 40 |
| 3-17 | Subscription initialization call flow | 42 |
| 3-18 | Subscription call flow | 43 |
| 3-19 | Call flow to register/remove listener for generating basic reports | 44 |
| 3-20 | Call flow to register/remove listener for generating detailed reports | 46 |
| 3-21 | Call flow to register/remove listener for generating detailed engine reports | 48 |
| 3-22 | Call flow to register/remove listener for system info updates | 49 |
| 3-23 | Call flow to request energy consumed information | 50 |
| 3-24 | Call flow to get year of hardware information | 51 |
| 3-25 | Call flow to get terrestrial positioning information | 51 |
| 3-26 | Call flow to cancel terrestrial positioning information | 52 |
| 3-27 | Call flow to enable/disable constraint time uncertainty | 52 |
| 3-28 | Call flow to enable/disable PACE | 53 |
| 3-29 | Call flow to delete all aiding data | 53 |
| 3-30 | Call flow to configure lever arm parameters | 54 |
| 3-31 | Call flow to configure blacklisted constellations | 54 |
| 3-32 | Call flow to configure robust location | 55 |
| 3-33 | Call flow to configure min gps week | 55 |
| 3-34 | Call flow to request min gps week | 56 |
| 3-35 | Call flow to delete specified data | 56 |
| 3-36 | Call flow to configure min sv elevation | 57 |
| 3-37 | Call flow to request min sv elevation | 57 |
| 3-38 | Call flow to request robust location | 58 |
| 3-39 | Call flow to configure dead reckoning engine | 58 |
| 3-40 | Call flow to configure secondary band | 59 |
| 3-41 | Call flow to request secondary band | 59 |
| 3-42 | Call flow to configure engine state | 60 |
| 3-43 | Call flow to provide user consent for terrestrial positioning | 60 |
| 3-44 | Call flow to configure NMEA sentence type | 61 |
| 3-45 | Start/Stop data call call flow | 62 |

| | |
|---|-----|
| 3-46 Request data profile list call flow | 64 |
| 3-47 Get Dedicated Radio Bearer Call Flow | 65 |
| 3-48 Request service status call flow | 66 |
| 3-49 Request roaming status call flow | 67 |
| 3-50 Get/Set data filter mode call flow | 68 |
| 3-51 Add data restrict filter call flow | 69 |
| 3-52 Remove data restrict filter call flow | 70 |
| 3-53 Create VLAN and bind it to PDN for data VLAN manager call flow | 72 |
| 3-54 LAN-LAN VLAN Configuration Usecase from EAP call flow | 73 |
| 3-55 LAN-LAN VLAN Configuration Usecase from A7 call flow | 75 |
| 3-56 LAN-WAN VLAN Configuration Usecase from EAP call flow | 76 |
| 3-57 LAN-WAN VLAN Configuration Usecase from A7 call flow | 79 |
| 3-58 Create Static NAT entry for data NAT manager call flow | 81 |
| 3-59 Firewall enablement in data Firewall manager call flow | 82 |
| 3-60 Add Firewall entry in data Firewall manager call flow | 83 |
| 3-61 Set Firewall DMZ in data Firewall manager call flow | 84 |
| 3-62 Socks enablement in data Socks manager call flow | 85 |
| 3-63 L2TP enablement and Configuration in data L2TP manager call flow | 87 |
| 3-64 Call flow to add and enable a software bridge | 89 |
| 3-65 Call flow to remove and disable a software bridge | 90 |
| 3-66 Retrieve/Update C-V2X configuration call flow | 92 |
| 3-67 C-V2X radio manager initialization call flow | 93 |
| 3-68 Get C-V2X status call flow | 94 |
| 3-69 Start/Stop C-V2X mode call flow | 95 |
| 3-70 C-V2X radio initialization call flow | 96 |
| 3-71 C-V2X radio RX subscription call flow | 97 |
| 3-72 C-V2X radio TX event flow call flow | 98 |
| 3-73 C-V2X radio SPS flow call flow | 99 |
| 3-74 C-V2X Throttle Manager filter rate adjustment notification call flow | 100 |
| 3-75 C-V2X Throttle Manager set verification call flow | 101 |
| 3-76 Audio Manager API call flow | 102 |
| 3-77 Audio Voice Call Start/Stop call flow | 104 |
| 3-78 Audio Voice Call Device Switch call flow | 106 |
| 3-79 Audio Voice Call Volume/Mute control call flow | 108 |
| 3-80 Call flow to play DTMF tone | 111 |
| 3-81 Call flow to detect DTMF tone | 113 |
| 3-82 Audio Playback call flow | 115 |
| 3-83 Audio Capture call flow | 117 |
| 3-84 Call flow to play/stop tone on a sink device | 119 |
| 3-85 Call flow to start/stop loopback between source and sink devices | 121 |
| 3-86 Call flow to play Compressed audio format | 123 |
| 3-87 Audio Transcoding Operation Callflow | 125 |
| 3-88 Compressed audio format playback on Voice Paths Callflow | 127 |
| 3-89 Audio Subsystem Restart Callflow | 129 |
| 3-90 Audio calibration configuration status | 130 |
| 3-91 Thermal manager call flow | 131 |
| 3-92 Call flow to register/remove listener for Thermal shutdown manager | 132 |
| 3-93 Call flow to set/get the Thermal auto-shutdown mode | 133 |
| 3-94 Call flow to manage thermal auto-shutdown from an eCall application | 134 |
| 3-95 Call flow to register/remove listener for TCU-activity manager | 136 |

| | |
|--|-----|
| 3-96 Call flow to set the TCU-activity state in ACTIVE mode | 137 |
| 3-97 Call flow to set the TCU-activity state in PASSIVE mode | 138 |
| 3-98 Remote SIM call flow | 140 |
| 3-99 Modem Config load and activate call flow | 142 |
| 3-100 Modem Config deactivate and delete Call Flow | 143 |
| 3-101 Modem Config get and set Auto Selection Mode Call Flow | 144 |
| 3-102 Sensor sub-system start-up call flow | 146 |
| 3-103 Sensor data acquisition call flow | 147 |
| 3-104 Sensor reconfiguration call flow | 148 |
| 3-105 Sensor sub-system cleanup call flow | 149 |
| 3-106 Sensor power control cleanup call flow | 150 |
| 3-107 Sensor feature control cleanup call flow | 151 |
| 3-108 EFS restore notification registration and handling call flow | 152 |
| 3-109 Control the filesystem for ECALL operation call flow | 154 |
| 3-110 Control the filesystem for OTA operation call flow | 155 |

1 Introduction

1.1 Purpose

This document describes interface specification of Telematics Software Development Kit (SDK) for applications on Linux based automotive platforms.

1.2 Scope

Telematics SDK exposes a rich set of APIs conforming to C++11 standard which form the building blocks to create stand-alone Telematics applications.

This document provides high level overview of Telematics SDK architecture and its APIs. Call flow diagrams are provided for various APIs such as a Phone, Call, SMS, SIM Card Services, Audio, Location, Remote Sim, Modem configuration etc.

This document assumes that the developers are familiar with Linux and C++11 programming.

1.3 Conventions

Function declarations, function names, type declarations, and code samples appear in a different font. For example,

```
#include
```

Parameter directions are indicated as follows:

Parameters

| | | |
|---------|------------------|---|
| in | <i>paramname</i> | indicates an input parameter. |
| out | <i>paramname</i> | indicates an output parameter. |
| in, out | <i>paramname</i> | indicates a parameter used for both input and output. |

Most APIs are asynchronous as underlying sub-systems such as telephony are asynchronous. API names follow the convention of using prefix " get " for synchronous calls and " request " for asynchronous calls. Asynchronous responses such as listener callbacks come on a different thread than the application thread.

1.4 SDK Versioning

The following convention is used for versioning the SDK releases

SDK version (major.minor.patch)

SDK_VERSION = 1.0.0

Major version: This number will be incremented whenever significant changes or features are introduced.

Minor version: This number will be incremented when smaller features with some new APIs are introduced.

Patch version: If the release only contains bug fixes, but no API change then the patch version would be incremented, No change in the actual API interface.

NOTE: Use `telux::common::Version::getSdkVersion()` API to query the current version of SDK or refer the VERSION file in the repository

1.5 Public API Status

Public APIs are introduced and removed (if necessary) in phases. This allows users of an existing API that is being Deprecated to migrate. APIs will be marked with note indicating whether the API is subject to change or if it is not recommended to use the API.

as follows:

- **Eval:** This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.
- **Obsolete:** API is not preferred and a better alternative is available.
- **Deprecated:** API is not going to be supported in future releases. Clients should stop using this API. Once an API has been marked as Deprecated, the API could be removed in future releases.

2 Functional Overview

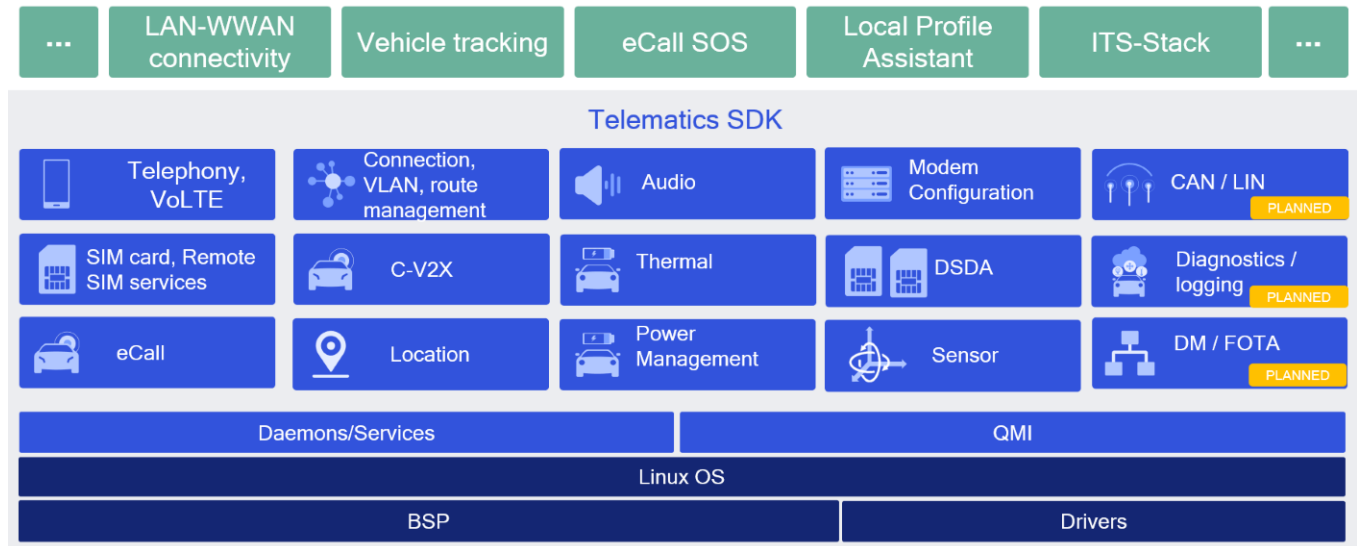


Figure 2-1 SDK-Overview

2.1 Overview

The Telematics library runs in the user space of the Linux system. It interacts with Telephony services and other sub-systems to provide various services like phone calls, SMS etc. These services are exposed by the SDK through fixed public APIs that are available on all Telematics platforms that support SDK. The Telematics APIs are grouped into the following functional modules:

Telephony

Telephony sub-system consists of APIs for functions related to Phone, Call, SMS and Signal Strength, Network Selection and Serving System Management.

SIM Card Services

SIM Card services sub-system consists of APIs to perform SIM card operations such as Send APDU messages to SIM card applications, SIM Access Profile(SAP) operations etc.

Location Services

Location Services sub-system consists of APIs to receive location details such as GNSS Positions, Satellite Vehicle information, Jammer Data signals, nmea and measurements information. The location manager sub-system also consists of APIs to get location system info, request energy consumed, get year of hardware information, get terrestrial position information and cancel terrestrial position information. Also

the location configurator sub-system consists of API to enable/disable constraint time uncertainty, enable/disable PACE, delete all aiding data, configure lever arm parameters, configure the blacklisted satellite vehicle, configure robust location, configure min gps week, request min gps week, configure min sv elevation, request min sv elevation, request robust location, delete specified data, configure dR engine, configure secondary band, request secondary band, configure engine state, provide consent for terrestrial positioning and configure NMEA types.

Connection Management

Connection Management sub-system consists of APIs for establishing Cellular WAN/ Backhaul connection sessions and for Connection Profile Management etc.

Audio Management

Audio Management sub-system consists of APIs for Audio management such as setting up audio streams, switching devices on streams, apply volume/mute etc

Thermal Management

Thermal Management sub-system consists of APIs to get list of thermal zones, cooling devices and binding information.

Thermal Shutdown Mangement

Thermal shutdown management sub-system consists of APIs to get/set the thermal auto-shutdown mode and listen to its updates.

TCU Activity Management

TCU Activity Management sub-system consists of APIs to get TCU-activity state updates, set the TCU-activity state, etc.

Remote SIM Services

Remote SIM sub-system consists of APIs that allow a device that does not have a SIM physically connected to it to access a SIM remotely (e.g. over BT, Ethernet, etc.) and perform card operations on that SIM, such as requesting reset, transmitting APDU messages, etc.

Modem Config Services

Modem Config sub-system consists of APIs that allow to request modem config files, load/delete a modem config file from modem's storage, activate/deactivate a modem config file, get/set auto selection mode for config files.

Data Network Management

Data Network Management sub-system consists of APIs to setup VLAN, static NAT, Firewall, Socks, etc.

Sensor services

The sensor sub-system provides API to configure and acquire data from underlying hardware sensors like accelerometers, gyroscopes among others.

Platform services

The platform sub-system provides APIs to configure and control platform functionalities, like starting an EFS backup, control filesystem for ECALL and OTA operations. This sub-system also provides notifications about certain system related events, for instance filesystem events such as EFS restore and backup events.

Debug Logger

Logger consists of API that can be utilized to log messages from SDK Applications.

Telematics SDK classes can be broadly divided into the following types:

- Factory - Factory classes are central classes such as PhoneFactory which can be used to create Manager classes corresponding to their sub-systems such as PhoneManager.
- Manager - Manager classes such as PhoneManager to manage multiple Phone instances, CardManager to manage multiple SIM Card instances etc.
- Observer/ Listener - Listener for unsolicited responses.
- Command Callback - Single-shot response callback for asynchronous API requests.
- Logger - APIs to log messages, control the log levels.

2.2 Features

Telematics SDK provides APIs for the following features:

2.2.1 Call Management

CallManager, Phone and PhoneManager APIs of Telematics SDK provides call related control operations such as

- Initiate a voice call
- Answer the incoming call
- Hold the call
- Hangup waiting, held or active call

CallManager and PhoneManager also provides additional functionality such as

- Allowing conference, and switch between waiting or holding call and active call
- Emergency Call (dial 112)
- Notifications about call state change

2.2.2 SMS

SMS Manager APIs of Telematics SDK provides SMS related functionality such as

- Sends and receives SMS messages of type GSM7, GSM8 and UCS2

2.2.3 SIM Card Services

The SIM Card operations are performed by CardManager and SapCardManager.

CardManager APIs of Telematics SDK perform operations on UICC card such as

- Open or close logical/basic channel to ICC card
- Transmit Application Protocol Data Unit (APDU) to the ICC Card over logical/basic channel
- Receive response APDU from the ICC Card with the status
- Notify about ICC card information change

SapCardManager APIs provides SIM Access Profile(SAP) related functionality such as

- Open or close SIM Access Profile(SAP) connection
- Transmit Application Protocol Data Unit (APDU) over SAP connection
- Receive response APDU over SAP connection
- Perform SAP operations such as Answer to Reset(ATR), SIM Power off, SIM Power On, SIM Reset and fetch Card Reader status.

2.2.4 Phone Information

Phone APIs of Telematics SDK provides phone related information such as

- Get Service state of phone i.e. EMERGENCY_ONLY, IN_SERVICE and OUT_OF_SERVICE
- Get Radio state of device i.e RADIO_STATE_OFF, RADIO_STATE_ON and RADIO_STATE_UNAVAILABLE
- Retrieve the signal strength corresponding to the technology supported by SIM
- Device Identity
- Set or Request Operating Mode
- Subscription Information

2.2.5 Location Services

Location Services APIs of Telematics SDK provide the mechanism to register listener and to receive location updates, satellite vehicle information, jammer signals, nmea and measurement updates. The location manager sub-system also consists of APIs to get location system info, request energy consumed, get year of hardware information, get terrestrial position information and cancel terrestrial position information. Following parameters are configurable through the APIs.

- Minimum time interval between two consecutive location reports.
- Minimum distance travelled after which the period between two consecutive location reports depends on the interval specified.

Location Configurator APIs of Telematics SDK provide mechanism to enable/disable constraint time uncertainty feature, enable/disable PACE, delete all aiding data, configure lever arm parameters, configure blacklisted satellite vehicles, configure robust location, configure min gps week, request min gps week, configure min sv elevation, request min sv elevation, request robust location, delete specified data,

configure dR engine, configure secondary band, request secondary band, configure engine state, provide consent for terrestrial positioning and configure NMEA types.

2.2.6 Data Services

Data Services APIs in the Telematics SDK used for cellular connectivity, modem profile management, filters management, and networking.

Data Connection Manager APIs provide functionality such as

- start / stop data call
- listen for data call state changes

Data Profile Manager APIs provide functionality such as

- List available profiles in the modem
- Create / modify / delete / modify modem profiles
- Query for the selected profile

Data Serving System Manager APIs provide functionality such as

- Get dedicated radio bearer status
- Request Modem Service Status
- Request Modem Roaming Status

Data Filter Manager APIs provide functionality such as

- get / set data filter mode per data call
- get / set data filter mode for all data call in up state
- add / remove data filter per data call
- add / remove data filter for all data call in up state

Data VLAN Manager APIs provide functionality such as

- Create / remove VLAN
- Query VLAN info
- Bind / unbind VLAN to PDN
- Query current VLAN to PDN mapping

Data Static LAN Manager APIs provide functionality such as

- Add / remove static LAN entry
- Request current static NAT entries

Data Firewall Manager APIs provide functionality such as

- Add / remove DMZ entry
- Query current DMZ entries

- Set Firewall configuration to enable / disable Firewall
- Query current status of Firewall
- Add / remove Firewall entry
- Query Firewall entry rules

Data Socks Manager APIs provide functionality such as

- Enable/Disable Socks feature

Data L2TP Manager APIs provides functionality such as

- Set L2TP configuration to enable/disable L2TP, TCP Mss and MTU size
- Add / remove L2TP tunnel
- Query active L2TP configuration

Data Software Bridge Manager provides interface to enable packet acceleration for non-standard WLAN and Ethernet physical interfaces. It facilitates to configure a software bridge between the interface and Hardware accelerator. Its APIs provide functionality such as

- Add / remove a software bridge
- Query the software bridges configured in the system
- Enable / Disable the software bridge management

2.2.7 Network Selection and Serving System Management

Network Selection and Service System Management APIs in the Telematics SDK used for configuring the networks and preferences

Network Selection Manager APIs provide functionality such as

- request or set network selection mode (Manual or Automatic)
- scan for available networks
- request or set preferred networks list

Serving System Manager APIs provide functionality such as

- request and set service domain preference and radio access technology mode preference for searching and registering (CS/PS domain, RAT and operation mode)

2.2.8 C-V2X

The C-V2X sub-system contains APIs that support Cellular-V2X operation.

Cellular-V2X APIs in the Telematics SDK include Cv2xRadioManager and Cv2xRadio interfaces.

Cv2xRadioManager provides an interface to a C-V2X capable modem. The API includes methods for

- Enabling C-V2X mode
- Disabling C-V2X mode
- Querying the status of C-V2X
- Updating the C-V2X configuration via a config XML file

Cv2xRadio abstracts a C-V2X radio channel. The API includes methods for

- Obtaining the current capabilities of the radio
- Listen for radio state changes
- Creating and Closing an RX subscription
- Creating and Closing a TX event-driven flow
- Creating and Closing a TX semi-persistent-scheduling (SPS) flow
- Updating TX SPS flow parameters
- Update Source L2 Info

2.2.9 Audio

The Audio subSystem contains of APIs that support Audio operation.

Audio APIs in the Telematics SDK include AudioManager, AudioStream, AudioVoiceStream, AudioPlayStream, AudioCaptureStream interfaces.

AudioManager provides an interface for creation/deletion of audio stream. The API includes methods for

- Query readiness of subSystem
- Query supported "Device Types"
- Query supported "Stream Types"
- Creating Audio Stream
- Deleting Audio Stream

AudioStream abstracts the properties common to different stream types. The API includes methods for

- Query stream type
- Query routed device
- Set device
- Query volume details
- Set volume
- Query mute details

- Set mute

AudioVoiceStream along with inheriting AudioStream, provides additional APIs to manage voice call session as stated below.

- Start Voice Audio Operation
- Stop Voice Audio Operation
- Play DTMF tone
- Detect DTMF tone

AudioPlayStream along with inheriting AudioStream, provides additional APIs to manage audio play session as stated below.

- write audio samples
- Write audio samples for compressed audio format
- Stop Audio for compressed audio format
- Play compressed format audio on voice paths

AudioCaptureStream along with inheriting AudioStream, provides additional APIs to manage audio capture session as stated below.

- read audio samples

AudioLoopbackStream along with inheriting AudioStream, provides additional APIs to manage audio loopback session as stated below.

- Start loopback
- Stop loopback

AudioToneGeneratorStream along with inheriting AudioStream, provides additional APIs to manage audio tone generator session as stated below.

- Play tone
- Stop tone

Transcoder provides APIs to manage audio transcoder which is able to perform below operations.

- Convert one audio format to another

Audio SDK provides details of Supported "Device Types" and "Stream Types" in the Audio subSystem of Reference Telematics platform.

“Device Type” encapsulates the type of device supported in Reference Telematics platform. The representation of these devices would be made available via public header file <usr/include/telux/audio/AudioDefines.hpp>.

Example: DEVICE_TYPE_XXXX

Internally SDK Device Type mapped to Audio HAL devices as per <usr/include/system/audio.h>.

In current release it is mapped per below table.

Current Device Mapping Table:

| SDK Audio Device Representation | Audio HAL Representation |
|---------------------------------|--------------------------|
| DEVICE_TYPE_SPEAKER | AUDIO_DEVICE_OUT_SPEAKER |
| DEVICE_TYPE_MIC | AUDIO_DEVICE_IN_BACK_MIC |

However Device Mapping configurable as stated below. This configurability provides flexibility to map different Audio HAL devices to SDK representation.

Update tel.conf file with below details before boot of system.

NUM_DEVICES specifies the number of device types supported

DEVICE_TYPE specifies the SDK type of each device (in comma separated values)

DEVICE_DIR specifies the device direction for each device in order above (in comma separated values)

AHAL_DEVICE_TYPE specifies the mapped Audio HAL type of each device (in comma separated values)

Example:

Note: The default values provided here are based on QTI's reference design.

NUM_DEVICES=6

DEVICE_TYPE=1,2,3,257,258,259

DEVICE_DIR=1,1,1,2,2,2

AHAL_DEVICE_TYPE=2,1,4,2147483776,2147483652,2147483664

For any stream types, maximum device supported would be one. Single stream per multiple devices not supported. For voice stream Rx Device would decide corresponding Tx Device pair as decided by Audio HAL.

NOTE FOR SYSTEM INTEGRATORS:

The mapping of Audio devices to Audio HAL devices is static currently based on QTI's Reference Telematics platform. For custom platforms this mapping need to be updated.

“Stream Type” encapsulates the type of stream supported in Reference Telematics Platform. The representation of these stream types made available via public header file <usr/include/telux/audio/AudioDefines.hpp>.

Example: VOICE_CALL, PLAY, CAPTURE etc

Volume Support Table:

This table captures scenarios where the volume could be modified.

| Stream Type | Stream Direction (RX) | Stream Direction (Tx) |
|----------------|-----------------------|-----------------------|
| VOICE_CALL | Applicable | Not Applicable |
| PLAY | Applicable | Not Applicable |
| CAPTURE | Not Applicable | Applicable |
| LOOPBACK | Not Applicable | Not Applicable |
| TONE_GENERATOR | Not Applicable | Not Applicable |

In case QTI's reference design does not support volume for specific stream category, API responds with error.

Mute Support Table:

This table captures when stream could be muted and in which direction.

| Stream Type | Stream Direction (RX) | Stream Direction (Tx) |
|----------------|-----------------------|-----------------------|
| VOICE_CALL | Applicable | Applicable |
| PLAY | Applicable | Not Applicable |
| CAPTURE | Not Applicable | Applicable |
| LOOPBACK | Not Applicable | Not Applicable |
| TONE_GENERATOR | Not Applicable | Not Applicable |

In case QTI's reference design does not support mute for specific stream category, API responds with error.

2.2.10 Thermal Management

Thermal Management APIs in the Telematics SDK are used for reading thermal zone, cooling device and binding information.

Thermal Management APIs provide functionality such as

- get thermal zones with thermal zone description, current temperature, trip points and binding info
- get cooling devices with cooling device type, maximum and current cooling level
- get thermal zone by Id
- get cooling device by Id

2.2.11 Thermal Shutdown Management

Thermal Shutdown Management APIs provide functionality such as

- Query auto-shutdown mode.
- Set auto-shutdown mode.
- Get notifications on auto-shutdown mode updates.

2.2.12 TCU Activity Management

TCU-activity Manager APIs in Telematics SDK provides TCU-activity state related operations such as

- Query the current TCU-activity state
- Get notifications about the TCU-activity state changes
- Set the system to a desired activity state

2.2.13 Remote SIM

Remote SIM APIs in the Telematics SDK allow a device to use the WWAN capabilities of a SIM on another device.

Remote SIM APIs provide functionality such as

- Sending card events (reset, power up, errors) to the modem
- Sending/receiving APDU messages from/to the modem and remote SIM.
- Receiving operations from the modem (disconnect, power up, reset) to the remote SIM.

2.2.14 Modem Config Management

Modem Config APIs in the Telematics SDK provides modem config related functionalities such as

- Request modem config files from modem's storage.
- Load a modem config file to modem's storage.
- Activate/Deactivate a modem config file from modem's storage.
- Get Active config info details.
- Get/Set config auto selection mode.
- Delete a modem config file from modem's storage.
- Ability to get notified whenever a SW config file is activated.

2.2.15 Sensors

The sensor sub-system provides APIs to

- Configure and acquire continuous stream of data from an underlying sensor
- Create multiple clients for a given sensor, each of which can have their own configuration (sampling rate, batch count) for data acquisition.
- Query and control sensor features available on the hardware or those offered by the software framework. Availability of sensor features depend on the sensor hardware being used and the capabilities it offers.

In addition to the sensor sub-system APIs, configuration items relevant to the underlying sensors are also available in `/etc/sensors.conf` on the device filesystem. This includes the range for the sensors, the limits on sampling frequency and batch count among other parameters.

2.2.16 Platform

The platform sub-system provides APIs to

- Register and listen to filesystem events such as EFS backup and restore notifications
- Request EFS backup

2.2.17 Debug Logger

Logging APIs in the Telematics SDK provides logging related functionalities such as

- Runtime configurable logging to console, diag and file.
- Possible LOG_LEVEL values are NONE, PERF, ERROR, WARNING, INFO, DEBUG.

2.3 Security

2.3.1 SELinux

SELinux is an access control framework provided by the Linux kernel. It provides a mechanism to restrict/control access to system resources such as file nodes and sockets. SELinux framework expects any process running in userspace to declare all its interactions with the system resources in the form of SELinux policies. On platforms enabled with SELinux, an app that uses an SDK API would also need to declare its usage through SELinux policies to ensure that it has all the required permissions. In order for an application to use the SDK's APIs on such a platform, SELinux interfaces have been defined that the app needs to declare in its policies.

Listed below are the interfaces to be used when an app uses APIs belonging to a given namespace/class of the SDK.

Note For the below list, let us consider the application's security context to be `app_t` (also called domain context).

| SDK Namespace/Class | SELinux interface | Arguments | Usage |
|------------------------------|------------------------------------|----------------|---|
| tel | telux_allow_tel() | domain context | telux_allow_tel(app_t) |
| data | telux_allow_data() | domain context | telux_allow_data(app_t) |
| audio | telux_allow_audio() | domain context | telux_allow_audio(app_t) |
| loc | telux_allow_loc() | domain context | telux_allow_loc(app_t) |
| IThermalManager | telux_allow_↔ thermalmanager() | domain context | telux_allow_↔ thermalmanager(app_t) |
| IThermalShutdown↔ Manager | telux_allow_↔ thermalshutdown() | domain context | telux_allow_↔ thermalshutdown(app_t) |
| power | telux_allow_power() | domain context | telux_allow_power(app↔ _t) |
| config | telux_allow_↔ modemconfig() | domain context | telux_allow_↔ modemconfig(app_t) |
| cv2x | telux_allow_v2x() | domain context | telux_allow_v2x(app_t) |
| sensor | telux_allow_sensor() | domain context | telux_allow_sensor(app↔ _t) |
| platform | telux_allow_platform() | domain context | telux_allow_↔ platform(app_t) |

The following example illustrates how an application can incorporate the SELinux interfaces exposed by SDK in its SELinux policies. Below code snippet is part of a Type Enforcement (TE) file of the application which grants required permissions to perform all SDK data operations.

```
policy_module(application, 1.0)
type app_t;
```

```
#Granting SDK data client permissions to the application  
telux_allow_data(app_t);
```

3 Call Flow Diagrams

3.1 Application initialization call flow

TelSDK initializes various sub-systems during start-up. It marks each sub-system as ready once the initialization procedures are completed for that sub-system. The application has to wait until the corresponding sub-system is ready on which it needs to make API requests. TelSDK provides APIs to check whether sub-system is ready or not.

Example:

3.1.1 Phone manager initialization

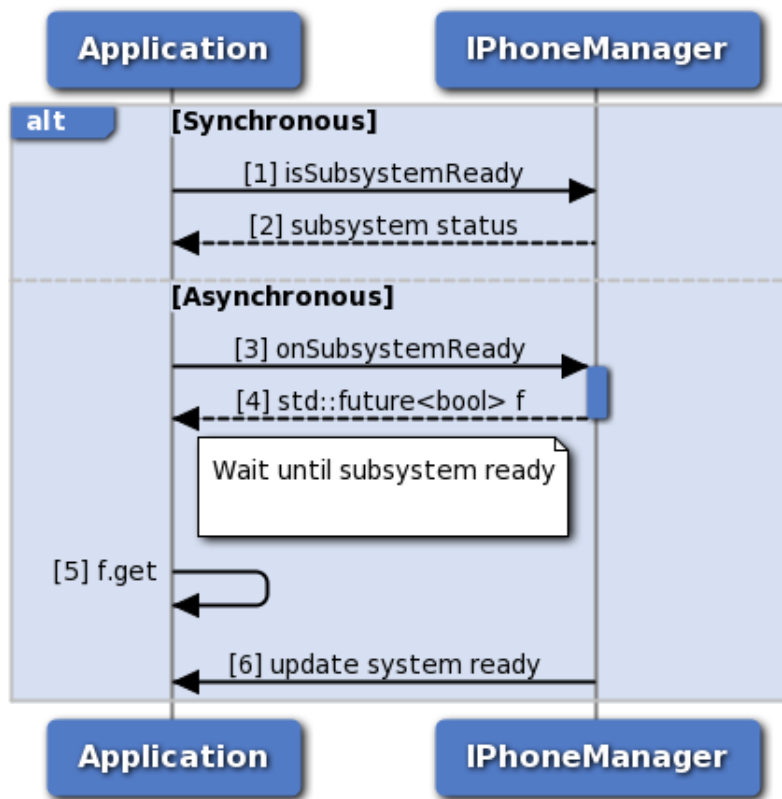


Figure 3-1 Phone manager initialization

1. Application can use iPhoneManager::isSubsystemReady to determine if the system is ready.
2. The application receives the status i.e. either true or false whether sub-system is ready or not.

3. If it is not ready, then the application could use `onSubsystemReady` which returns `std::future`.
4. `PhoneManager` notifies the application when the subsystem is ready through the `std::future` object.
5. The application waits until the asynchronous operation i.e `onSubsystemReady` completes.
6. `PhoneManager` updates the application once sub-system initialization completes.

3.2 Telephony

3.2.1 Dial call flow

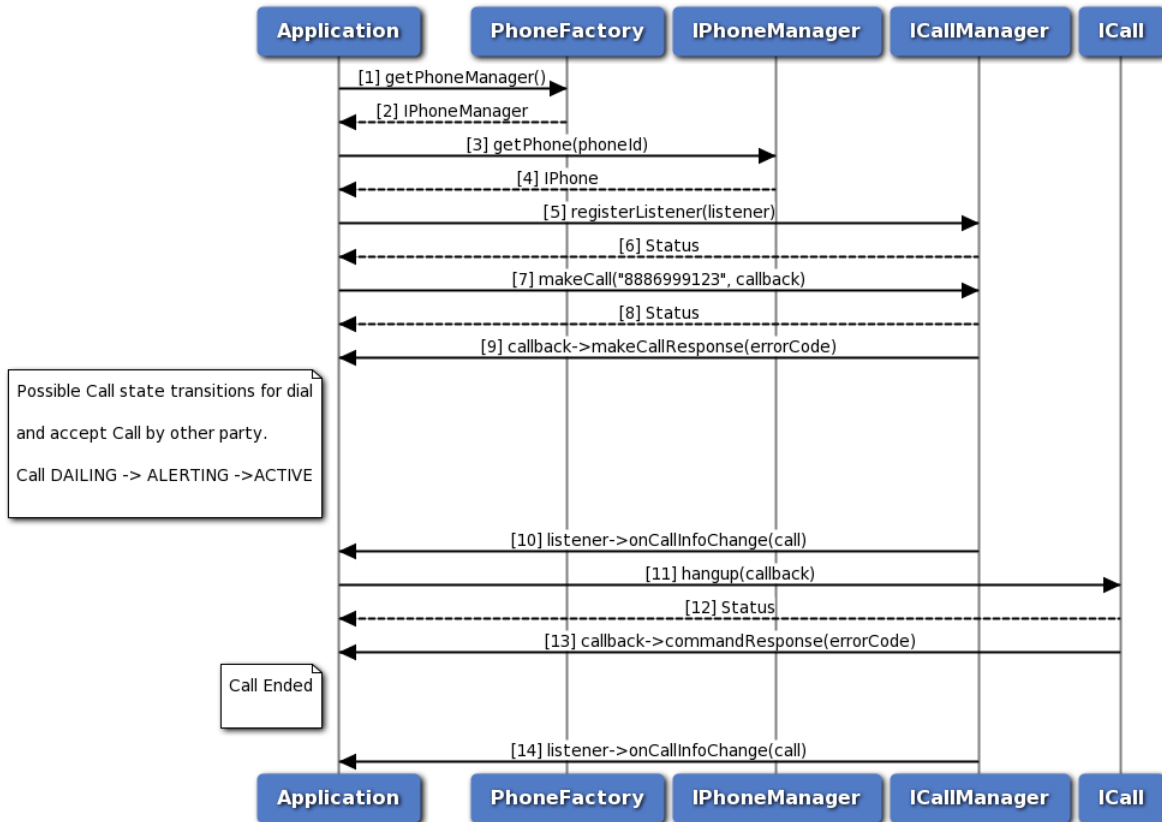


Figure 3-2 Dial call flow

1. The application gets the `PhoneManager` object using `PhoneFactory`.
2. The application receives the `PhoneManager` object in order to get `Phone`.
3. The application gets the `Phone` object for given phone identifier using `PhoneManager`.
4. `PhoneManager` returns `Phone` object to application. In case phone identifier is not specified, it returns default phone.
5. The application registers a listener with `CallManager` to listen to the call info change notifications like `DIALING`, `ALERTING`, `ACTIVE` and `ENDED`.
6. The application receives the status like `SUCCESS` or `INVALIDPARAM` based on registration of listener to `CallManager`.

7. The application dials a number by using makeCall API, optionally specifying callback to get asynchronous response.
8. The application receives the status like SUCCESS, INVALIDPARAM and FAILED etc based on the execution of makeCall API.
9. Optionally, the application gets asynchronous response for makeCall using makeCallResponseCallback.
10. The application receives callback on call info change like DIALING/ALERTING/ACTIVE when other party accepts the call.
11. The application sends hangup command to hangup the call, optionally specifying callback to get asynchronous response.
12. The application receives the status like SUCCESS, FAILED etc based on the execution of hangup API.
13. Optionally, the application gets asynchronous response for hangup using CommandResponseCallback.
14. The application receives callback on call info change i.e Call Ended from CallManager.

3.2.2 ECall call flow

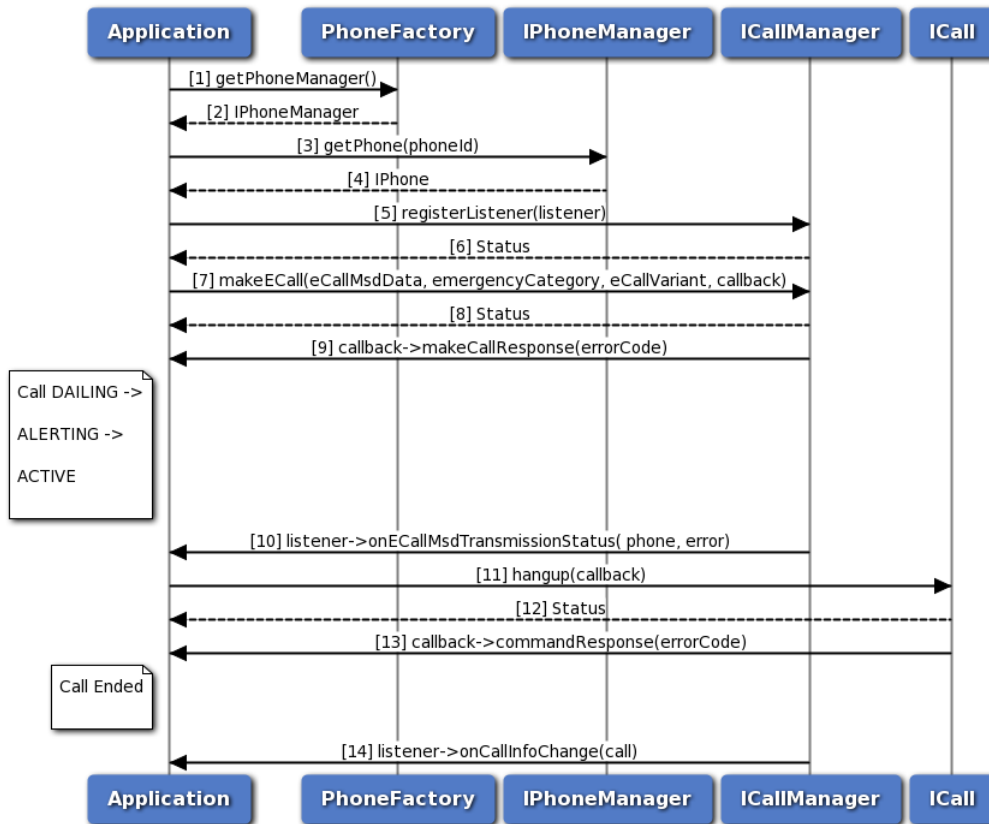


Figure 3-3 ECall call flow

1. The application gets the PhoneManager object using PhoneFactory.

2. The application receives the PhoneManager object in order to get Phone.
3. The application gets the Phone object optionally specifying phone identifier using PhoneManager.
4. PhoneManager returns Phone object to application, returns default phone in case phone identifier is not specified.
5. The application registers a listener with CallManager to listen to the call info change notifications like DIALING, ALERTING, ACTIVE etc.
6. The application receives the status like SUCCESS, FAILED etc based on registration of listener from CallManager.
7. The application dials an emergency call by using makeECall API, optionally specifying callback to get asynchronous response.
8. The application receives the status like SUCCESS, FAILED etc based on the execution of makeECall API.
9. Optionally, the application gets asynchronous response for makeECall using makeCallResponseCallback.
10. CallManager sends ecall msd transmission status to the application by using onECallMsdTransmissionStatus API.
11. The application sends hangup command to hangup the call, optionally gets asynchronous response using callback.
12. The application receives the status like SUCCESS, FAILED etc based on the execution of hangup API.
13. Optionally, the application gets asynchronous response for hangup using CommandResponseCallback.
14. CallManager sends call info change i.e Call Ended to the application by using onCallInfoChange callback function.

3.2.3 Signal strength call flow

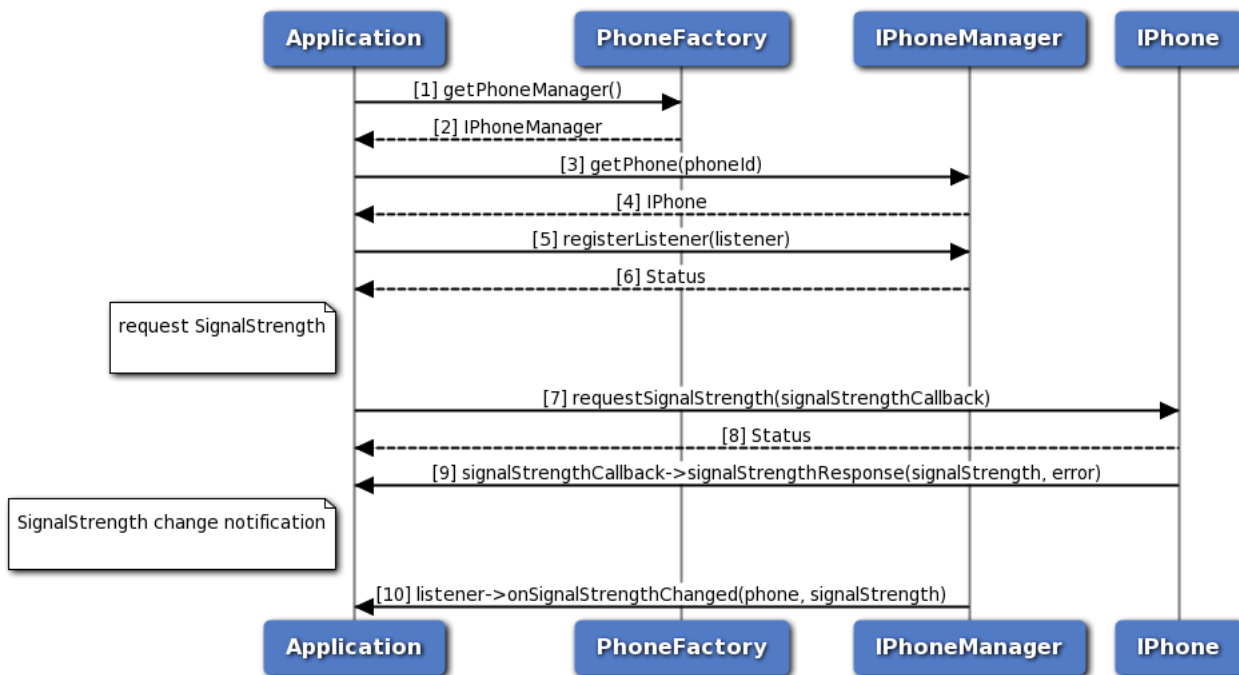


Figure 3-4 Signal strength call flow

1. The application gets PhoneManager object using PhoneFactory.
2. The application receives the PhoneManager object in order to get Phone instance.
3. The application gets phone instance for a given phone identifier using PhoneManager object.
4. PhoneManager returns iPhone object to the application.
5. Application registers the listener to get notification for signal strength change.
6. The application receives the status i.e. either SUCCESS or FAILED based on the registration of the listener.
7. The application requests for signal strength and optionally, gets asynchronous response using ISignalStrengthCallback.
8. The application receives the status i.e. either SUCCESS or FAILED based on execution of requestSignalStrength API in SapCardManager.
9. Optionally, the response for signal strength request is received by the application.
10. Application receives a notification when there is a change in signal strength.

3.2.4 Answer, Reject, RejectWithSMS call flow

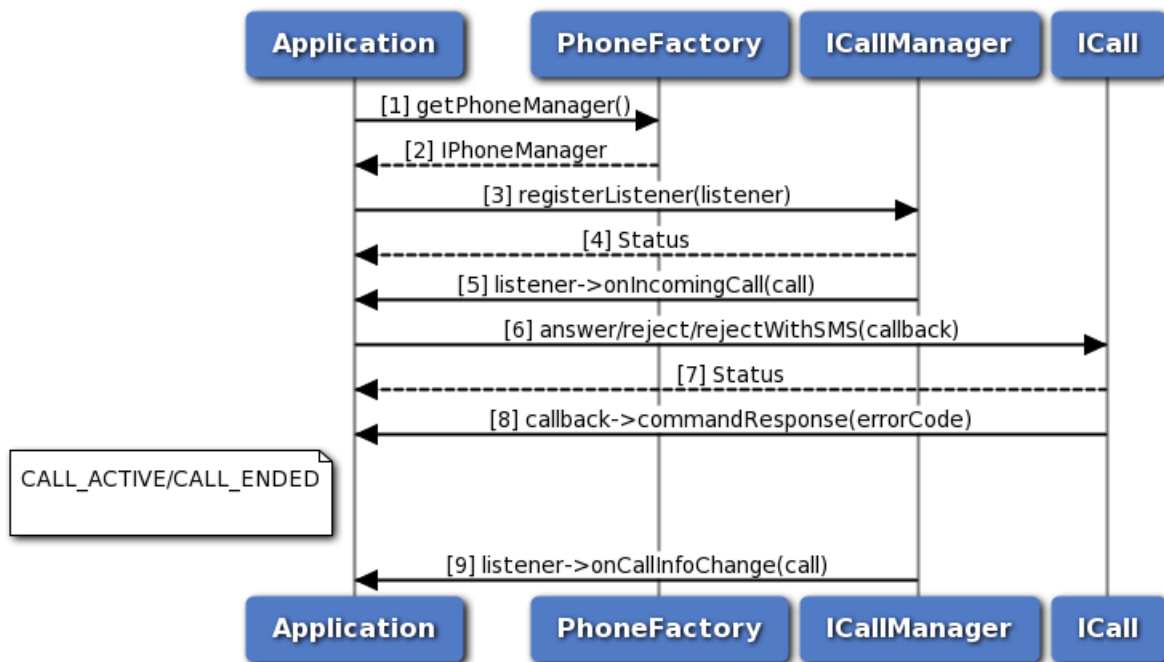


Figure 3-5 Answer, Reject, RejectWithSMS call flow

1. The application gets the PhoneManager object using PhoneFactory.
2. The application receives the PhoneManager object in order to register listener.
3. The application registers a listener with CallManager to listen incoming call notifications.
4. The application receives the status like SUCCESS, FAILED etc based on registration of listener from CallManager.
5. The application receives onIncomingCall notification when there is an incoming call.
6. The application performs answer/reject/rejectWithSMS operation using ICall.
7. The application receives the status like SUCCESS, FAILED etc based on execution of answer/reject/rejectWithSMS.
8. Optionally, the application gets asynchronous response for answer/reject/rejectWithSMS using CommandResponseCallback.
9. The CallManager sends call info change i.e CALL_ACTIVE or CALL_ENDED to the application by using onCallInfoChange callback function.

3.2.5 Hold call flow

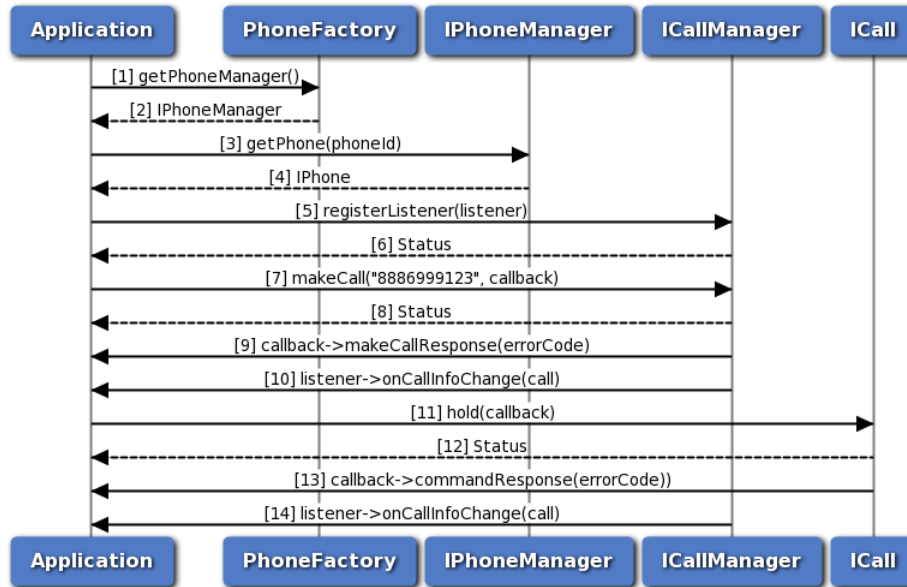


Figure 3-6 Hold call flow

1. The application gets the PhoneManager object using PhoneFactory.
2. The application receives the PhoneManager object in order to get Phone.
3. The application gets the Phone object for given phone identifier using PhoneManager.
4. PhoneManager returns Phone object to application, returns default phone in case phone identifier is not specified.
5. The application registers a listener with CallManager to listen to the call info change notifications like DIALING, ALERTING, ACTIVE etc.
6. The application receives the status like SUCCESS or INVALIDPARAM based on registration of listener to CallManager.
7. The application dials a number by using makeCall API, optionally specifying callback to get asynchronous response.
8. The application receives the status like SUCCESS, INVALIDPARAM and FAILED etc based on the execution of makeCall API.
9. Optionally, the application gets asynchronous response for makeCall using makeCallResponseCallback.
10. The CallManager sends call info change i.e CALL_ACTIVE to application by using onCallInfoChange API.
11. The application sends hold command to hold the call, optionally specifying callback to get asynchronous response.
12. The application receives the status like SUCCESS, FAILED etc based on the execution of hold API.
13. Optionally, the application gets asynchronous response for hold using CommandResponseCallback.
14. The application receives call info change i.e CALL_ON_HOLD from CallManager.

3.2.6 Hold, Conference, Swap call flow

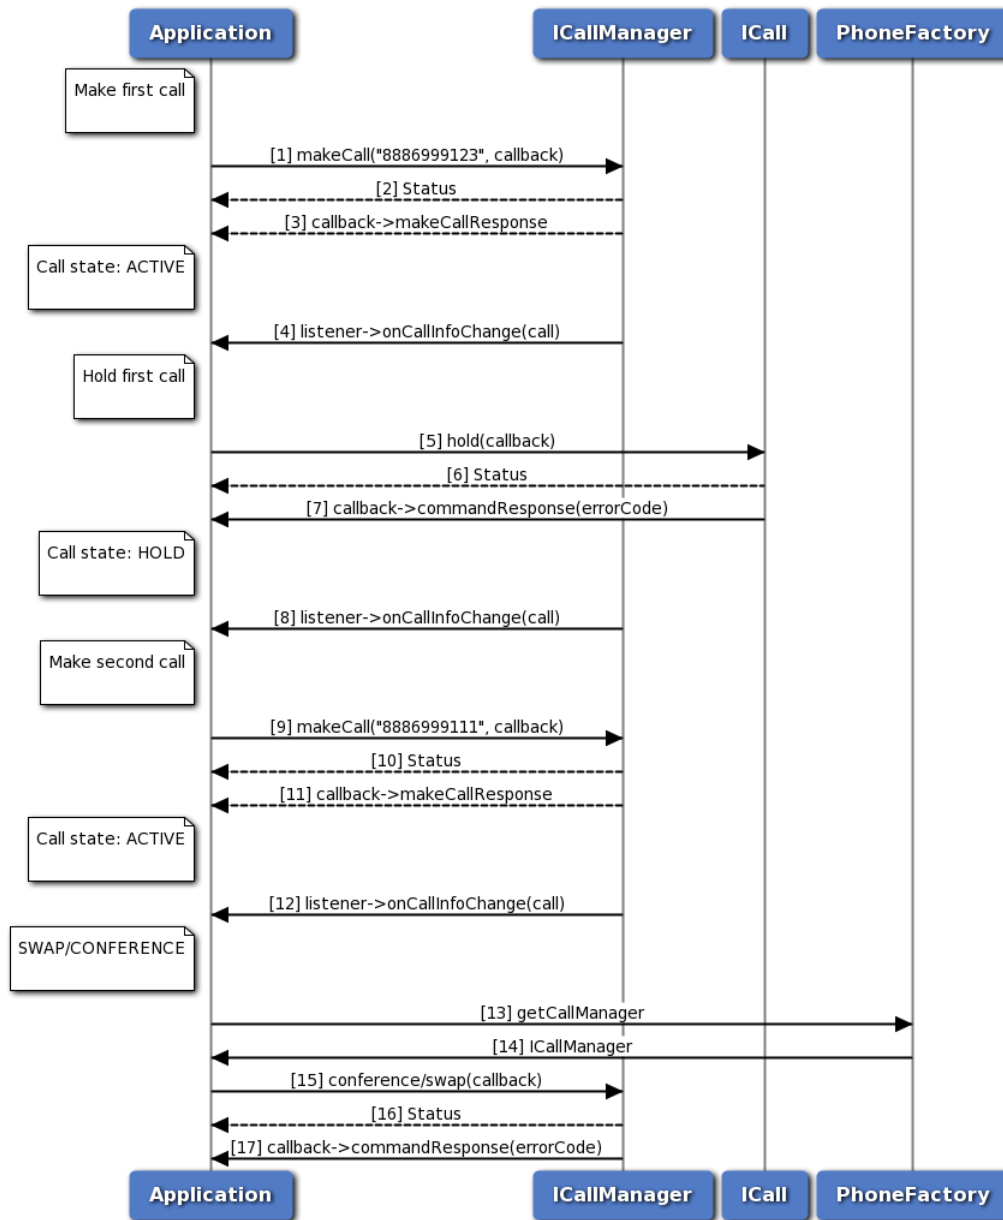


Figure 3-7 Hold, Conference, Swap call flow

1. The application makes first call using ICall.
2. The application receives the status like SUCCESS, FAILED etc based on execution of makeCall operation.
3. Optionally, the application gets asynchronous response for makeCall using makeCallResponseCallback.
4. The CallManager sends call info change i.e CALL_ACTIVE to application by using onCallInfoChange API.
5. The application sends hold command to hold the call, optionally specifying callback to get

- asynchronous response.
6. The application receives the status like SUCCESS, FAILED etc based on the execution of hold API.
 7. Optionally, the application gets asynchronous response for hold using CommandResponseCallback.
 8. The application receives call info change i.e CALL_ON_HOLD from CallManager.
 9. The application makes second call using ICall.
 10. The application receives the status like SUCCESS, FAILED etc based on execution of makeCall operation.
 11. Optionally, the application gets asynchronous response for makeCall using makeCallResponseCallback.
 12. The CallManager sends call info change i.e CALL_ACTIVE to application by using onCallInfoChange API.
 13. The application requests the PhoneFactory to get ICallManager object.
 14. The application receives the ICallManager object using PhoneFactory.
 15. The application performs conference/swap operation using ICallManager by passing first call and second call. optionally application can pass callback to receive hold response asynchronously.
 16. The application receives the status like SUCCESS, FAILED etc based on the execution of conference/swap API.
 17. Optionally, the application gets asynchronous response for conference/swap using CommandResponseCallback.

3.2.7 SMS call flow

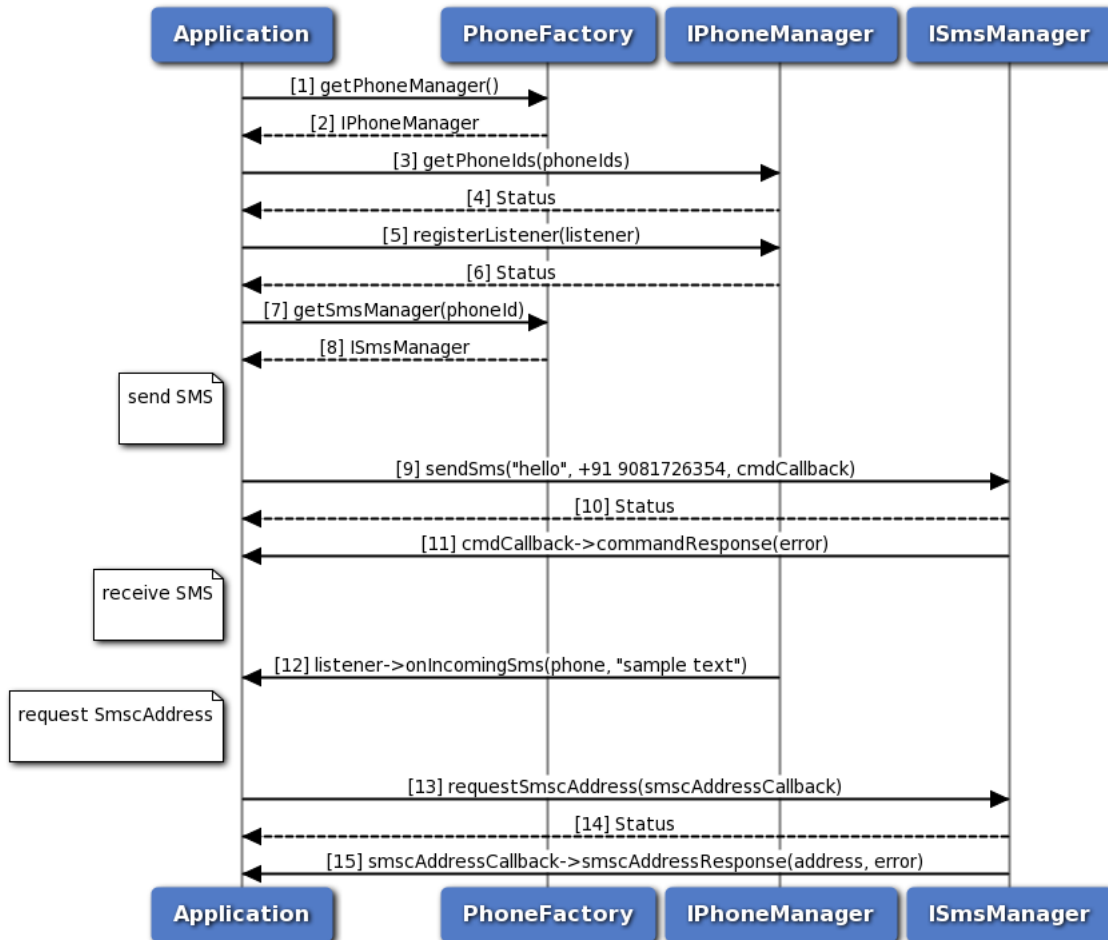


Figure 3-8 SMS call flow

1. Application gets PhoneManager object using PhoneFactory.
2. PhoneFactory returns the PhoneManager object to application in order to get list of phone identifiers.
3. The application retrieves the list of phone identifier on the device using PhoneManager object.
4. Application receives the status i.e. either SUCCESS or FAILED based on the execution of getPhoneIds API in PhoneManager.
5. Application registers the listener for incoming SMS with IPhoneManager.
6. The application receives the status i.e. either SUCCESS or INVALIDPARAM based on successful registration of the listener.
7. The application gets SmsManager object corresponding to specific phone identifier.
8. PhoneFactory returns the SmsManager object to application in order to perform operations like send SMS and get SMSC address.
9. The application sends SMS to the receiver address and optionally gets asynchronous response using CommandResponseCallback.
10. Application receives the status i.e. either SUCCESS or FAILED based on execution of sendSms API

in SmsManager.

11. Optionally, the response for send SMS is received by the application.
12. Application gets notified for incoming SMS.
13. The application requests for SmscAddress and optionally gets asynchronous response using ISmscAddressCallback.
14. Application receives the status i.e. either SUCCESS or FAILED based on successful execution of requestSmscAddress API in SmsManager.
15. Optionally, the application receives the SMSC address on success or gets error on failure in the command response callback.

3.2.8 Radio and Service state call flow

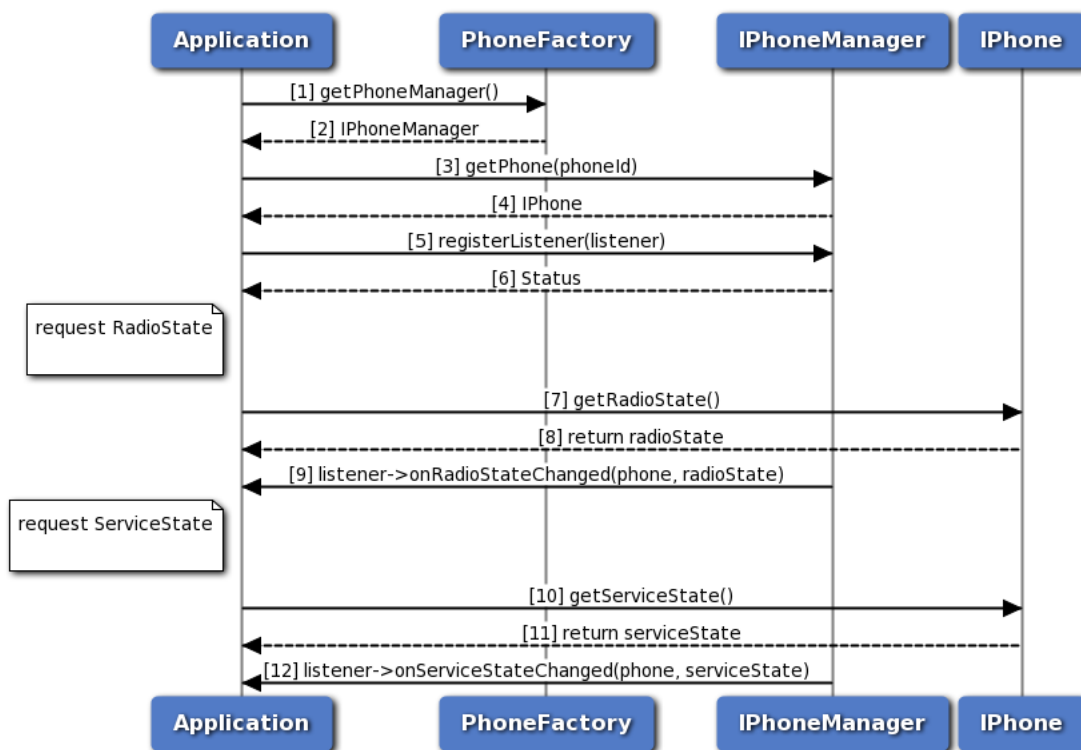


Figure 3-9 Radio and Service state call flow

1. The application gets PhoneManager object using PhoneFactory.
2. The application receives the PhoneManager object in order to get Phone instance.
3. The application gets phone instance for a given phone identifier using PhoneManager object.
4. PhoneManager returns IPhone object to the application.
5. Application registers the listener to get notifications for radio and service state change.
6. The application receives the status i.e. either SUCCESS or FAILED based on the registration of the listener.
7. The application request the Phone to get radio state.

8. The application receives the radio state like RADIO_STATE_ON, OFF or UNAVAILABLE.
9. Application receives a notification when there is a change in radio state.
10. The application request the Phone to get service state.
11. The application receives the service state like IN_SERVICE, OUT_OF_SERVICE, EMERGENCY_ONLY or RADIO_OFF.
12. Application receives a notification when there is a change in service state.

3.2.9 Network Selection Manager call flow

Network selection manager provides APIs to get and set network selection mode, get and set preferred networks and perform network scan for available networks. Registered listener will get notified for the change in network selection mode.

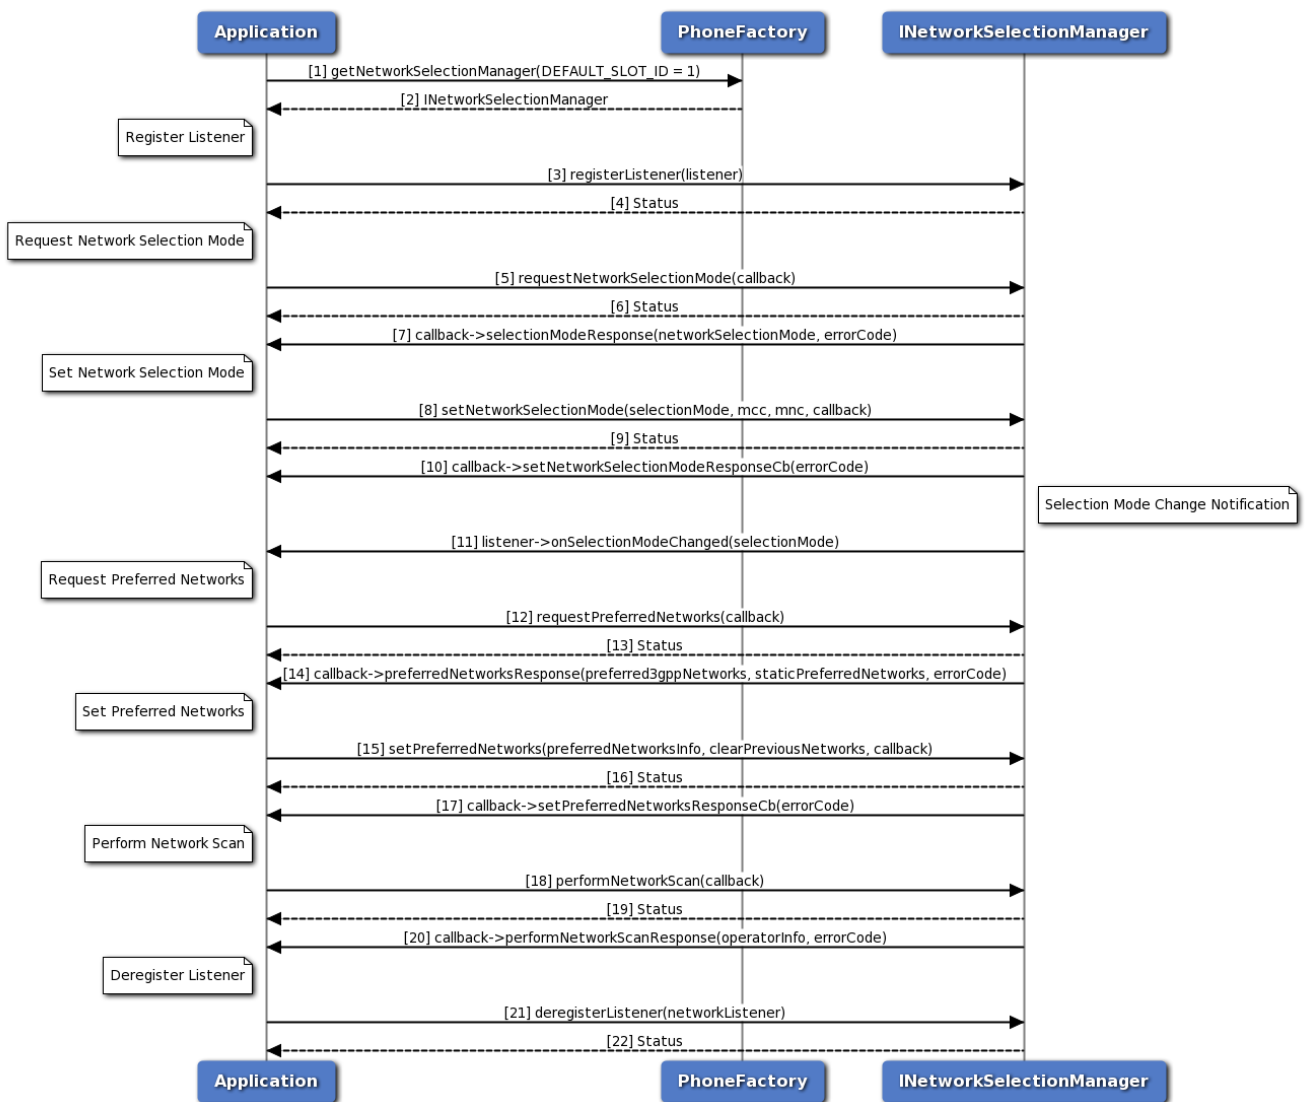


Figure 3-10 Network selection manager call flow

1. Application requests phone factory for network selection manager.
2. Phone factory returns INetworkSelectionManager object using which application will register or deregister a listener.
3. Application can register a listener to get notifications for network selection mode change.
4. Status of register listener i.e. either SUCCESS or other status will be returned to the application.
5. Application requests for network selection mode using INetworkSelectionManager object and gets asynchronous response using SelectionModeResponseCallback.
6. The application receives the status i.e. either SUCCESS or other status based on the execution of requestNetworkSelectionMode API.
7. The response for get network selection mode request is received by the application.
8. The application can also set network selection mode and optionally gets asynchronous response using ResponseCallback. MCC and MNC are optional for AUTOMATIC network selection mode.
9. Application receives the status i.e. either SUCCESS or other status based on the execution of setNetworkSelectionMode API.
10. Optionally the response for set network selection mode request is received by the application.
11. Registered listener will get notified for the network selection mode change.
12. Similarly, the application requests for preferred networks using INetworkSelectionManager object and gets asynchronous response using PreferredNetworksCallback.
13. The application receives the status i.e. either SUCCESS or other status based on the execution of requestPreferredNetworks API.
14. The response for get preferred networks request i.e. 3GPP preferred network list and static 3GPP preferred network list is received by the application asynchronously. Higher priority networks appear first in the list. The networks that appear in the 3GPP Preferred Networks list get higher priority than the networks in the static 3GPP preferred networks list.
15. The application can set 3GPP preferred network list and optionally gets asynchronous response using ResponseCallback. If clear previous networks flag is false then new 3GPP preferred network list is appended to existing preferred network list. If flag is true then old list is flushed and new 3GPP preferred network list is added.
16. Application receives the status i.e. either SUCCESS or other status based on the execution of setPreferredNetworks API.
17. Optionally the response for set preferred networks request is received by the application.
18. The application can perform network scan for available networks using INetworkSelectionManager object and gets asynchronous response using NetworkScanCallback.
19. Application receives the status i.e. either SUCCESS or other status based on the execution of performNetworkScan API.
20. Network name, MCC, MNC and status of the operator will be received by the application.
21. Application can deregister a listener there by it would not get notifications.
22. Status of deregister listener i.e. either SUCCESS or other status will be returned to the application.

3.2.10 Serving System Manager Call Flow

Serving system manager provides APIs to get and set RAT mode preference and get and set service domain preference. Registered listener will get notified for the change in RAT mode and service domain preference change.

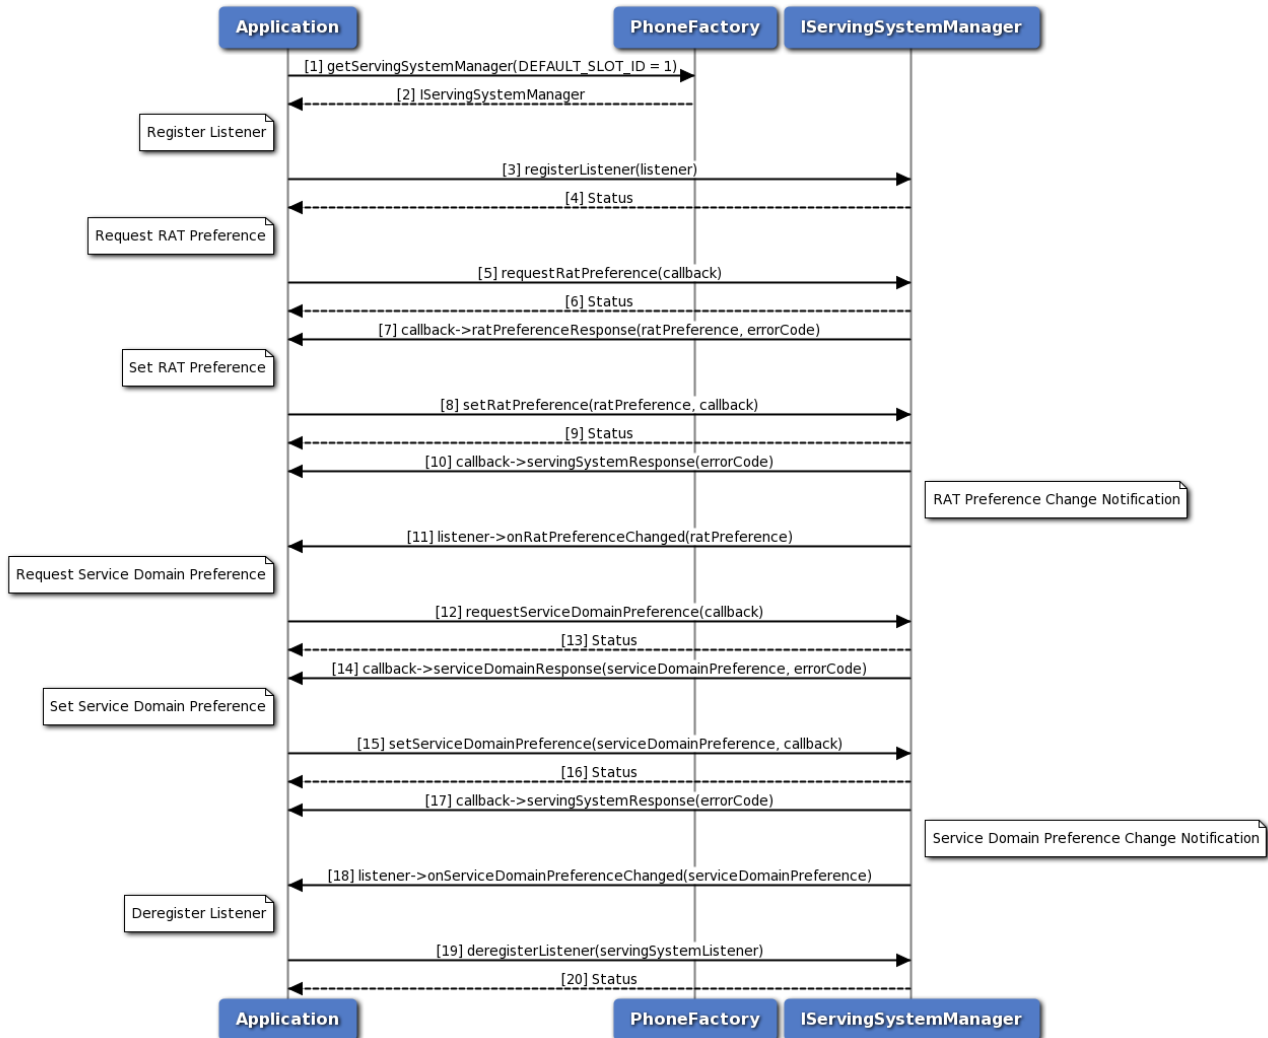


Figure 3-11 Serving System Manager Call Flow

1. Application requests phone factory for serving system manager.
2. Phone factory returns `IServingSystemManager` object using which application will register or deregister a listener.
3. Application can register a listener to get notifications for RAT mode and service domain preference changes.
4. Status of register listener i.e. either SUCCESS or other status will be returned to the application.
5. Application requests for RAT mode preference using `IServingSystemManager` object and gets asynchronous response using `RatPreferenceCallback`.

6. The application receives the status i.e. either SUCCESS or other status based on the execution of requestRatPreference API.
7. The response for get RAT preference request is received by the application.
8. The application can also set RAT mode preference and optionally gets asynchronous response using ResponseCallback.
9. Application receives the status i.e. either SUCCESS or other status based on the execution of setRatPreference API.
10. Optionally the response for set RAT preference request is received by the application.
11. Registered listener will get notified for the RAT mode preference change.
12. Application requests for service domain preference using IServingSystemManager object and gets asynchronous response using ServiceDomainPreferenceCallback.
13. The application receives the status i.e. either SUCCESS or other status based on the execution of requestServiceDomainPreference API.
14. The response for get service domain preference request is received by the application.
15. The application can also set service domain preference and optionally gets asynchronous response using ResponseCallback.
16. Application receives the status i.e. either SUCCESS or other status based on the execution of setServiceDomainPreference API.
17. Optionally the response for set service domain preference request is received by the application.
18. Registered listener will get notified for the service domain preference change.
19. Application can deregister a listener there by it would not get notifications.
20. Status of deregister listener i.e. either SUCCESS or other status will be returned to the application.

3.3 Card Services

3.3.1 Get applications call flow

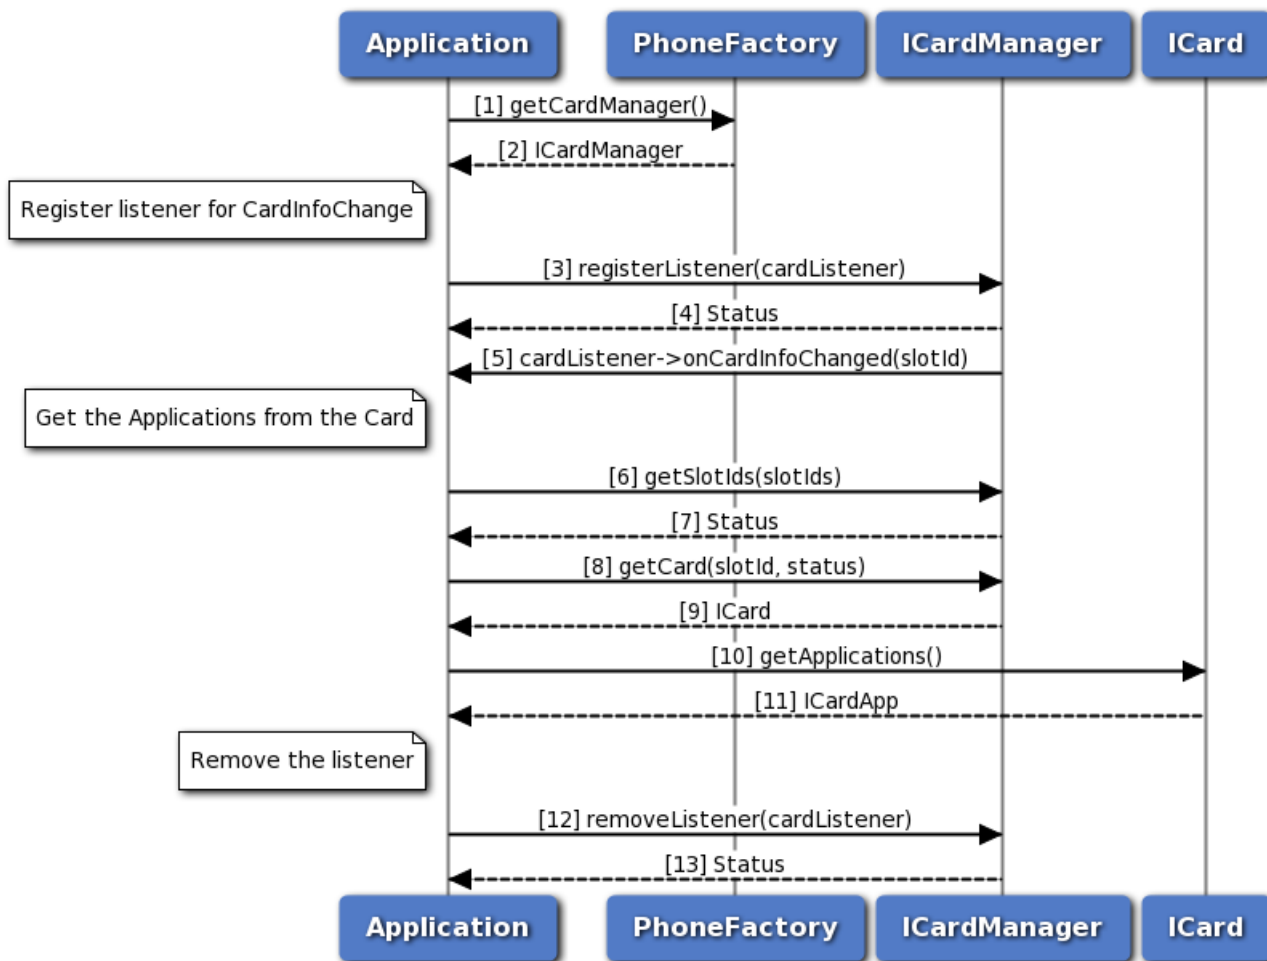


Figure 3-12 Get applications call flow

1. Application gets the CardManager object from PhoneFactory.
2. Application receives CardManager object in order to perform operations like getSlotIds and getCard.
3. The application registers a listener for Card info change event with CardManager.
4. Application receives the status i.e. either SUCCESS or INVALIDPARAM based on the registration of listener.
5. The response from onCardInfoChanged is received by the application whenever there is card info change.
6. The application gets the slotIds from the sub-system using CardManager.
7. Application receives the status i.e. either SUCCESS or NOTREADY along with the updated slotIds.
8. Then, the application sends request to CardManager to get Card object for a specific slotId.
9. Application receives Card object from CardManager in order to perform card operation like getApplications.

10. The application gets the CardApps from Card object.
11. The application receives CardApps which contain information such as AppId, AppType and AppState.
12. Now the application removes the listener associated with CardManager.
13. Application receives the status i.e. either SUCCESS or NOSUCH for the removal of listener.

3.3.2 Transmit APDU call flow

3.3.2.1 On logical channel

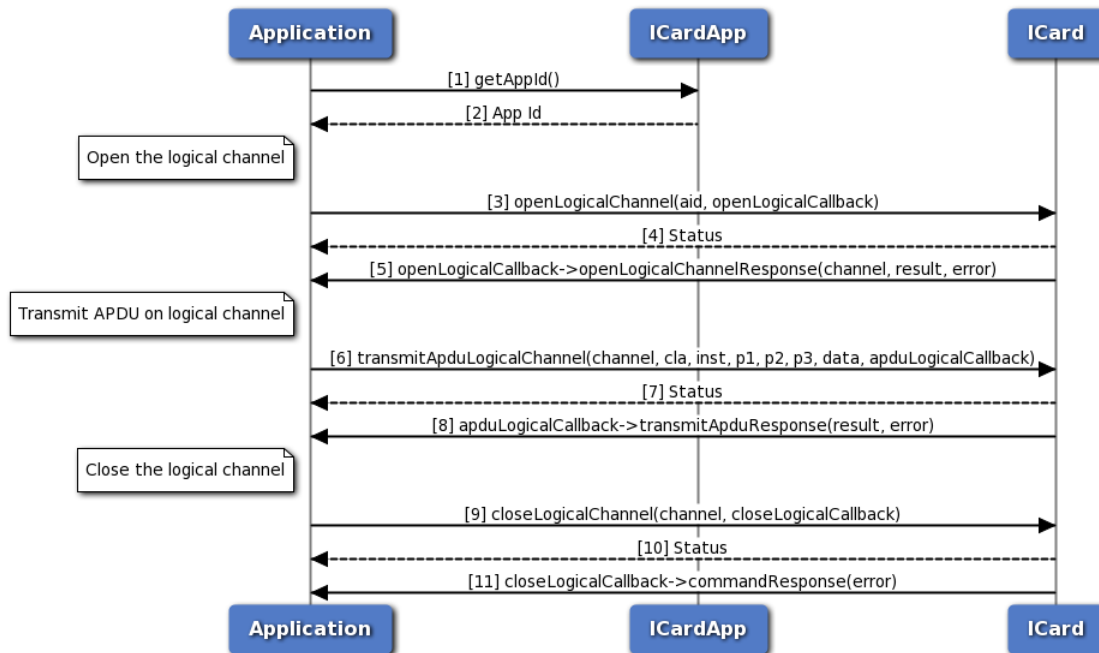


Figure 3-13 On logical channel

1. The Application requests CardApp for the SIM application identifier.
2. The application receives the application identifier to perform open logical channel.
3. Application sends request to open the logical channel with the application identifier and optionally, gets asynchronous response in OpenLogicalChannelCallback.
4. The application receives the status i.e. either SUCCESS or FAILED based on execution of openLogicalChannel API.
5. Optionally, the application receives the response which contains either channel number on success or error in case of failure.
6. Then, the application transmits the APDU data on logical channel using the channel obtained earlier. Optionally, gets asynchronous response in TransmitAduResponseCallback.
7. The application receives the status i.e. either SUCCESS or FAILED based on execution of transmitAduLogicalChannel API.
8. Optionally, the application receives the response which contains either result on success or error in

case of failure.

9. Finally, the application closes the logical channel that is opened to transmit APDU and optionally, gets asynchronous response in `CommandResponseCallback`.
10. The application receives the status i.e. either `SUCCESS` or `FAILED` based on execution of `closeLogicalChannel` API.
11. Optionally, the application receives the response which contains error in case of failure.

3.3.2.2 On basic channel

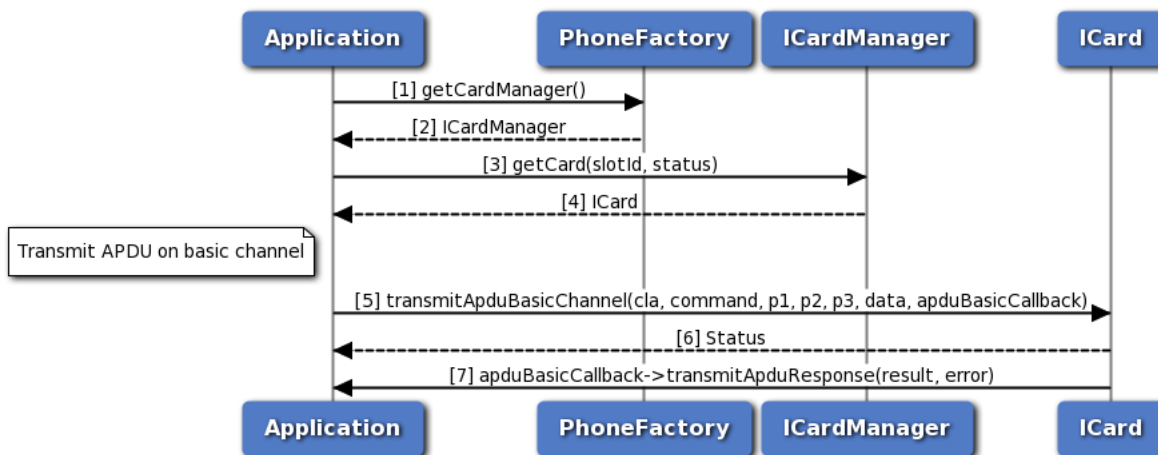


Figure 3-14 On basic channel

1. Application gets the `ICardManager` object from `PhoneFactory`.
2. Application receives `ICardManager` object in order to perform operation like `getCard`.
3. The application gets `ICard` object for a specific `slotId` from `ICardManager`.
4. Application receives `ICard` object in order to perform card operation like `transmitApuBasicChannel`.
5. The application transmits APDU data on basic channel and optionally, gets asynchronous response in `TransmitApuResponseCallback`.
6. The application receives the status i.e. either `SUCCESS` or `FAILED` based on execution of `transmitApuBasicChannel` API.
7. Optionally, the application receives the response which contains either result on success or error in case of failure.

3.3.3 SAP card manager call flow

3.3.3.1 Request card reader status, Request ATR, Transmit APDU call flow

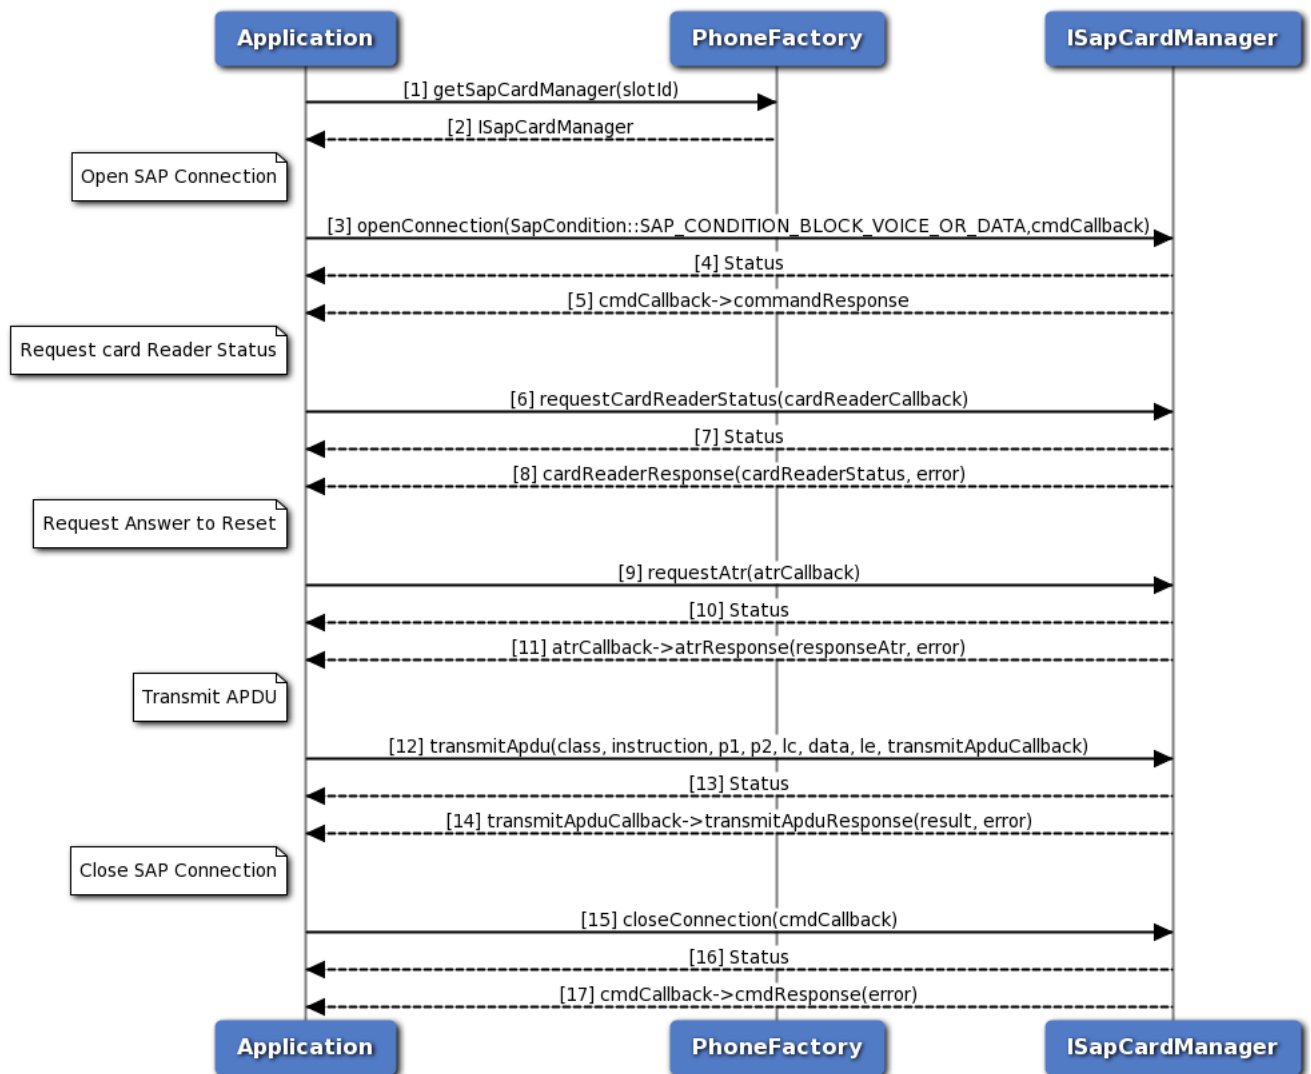


Figure 3-15 Request card reader status, Request ATR, Transmit APDU call flow

{sap_card_operations.png,Request card reader status, Request ATR, Transmit APDU call flow,80,80,Request card reader status, Request ATR, Transmit APDU call flow }

1. The application gets SapCardManager object corresponding to slotId using PhoneFactory.
2. The application receives the SapCardManager object in order to perform SAP operations like request ATR, Card Reader Status and transmit APDU.
3. The application opens SIM Access Profile(SAP) connection with SIM card using default SAP condition (i.e. SAP_CONDITION_BLOCK_VOICE_OR_DATA) and optionally, gets asynchronous response using CommandResponseCallback.
4. The application receives the status i.e. either SUCCESS or FAILED based on execution of openConnection API in SapCardManager.
5. Optionally, the response for openConnection is received by the application.

6. The application sends request card reader status command and optionally, gets asynchronous response using ICardReaderCallback.
7. The application receives the status i.e. either SUCCESS or FAILED based on execution of requestCardReaderStatus API in SapCardManager.
8. Optionally, the response for card reader status is received by the application.
9. Similarly, the application can send SAP Answer To Reset command and optionally, gets asynchronous response using IAttrResponseCallback.
10. The application receives the status i.e. either SUCCESS or FAILED based on execution of requestAttr API in SapCardManager.
11. Optionally, the response for SAP Answer To Reset is received by the application.
12. Similarly, the application sends the APDU on SAP mode and optionally, gets asynchronous response using ISapTransmitApduResponseCallback.
13. The application receives the status i.e. either SUCCESS or FAILED based on execution of transmitApdu API in SapCardManager.
14. Optionally, the response for transmit APDU is received by the application.
15. Now the application closes the SAP connection with SIM and optionally, gets asynchronous response using CommandResponseCallback.
16. The application receives the status i.e. either SUCCESS or FAILED based on execution of closeConnection API in SapCardManager.
17. Optionally, the response for SAP close connection is received by the application.

3.3.3.2 SIM Turn off, Turn on and Reset call flow

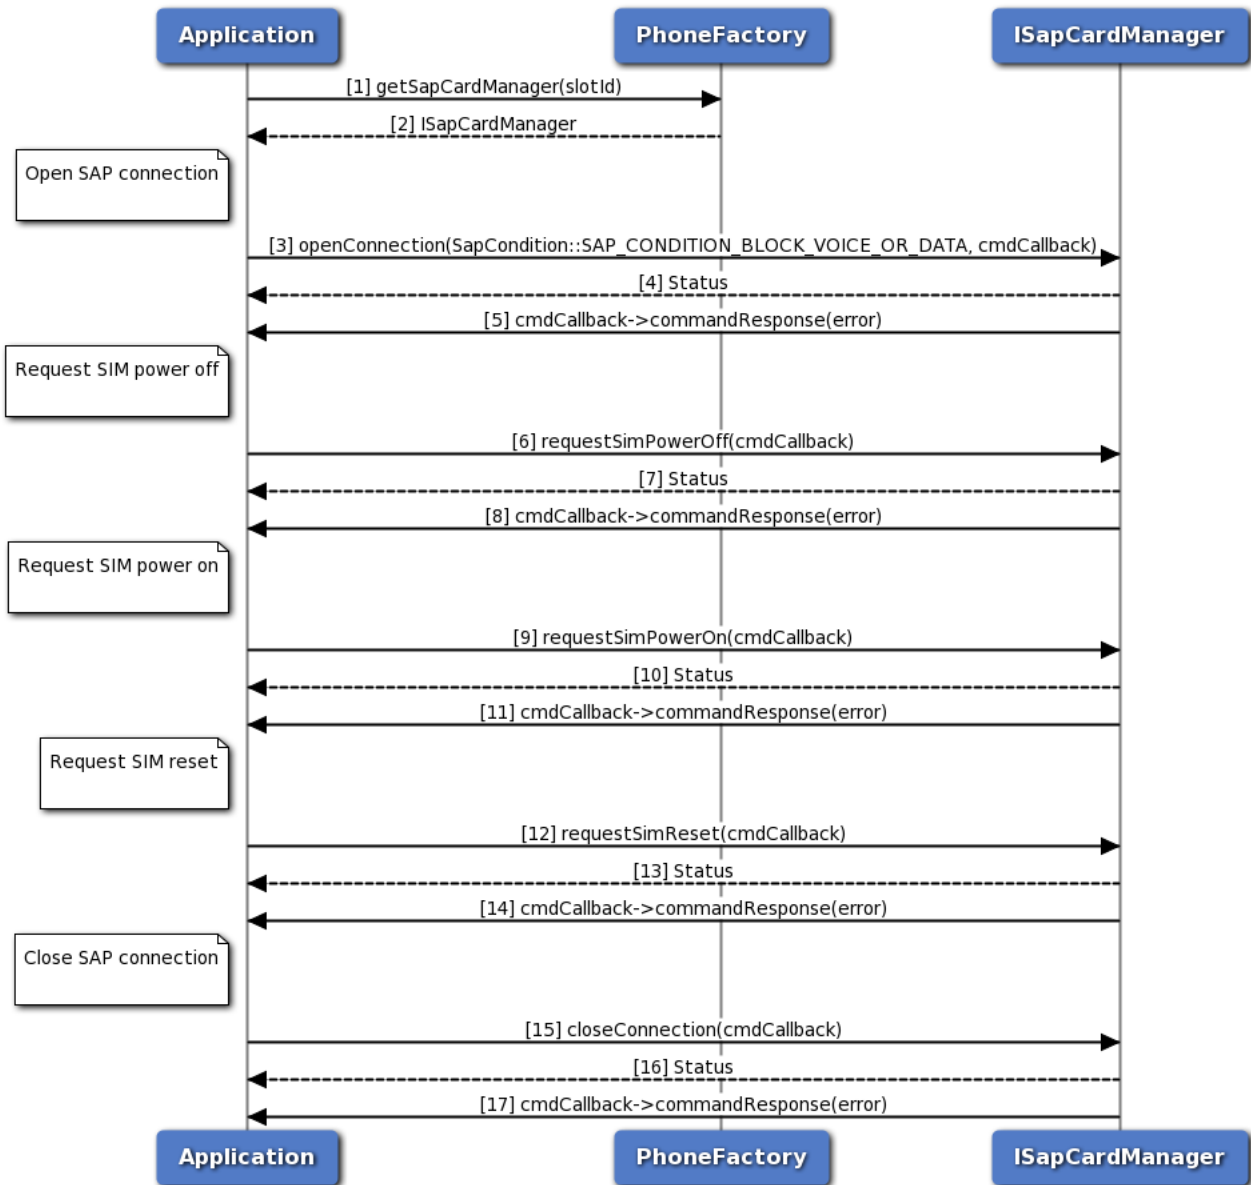


Figure 3-16 SIM Turn off, Turn on and Reset call flow

{sap_mgr_sim_call_flow.png, SIM Turn off, Turn on and Reset call flow, 80, 80, SIM Turn off, Turn on and Reset call flow}

1. Application gets SapCardManager object corresponding to slotID using PhoneFactory.
2. PhoneFactory returns the SapCardManager object to application in order to perform SAP operations like SIM power off, on or reset.
3. The application opens SIM Access Profile(SAP) connection with SIM card using default SAP condition (i.e. SAP_CONDITION_BLOCK_VOICE_OR_DATA) and optionally, gets asynchronous response using CommandResponseCallback.

4. Application receives the status i.e. either SUCCESS or FAILED based on execution of openConnection API in SapCardManager.
5. Optionally, the response for openConnection is received by the application.
6. The application sends SIM Power Off command to turn off the SIM and optionally, gets asynchronous response using CommandResponseCallback.
7. The application receives the status i.e. either SUCCESS or FAILED based on execution of requestSimPowerOff API in SapCardManager.
8. Optionally, the response for SIM Power Off is received by the application.
9. Similarly, the application can send SIM Power On command to turn on the SIM and optionally, gets asynchronous response using CommandResponseCallback.
10. The application receives the status i.e. either SUCCESS or FAILED based on execution of requestSimPowerOn API in SapCardManager.
11. Optionally, the response for SIM Power On is received by the application.
12. Similarly, the application sends SIM Reset command to perform SIM Reset and optionally, gets asynchronous response.
13. The application receives the status i.e. either SUCCESS or FAILED based on execution of requestSimReset API in SapCardManager.
14. Optionally, the response for SIM Reset is received by the application.
15. Now the application closes the SAP connection with SIM and optionally, gets asynchronous response using CommandResponseCallback.
16. The application receives the status i.e. either SUCCESS or FAILED based on execution of closeConnection API in SapCardManager.
17. Optionally, the response for SAP close connection is received by the application.

3.3.4 Subscription Call flow

3.3.4.1 Subscription initialization

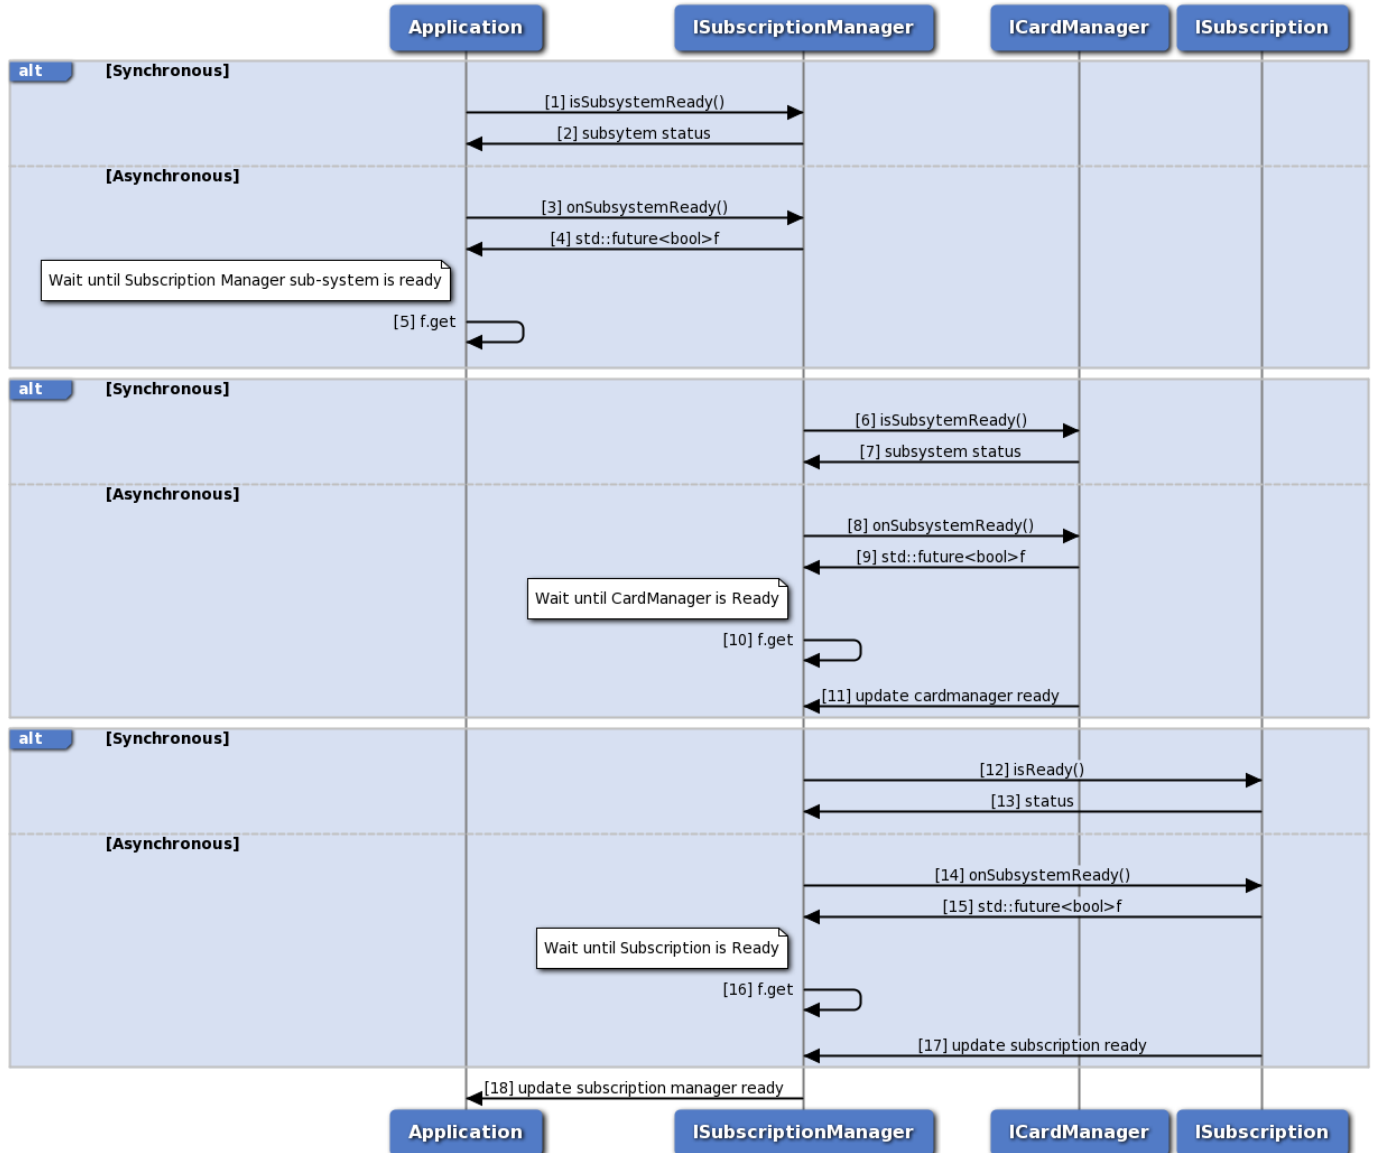


Figure 3-17 Subscription initialization call flow

1. Application can use ISubscriptionManager::isSubsystemReady to determine if the SubscriptionManager is ready.
2. The application receives the status i.e either true or false whether sub-system is ready or not.
3. If it is not ready, then the application could use onSubsystemReady which returns std::future.
4. SubscriptionManager notifies the application when the subsystem is ready through the std::future object.
5. The application waits until the asynchronous operation i.e onSubsystemReady completes.
6. SubscriptionManager uses ICardManager::isSubsystemReady to determine if the CardManager is ready.

7. The SubscriptionManager receives the status i.e either true or false whether sub-system is ready or not.
8. If it is not ready, then the SubscriptionManager could use onSubsystemReady which returns std::future.
9. CardManager notifies the SubscriptionManager when the subsystem is ready through the std::future object.
10. The SubscriptionManager waits until the asynchronous operation i.e onSubsystemReady completes.
11. CardManager updates the SubscriptionManager once the card manager sub-system is ready
12. SubscriptionManager uses ISubscription::isReady to determine if the Subscription is ready.
13. The SubscriptionManager receives the status i.e either true or false whether sub-system is ready or not.
14. If it is not ready, then the SubscriptionManager could use onSubsystemReady which returns std::future.
15. Subscription notifies the SubscriptionManager when the subsystem is ready through the std::future object.
16. The SubscriptionManager waits until the asynchronous operation i.e onSubsystemReady completes.
17. Subscription updates the SubscriptionManager when the subscription is ready.
18. SubscriptionManager updates the application once subscription manager initialization completes.

3.3.4.2 Subscription call flow

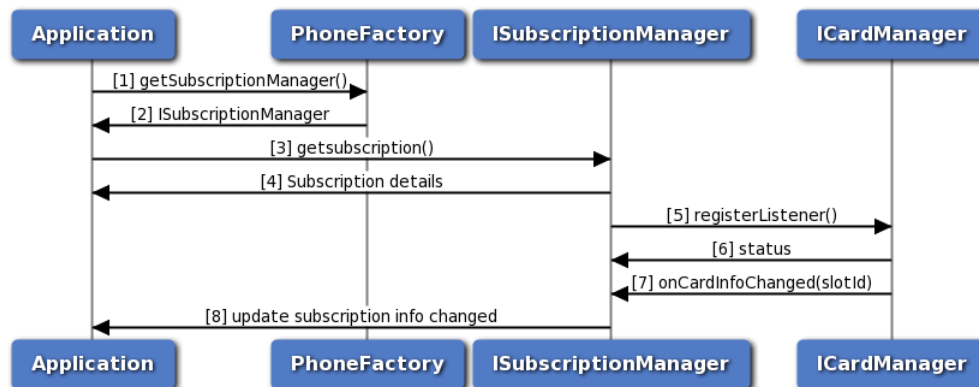


Figure 3-18 Subscription call flow

1. The application gets the PhoneManager object using PhoneFactory.
2. The application receives the PhoneManager object in order to get Subscription.
3. The application gets the Subscription object for given slot identifier using SubscriptionManager.
4. SubscriptionManager returns Subscription object to application. Subscription can be used to get subscription details like countryISO, operator details etc.
5. The Subscription manager registers a listener with CardManager to listen to the card info change notifications like card state PRESENT, ABSENT, UNKNOWN, ERROR and RESTRICTED.

6. The SubscriptionManager receives the status like SUCCESS or INVALIDPARAM based on registration of listener to CardManager.
7. The SubscriptionManager receives callback card info change i.e subscription info changed or removed.
8. The SubscriptionManager updates the application once the subscription info is updated.

3.4 Call flow for location services

Application will get the location manager object from location factory. The caller needs to register a listener. Application would then need to start the reports using one of 2 APIs depending on if the detailed or basic reports are needed. When reports are no longer required, the app needs to stop the report and de-register the listener.

NOTE: Applications need to have "locclient" Linux group permissions to be able to operate successfully with underlying services.

3.4.1 Call flow to register/remove listener for generating basic reports

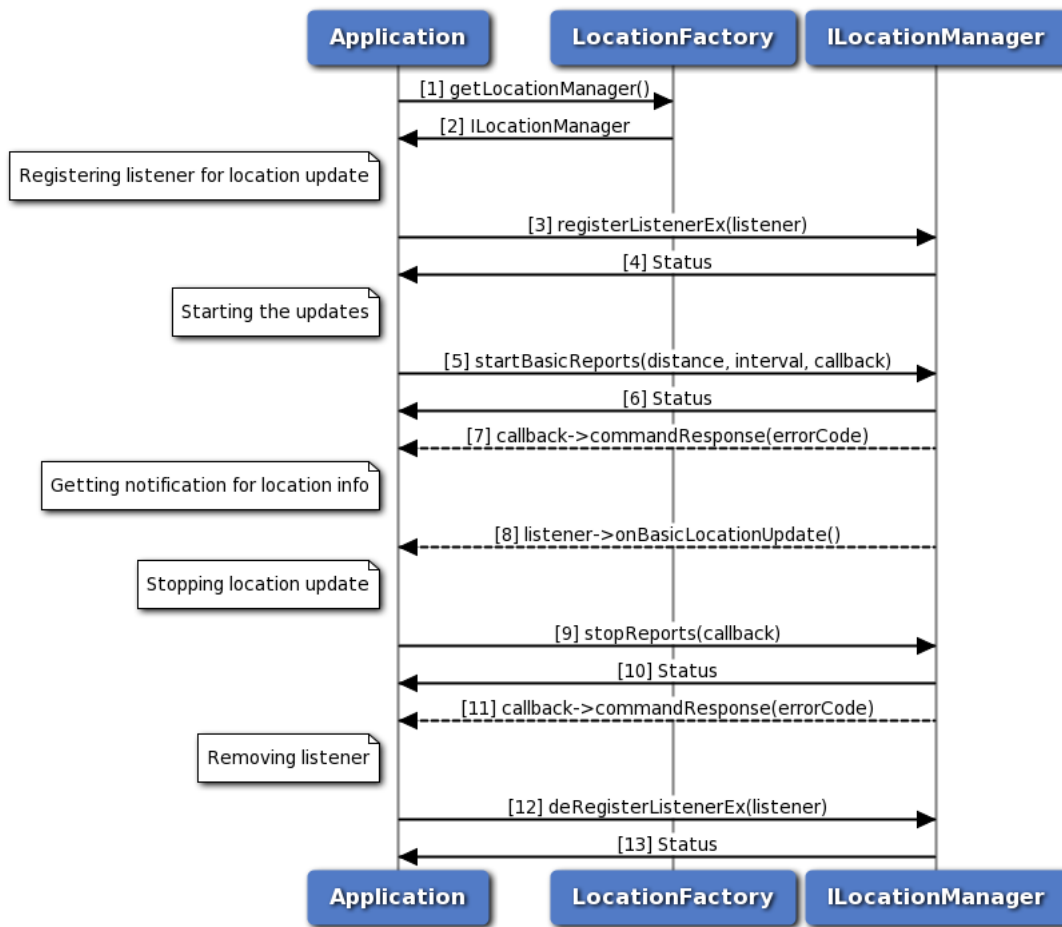


Figure 3-19 Call flow to register/remove listener for generating basic reports

1. Application requests location factory for location manager object.

2. Location factory returns ILocationManager object using which application will register or remove a listener.
3. Application can register a listener for getting notifications for location updates.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application starts the basic reports using startBasicReports API for getting location updates.
6. Status of startBasicReports i.e. either SUCCESS or FAILED will be returned to the application.
7. The response for startBasicReports is received by the application.
8. Application will get location updates like latitude, longitude and altitude etc.
9. Application stops receiving the report through stopReports API.
10. Status of stopReports i.e. either SUCCESS or FAILED will be returned to the application.
11. The response for stopReports is received by the application.
12. Application can remove listener and when the number of listeners are zero then location service will get stopped automatically.
13. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.4.2 Call flow to register/remove listener for generating detailed reports

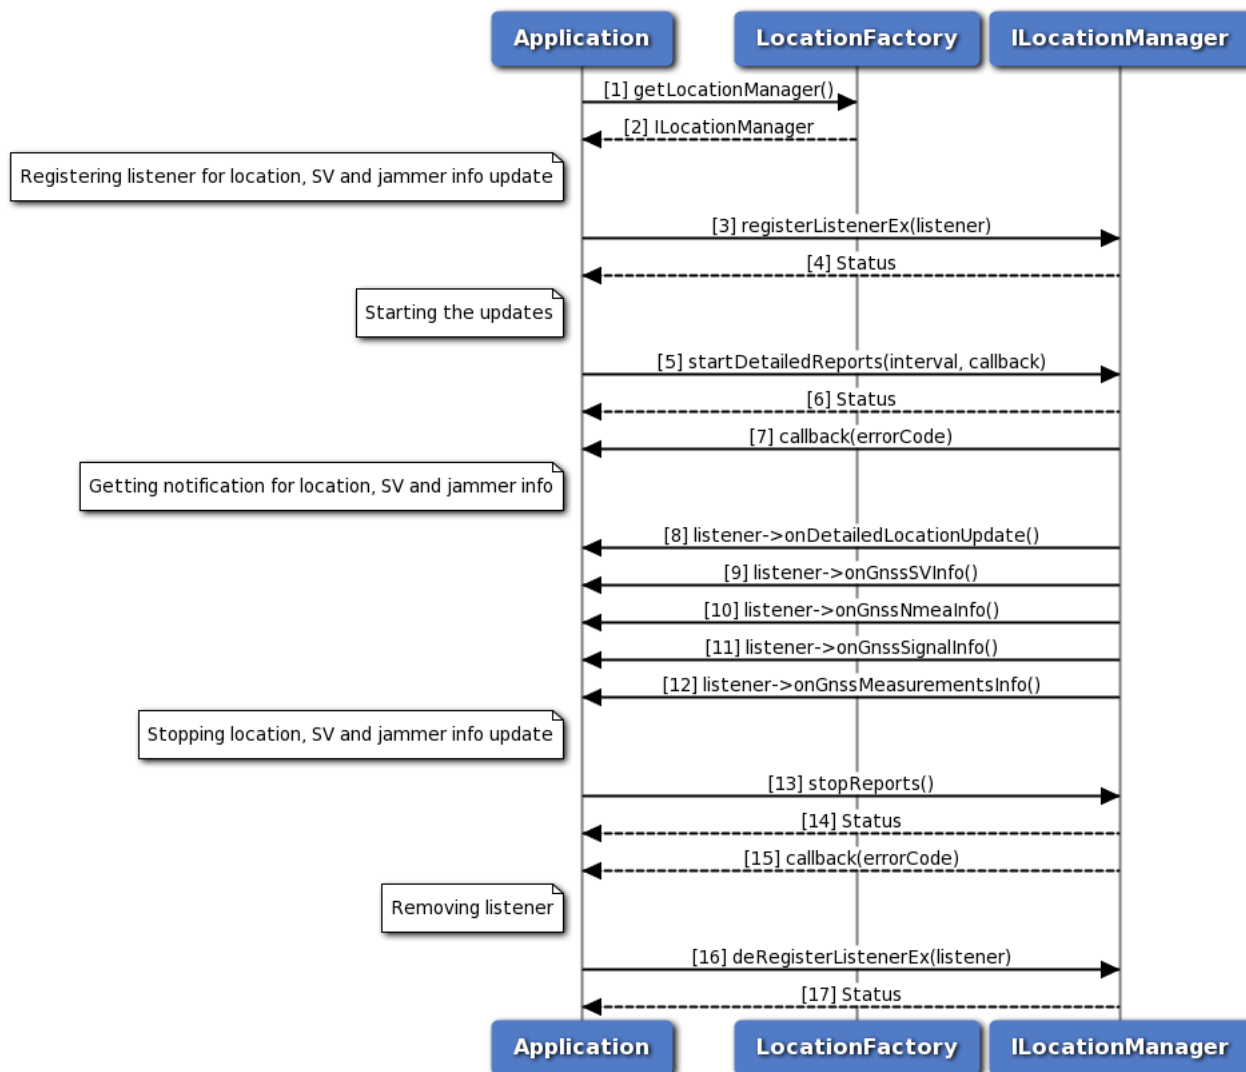


Figure 3-20 Call flow to register/remove listener for generating detailed reports

1. Application requests location factory for location manager object.
2. Location factory returns ILocationManager object using which application will register or remove a listener.
3. Application can register a listener for getting notifications for location, satellite vehicle, jammer signal, nmea and measurements updates.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application starts the detailed reports using startDetailedReports API for getting location, satellite vehicle, jammer signal, nmea and measurements updates.
6. Status of startDetailedReports i.e. either SUCCESS or FAILED will be returned to the application.
7. The response for startDetailedReports is received by the application.

8. Application will get location updates like latitude, longitude and altitude etc.
9. Application will receive satellite vehicle information like SV status and constellation etc.
10. Application will receive nmea information.
11. Application will receive jammer information etc.
12. Application will receive measurement information.
13. Application stops receiving all the reports through stopReports API.
14. Status of stopReports i.e. either SUCCESS or FAILED will be returned to the application.
15. The response for stopReports is received by the application.
16. Application can remove listener and when the number of listeners are zero then location service will get stopped automatically.
17. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.4.3 Call flow to register/remove listener for generating detailed engine reports

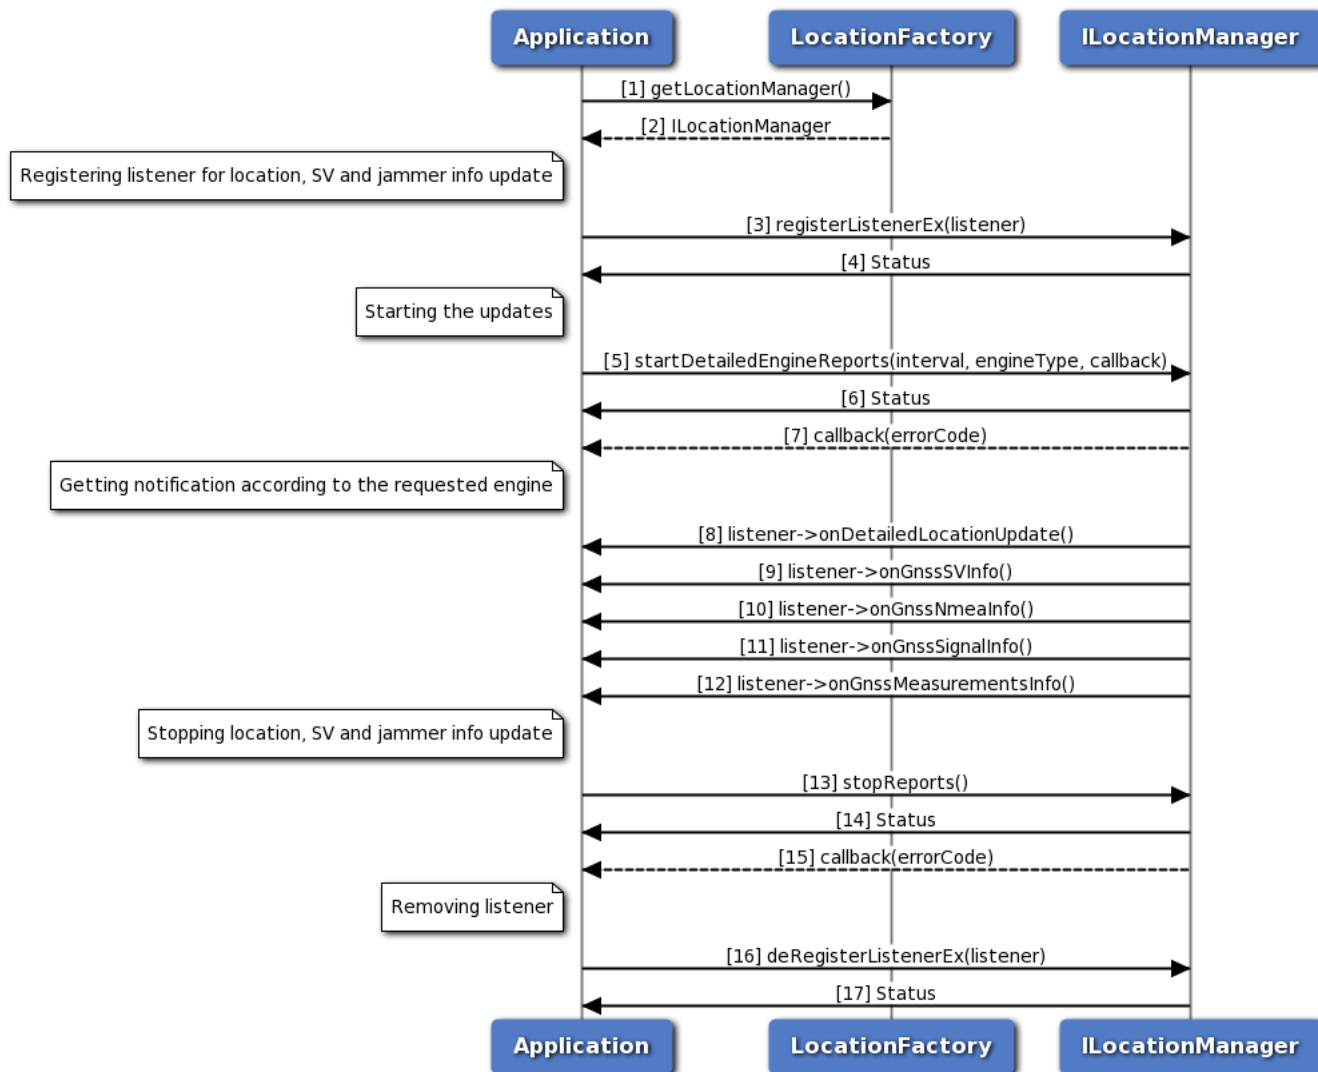


Figure 3-21 Call flow to register/remove listener for generating detailed engine reports

1. Application requests location factory for location manager object.
2. Location factory returns ILocationManager object using which application will register or remove a listener.
3. Application can register a listener for getting notifications for location, satellite vehicle and jammer signal, nmea and measurements updates.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application starts the detailed engine reports using startDetailedEngineReports API for getting location, satellite vehicle, jammer signal, nmea and measurements updates.
6. Status of startDetailedReports i.e. either SUCCESS or FAILED will be returned to the application.

7. The response for startDetailedReports is received by the application.
8. Application will get location updates like latitude, longitude and altitude etc from the requested engine type(SPE/PPE/Fused).
9. Application will receive satellite vehicle information like SV status and constellation etc depending on the requested SPE/PPE/Fused engine type.
10. Application will receive nmea information depending on the requested SPE/PPE/Fused engine type
11. Application will receive jammer information etc depending on the requested SPE/PPE/Fused engine type.
12. Application will receive measurement information etc depending on the requested SPE/PPE/Fused engine type.
13. Application stops receiving all the reports through stopReports API.
14. Status of stopReports i.e. either SUCCESS or FAILED will be returned to the application.
15. The response for stopReports is received by the application.
16. Application can remove listener and when the number of listeners are zero then location service will be stopped automatically.
17. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.4.4 Call flow to register/remove listener for system info updates

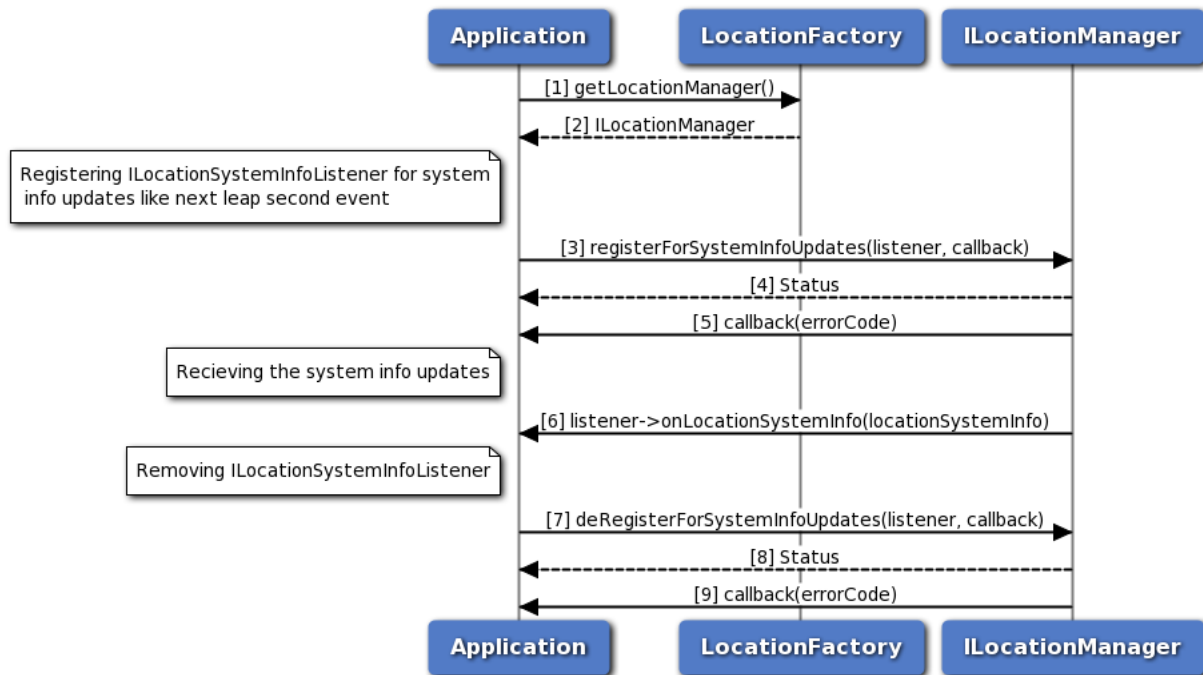


Figure 3-22 Call flow to register/remove listener for system info updates

1. Application requests location factory for location manager object.
2. Location factory returns ILocationManager object using which application will register or remove a listener.

3. Application can register a listener for system information updates with `registerForSystemInfoUpdates`.
4. Status of `registerForSystemInfoUpdates` i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for `registerForSystemInfoUpdates` is received by the application.
6. Application will get system information update.
7. Application can remove listener with `deRegisterForSystemInfoUpdates`.
8. Status of `deRegisterForSystemInfoUpdates` i.e. either SUCCESS or FAILED will be returned to the application.
9. The response for `deRegisterForSystemInfoUpdates` is received by the application.

3.4.5 Call flow to request energy consumed information

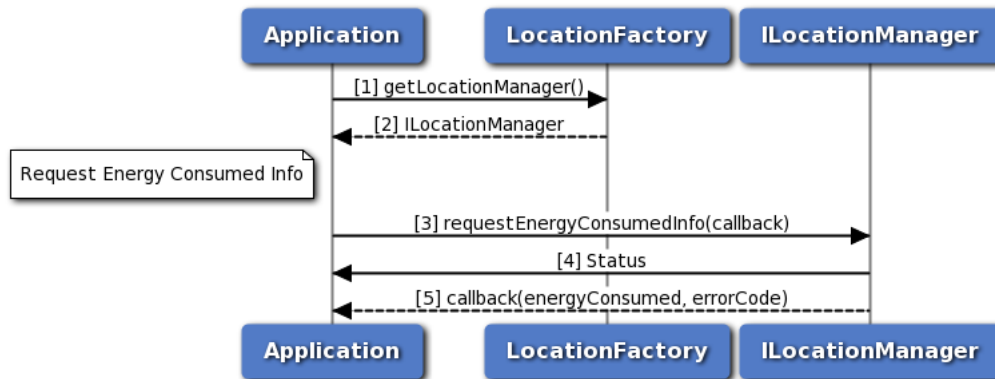


Figure 3-23 Call flow to request energy consumed information

1. Application requests location factory for location manager object.
2. Location factory returns `ILocationManager` object.
3. Application can request for energy consumed information with `requestEnergyConsumedInfo`.
4. Status of `requestEnergyConsumedInfo` i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for `requestEnergyConsumedInfo` is received by the application.

3.4.6 Call flow to get year of hardware information

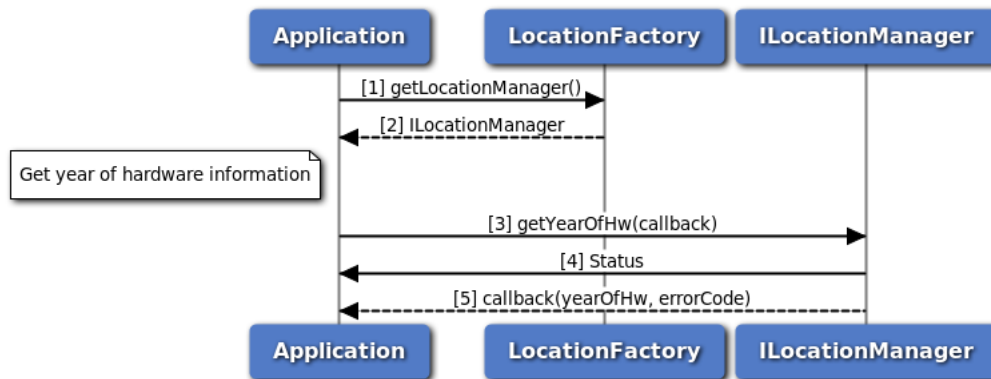


Figure 3-24 Call flow to get year of hardware information

1. Application requests location factory for location manager object.
2. Location factory returns ILocationManager object.
3. Application can request for year of hardware information with getYearOfHw.
4. Status of getYearOfHw i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for getYearOfHw is received by the application.

3.4.7 Call flow to get terrestrial positioning information

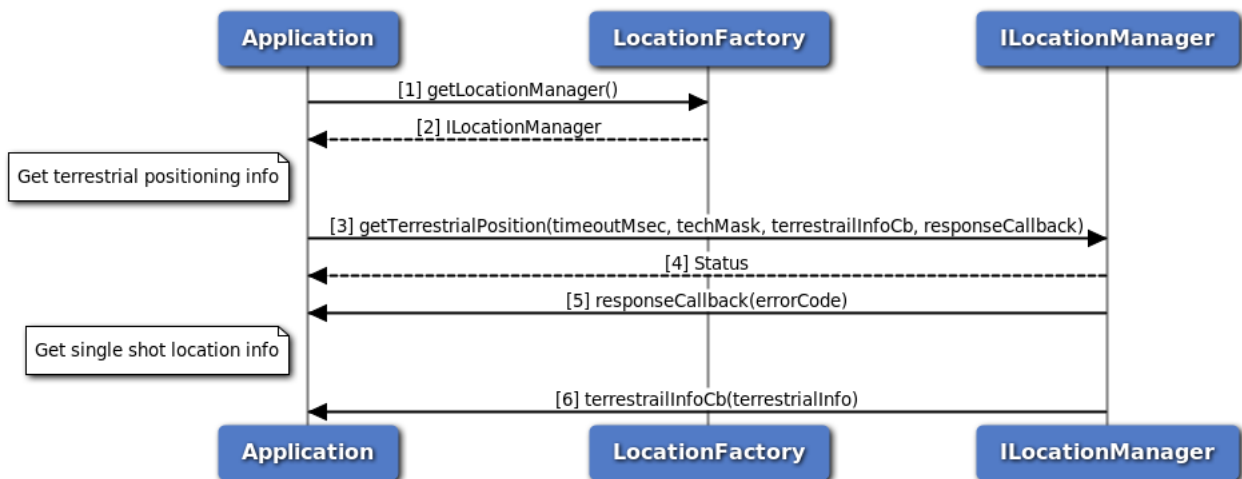


Figure 3-25 Call flow to get terrestrial positioning information

1. Application requests location factory for location manager object.
2. Location factory returns ILocationManager object.
3. Application can request for terrestrial positioning information with getTerrestrialPosition API.

4. Status of `getTerrestrialPosition` i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for `getTerrestrialPosition` is received by the application.
6. Single shot terrestrial position information is received by the application.

3.4.8 Call flow to cancel terrestrial positioning information

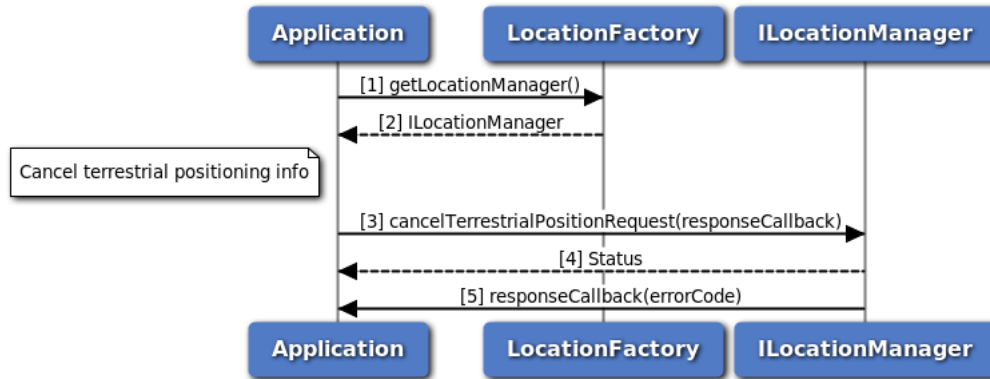


Figure 3-26 Call flow to cancel terrestrial positioning information

1. Application requests location factory for location manager object.
2. Location factory returns ILocationManager object.
3. Application can cancel request for terrestrial positioning information with `cancelTerrestrialPositionRequest` API.
4. Status of `cancelTerrestrialPositionRequest` i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for `cancelTerrestrialPositionRequest` is received by the application.

3.4.9 Call flow to enable/disable constraint time uncertainty

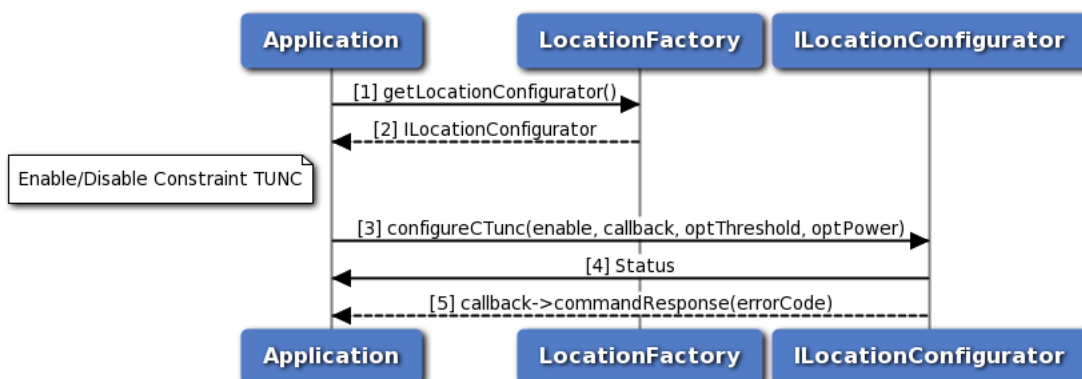


Figure 3-27 Call flow to enable/disable constraint time uncertainty

1. Application requests location factory for location configurator object.

2. Location factory returns ILocationConfigurator object.
3. Application enables/disables constraint tunc using configureCTunc API.
4. Status of configureCTunc i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureCTunc is received by the application.

3.4.10 Call flow to enable/disable PACE

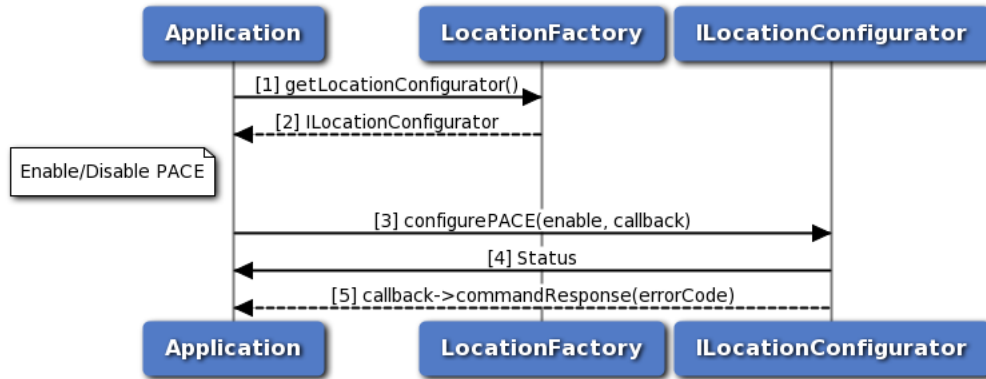


Figure 3-28 Call flow to enable/disable PACE

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application enables/disables PACE using configurePACE API.
4. Status of configurePACE i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configurePACE is received by the application.

3.4.11 Call flow to delete all aiding data

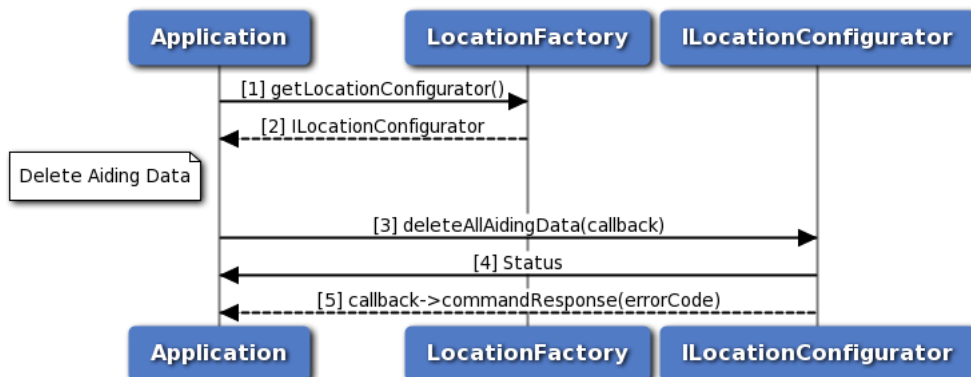


Figure 3-29 Call flow to delete all aiding data

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.

3. Application deletes all aiding data using deleteAllAidingData API.
4. Status of deleteAllAidingData i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for deleteAllAidingData is received by the application.

3.4.12 Call flow to configure lever arm parameters

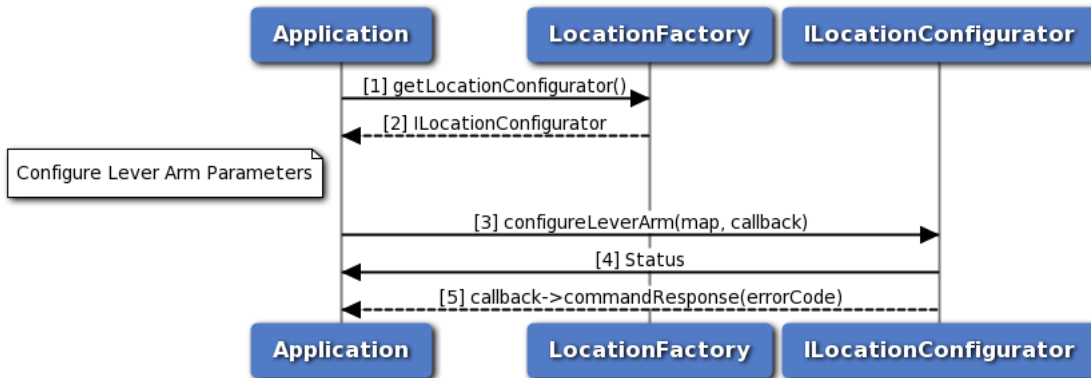


Figure 3-30 Call flow to configure lever arm parameters

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures lever arm parameters using configureLeverArm API.
4. Status of configureLeverArm i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureLeverArm is received by the application.

3.4.13 Call flow to configure blacklisted constellations

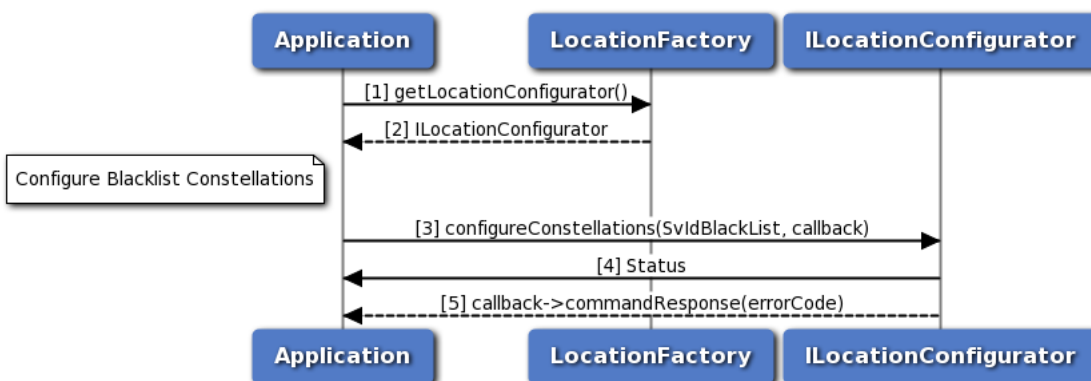


Figure 3-31 Call flow to configure blacklisted constellations

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures blacklisted constellations using configureConstellations API.

4. Status of configureConstellations i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureConstellations is received by the application.

3.4.14 Call flow to configure robust location

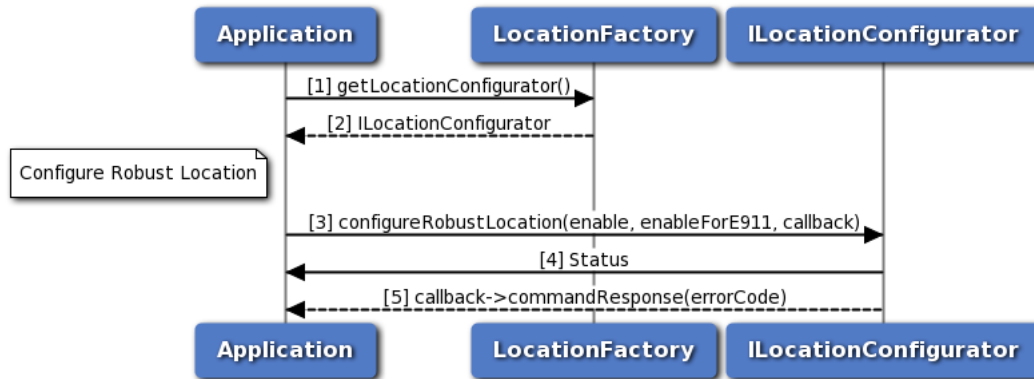


Figure 3-32 Call flow to configure robust location

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures robust location using configureRobustLocation API.
4. Status of configureRobustLocation i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureRobustLocation is received by the application.

3.4.15 Call flow to configure min gps week

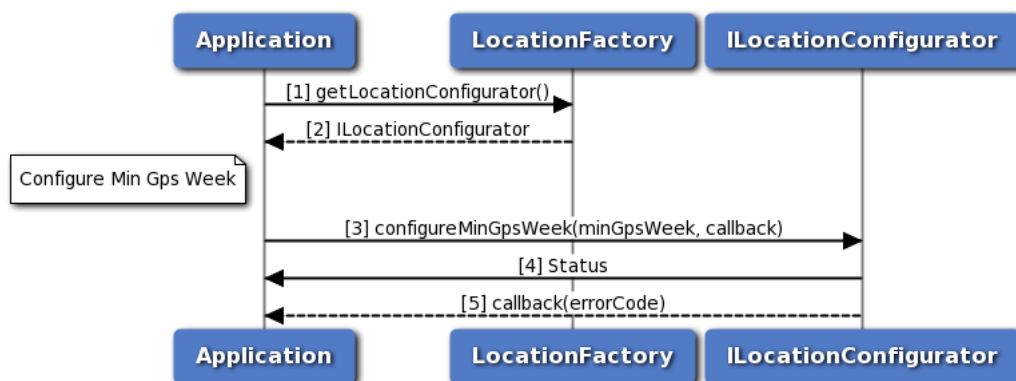


Figure 3-33 Call flow to configure min gps week

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures min gps week using configureMinGpsWeek API.

4. Status of configureMinGpsWeek i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureMinGpsWeek is received by the application.

3.4.16 Call flow to request min gps week

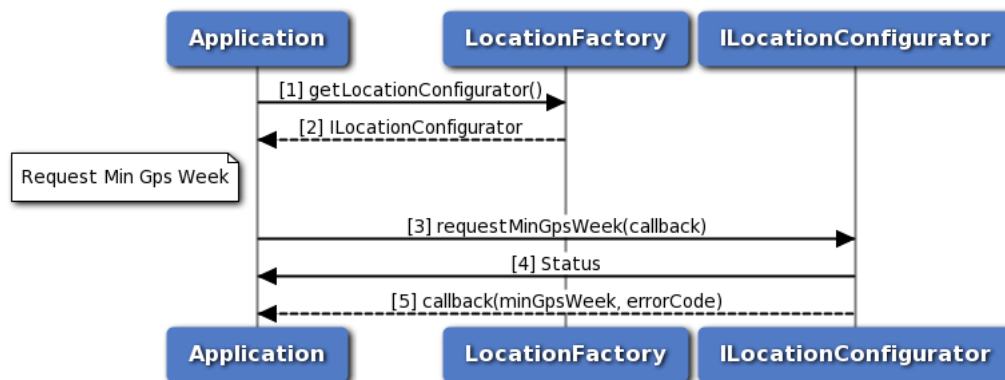


Figure 3-34 Call flow to request min gps week

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application requests min gps week using requestMinGpsWeek API.
4. Status of requestMinGpsWeek i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for requestMinGpsWeek is received by the application.

3.4.17 Call flow to delete specified data

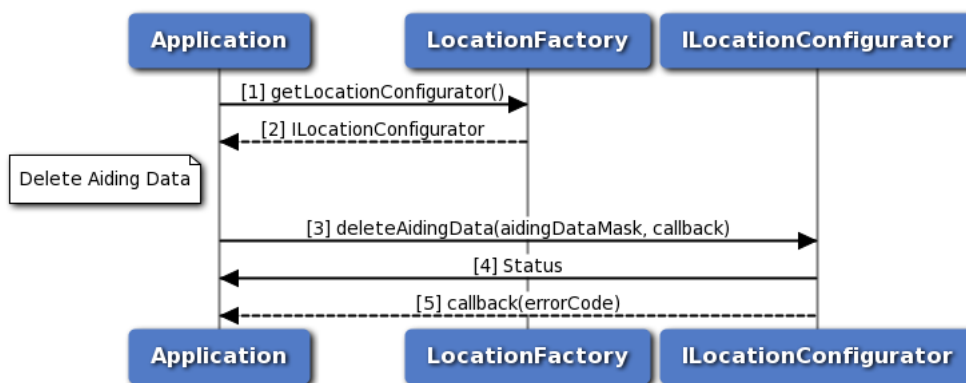


Figure 3-35 Call flow to delete specified data

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application requests delete specified data using deleteAidingData API.
4. Status of deleteAidingData i.e. either SUCCESS or FAILED will be returned to the application.

- The response for deleteAidingData is received by the application.

3.4.18 Call flow to configure min sv elevation

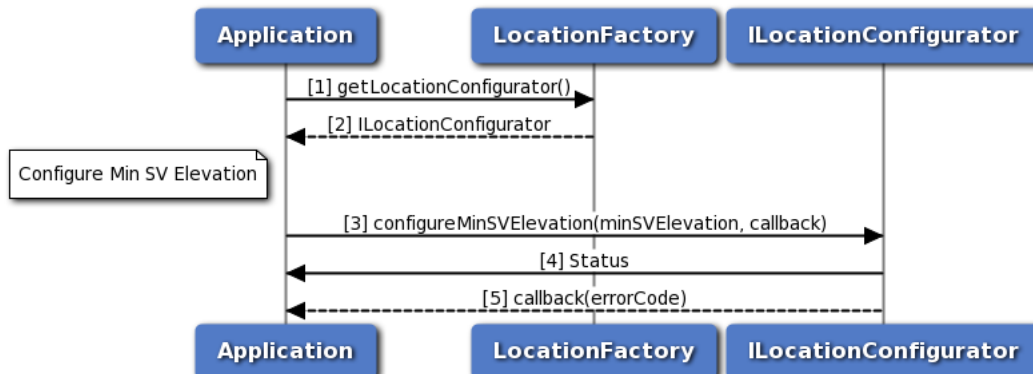


Figure 3-36 Call flow to configure min sv elevation

- Application requests location factory for location configurator object.
- Location factory returns ILocationConfigurator object.
- Application configures min SV elevation using configureMinSVElevation API.
- Status of configureMinSVElevation i.e. either SUCCESS or FAILED will be returned to the application.
- The response for configureMinSVElevation is received by the application.

3.4.19 Call flow to request min sv elevation

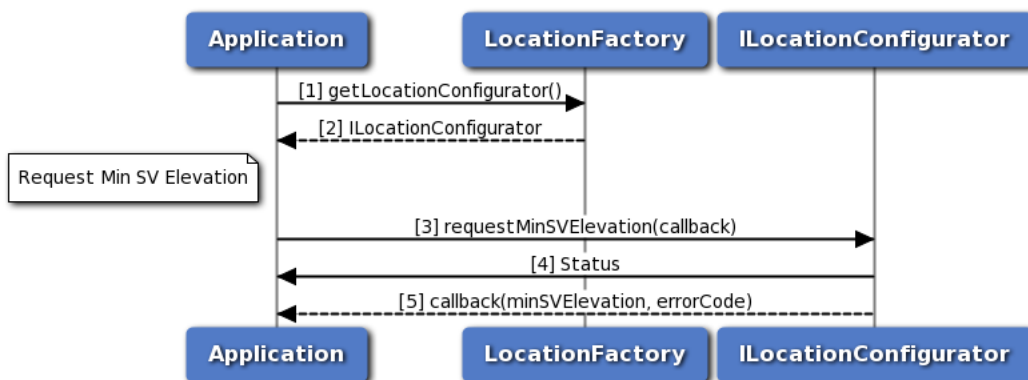


Figure 3-37 Call flow to request min sv elevation

- Application requests location factory for location configurator object.
- Location factory returns ILocationConfigurator object.
- Application requests min SV elevation using requestMinSVElevation API.

4. Status of requestMinSVElevation i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for requestMinSVElevation is received by the application.

3.4.20 Call flow to request robust location

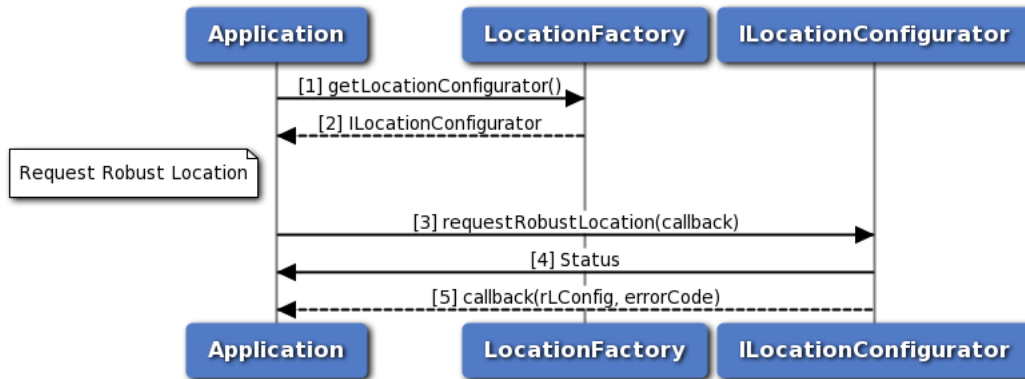


Figure 3-38 Call flow to request robust location

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application requests robust location using requestRobustLocation API.
4. Status of requestRobustLocation i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for requestRobustLocation is received by the application.

3.4.21 Call flow to configure dead reckoning engine

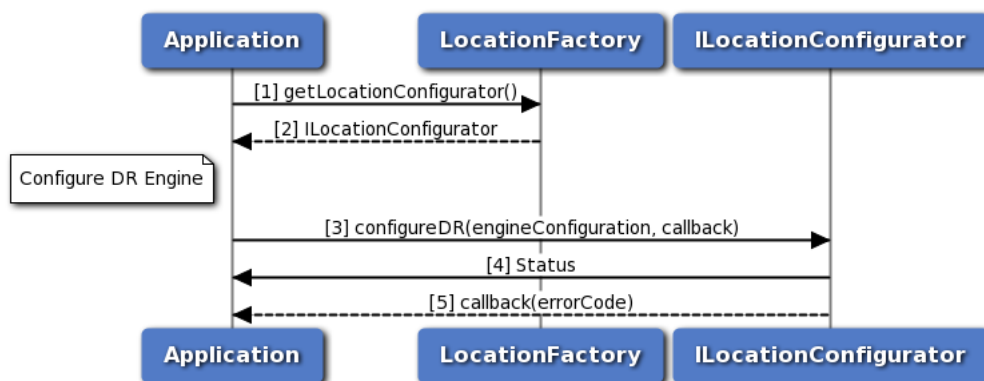


Figure 3-39 Call flow to configure dead reckoning engine

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures dead reckoning engine using configureDR API.

4. Status of configureDR i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureDR is received by the application.

3.4.22 Call flow to configure secondary band

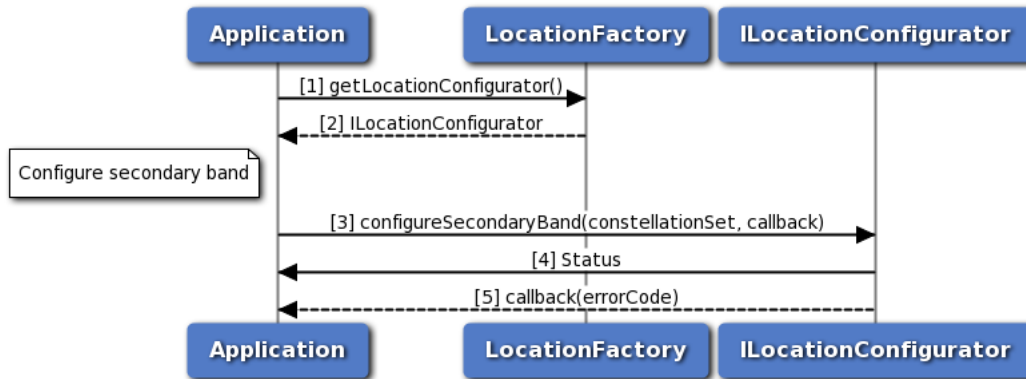


Figure 3-40 Call flow to configure secondary band

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures secondary band using configureSecondaryBand API.
4. Status of configureSecondaryBand i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureSecondaryBand is received by the application.

3.4.23 Call flow to request secondary band

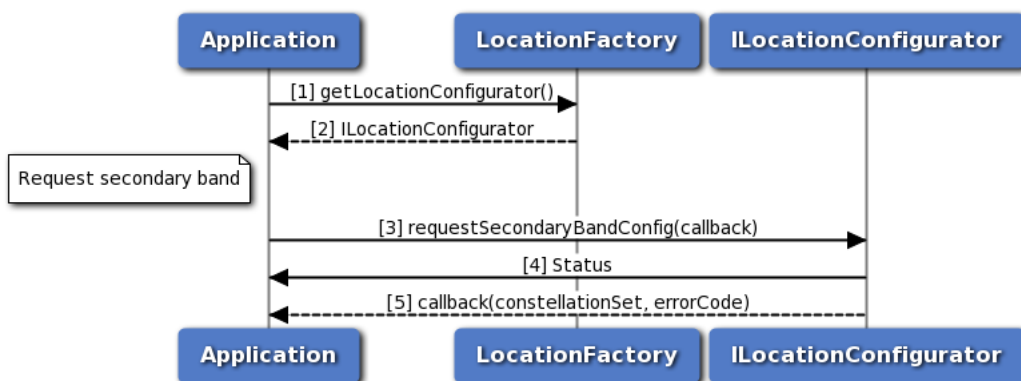


Figure 3-41 Call flow to request secondary band

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application requests secondary band using requestSecondaryBandConfig API.

4. Status of requestSecondaryBandConfig i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for requestSecondaryBandConfig is received by the application.

3.4.24 Call flow to configure engine state

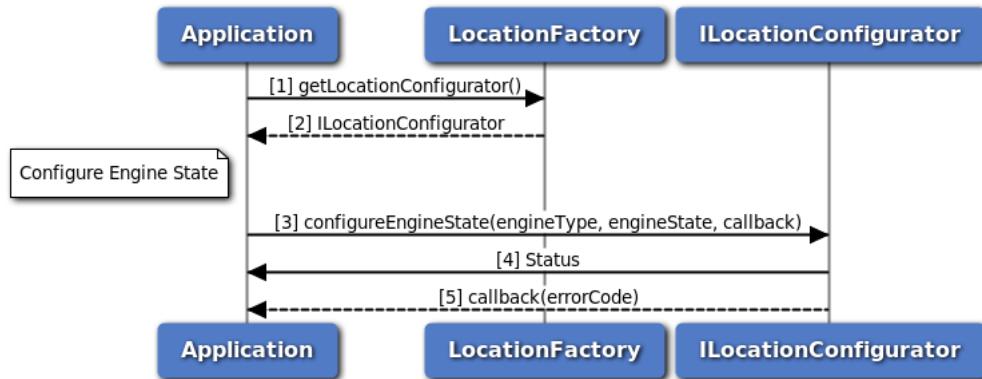


Figure 3-42 Call flow to configure engine state

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures engine state using configureEngineState API.
4. Status of configureEngineState i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureEngineState is received by the application.

3.4.25 Call flow to provide user consent for terrestrial positioning

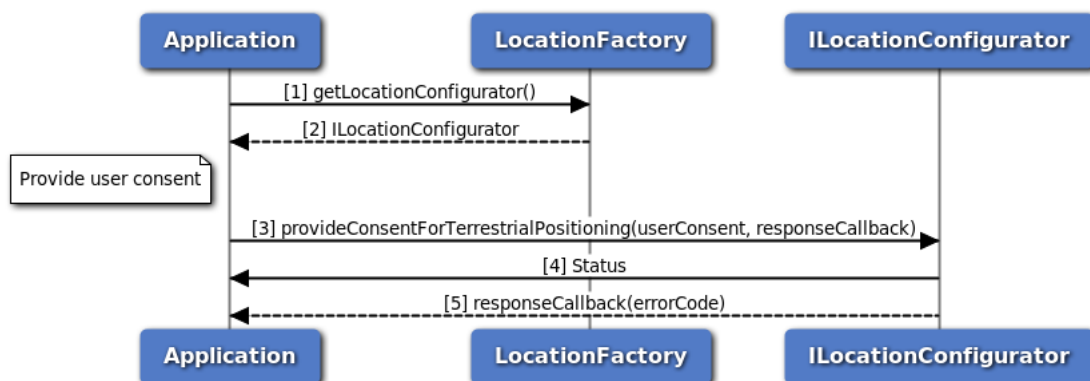


Figure 3-43 Call flow to provide user consent for terrestrial positioning

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.

3. Application provides user consent for terrestrial positioning using provideConsentForTerrestrialPositioning API.
4. Status of provideConsentForTerrestrialPositioning i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for provideConsentForTerrestrialPositioning is received by the application.

3.4.26 Call flow to configure NMEA sentence type

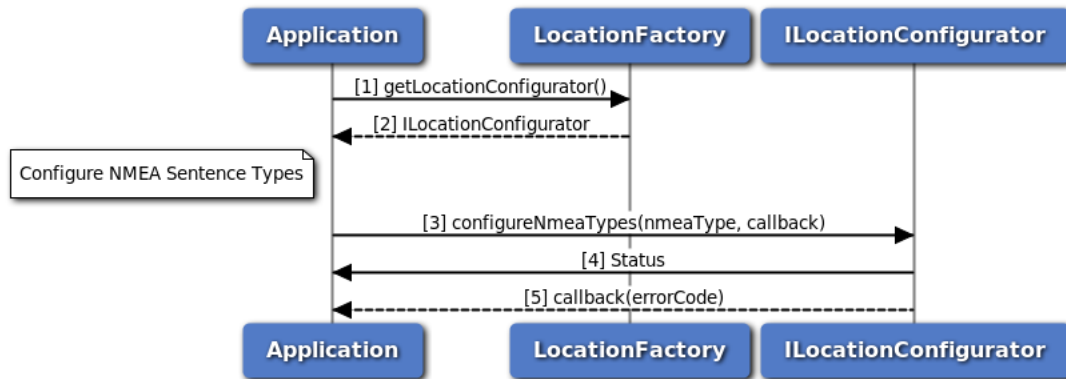


Figure 3-44 Call flow to configure NMEA sentence type

1. Application requests location factory for location configurator object.
2. Location factory returns ILocationConfigurator object.
3. Application configures NMEA sentence type using configureNmeaTypes API.
4. Status of configureNmeaTypes i.e. either SUCCESS or FAILED will be returned to the application.
5. The response for configureNmeaTypes is received by the application.

3.5 Data Services

Applications need to have "radio" Linux group permissions to be able to operate successfully with underlying services.

3.5.1 Start/Stop for data connection manager call flow

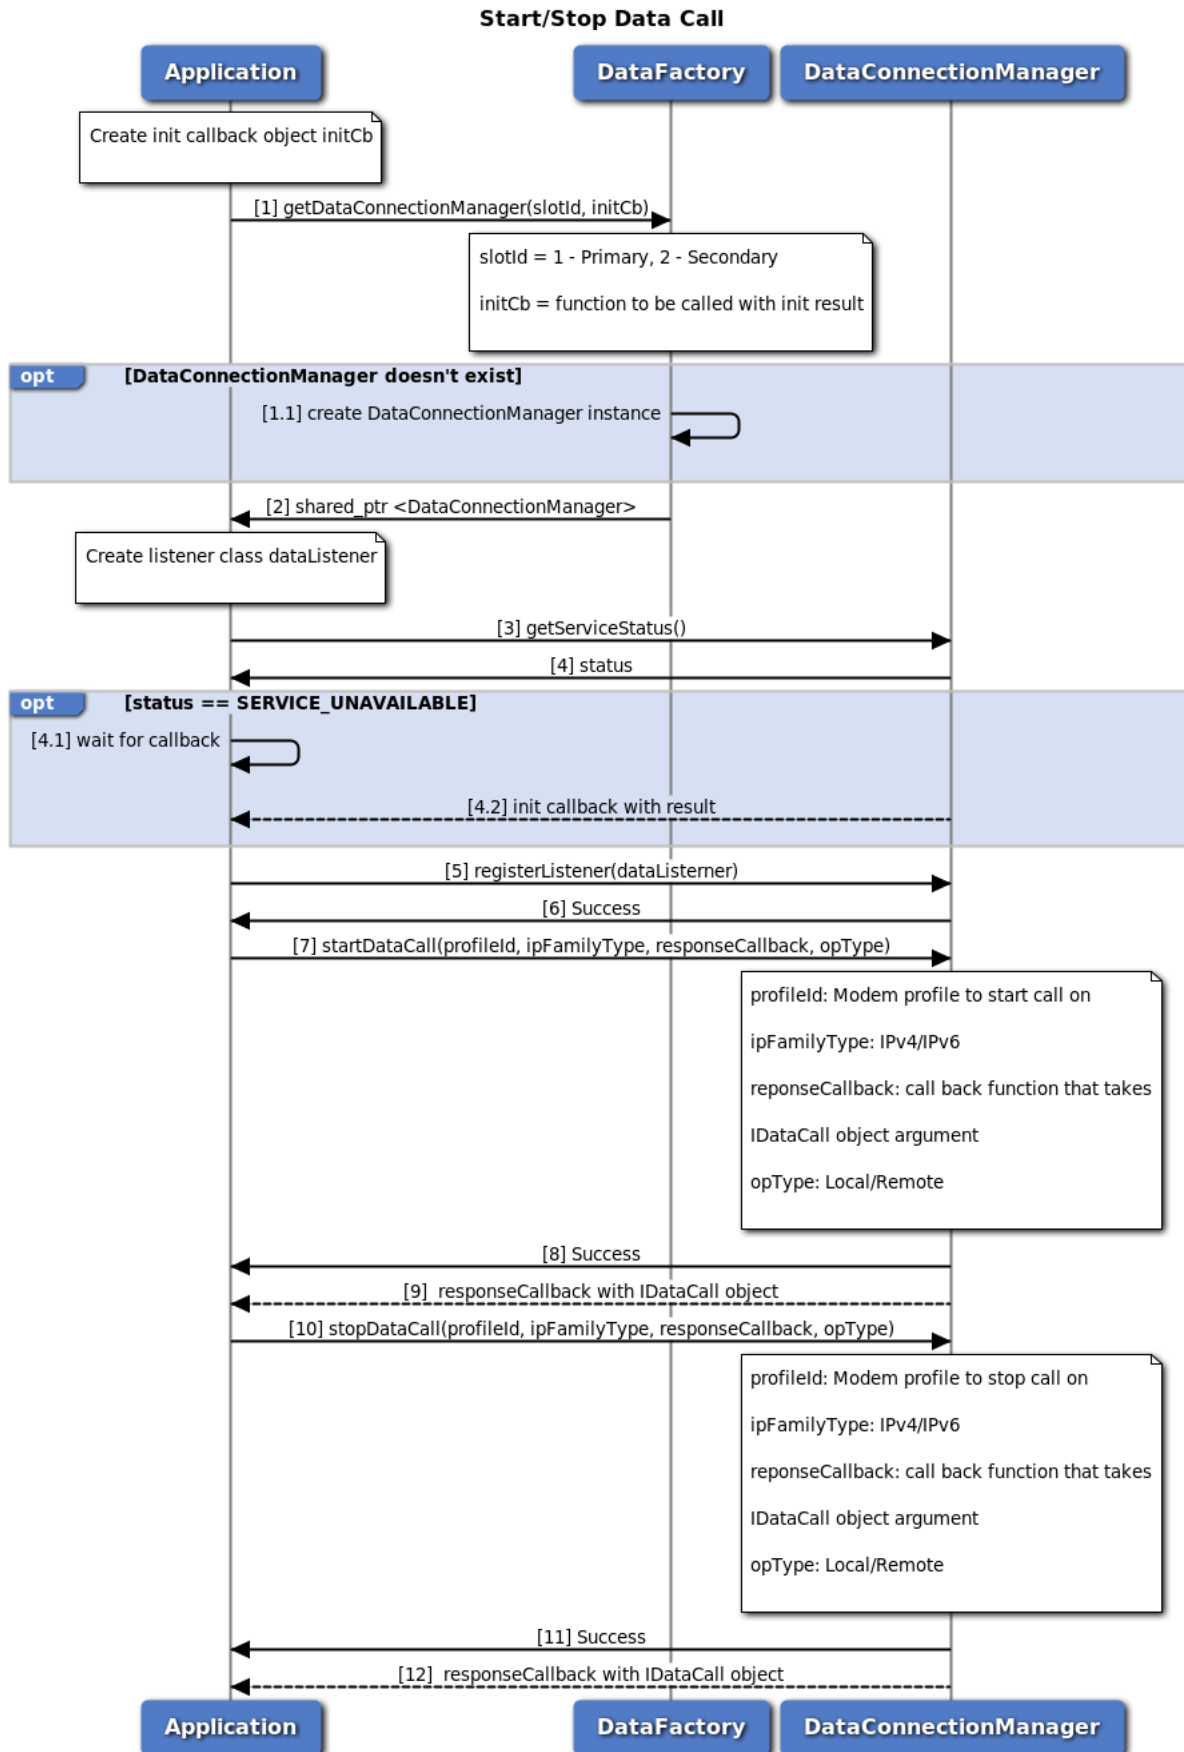


Figure 3-45 Start/Stop data call call flow

1. Application requests Data Connection Manager object associated with sim id from data factory. Application can optionally provide callback to be called when manager initialization is completed.
2. Data factory returns shared pointer to data connection manager object to application.
3. Application request current service status of data connection manager returned by data factory.
4. Data connection manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Data connection manager calls application callback with initialization result (success/failure).
5. Application registers as listener to get notifications for data call change.
6. The application receives the status i.e. either SUCCESS or FAILED based on the registration of the listener.
7. Application requests for start data call and optionally gets asynchronous response using startDataCallback.
8. Application receives the status i.e. either SUCCESS or FAILED based on the execution of startDataCall.
9. Optionally, the application gets asynchronous response for startDataCall using startDataCallback.
10. Application requests for stop data call and optionally gets asynchronous response using stopDataCallback.
11. Application receives the status i.e. either SUCCESS or FAILED based on the execution of stopDataCall.
12. Optionally, the application gets asynchronous response for stopDataCall using stopDataCallback.

3.5.2 Request data profile list call flow

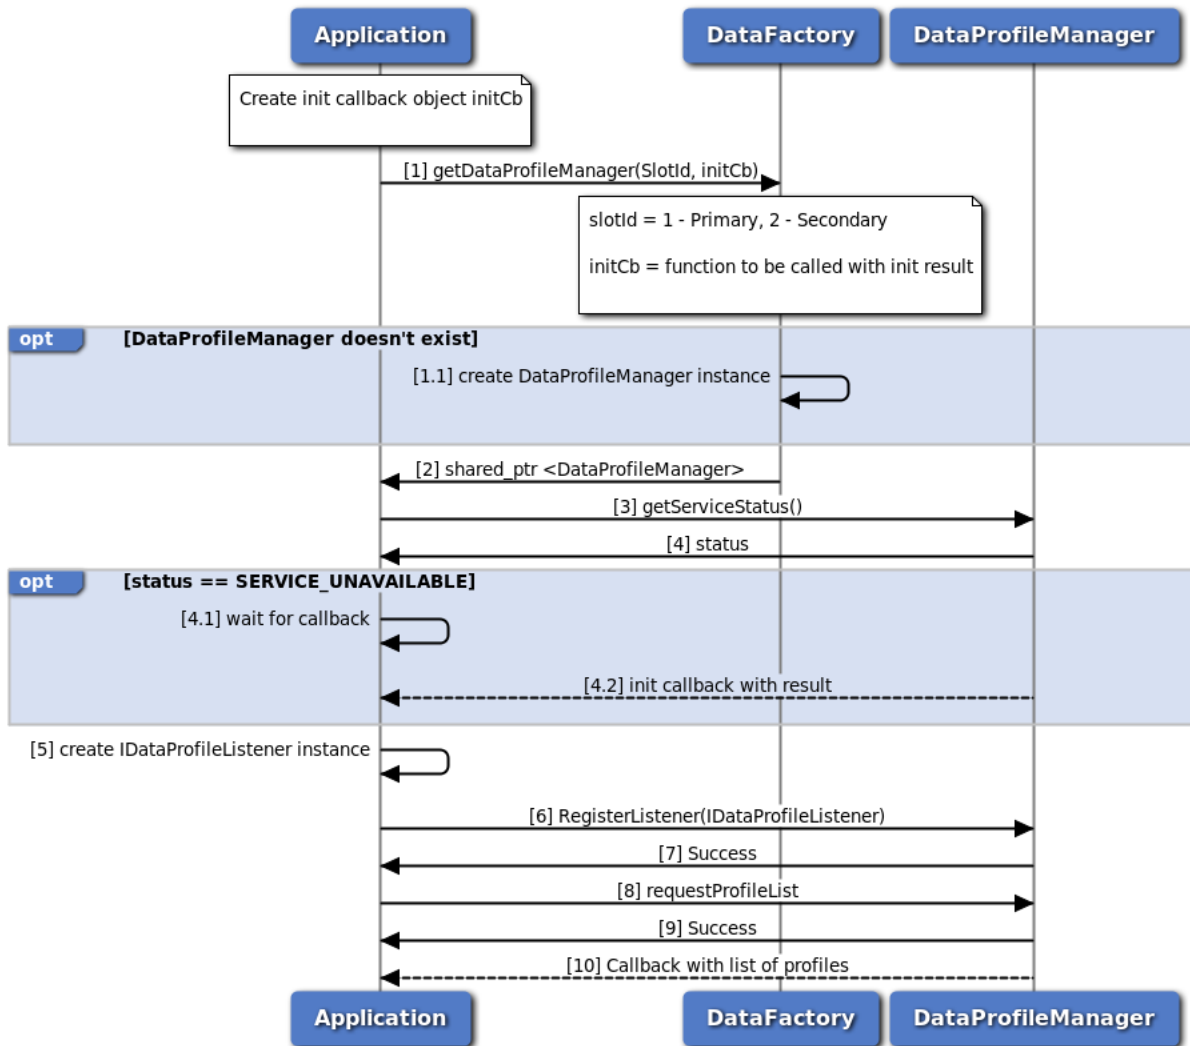


Figure 3-46 Request data profile list call flow

1. Application requests Data profile Manager object associated with sim id from data factory. Application can optionally provide callback to be called when manager initialization is completed.
2. Data factory returns shared pointer to data profile manager object to application.
3. Application request current service status of data profile manager returned by data factory.
4. Data profile manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Data profile manager calls application callback with initialization result (success/failure).
5. Application creates listener class of type IDataProfileListener
6. Application register created object in step 5 as listener to data profile changes
7. Application receives the status i.e. either SUCCESS or FAILED based on the execution of registerListener
8. Application requests list of profile

9. Application receives the status i.e. either SUCCESS or FAILED based on the execution of requestProfileList
10. Application gets callback with list of all profiles

3.5.3 Data Serving System Manager Call Flow

Data Serving System manager provides the interface to access network and modem low level services. It provides APIs to get current dedicated radio bearer, get current service status and preferred RAT, and get current roaming status. Serving System Listener provides an interface for application to receive data serving system notification events such as change in dedicated radio bearer, change in service status, or change in roaming status. The application must register as a listener for Serving System updates.

3.5.3.1 Get Dedicated Radio Bearer Call Flow

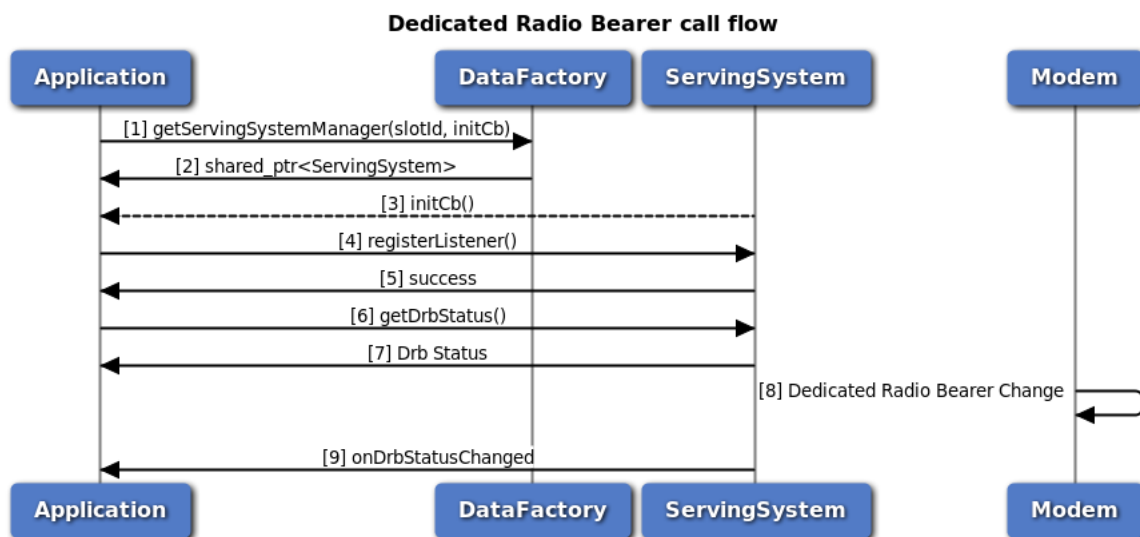


Figure 3-47 Get Dedicated Radio Bearer Call Flow

1. Application requests data factory for data serving system manager object with slot Id and init callback.
2. Data factory returns IServingSystemManager object to application.
3. Serving System Manager calls application callback provided in step 1 with initialization result pass/fail.
4. Application register itself as listener with Serving System manager to receive dedicated radio bearer changes notification.
5. Application gets success for registering as listener.
6. Application calls getDrbStatus to get current dedicated radio bearer status.
7. Application receives the current dedicated bearer status.
8. Dedicated radio bearer changes in modem
9. Application gets onDrbStatusChanged indication with new status

3.5.3.2 Request Service Status Call Flow

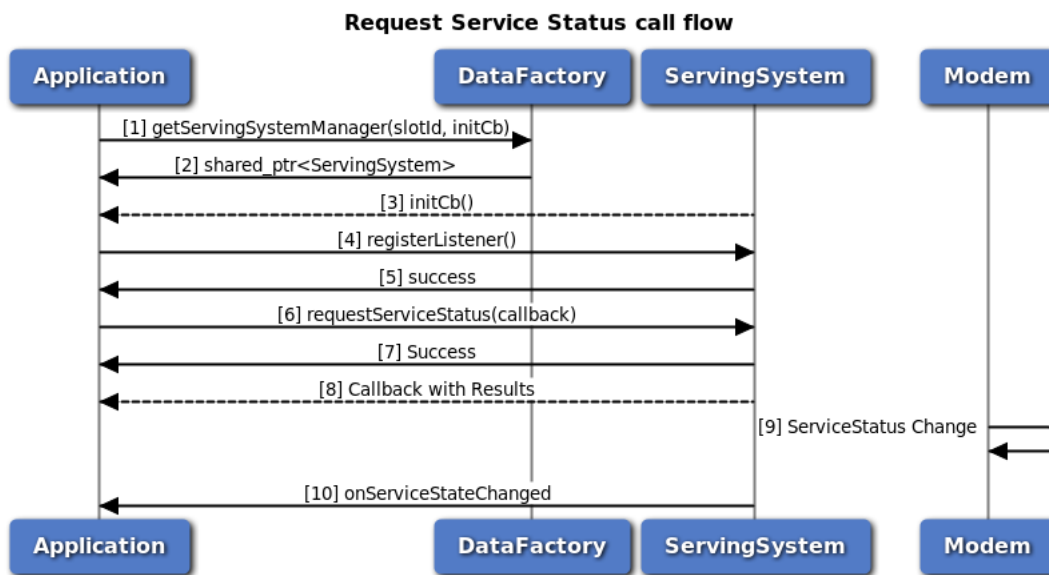


Figure 3-48 Request service status call flow

1. Application requests data factory for data serving system manager object with slot Id and init callback.
2. Data factory returns IServicingSystemManager object to application.
3. Serving System Manager calls application callback provided in step 1 with initialization result pass/fail.
4. Application register itself as listener with Serving System manager to receive service status changes notification.
5. Application gets success for registering as listener.
6. Application calls requestServiceStatus to get current service status and provides callback.
7. Application receives the status i.e. either SUCCESS or FAILED based on the execution of requestServiceStatus.
8. Application gets asynchronous response for requestServiceStatus through callback provided in step 4 with current service status.
9. Service status changes in modem
10. Application gets onServiceStateChanged indication with new status

3.5.3.3 Request Roaming Status Call Flow

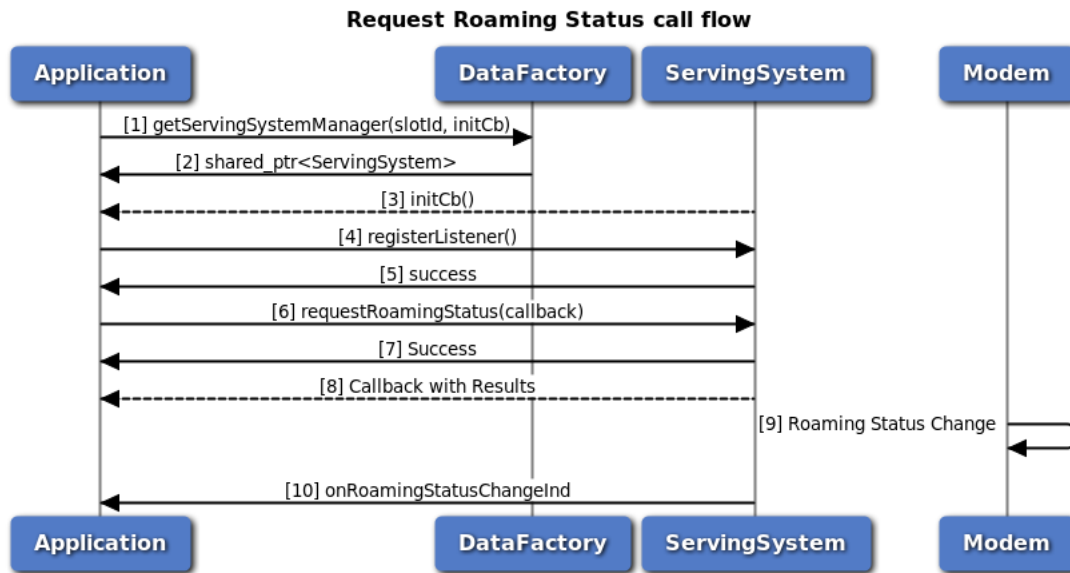


Figure 3-49 Request roaming status call flow

1. Application requests data factory for data serving system manager object with slot Id and init callback.
2. Data factory returns IServingSystemManager object to application.
3. Serving System Manager calls application callback provided in step 1 with initialization result pass/fail.
4. Application register itself as listener with Serving System manager to receive roaming status changes notification.
5. Application gets success for registering as listener.
6. Application calls requestRoamingStatus to get current service status and provides callback.
7. Application receives the status i.e. either SUCCESS or FAILED based on the execution of requestRoamingStatus.
8. Application gets asynchronous response for requestRoamingStatus through callback provided in step 4 with current service status.
9. Roaming status changes in modem
10. Application gets onRoamingStatusChanged indication with new status

3.5.4 Data Filter Manager Call Flow

Data Filter manager provides APIs to get/set data filter mode, add/remove data restrict filters. Its API can be used per data call or globally to apply the same changes to all the underlying currently up data call. It also has a listener interface for notifications for data filter status update. Application will get the Data Filter manager object from data factory. The application can register a listener for data filter mode change updates.

3.5.4.1 Call flow to Set/Get data filter mode

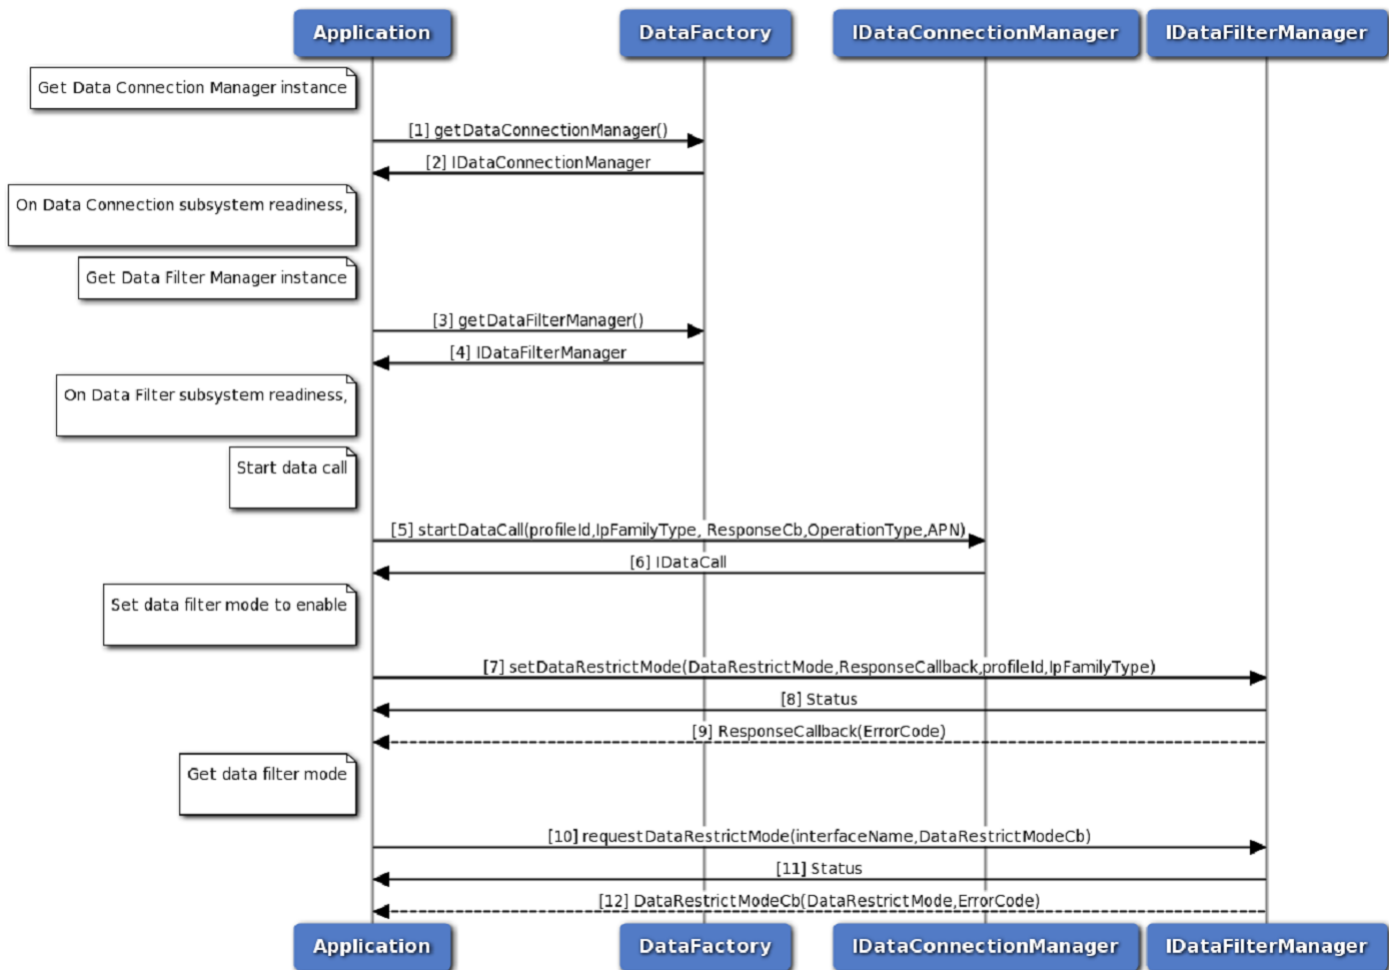


Figure 3-50 Get/Set data filter mode call flow

1. Application requests data factory for data connection manager object.
2. Data factory returns IDataConnectionManager object to application.
3. Application requests data factory for data filter manager object.
4. Data factory returns IDataFilterManager object to application.
5. Application requests for start data call and optionally gets asynchronous response using startDataCallback.
6. Application receives the status i.e. either SUCCESS or FAILED based on the execution of startDataCall.
7. Optionally, the application gets asynchronous response for startDataCall using startDataCallback.
8. Application requests for set data filter mode to enable and optionally gets asynchronous response using ResponseCallback.

9. Application receives the status i.e. either SUCCESS or FAILED based on the execution of setDataRestrictMode.
10. Optionally, the application gets asynchronous response for setDataRestrictMode using ResponseCallback.
11. Application requests for get data filter mode and optionally gets asynchronous response using DataRestrictModeCb.
12. Application receives the status i.e. either SUCCESS or FAILED based on the execution of requestDataRestrictMode.
13. Optionally, the application gets asynchronous response for requestDataRestrictMode using DataRestrictModeCb.

3.5.4.2 Call flow to Add data restrict filter

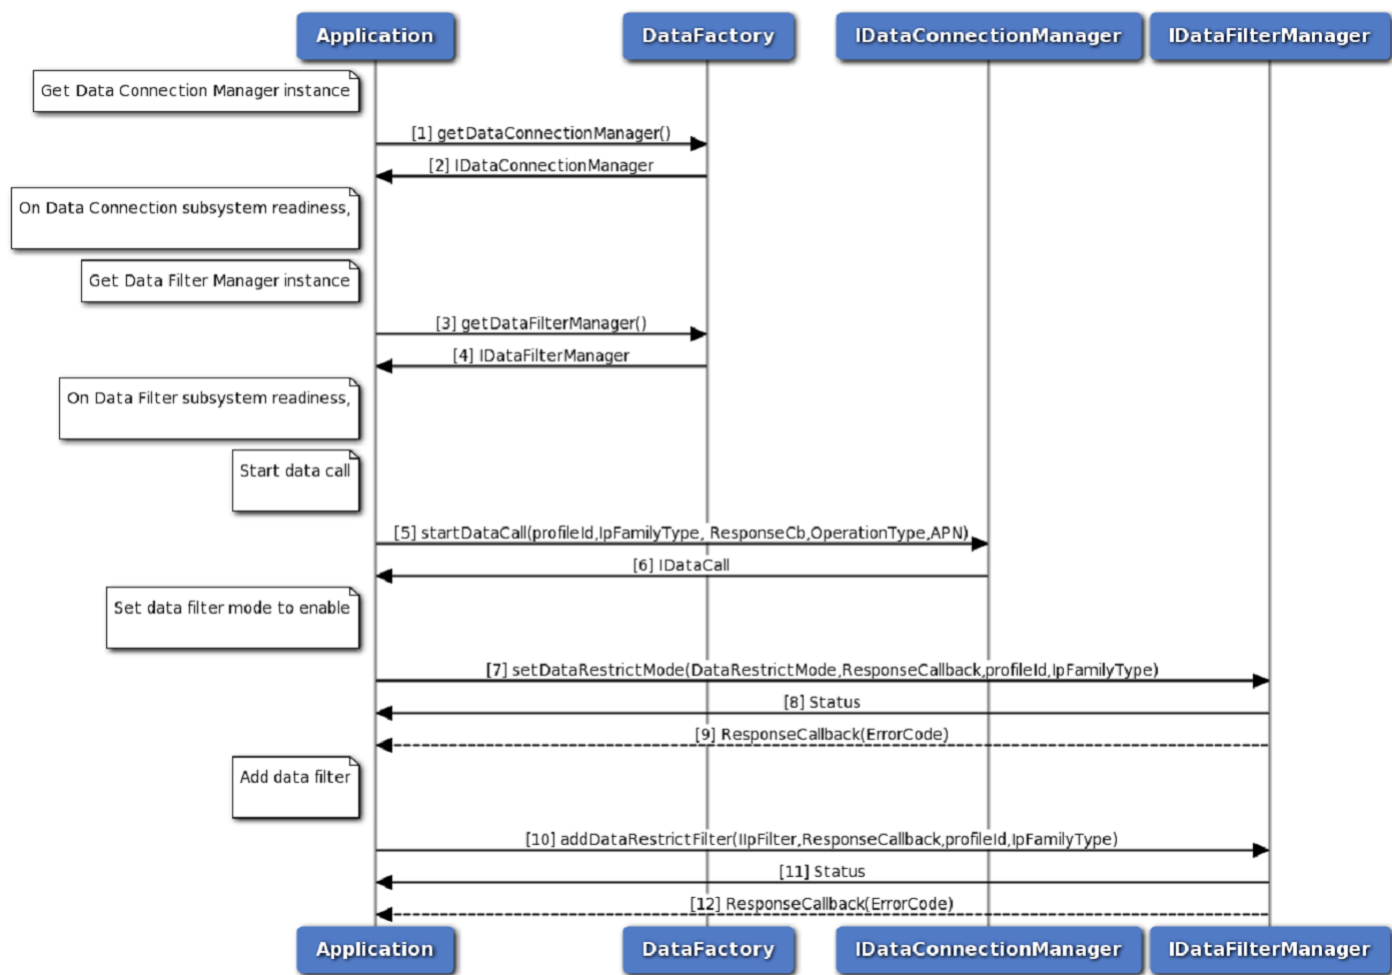


Figure 3-51 Add data restrict filter call flow

1. Application requests data factory for data connection manager object.
2. Data factory returns IDataConnectionManager object to application.

3. Application requests data factory for data filter manager object.
4. Data factory returns IDataFilterManager object to application.
5. Application requests for start data call and optionally gets asynchronous response using startDataCallback.
6. Application receives the status i.e. either SUCCESS or FAILED based on the execution of startDataCall.
7. Optionally, the application gets asynchronous response for startDataCall using startDataCallback.
8. Application requests for add data filter and optionally gets asynchronous response using ResponseCallback.
9. Application receives the status i.e. either SUCCESS or FAILED based on the execution of addDataRestrictFilter.
10. Optionally, the application gets asynchronous response for addDataRestrictFilter using ResponseCallback.

3.5.4.3 Call flow to Remove data restrict filter

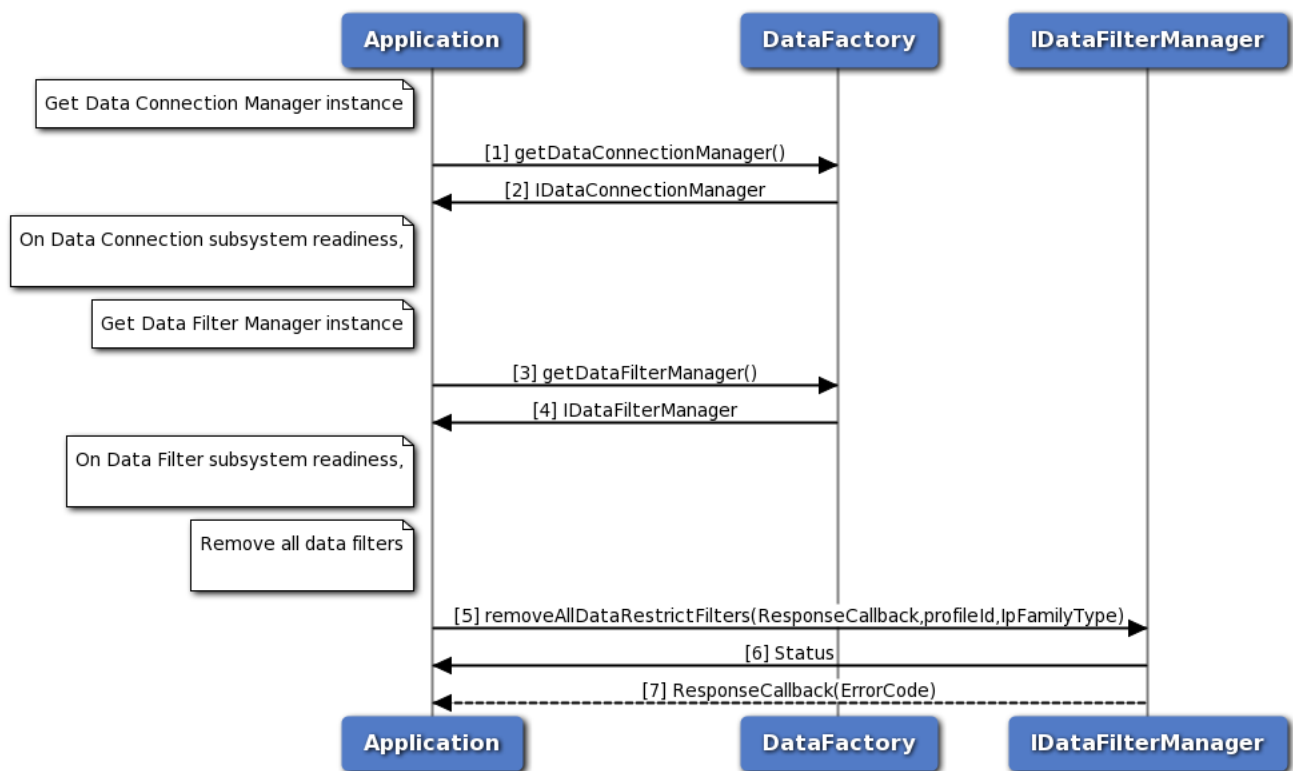


Figure 3-52 Remove data restrict filter call flow

1. Application requests data factory for data connection manager object.
2. Data factory returns IDataConnectionManager object to application.
3. Application requests data factory for data filter manager object.

4. Data factory returns IDataFilterManager object to application.
5. Application requests for start data call and optionally gets asynchronous response using startDataCallback.
6. Application receives the status i.e. either SUCCESS or FAILED based on the execution of startDataCall.
7. Optionally, the application gets asynchronous response for startDataCall using startDataCallback.
8. Application requests for add data filter and optionally gets asynchronous response using ResponseCallback.
9. Application receives the status i.e. either SUCCESS or FAILED based on the execution of removeAllDataRestrictFilters.
10. Optionally, the application gets asynchronous response for removeAllDataRestrictFilters using ResponseCallback.

3.5.5 Data Networking Call Flow

Application will get the following manager objects from data factory to configure networking. IVlanManager is used to access all VLAN APIs. INatManager is used to access all Static NAT APIs. IFirewallManager is used to access all Firewall APIs.

3.5.5.1 Create VLAN and Bind it to PDN in data vlan manager call flow

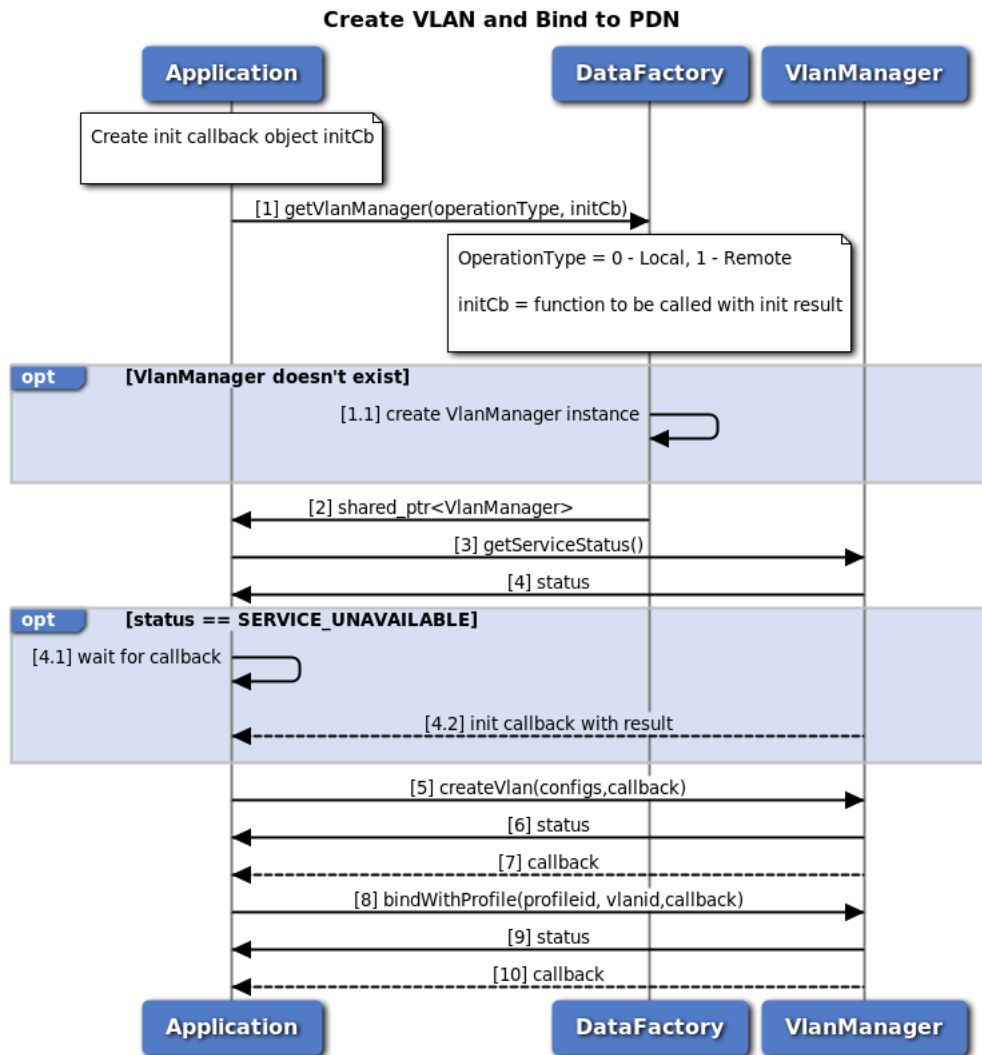


Figure 3-53 Create VLAN and bind it to PDN for data VLAN manager call flow

1. Application requests data factory for data IVlanManager object. Application can optionally provide callback to be called when manager initialization is completed. 1.1. If IVlanManager object does not exist, data factory will create new object.
2. Data factory returns shared pointer to IVlanManager object to application.
3. Application request current service status of vlan manager returned by data factory
4. The application receives the Status i.e. either true or false to indicate whether sub-system is ready or not. 4.1. If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1 4.2. Vlan manager calls application callback with initialization result (success/failure).
5. On success, application calls IVlanManager::createVlan with assigned id, interface, and acceleration type.
6. Application receives synchronous Status which indicates if the IVlanManager::createVlan request

was sent successfully.

7. Application is notified of the Status of the IVlanManager::createVlan request (either SUCCESS or FAILED) via the application-supplied callback.
8. Application calls IVlanManager::bindWithProfile with Vlan id and profile id.
9. Application receives synchronous Status which indicates if the IVlanManager::bindWithProfile request was sent successfully.
1. Application is notified of the Status of the IVlanManager::bindWithProfile request (either SUCCESS or FAILED) via the application-supplied callback.

3.5.5.2 LAN-LAN VLAN Configuration from EAP usecase call flow

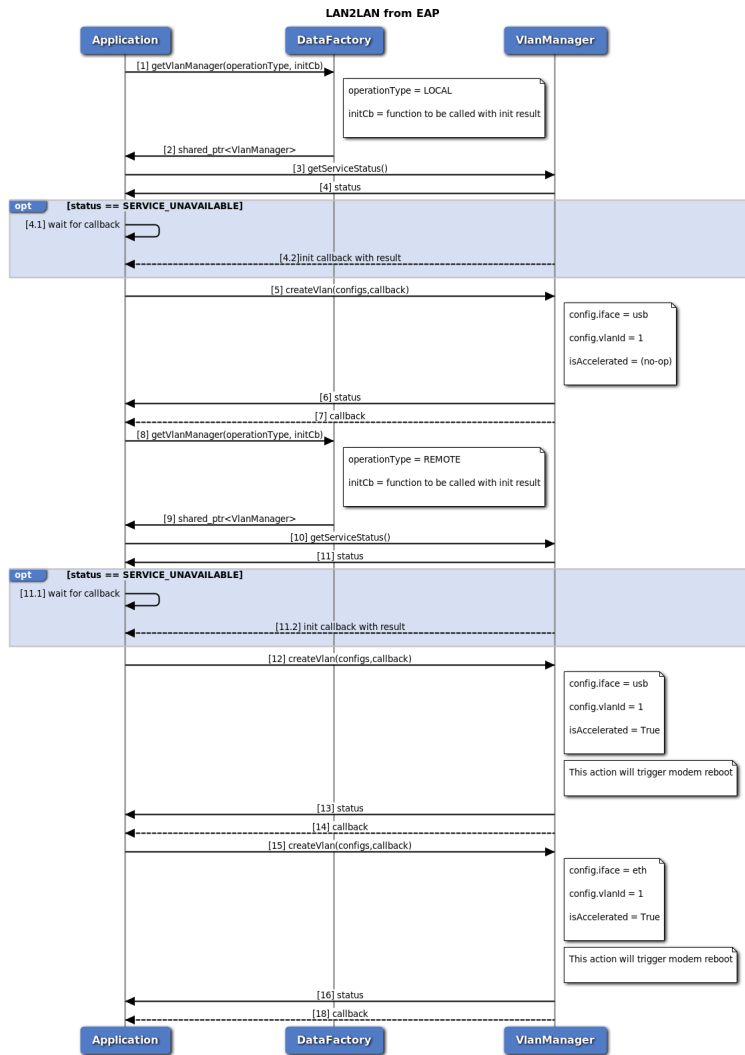


Figure 3-54 LAN-LAN VLAN Configuration Usecase from EAP call flow

1. Application requests data factory for data IVlanManager for local operation object. Application can optionally provide callback to be called when manager initialization is completed.
2. Data factory returns shared pointer to local vlan manager object to application.

3. Application request current service status of local vlan manager returned by data factory.
4. Vlan manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Vlan manager calls application callback with initialization result (success/failure).
5. On success, application calls IVlanManager::createVlan with USB interface, Vlan id 1 and no acceleration.
6. Vlan manager returns synchronous response to application (success/fail).
7. Vlan manager calls application provided callback in step 5 with createVlan results
8. Application requests data factory for data IVlanManager for remote operation object. Application can optionally provide callback to be called when manager initialization is completed.
9. Data factory returns shared pointer to remote vlan manager object to application.
10. Application request current service status of remote vlan manager returned by data factory.
11. Vlan manager returns current service status. 11.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 11.2 Vlan manager calls application callback with initialization result (success/failure).
12. On success, application calls IVlanManager::createVlan with USB interface, Vlan id 1 and acceleration.
13. Vlan manager returns synchronous response to application (success/fail).
14. Vlan manager calls application provided callback in step 12 with createVlan results.
15. Application calls IVlanManager::createVlan with ETH interface, Vlan id 1 and acceleration.
16. Vlan manager returns synchronous response to application (success/fail).
17. Vlan manager calls application provided callback in step 15 with createVlan results.

3.5.5.3 LAN-LAN VLAN Configuration from A7 usecase call flow

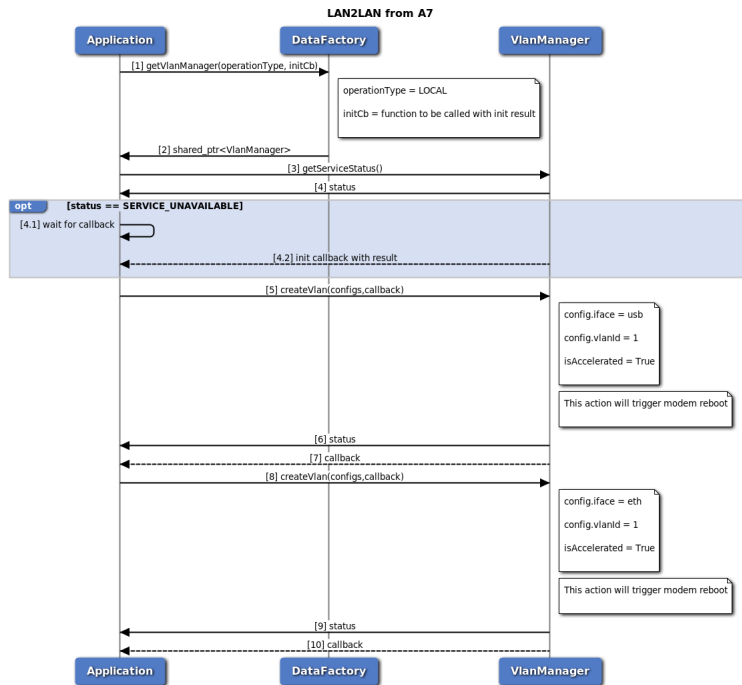


Figure 3-55 LAN-LAN VLAN Configuration Usecase from A7 call flow

1. Application requests data factory for data IVlanManager for local operation object. Application can optionally provide callback to be called when manager initialization is completed.
2. Data factory returns shared pointer to local vlan manager object to application.
3. Application request current service status of local vlan manager returned by data factory.
4. Vlan manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Vlan manager calls application callback with initialization result (success/failure).
5. On success, application calls IVlanManager::createVlan with USB interface, Vlan id 1 and acceleration.
6. Vlan manager returns synchronous response to application (success/fail).
7. Vlan manager calls application provided callback in step 5 with createVlan results.
8. Application calls IVlanManager::createVlan with ETH interface, Vlan id 1 and acceleration.
9. Vlan manager returns synchronous response to application (success/fail).
10. Vlan manager calls application provided callback in step 8 with createVlan results.

3.5.5.4 LAN-WAN VLAN Configuration from EAP usecase call flow

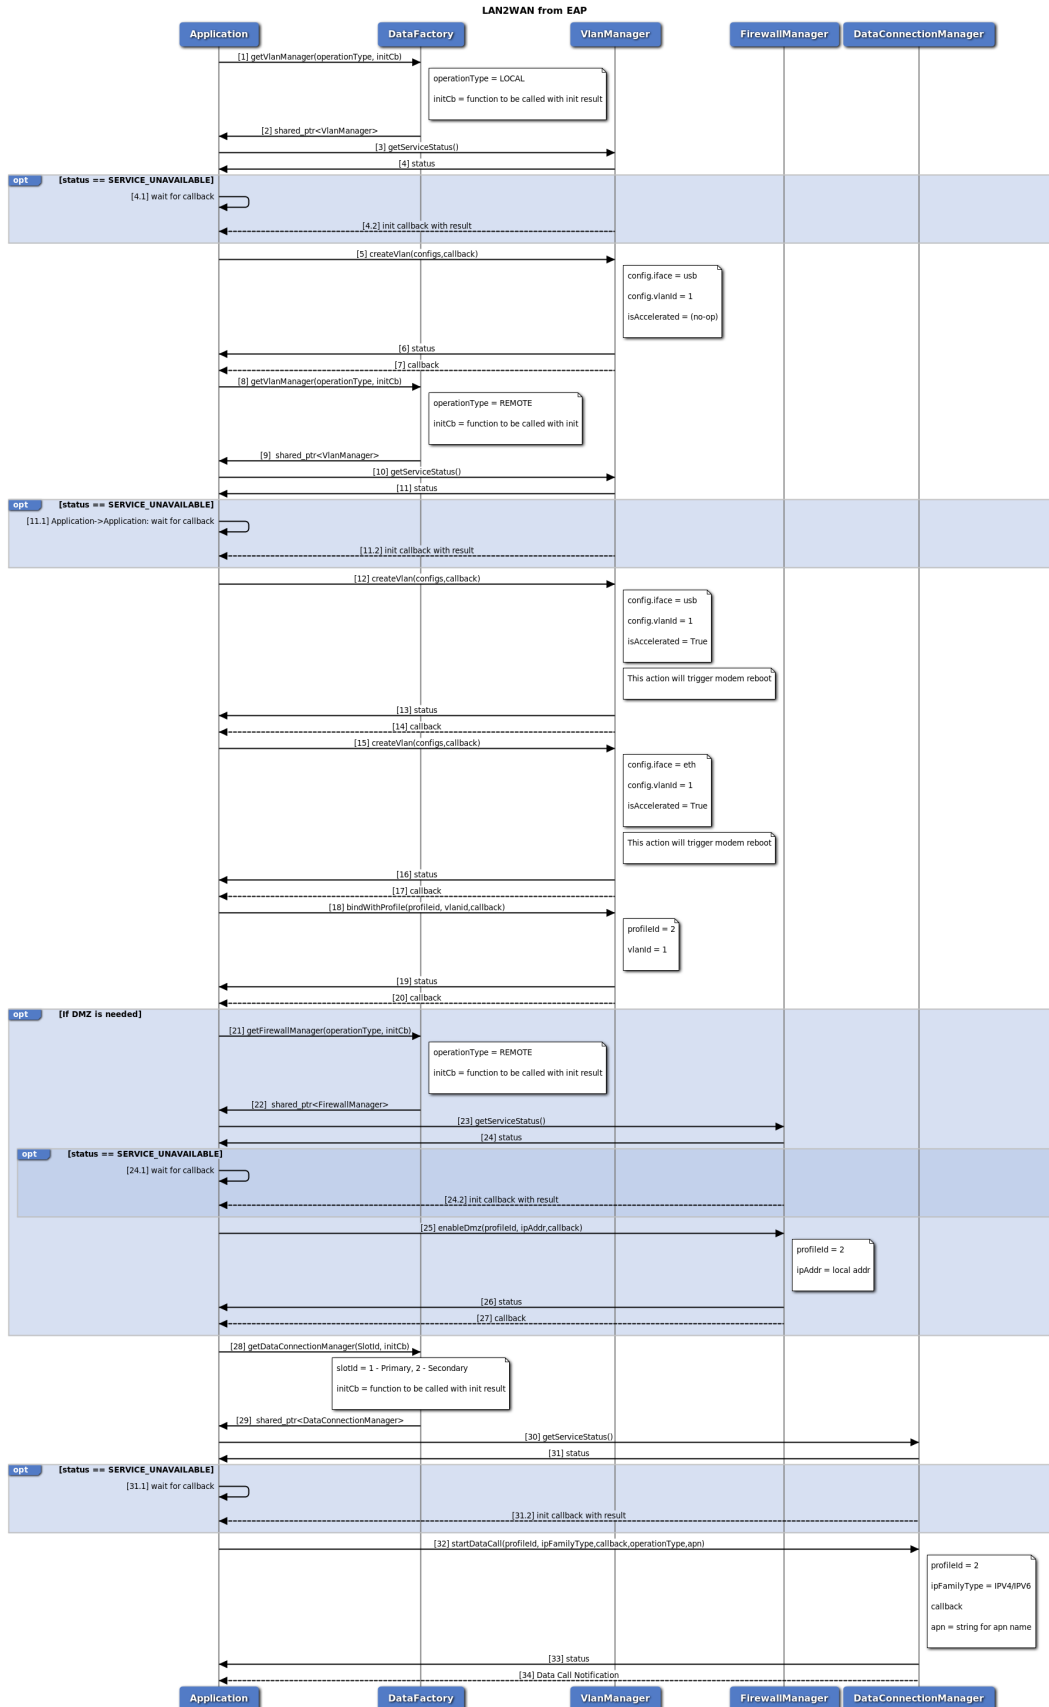


Figure 3-56 LAN-WAN VLAN Configuration Usecase from EAP call flow

1. Application requests data factory for local data vlan manager object.
2. Data factory returns shared pointer to local vlan manager to application.
3. Application request current service status of local vlan manager returned by data factory.
4. Vlan manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Vlan manager calls application callback with initialization result (success/failure).
5. On success, application calls IVlanManager::createVlan with USB interface, Vlan id 1 and no acceleration.
6. Vlan manager returns synchronous response to application (success/fail).
7. Vlan manager calls application provided callback in step 5 with createVlan results.
8. Application requests data factory for remote data vlan manager object.
9. Data factory returns shared pointer to remote vlan manager to application.
10. Application request current service status of remote vlan manager returned by data factory.
11. Vlan manager returns current service status. 11.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 8. 11.2 Vlan manager calls application callback with initialization result (success/failure).
12. On success, application calls IVlanManager::createVlan with USB interface, Vlan id 1 and acceleration.
13. Vlan manager returns synchronous response to application (success/fail).
14. Vlan manager calls application provided callback in step 12 with createVlan results.
15. Application calls IVlanManager::createVlan with ETH interface, Vlan id 1 and acceleration.
16. Vlan manager returns synchronous response to application (success/fail).
17. Vlan manager calls application provided callback in step 15 with createVlan results.
18. Application calls IVlanManager::bindWithProfile with profile id to bind with.
19. Vlan manager returns synchronous response to application (success/fail).
20. Vlan manager calls application provided callback in step 18 with bindWithProfile results. If DMZ is needed:
 - (a) Application requests data factory for firewall manager object.
 - (b) Data factory returns shared pointer to firewall manager to application.
 - (c) Application request current service status of firewall manager returned by data factory.
 - (d) Firewall manager returns current service status. 24.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 21. 24.2 Firewall manager calls application callback with initialization result (success/failure).
 - (e) Application calls firewall manager enableDmz with profile id and local address to be enable Dmz on.
 - (f) Firewall manager returns synchronous response to application (success/fail).
 - (g) Firewall manager calls application provided callback in step 25 with enableDmz results.
21. Application requests data factory for data connection manager object.

22. Data factory returns shared pointer to data connection manager to application.
23. Application request current service status of data connection manager returned by data factory.
24. Data connection manager returns current service status. 31.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 28.
31.2 Data connection manager calls application callback with initialization result (success/failure).
25. Application can call data Connection manager startDataCall with profile id to start data call on, Ip Family type, operation Type and APN Name.
26. Data connection Manager returns synchronous response to application (success/fail).
27. Data connection Manager returns notification to application with data call details.

3.5.5.5 LAN-WAN VLAN Configuration from A7 usecase call flow

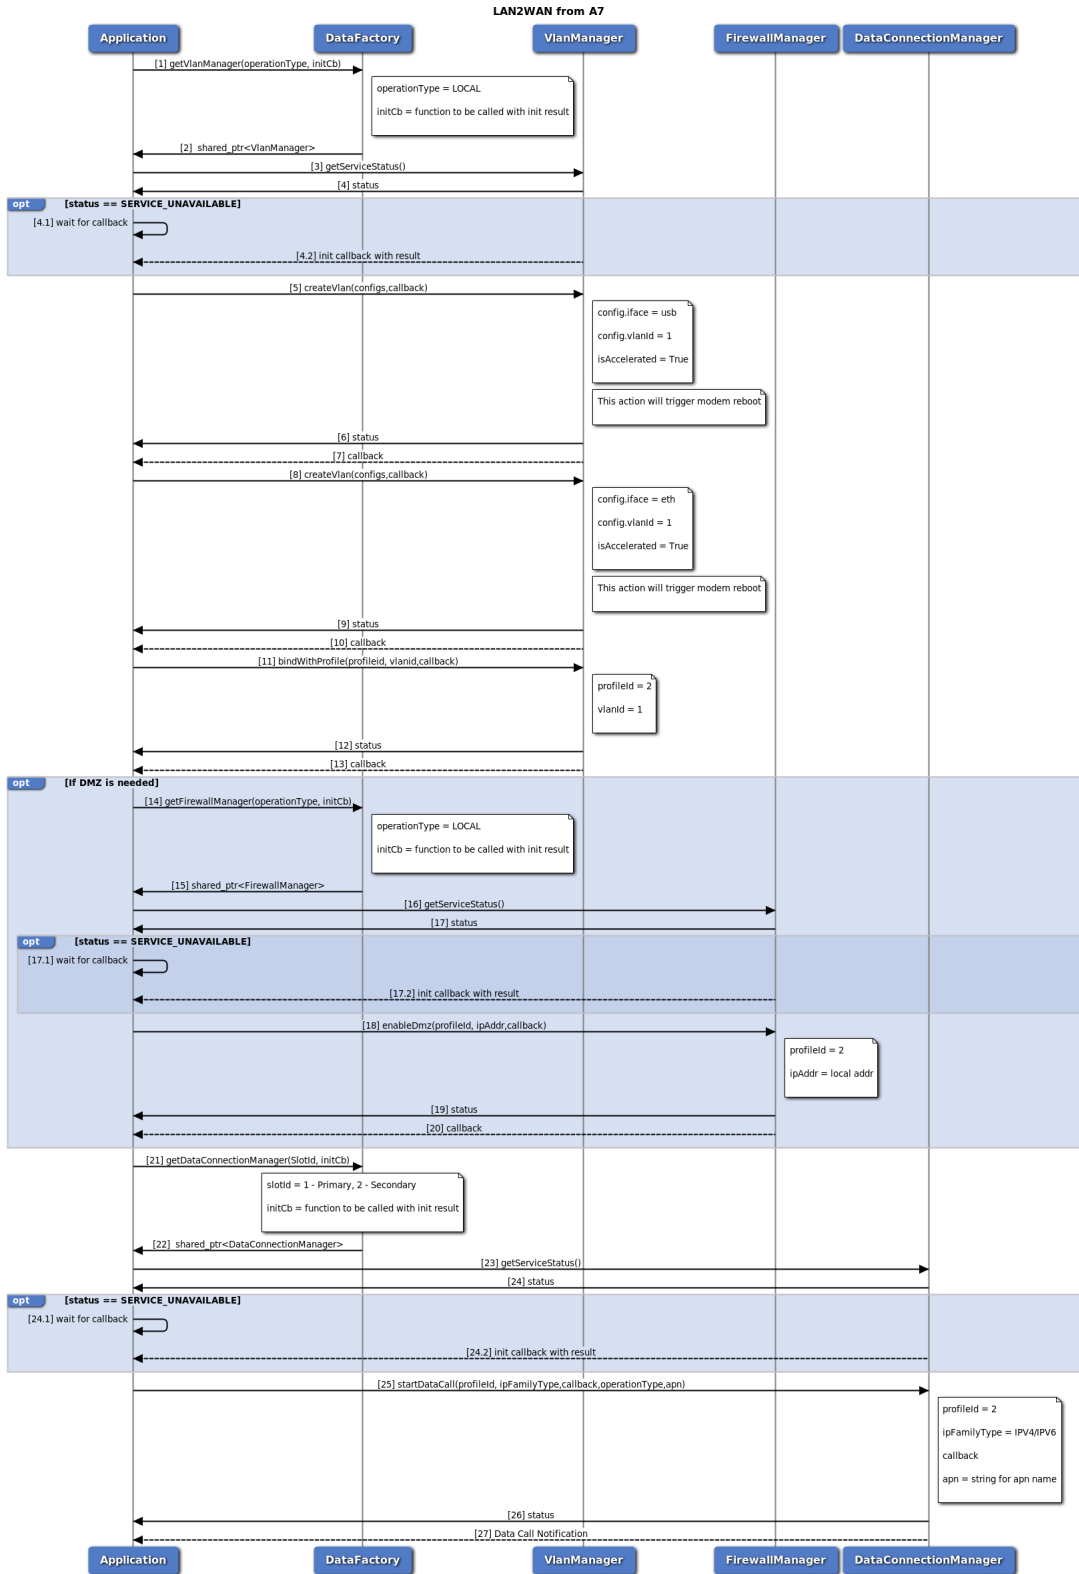


Figure 3-57 LAN-WAN VLAN Configuration Usecase from A7 call flow

1. Application requests data factory for local data vlan manager object.
2. Data factory returns shared pointer to local vlan manager to application.
3. Application request current service status of local vlan manager returned by data factory.
4. Vlan manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Vlan manager calls application callback with initialization result (success/failure).
5. On success, application calls IVlanManager::createVlan with USB interface, Vlan id 1 and acceleration.
6. Vlan manager returns synchronous response to application (success/fail).
7. Vlan manager calls application provided callback in step 5 with createVlan results.
8. Application calls IVlanManager::createVlan with ETH interface, Vlan id 1 and acceleration.
9. Vlan manager returns synchronous response to application (success/fail).
10. Vlan manager calls application provided callback in step 8 with createVlan results.
11. Application calls IVlanManager::bindWithProfile with profile id to bind with.
12. Vlan manager returns synchronous response to application (success/fail).
13. Vlan manager calls application provided callback in step 11 with bindWithProfile results. If DMZ is needed:
 - (a) Application requests data factory for firewall manager object.
 - (b) Data factory returns shared pointer to firewall manager to application.
 - (c) Application request current service status of firewall manager returned by data factory.
 - (d) Firewall manager returns current service status. 17.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 14. 17.2 Firewall manager calls application callback with initialization result (success/failure).
 - (e) Application calls firewall manager enableDmz with profile id and local address to be enable Dmz on.
 - (f) Firewall manager returns synchronous response to application (success/fail).
 - (g) Firewall manager calls application provided callback in step 25 with enableDmz results.
14. Application requests data factory for data connection manager object.
15. Data factory returns shared pointer to data connection manager to application.
16. Application request current service status of data connection manager returned by data factory.
17. Data connection manager returns current service status. 24.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 21. 24.2 Data connection manager calls application callback with initialization result (success/failure).
18. Application can call data Connection manager startDataCall with profile id to start data call on, Ip Family type, operation Type and APN Name.
19. Data connection Manager returns synchronous response to application (success/fail).
20. Data connection Manager returns notification to application with data call details.

3.5.5.6 Create Static NAT entry in data Static NAT manager call flow

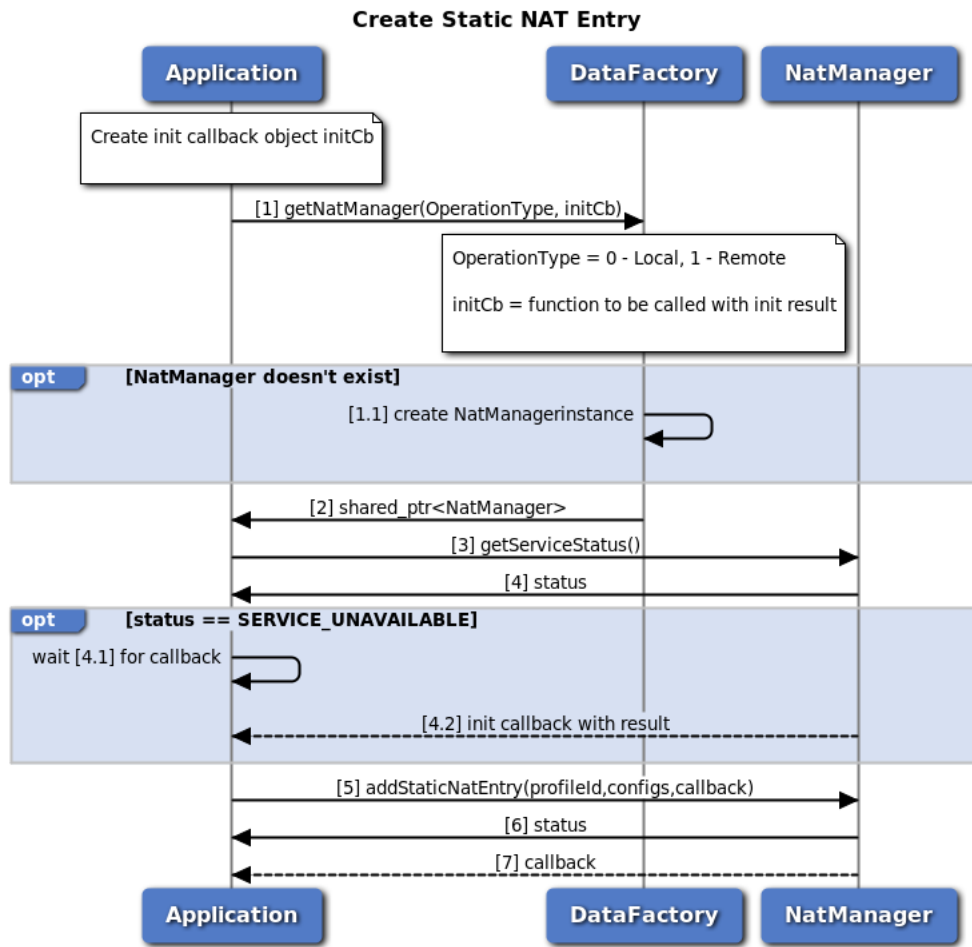


Figure 3-58 Create Static NAT entry for data NAT manager call flow

1. Application requests data factory for data nat manager object. 1.1. If nat manager object does not exist, data factory will create new object.
2. Data factory returns shared pointer to nat manager object to application.
3. Application request current service status of nat manager returned by data factory.
4. Nat manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Nat manager calls application callback with initialization result (success/failure).
5. On success, application calls nat manager addStaticNatEntry with profileId, private IP address port, private port, global port and IP Protocol.
6. Application receives synchronous Status which indicates if the nat manager addStaticNatEntry request was sent successfully.
7. Application is notified of the result of the nat manager addStaticNatEntry request (either SUCCESS or FAILED) via the application-supplied callback.

3.5.5.7 Firewall Enablement in data Firewall manager call flow

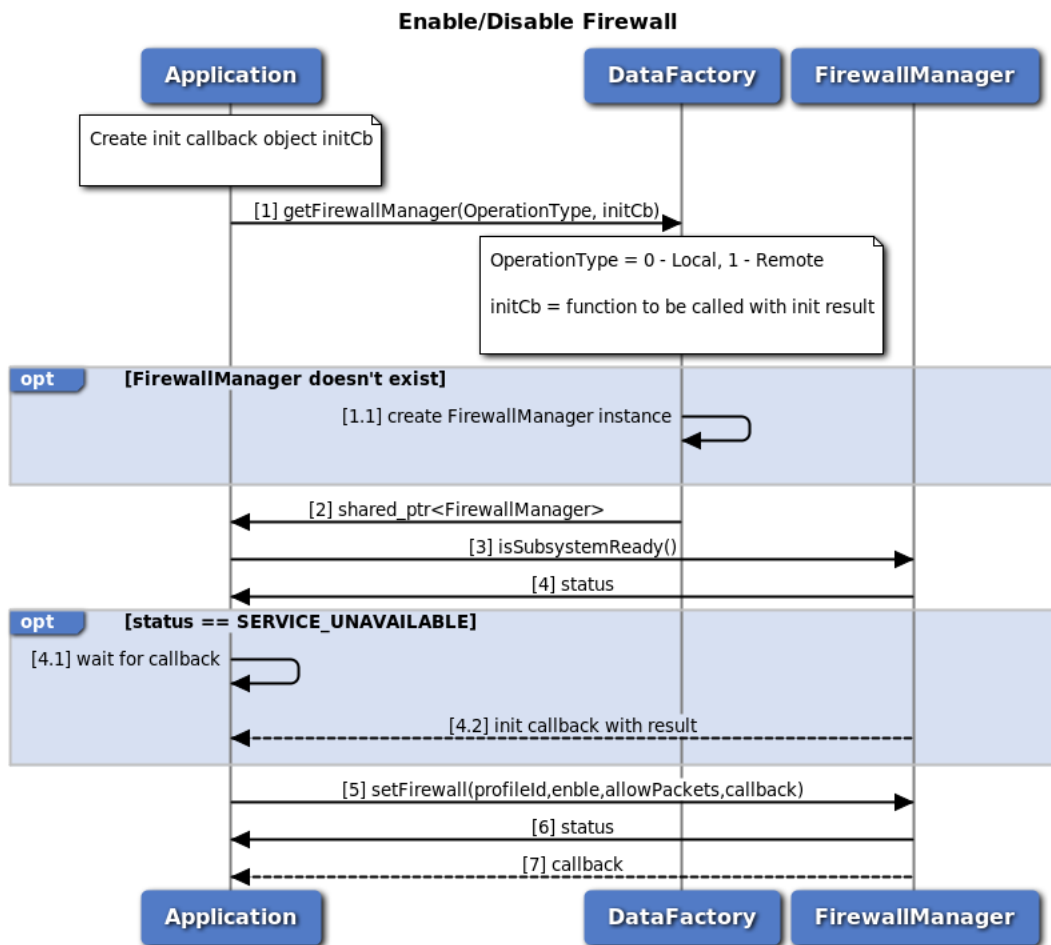


Figure 3-59 Firewall enablement in data Firewall manager call flow

1. Application requests data factory for data firewall manager object. 1.1. If firewall manager object does not exist, data factory will create new object.
2. Data factory returns shared pointer to firewall manager object to application.
3. Application request current service status of firewall manager returned by data factory.
4. Firewall manager returns current service status. 4.1 If status returned is `SERVICE_UNAVAILABLE` (manager is not ready), application should wait for init callback provided in step 1. 4.2 Firewall manager calls application callback with initialization result (success/failure).
5. On success, application calls firewall manager `setFirewall` with enable/disable and allow/drop packets.
6. Application receives synchronous Status which indicates if the firewall manager `setFirewall` request was sent successfully.
7. Application is notified of the Status of the firewall manager `setFirewall` request (either `SUCCESS` or `FAILED`) via the application-supplied callback.

3.5.5.8 Add Firewall Entry in data Firewall manager call flow

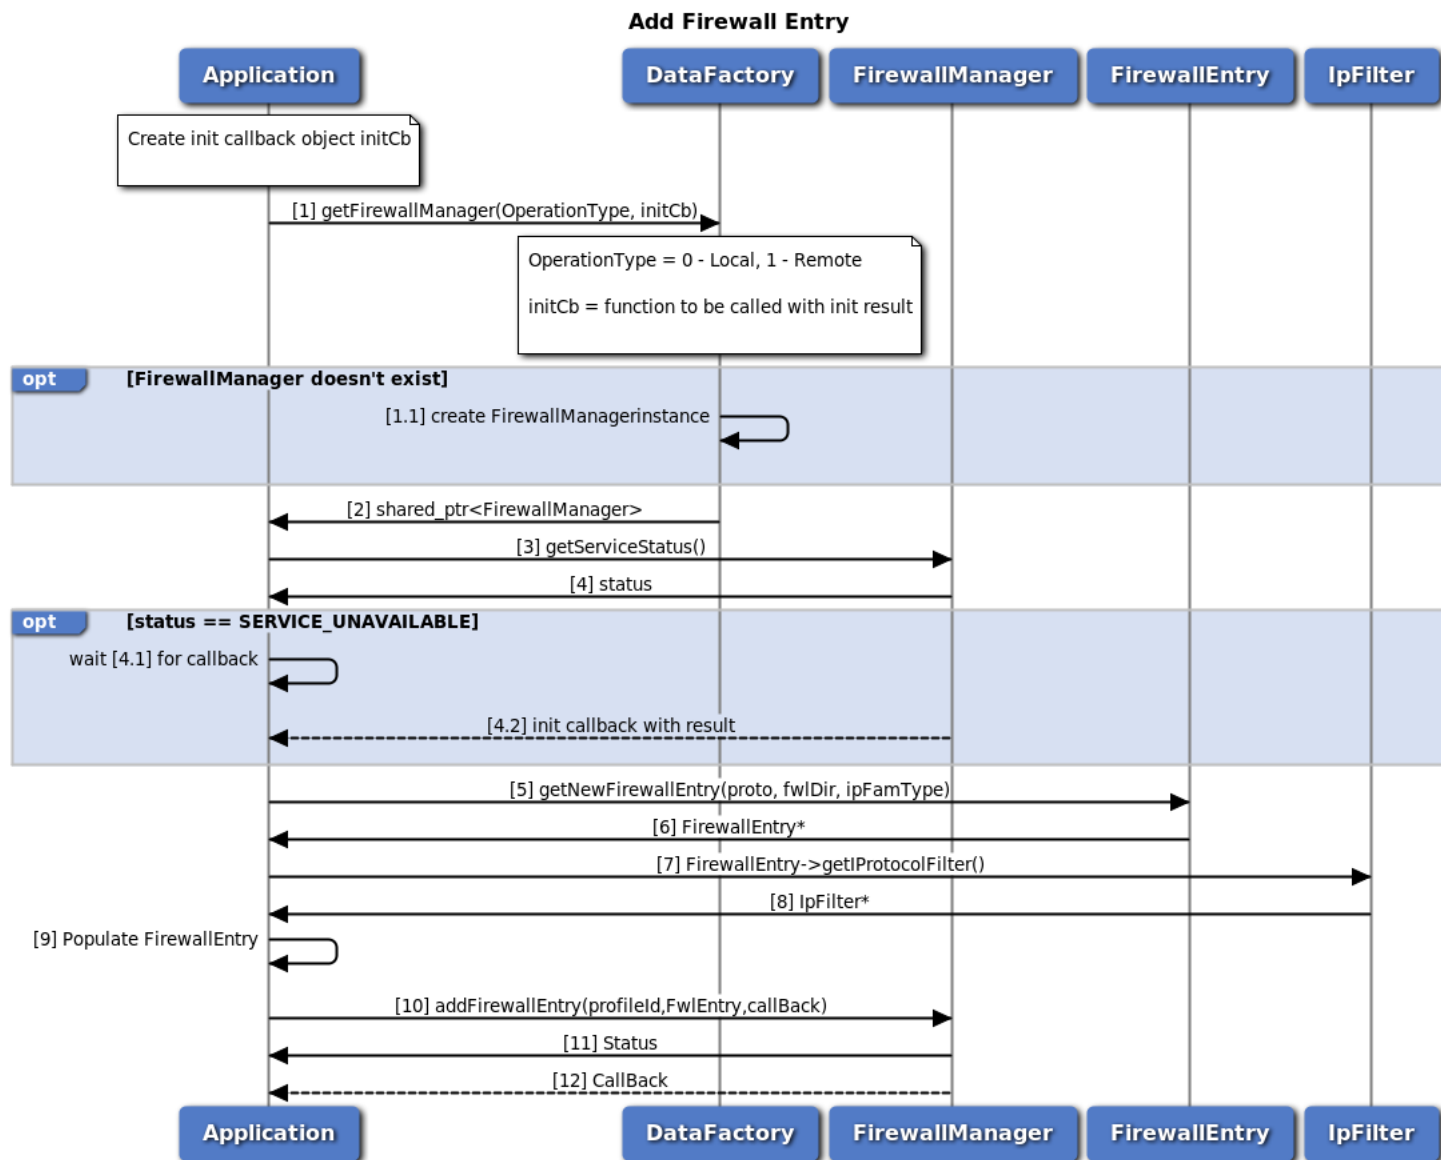


Figure 3-60 Add Firewall entry in data Firewall manager call flow

1. Application requests data factory for data firewall manager object. 1.1. If firewall manager object does not exist, data factory will create new object.
2. Data factory returns shared pointer to firewall manager object to application.
3. Application request current service status of data profile manager returned by data factory.
4. Firewall manager returns current service status. 4.1 If status returned is `SERVICE_UNAVAILABLE` (manager is not ready), application should wait for init callback provided in step 1. 4.2 Firewall manager calls application callback with initialization result (success/failure).
5. On success, application calls firewall manager `getNewFirewallEntry` to get `FirewallEntry` object.

6. Application receives Firewall Entry object.
7. Using Firewall Entry object, application calls `IFirewallEntry::getProtocolFilter` to get protocol filter object
8. Application receives `IpFilter` object.
9. Application populates `FirewallEntry` and `IpFilter` objects.
10. Application calls `IFirewallManager::addFirewallEntry` with `profileId` and `FirewallEntry` to add firewall entry
11. Application receives synchronous `Status` which indicates if `addFirewallEntry` was sent successfully
12. Application is notified of the `Status` of the `IFirewallManager::addFirewallEntry` request (either `SUCCESS` or `FAILED`) via the application-supplied callback.

3.5.5.9 Set Firewall DMZ in data Firewall manager call flow

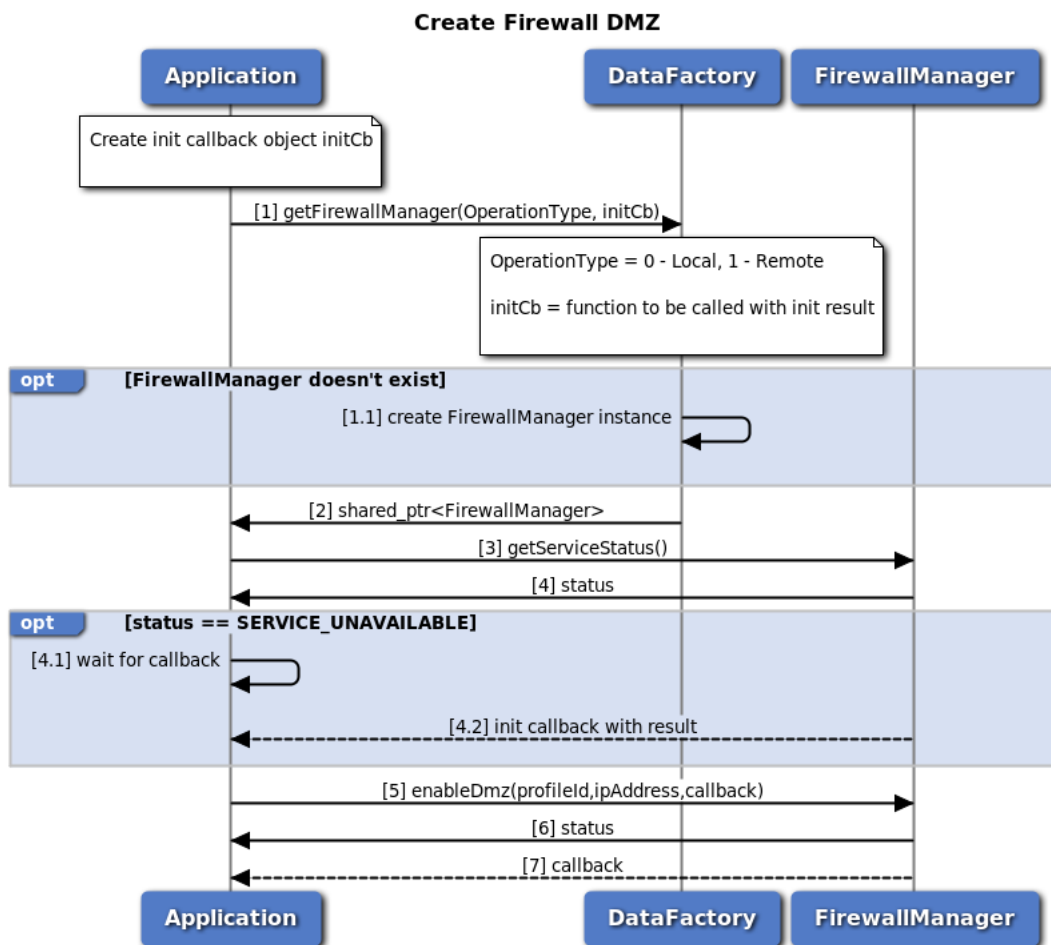


Figure 3-61 Set Firewall DMZ in data Firewall manager call flow

1. Application requests data factory for data firewall manager object. 1.1. If firewall manager object does not exist, data factory will create new object.
2. Data factory returns shared pointer to firewall manager object to application.

3. Application request current service status of firewall manager returned by data factory.
4. Firewall manager returns current service status. 4.1 If status returned is `SERVICE_UNAVAILABLE` (manager is not ready), application should wait for init callback provided in step 1. 4.2 Firewall manager calls application callback with initialization result (success/failure).
5. On success, application calls firewall manager `enableDmz` with `profileId` and IP Address.
6. Application receives synchronous Status which indicates if the firewall manager `enableDmz` request was sent successfully.
7. Application is notified of the Status of the firewall manager `enableDmz` request (either `SUCCESS` or `FAILED`) via the application-supplied callback.

3.5.5.10 Socks Enablement in data Socks manager call flow

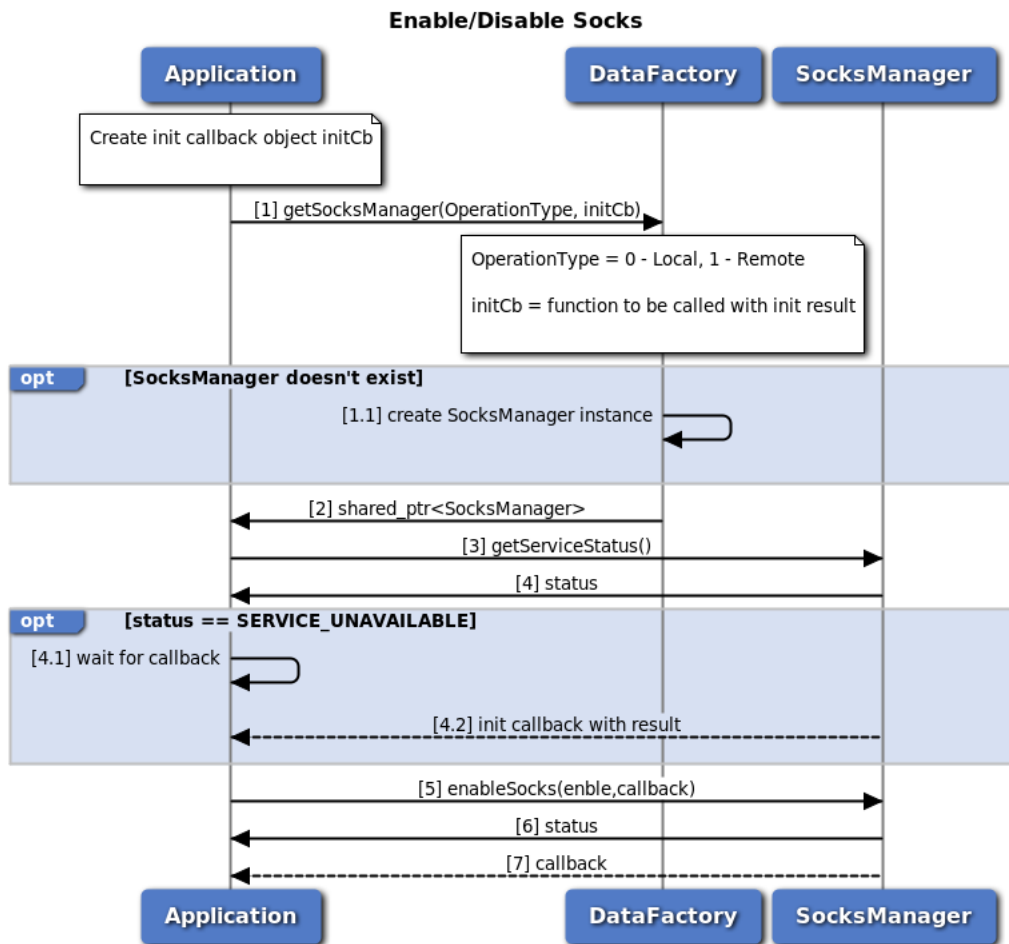


Figure 3-62 Socks enablement in data Socks manager call flow

1. Application requests data factory for data socks manager object. 1.1. If socks manager object does not exist, data factory will create new object.
2. Data factory returns shared pointer to socks manager object to application.
3. Application request current service status of socks manager returned by data factory.

4. Socks manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Socks manager calls application callback with initialization result (success/failure).
5. On success, application calls socks manager enableSocks with enable/disable.
6. Application receives synchronous Status which indicates if the socks manager enableSocks request was sent successfully.
7. Application is notified of the Status of the socks manager enableSocks request (either SUCCESS or FAILED) via the application-supplied callback.

3.5.5.11 L2TP Enablement and Configuration in data L2TP manager call flow

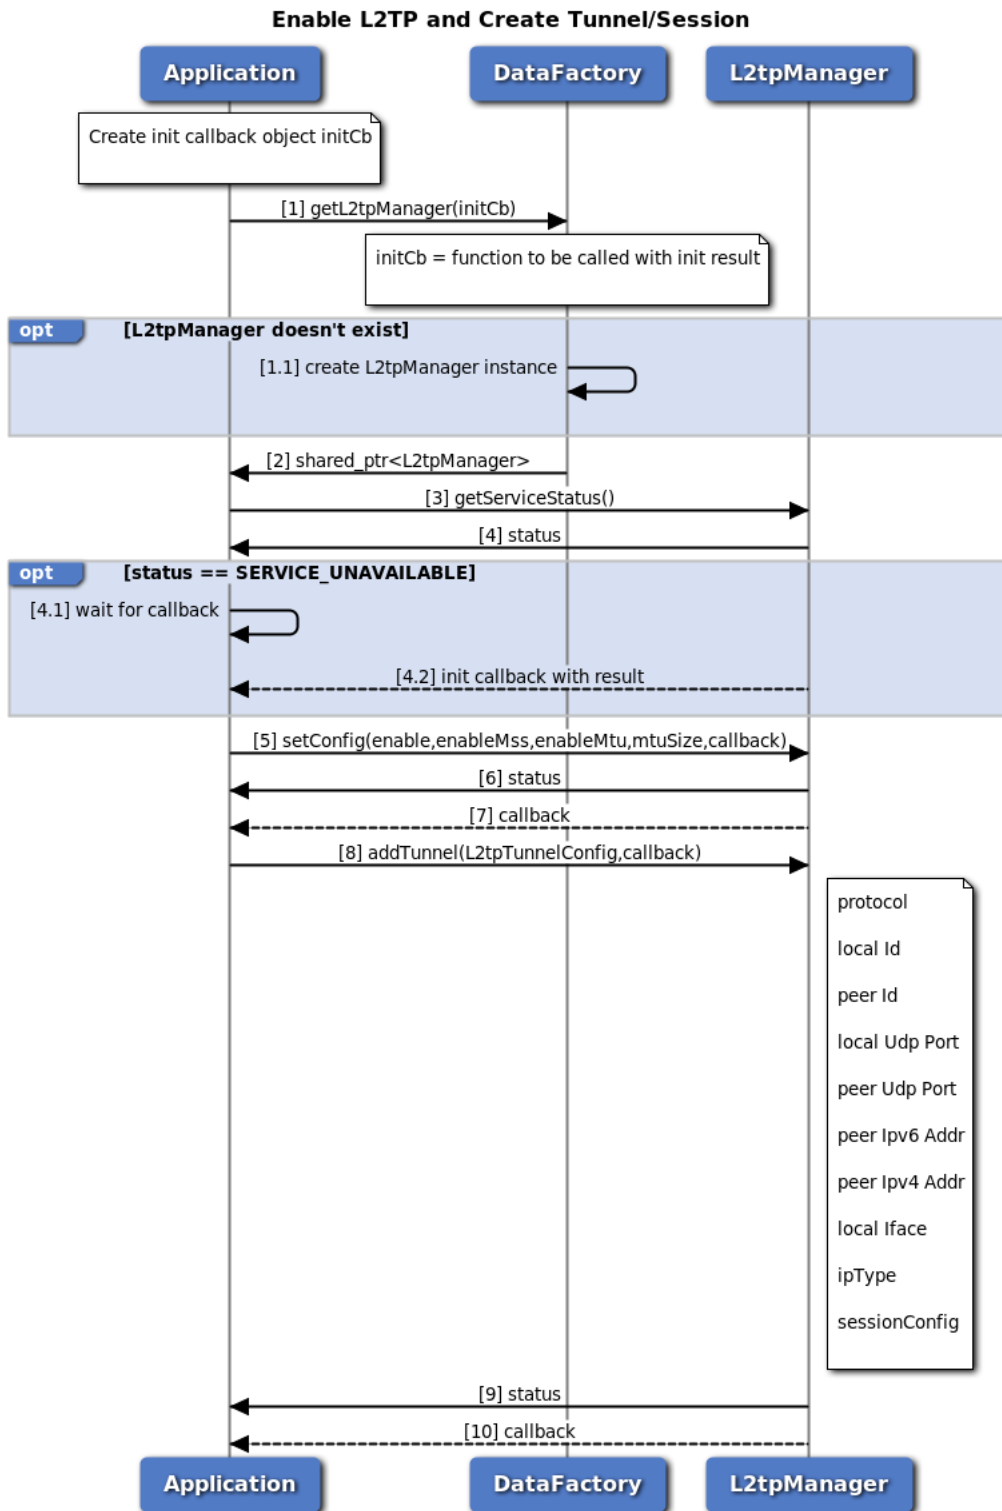


Figure 3-63 L2TP enablement and Configuration in data L2TP manager call flow

1. Application requests data factory for data l2tp manager object. 1.1. If l2tp manager object does not exist, data factory will create new object.

2. Data factory returns shared pointer to l2tp manager object to application.
3. Application request current service status of l2tp manager returned by data factory.
4. L2tp manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 L2tp manager calls application callback with initialization result (success/failure).
5. On success, application calls l2tp manager setConfig with enable/disable, enable/disable Mss, enable/disable MTU size and MTU size
6. Application receives synchronous Status which indicates if the l2tp manager setConfig request was sent successfully.
7. Application is notified of the Status of the l2tp manager setConfig request (either SUCCESS or FAILED) via the application-supplied callback.
8. Application calls l2tp manager setConfig with all required configurations to setup tunnel and session
9. Application receives synchronous Status which indicates if the l2tp manager setConfig request was sent successfully.
10. Application is notified of the Status of the l2tp manager setConfig request (either SUCCESS or FAILED) via the application-supplied callback.

3.5.5.12 Call flow to add and enable software bridge

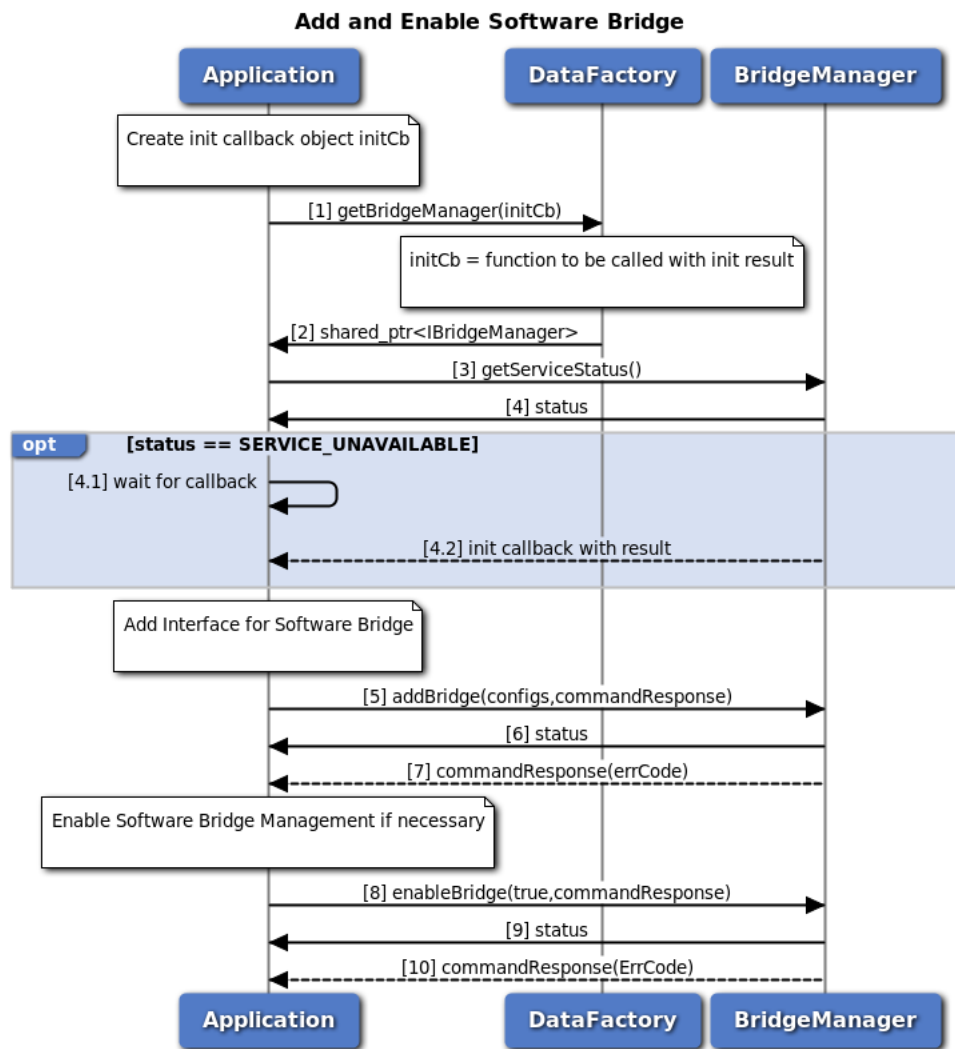


Figure 3-64 Call flow to add and enable a software bridge

1. Application requests data factory for bridge manager object.
2. Data factory returns shared pointer to bridge manager object to application.
3. Application request current service status of bridge manager returned by data factory.
4. Bridge manager returns current service status. 4.1 If status returned is `SERVICE_UNAVAILABLE` (manager is not ready), application should wait for init callback provided in step 1. 4.2 Bridge manager calls application callback with initialization result (success/failure).
5. On success, application requests to add software bridge configuration for an interface, providing an optional asynchronous response callback using `addBridge` API.
6. Application receives the synchronous status i.e. either `SUCCESS` or `FAILED` which indicates if the request was sent successfully.
7. Optionally, the application gets asynchronous response for `addBridge` via the application-supplied callback.

8. If the software bridge management is not enabled already, application requests to enable it, providing an optional asynchronous response callback using enableBridge API. Please note that this step affects all the software bridges configured in the system.
9. Application receives the status i.e. either SUCCESS or FAILED which indicates if the request was sent successfully.
10. Optionally, the application gets asynchronous response for enableBridge via the application-supplied callback.

3.5.5.13 Call flow to remove and disable software bridge

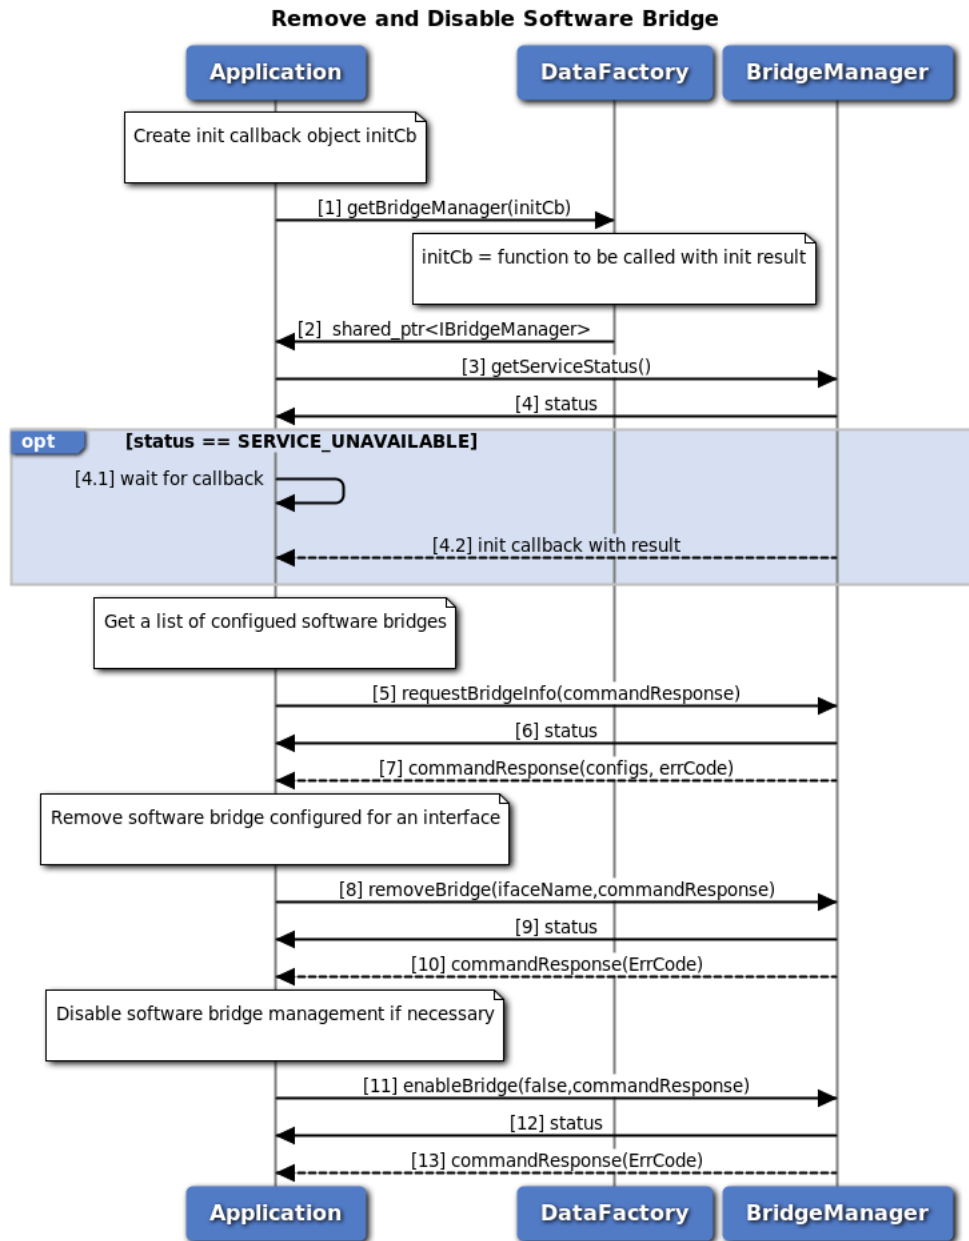


Figure 3-65 Call flow to remove and disable a software bridge

1. Application requests data factory for bridge manager object.
2. Data factory returns shared pointer to bridgeManager object to application.
3. Application request current service status of bridge manager returned by data factory.
4. Bridge manager returns current service status. 4.1 If status returned is SERVICE_UNAVAILABLE (manager is not ready), application should wait for init callback provided in step 1. 4.2 Bridge manager calls application callback with initialization result (success/failure).
5. On success, application requests to get the list of software bridge configurations, providing an asynchronous response callback using requestBridgeInfo API.
6. Application receives the synchronous status i.e. either SUCCESS or FAILED which indicates if the request was sent successfully.
7. The application gets asynchronous response for requestBridgeInfo via the application-supplied callback.
8. Application requests to remove software bridge configuration for an interface, providing an optional asynchronous response callback using removeBridge API.
9. Application receives the synchronous status i.e. either SUCCESS or FAILED which indicates if the request was sent successfully.
10. Optionally, the application gets asynchronous response for removeBridge via the application-supplied callback.
11. If the software bridge management needs to be disabled, application requests to disable it, providing an optional asynchronous response callback using enableBridge API. Please note that this step affects all the software bridges configured in the system.
12. Application receives the status i.e. either SUCCESS or FAILED which indicates if the request was sent successfully.
13. Optionally, the application gets asynchronous response for enableBridge via the application-supplied callback.

3.6 C-V2X

Applications need to have "radio" Linux group permissions to be able to operate successfully with underlying services.

3.6.1 Retrieve/Update C-V2X configuration

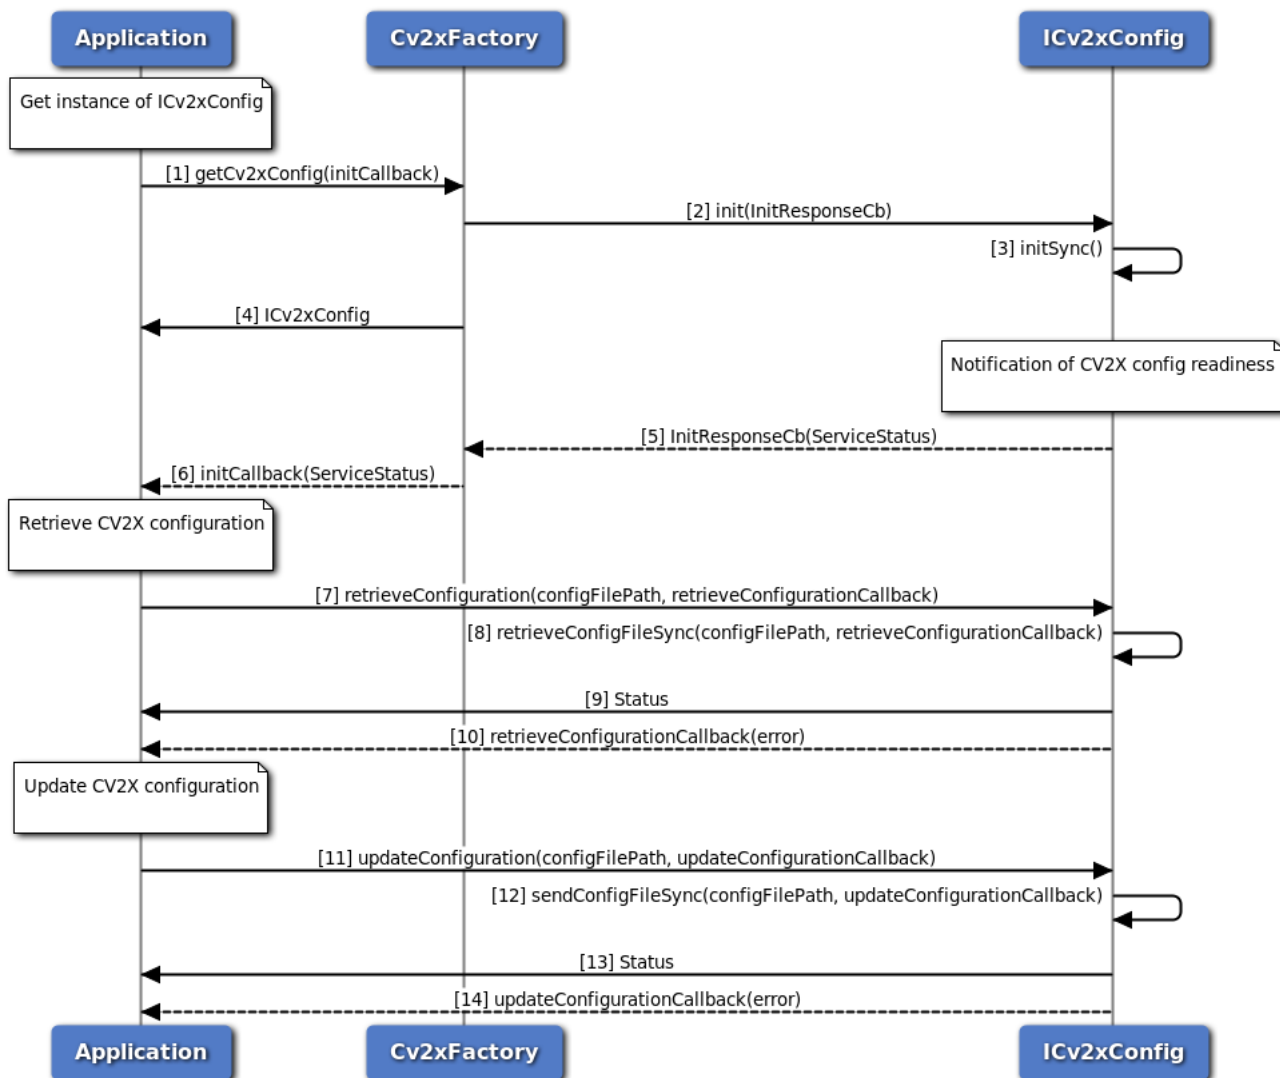


Figure 3-66 Retrieve/Update C-V2X configuration call flow

1. Application requests C-V2X factory for a C-V2X Config instance.
2. C-V2X factory creates ICv2xConfig object and calls `init()` method of ICv2xConfig.
3. C-V2X config starts initialization asynchronously.
4. C-V2X factory return ICv2xConfig object to application.
5. C-V2X factory is asynchronously notified of the readiness status of the C-V2X config via the initialization callback.
6. C-V2X factory calls application-supplied callback to notify the readiness status of C-V2X config (either `SERVICE_AVAILABLE` or `SERVICE_FAILED`). If the status is `SERVICE_AVAILABLE`, application can then request to retrieve or update C-V2X configuration.
7. Application requests to retrieve C-V2X configuration by calling `retrieveConfiguration` and supplying

- it with a path for the storing of config XML file.
8. C-V2X config sends request to modem and waits for response asynchronously.
9. Application receives synchronous status.
10. Application is asynchronously notified of the status of the request (either SUCCESS or FAILED) via the application-supplied callback.
11. Application requests to update C-V2X configuration by calling updateConfiguration and supplying it with a path to the new config XML file.
12. C-V2X config sends request to modem and waits for response asynchronously.
13. Application receives synchronous status.
14. Application is asynchronously notified of the status of the request (either SUCCESS or FAILED) via the application-supplied callback.

3.6.2 C-V2X radio manager initialization

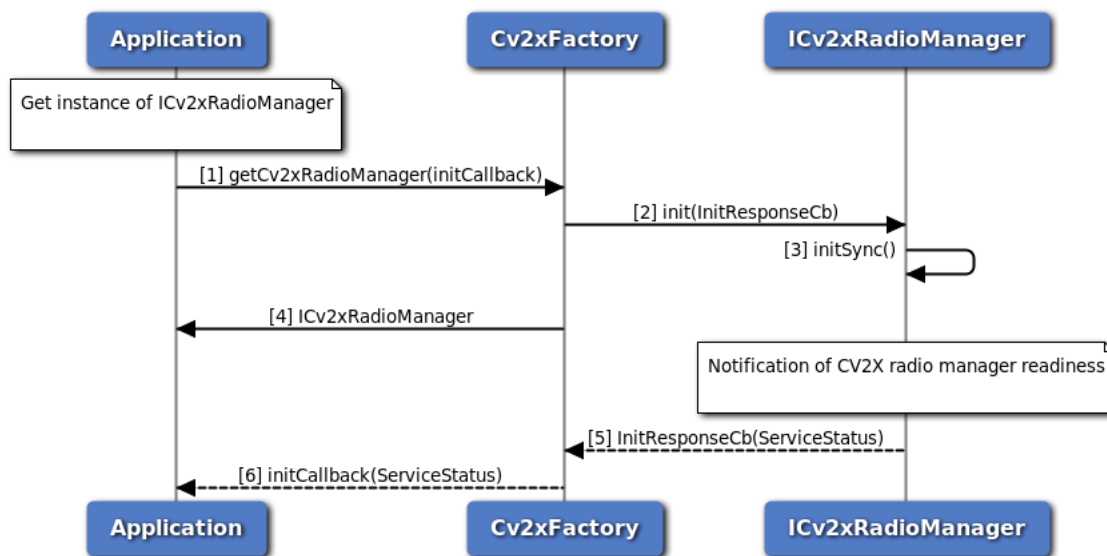


Figure 3-67 C-V2X radio manager initialization call flow

This call flow diagram describes the sequence of steps for initializing the ICv2xRadioManager object. Applications must perform this sequence before calling any other methods on the object.

1. Application requests C-V2X factory for a C-V2X radio manager instance.
2. C-V2X factory creates ICv2xRadioManager object and calls init() method of ICv2xRadioManager.
3. C-V2X radio manager starts initialization asynchronously.
4. C-V2X factory returns ICv2xRadioManager object to application.
5. C-V2X factory is asynchronously notified of the readiness status of the C-V2X radio manager via the initialization callback.
6. C-V2X factory calls application-supplied callback to notify the readiness status of C-V2X radio manager (either SERVICE_AVAILABLE or SERVICE_FAILED).

3.6.3 Get C-V2X status

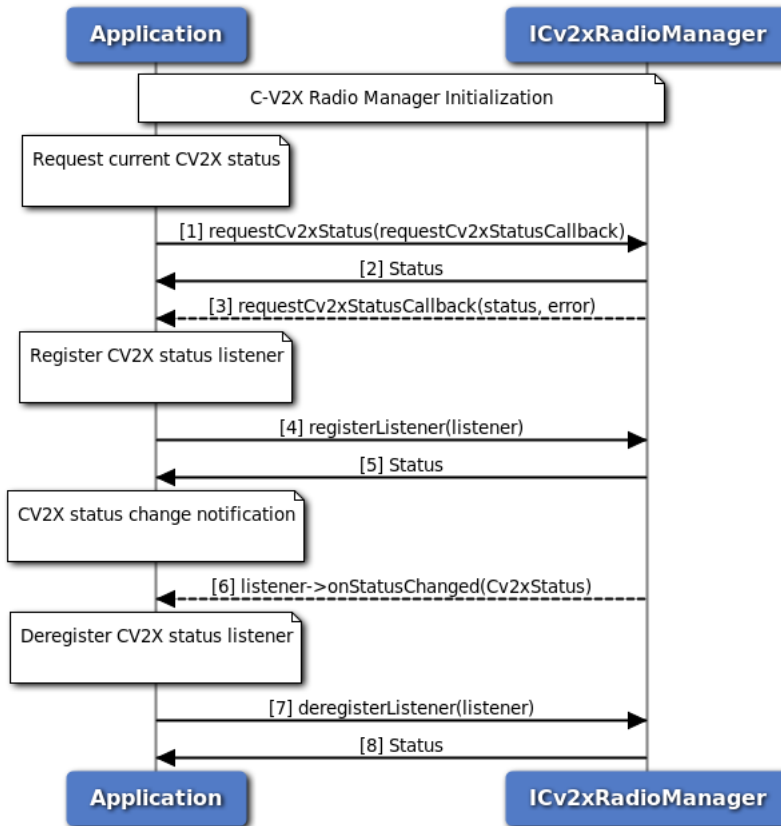


Figure 3-68 Get C-V2X status call flow

Note: Application must perform C-V2X radio manager initialization before calling any methods of ICv2xRadioManager.

1. Application requests current C-V2X status using requestCv2xStatus method.
2. Application receives synchronous status (either SUCCESS or FAILED) which indicates if the request was sent successfully.
3. Application is asynchronously notified of the status of the request (either SUCCESS or FAILED) via the application-supplied callback. If SUCCESS, the requested C-V2X status is returned in the callback.
4. Application register a listener for getting notifications of C-V2X status update.
5. Status of register listener (either SUCCESS or FAILED) will be returned to the application.
6. Application will get C-V2X status updates.
7. Application deregister the listener.
8. Status of deregistering listener (either SUCCESS or FAILED) will be returned to the application.

3.6.4 Start/Stop C-V2X Mode

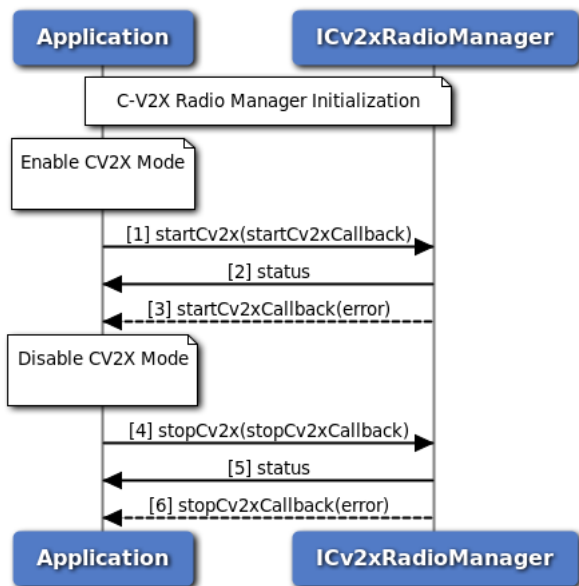


Figure 3-69 Start/Stop C-V2X mode call flow

Note: Application must perform C-V2X radio manager initialization before calling any methods of ICv2xRadioManager. In normal operation, applications do not need to start or stop C-V2X mode. The system is configured by default to start C-V2X mode at boot. We include the call flow below for the sake of completeness.

1. Application requests to put modem into C-V2X mode using startCv2x method.
2. Application receives synchronous status which indicates if the start request was sent successfully.
3. Application is notified of the status of the start request (either SUCCESS or FAILED) via the application-supplied callback.
4. Application requests to disable C-V2X mode using stopCv2x method.
5. Application receives synchronous status which indicates if the stop request was sent successfully.
6. Application is asynchronously notified of the status of the stop request (either SUCCESS or FAILED) via the application-supplied callback.

3.6.5 C-V2X radio Initialization

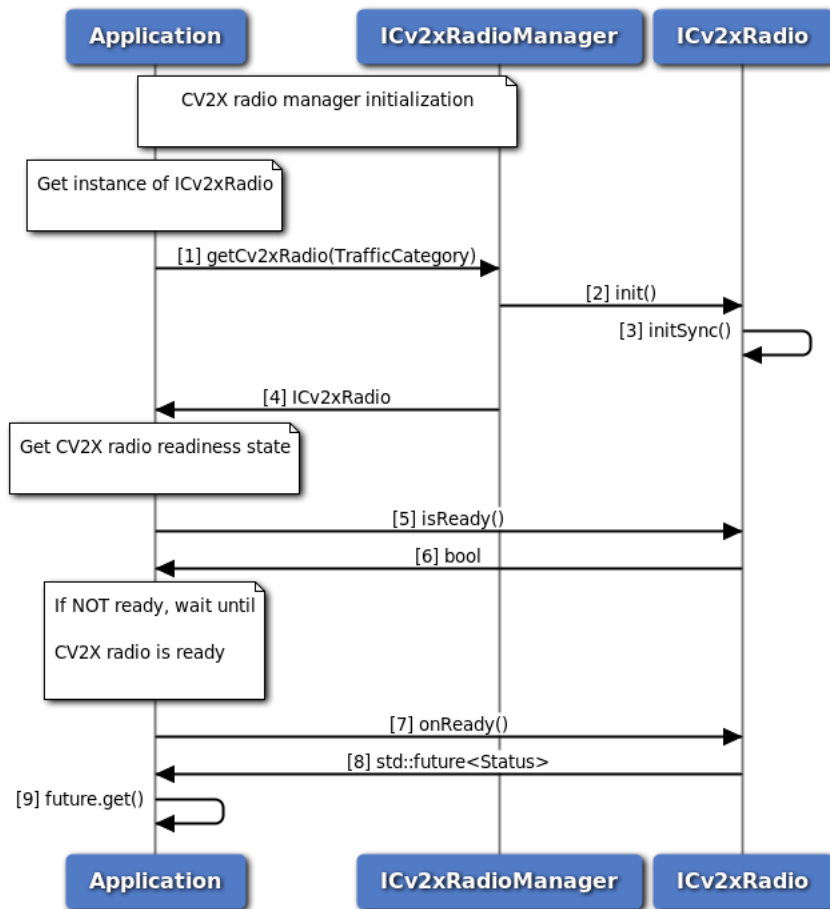


Figure 3-70 C-V2X radio initialization call flow

This call flow diagram describes the sequence of steps for initializing the ICv2xRadio object. Applications must perform this sequence before calling any other methods on the object. Note: for simplicity's sake, we omit this sequence in the remaining C-V2X Radio call flow diagrams but its inclusion is implied.

1. Application requests C-V2X Radio from ICv2xRadioManager.
2. C-V2X radio manager creates ICv2xRadio object and calls method `init()`.
3. C-V2X radio starts initialization asynchronously.
4. C-V2X radio manager returns ICv2xRadio object to application.
5. Application queries C-V2X radio's readiness state using `isReady()` method.
6. C-V2X radio returns a `bool` indicating whether it is ready to be used.
7. If C-V2X radio is not ready, the application calls `onReady()` method.
8. C-V2X radio returns a future object.
9. Application calls future's `get()` method and blocks until C-V2X radio has completed its initialization steps. The return value of `get()` indicates the status of the initialization (either SUCCESS or FAILED).

3.6.6 C-V2X radio RX subscription

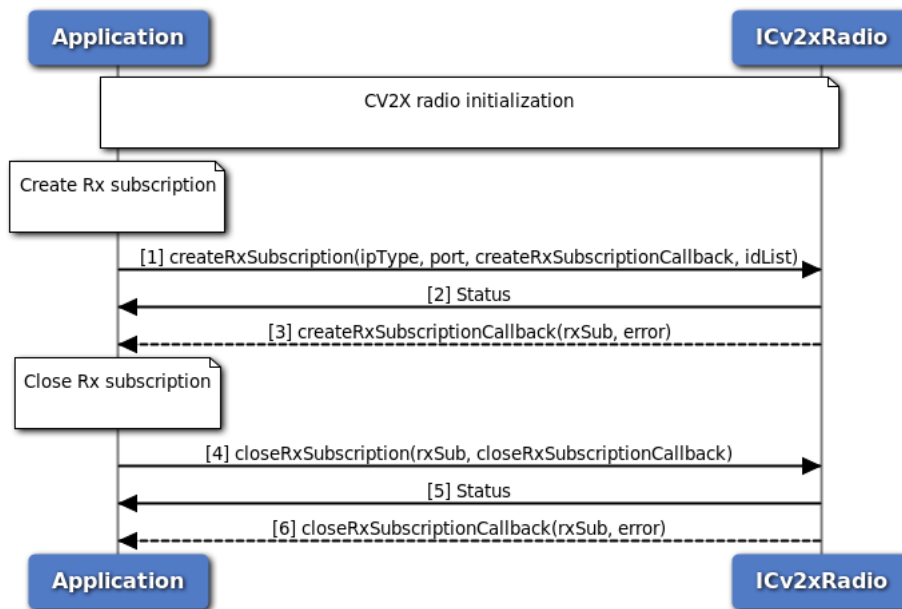


Figure 3-71 C-V2X radio RX subscription call flow

Note: Application must perform C-V2X radio initialization before calling any methods of ICv2xRadio.

1. Application requests a new RX subscription from the C-V2X radio using createRxSubscription method.
2. Application receives synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
3. C-V2X radio sends asynchronous notification via the callback function on the status of the request. If SUCCESS, the RX subscription is returned in the callback.
4. Application requests to close the RX subscription.
5. Application receives synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
6. C-V2X radio sends asynchronous notification via the callback (if a callback was specified) indicating the status of the request.

3.6.7 C-V2X radio TX event flow

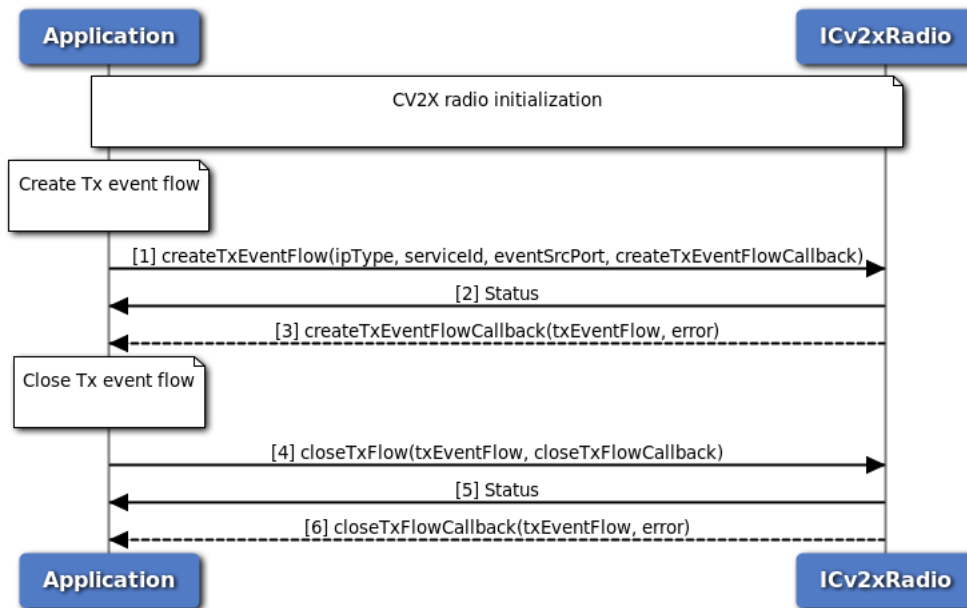


Figure 3-72 C-V2X radio TX event flow call flow

Note: Application must perform C-V2X radio initialization before calling any methods of ICv2xRadio.

1. Application requests a new TX event flow from the C-V2X radio using createTxEventFlow method.
2. Application receives synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
3. C-V2X radio sends asynchronous notification via the callback function on the status of the request. If SUCCESS, the TX event flow is returned in the callback.
4. Application requests to close the TX event flow.
5. Application receives synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
6. C-V2X radio sends asynchronous notification via the callback (if a callback was specified) indicating the status of the request.

3.6.8 C-V2X radio TX SPS flow

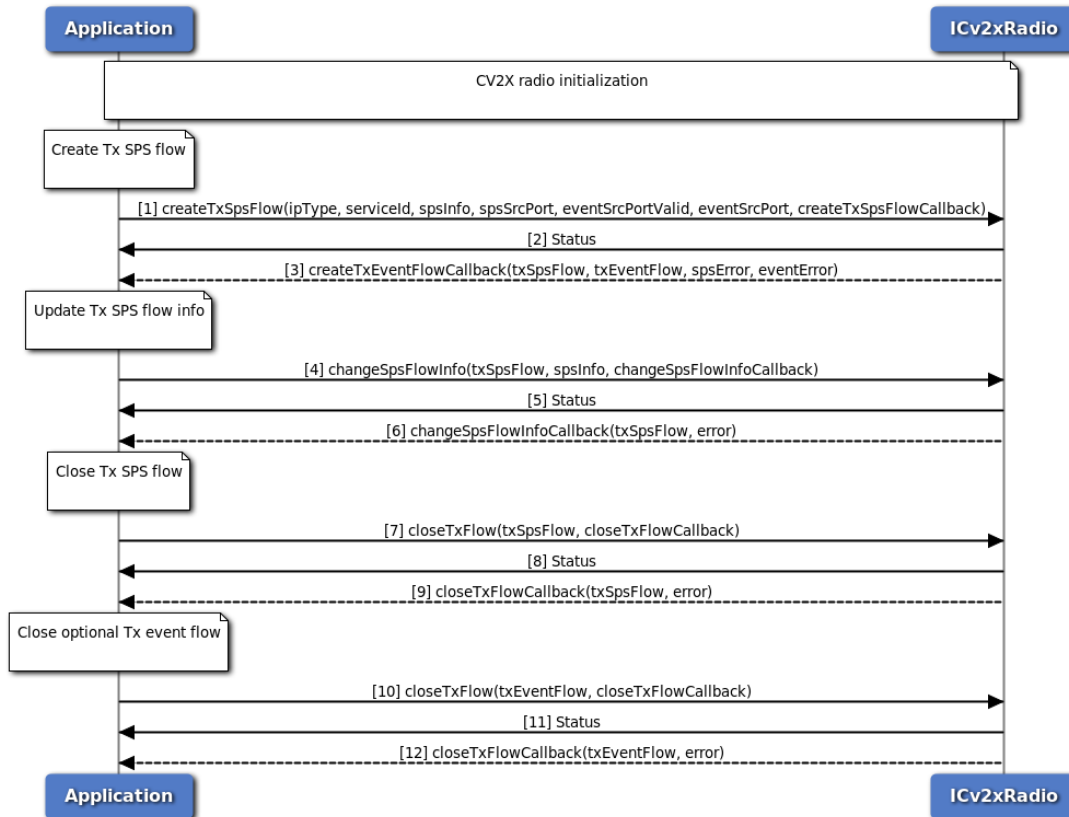


Figure 3-73 C-V2X radio SPS flow call flow

Note: Application must perform C-V2X radio initialization before calling any methods of ICv2xRadio.

1. Application requests a new TX SPS flow from the C-V2X radio using createTxSPSFlow method. The application can also specify an optional Tx event flow.
2. Application receives synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
3. C-V2X radio sends asynchronous notification via the callback function. The callback will return the Tx SPS flow and its status as well as the optional Tx event flow and its status.
4. Application requests to change the SPS parameters using the changeSpsFlowInfo method.
5. Application received synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
6. C-V2X radio sends asynchronous notification via the callback (if callback was specified) indicating the status of the request.
7. Application requests to close the SPS flow.
8. Application receives synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
9. C-V2X radio sends asynchronous notification via the callback (if a callback was specified) indicating the status of the request.

10. Application requests to close optional Tx event flow (if one was created).
11. Application receives synchronous status (either SUCCESS or FAILED) indicating whether the request was sent successfully.
12. C-V2X radio sends asynchronous notification via the callback (if a callback was specified) indicating the status of the request.

3.6.9 C-V2X Throttle Manager Filter rate adjustment notification flow

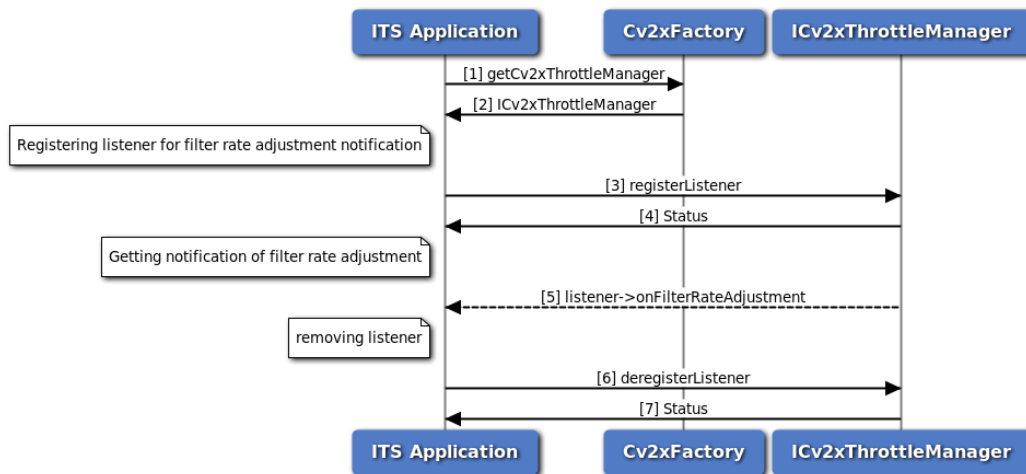


Figure 3-74 C-V2X Throttle Manager filter rate adjustment notification call flow

1. Application requests C-V2X factory for a C-V2X Throttle Manager.
2. C-V2X factory return ICv2xThrottleManager object to application.
3. Application register a listener for getting notifications of filter rate update.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application will get filter rate updates, positive value indicates to the application to filter more messages, and negative value indicates to the application to filter less messages
6. Application deregister the listener.
7. Status of deregistering listener, i.e. either SUCCESS or FAILED will be returned.

3.6.10 C-V2X Throttle Manager set verification load flow

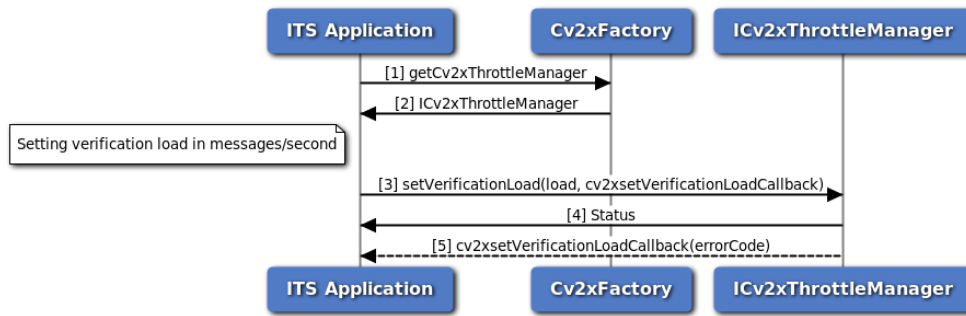


Figure 3-75 C-V2X Throttle Manager set verification call flow

1. Application requests C-V2X factory for a C-V2X Throttle Manager.
2. C-V2X factory return ICv2xThrottleManager object to application.
3. Application set verification load using setVerificationLoad method.
4. Application receives synchronous status which indicates if the request was sent successfully.
5. Application is notified of the status of the request (either SUCCESS or FAILED) via the application-supplied callback.

3.7 Audio

3.7.1 Audio Manager API call flow

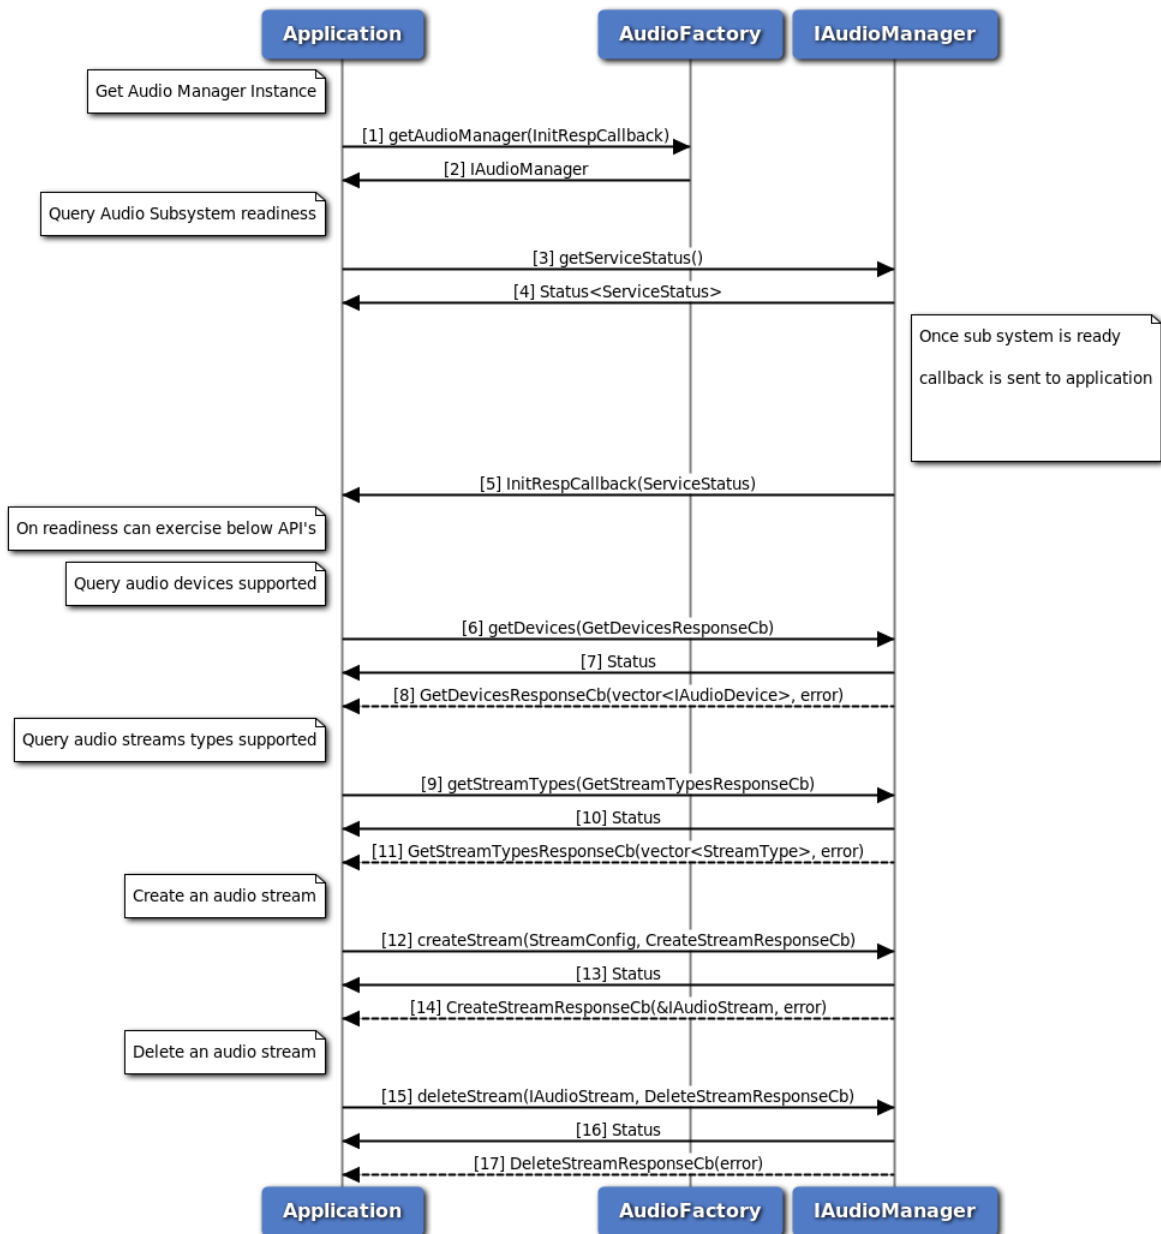


Figure 3-76 Audio Manager API call flow

1. Application requests Audio factory for an Audio Manager and passes callback pointer.
2. Audio factory return IAudioManager object to application.
3. Application can use IAudioManager::getServiceStatus to determine the state of sub system.
4. The application receives the ServiceStatus of sub system which indicates the state of service.
5. AudioManager notifies the application when the subsystem is ready through the callback mechanism.
6. On Readiness, Application requests supported device types using getDevices method.
7. Application receives synchronous Status which indicates if the getDevices request was sent

- successfully.
8. Application is notified of the Status of the `getDevices` request (either SUCCESS or FAILED) via the application-supplied callback, with array of supported device types.
 9. Application requests supported stream types using `getStreamTypes` method.
 10. Application receives synchronous Status which indicates if the `getStreamTypes` request was sent successfully.
 11. Application is notified of the Status of the `getStreamTypes` request (either SUCCESS or FAILED) via the application-supplied callback, with array of supported stream types.
 12. Application requests create audio stream using `createStream` method.
 13. Application receives synchronous Status which indicates if the `createStream` request was sent successfully.
 14. Application is notified of the Status of the `createStream` request (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface.
 15. Application requests delete audio stream using `deleteStream` method.
 16. Application receives synchronous Status which indicates if the `deleteStream` request was sent successfully.
 17. Application is notified of the Status of the `deleteStream` request (either SUCCESS or FAILED) via the application-supplied callback.

3.7.2 Audio Voice Call Start/Stop call flow

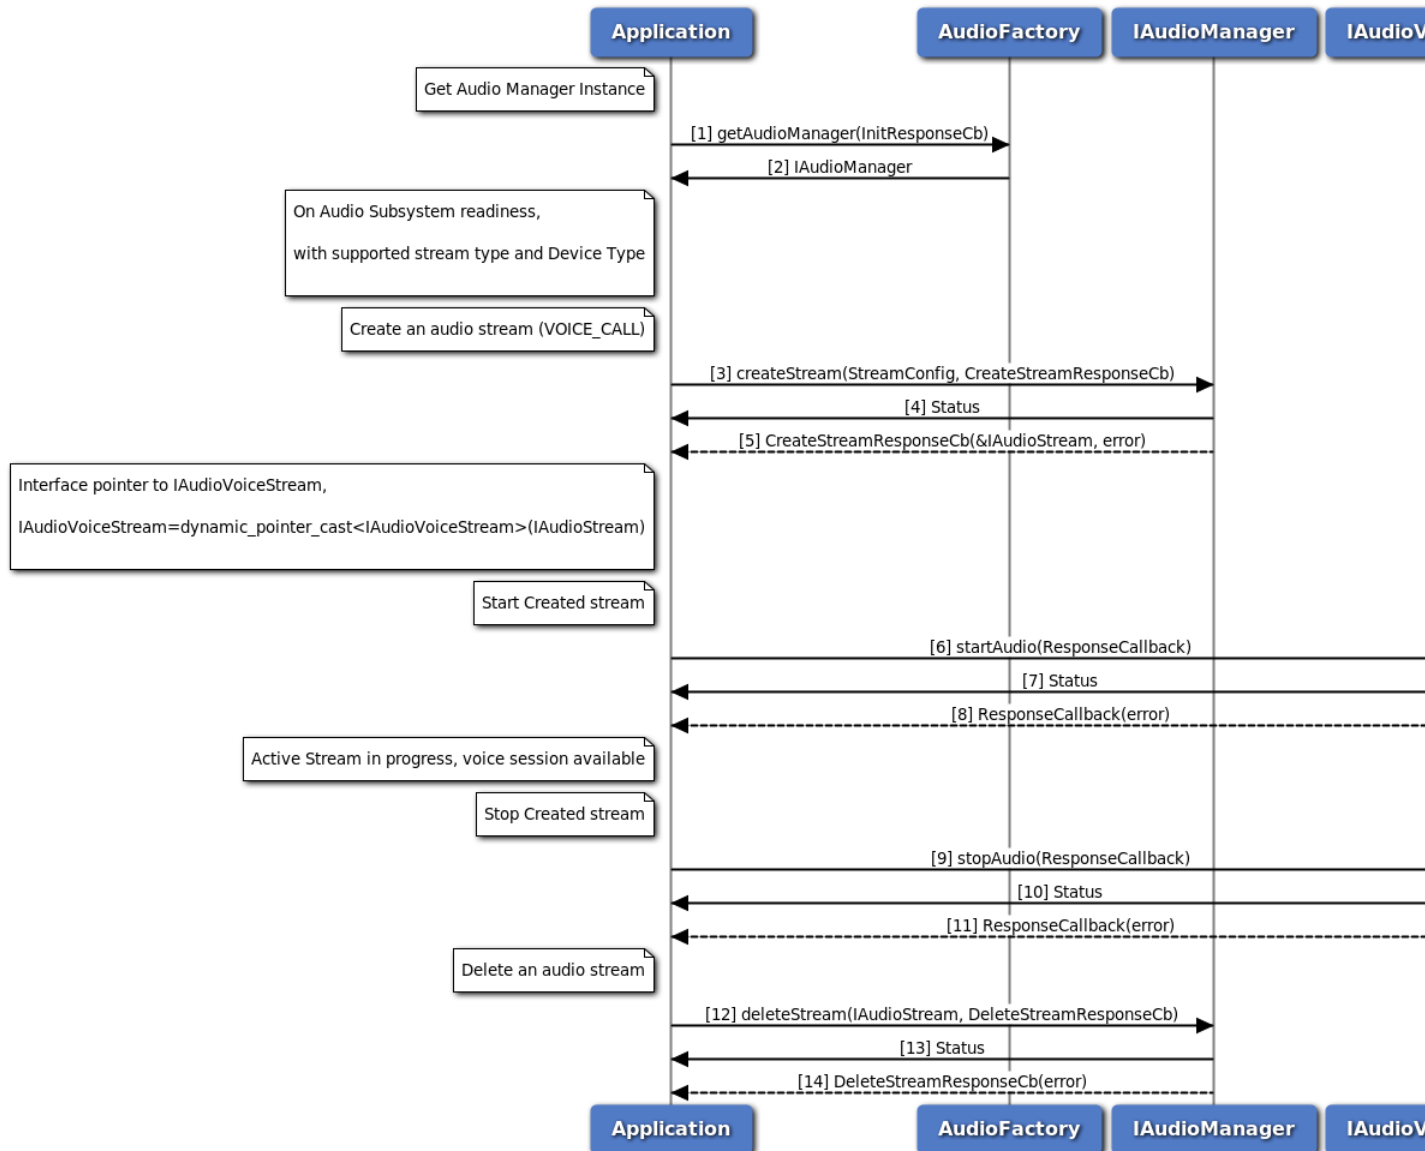


Figure 3-77 Audio Voice Call Start/Stop call flow

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests create audio voice stream using createStream method with streamType as VOICE_CALL.
4. Application receives synchronous Status which indicates if the createStream request was sent successfully.
5. Application is notified of the Status of the createStream request (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioVoiceStream.
6. Application requests start audio stream using startAudio method on IAudioVoiceStream.

7. Application receives synchronous Status which indicates if the startAudio request was sent successfully.
8. Application is notified of the Status of the startAudio request (either SUCCESS or FAILED) via the application-supplied callback.
9. Application requests stop audio stream using stopAudio method on IAudioVoiceStream.
10. Application receives synchronous Status which indicates if the stopAudio request was sent successfully.
11. Application is notified of the Status of the stopAudio request (either SUCCESS or FAILED) via the application-supplied callback.
12. Application requests delete audio stream using deleteStream method.
13. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
14. Application is notified of the Status of the deleteStream request (either SUCCESS or FAILED) via the application-supplied callback.

3.7.3 Audio Voice Call Device Switch call flow


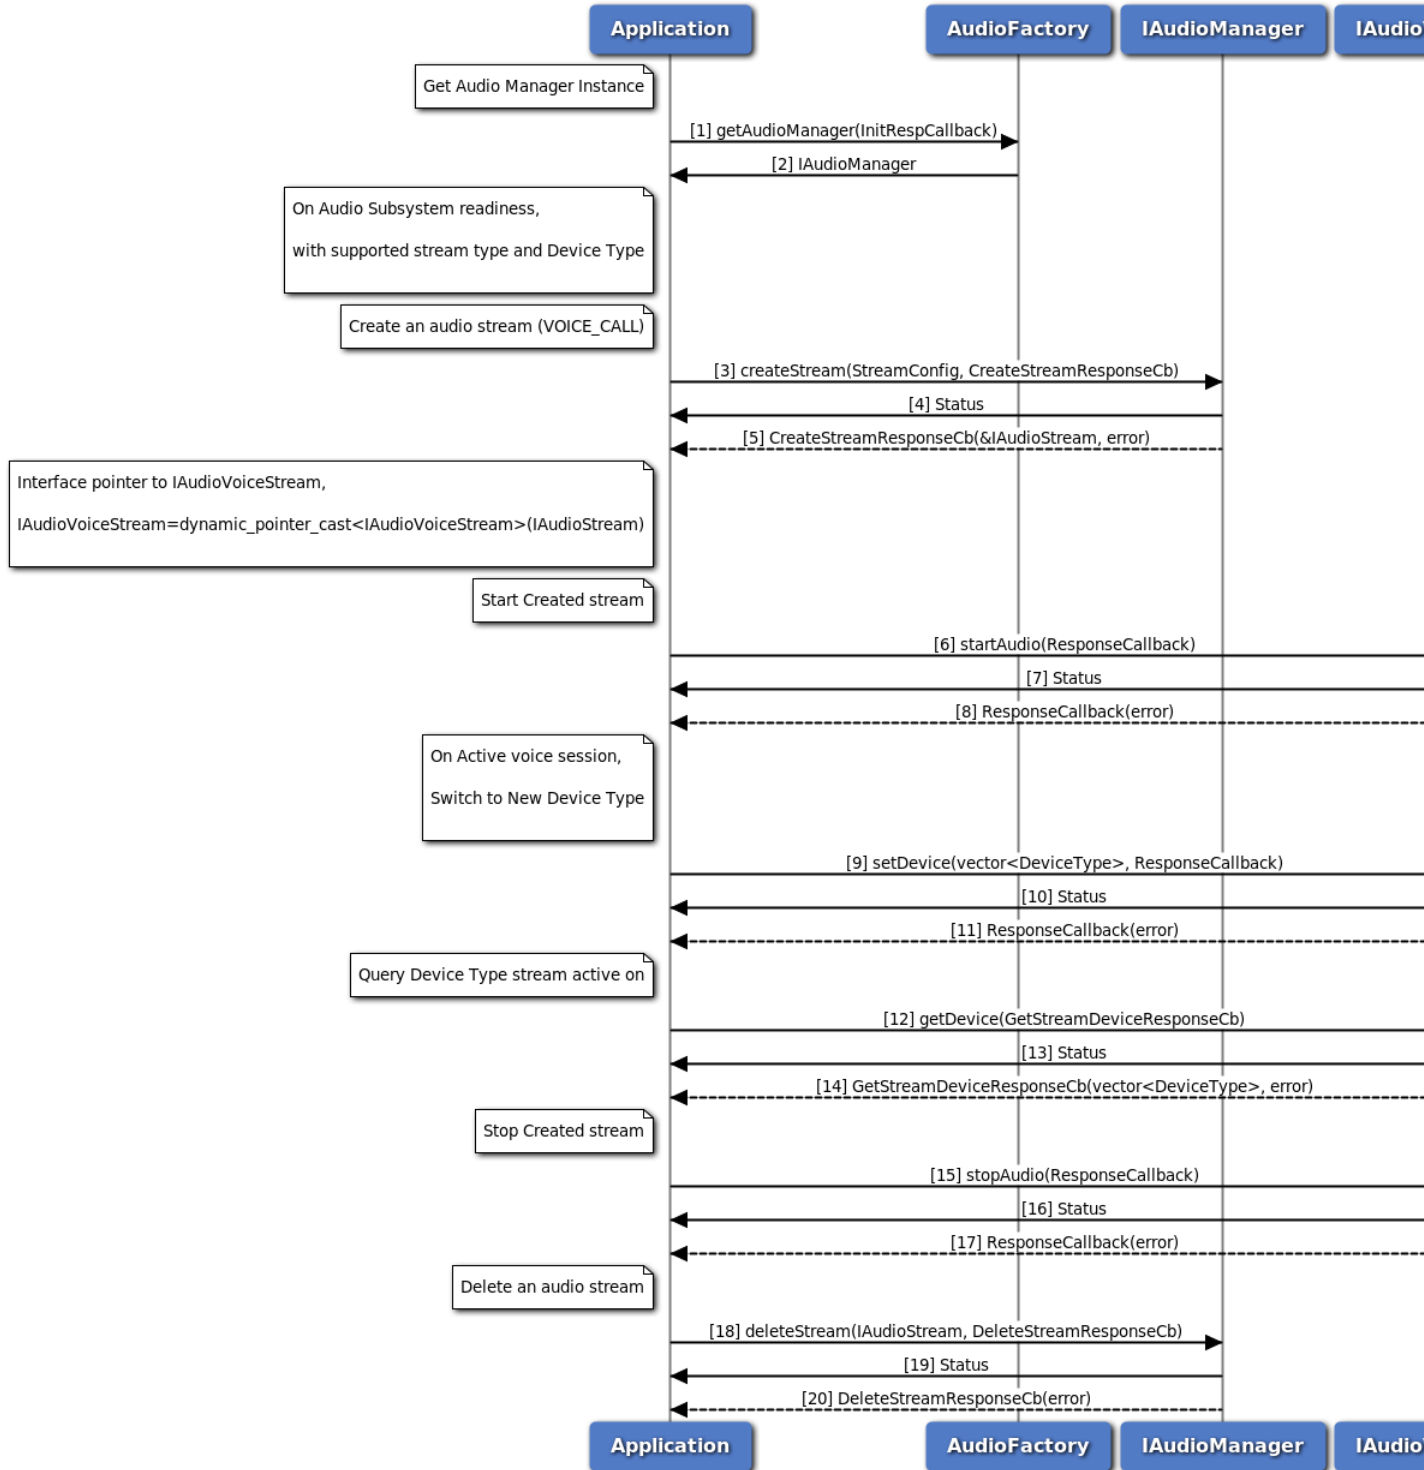


Figure 3-78 Audio Voice Call Device Switch call flow

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.

3. On Readiness, Application requests create audio voice stream using createStream method with streamType as VOICE_CALL.
4. Application receives synchronous Status which indicates if the createStream request was sent successfully.
5. Application is notified of the Status of the createStream request (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioVoiceStream.
6. Application requests start audio stream using startAudio method on IAudioVoiceStream.
7. Application receives synchronous Status which indicates if the startAudio request was sent successfully.
8. Application is notified of the Status of the startAudio request (either SUCCESS or FAILED) via the application-supplied callback.
9. Application requests new device routing of stream using setDevice method on IAudioVoiceStream.
10. Application receives synchronous Status which indicates if the setDevice request was sent successfully.
11. Application is notified of the Status of the setDevice request (either SUCCESS or FAILED) via the application-supplied callback.
12. Application query device stream routed to using getDevice method on IAudioVoiceStream.
13. Application receives synchronous Status which indicates if the getDevice request was sent successfully.
14. Application is notified of the Status of the getDevice request (either SUCCESS or FAILED) via the application-supplied callback, along with device types.
15. Application requests stop audio stream using stopAudio method on IAudioVoiceStream.
16. Application receives synchronous Status which indicates if the stopAudio request was sent successfully.
17. Application is notified of the Status of the stopAudio request (either SUCCESS or FAILED) via the application-supplied callback.
18. Application requests delete audio stream using deleteStream method.
19. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
20. Application is notified of the Status of the deleteStream request (either SUCCESS or FAILED) via the application-supplied callback.

3.7.4 Audio Voice Call Volume/Mute control call flow

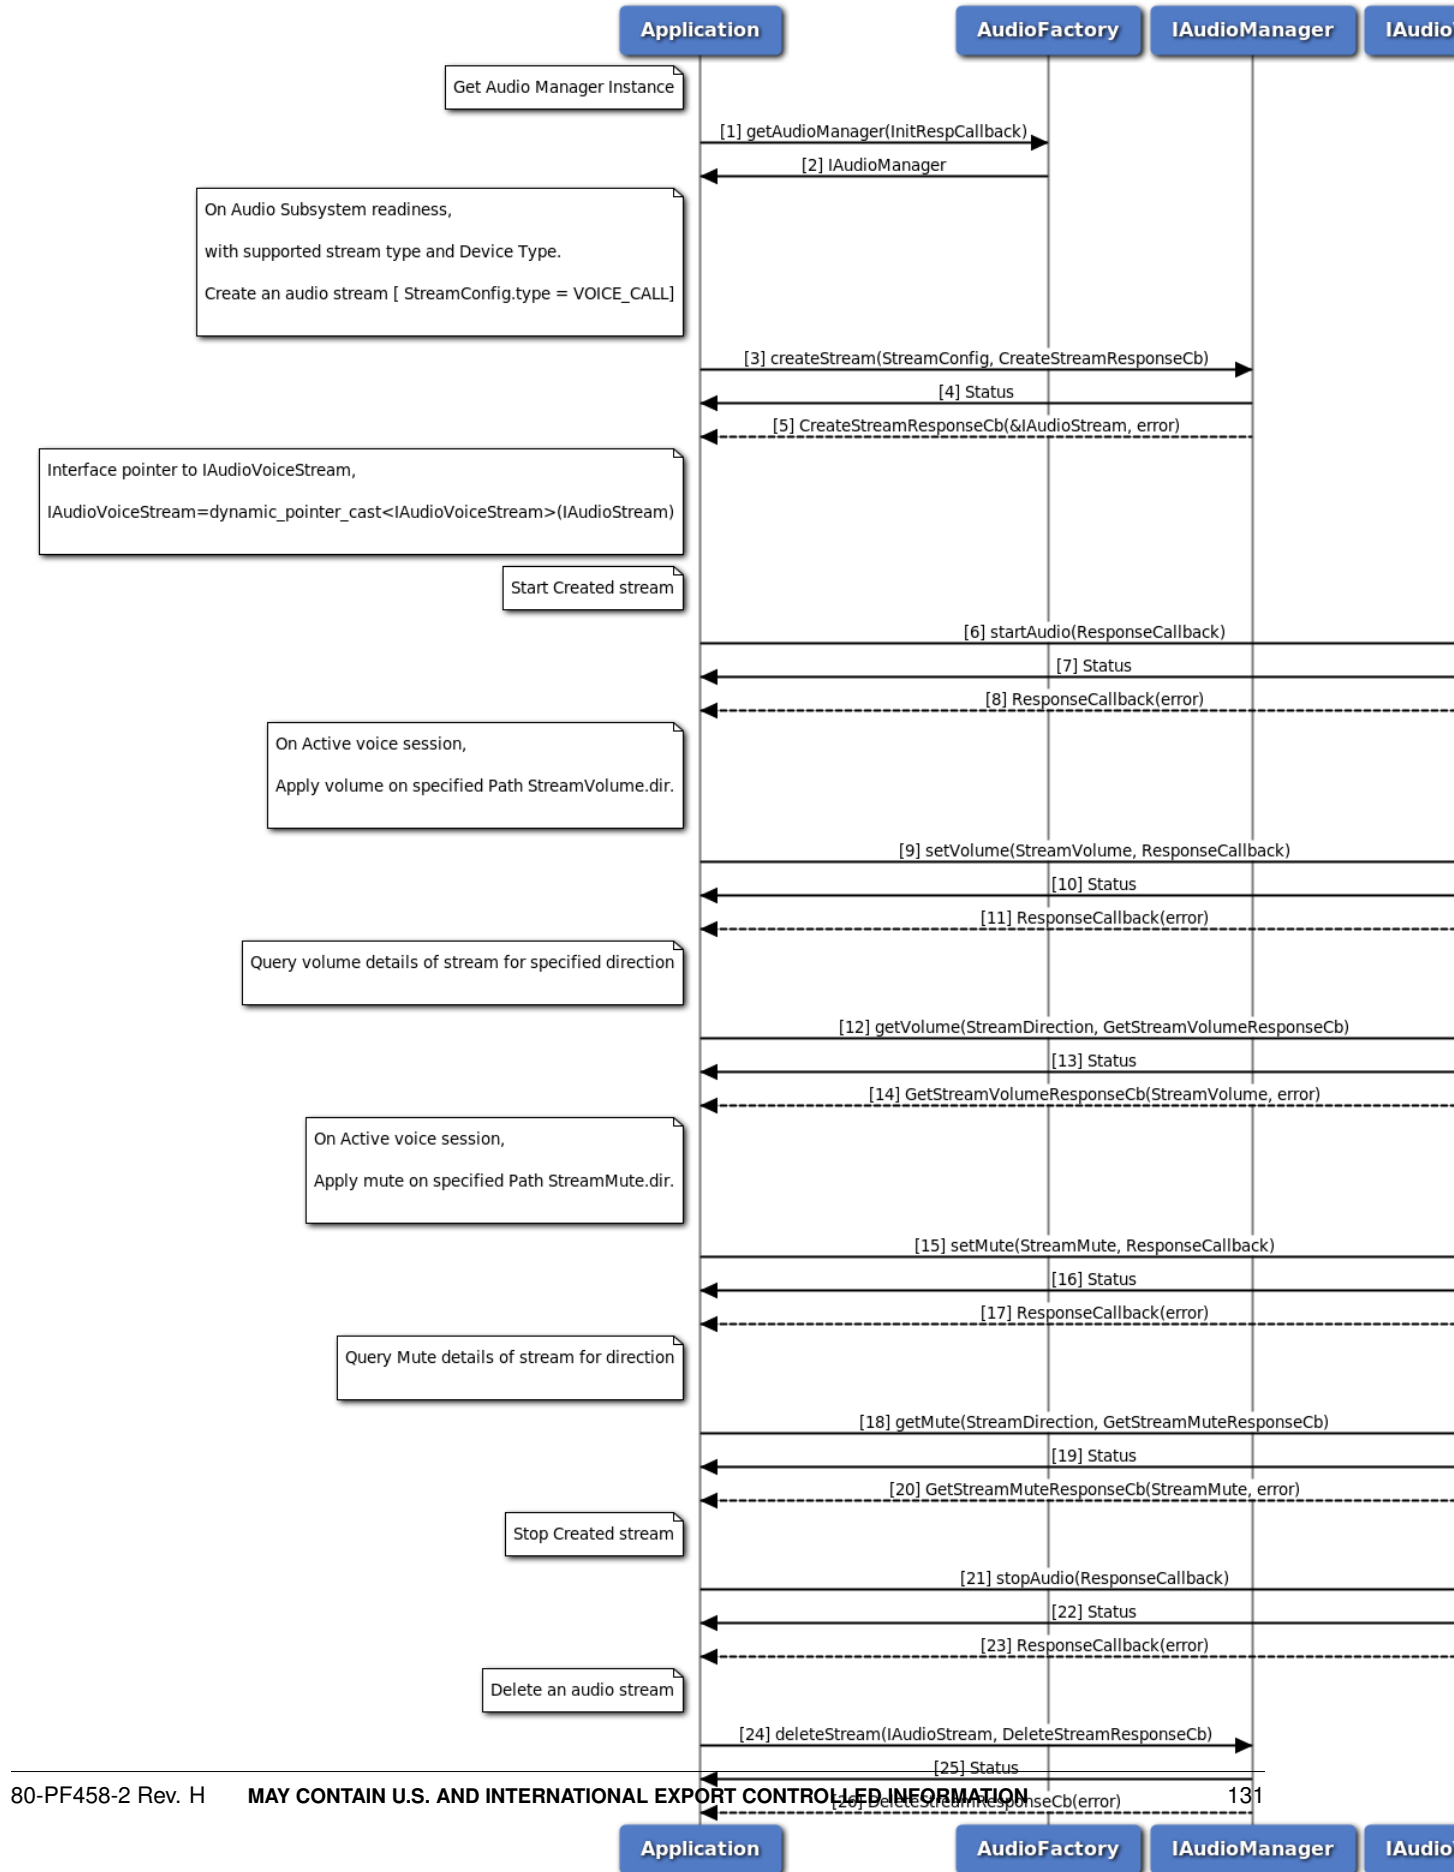

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests create audio voice stream using createStream method with streamType as VOICE_CALL.
4. Application receives synchronous Status which indicates if the createStream request was sent successfully.
5. Application is notified of the Status of the createStream request (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioVoiceStream.
6. Application requests start audio stream using startAudio method on IAudioVoiceStream.
7. Application receives synchronous Status which indicates if the startAudio request was sent successfully.
8. Application is notified of the Status of the startAudio request (either SUCCESS or FAILED) via the application-supplied callback.
9. Application requests new volume on stream using setVolume method on IAudioVoiceStream for specified direction.
10. Application receives synchronous Status which indicates if the setVolume request was sent successfully.
11. Application is notified of the Status of the setVolume request (either SUCCESS or FAILED) via the application-supplied callback.
12. Application query volume on stream using getVolume method on IAudioVoiceStream for specified direction.
13. Application receives synchronous Status which indicates if the getVolume request was sent successfully.
14. Application is notified of the Status of the getVolume request (either SUCCESS or FAILED) via the application-supplied callback for specified direction with volume details.
15. Application requests new mute on stream using setMute method on IAudioVoiceStream for specified direction.
16. Application receives synchronous Status which indicates if the setMute request was sent successfully.
17. Application is notified of the Status of the setMute request (either SUCCESS or FAILED) via the application-supplied callback.
18. Application query mute details on stream using getMute method on IAudioVoiceStream for specified direction.
19. Application receives synchronous Status which indicates if the getMute request was sent successfully.
20. Application is notified of the Status of the getMute request (either SUCCESS or FAILED) via the application-supplied callback for specified direction with mute details.
21. Application requests stop audio stream using stopAudio method on IAudioVoiceStream.
22. Application receives synchronous Status which indicates if the stopAudio request was sent successfully.
23. Application is notified of the Status of the stopAudio request (either SUCCESS or FAILED) via the application-supplied callback.

24. Application requests delete audio stream using deleteStream method.
25. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
26. Application is notified of the Status of the deleteStream request (either SUCCESS or FAILED) via the application-supplied callback.

3.7.5 Call flow to play DTMF tone

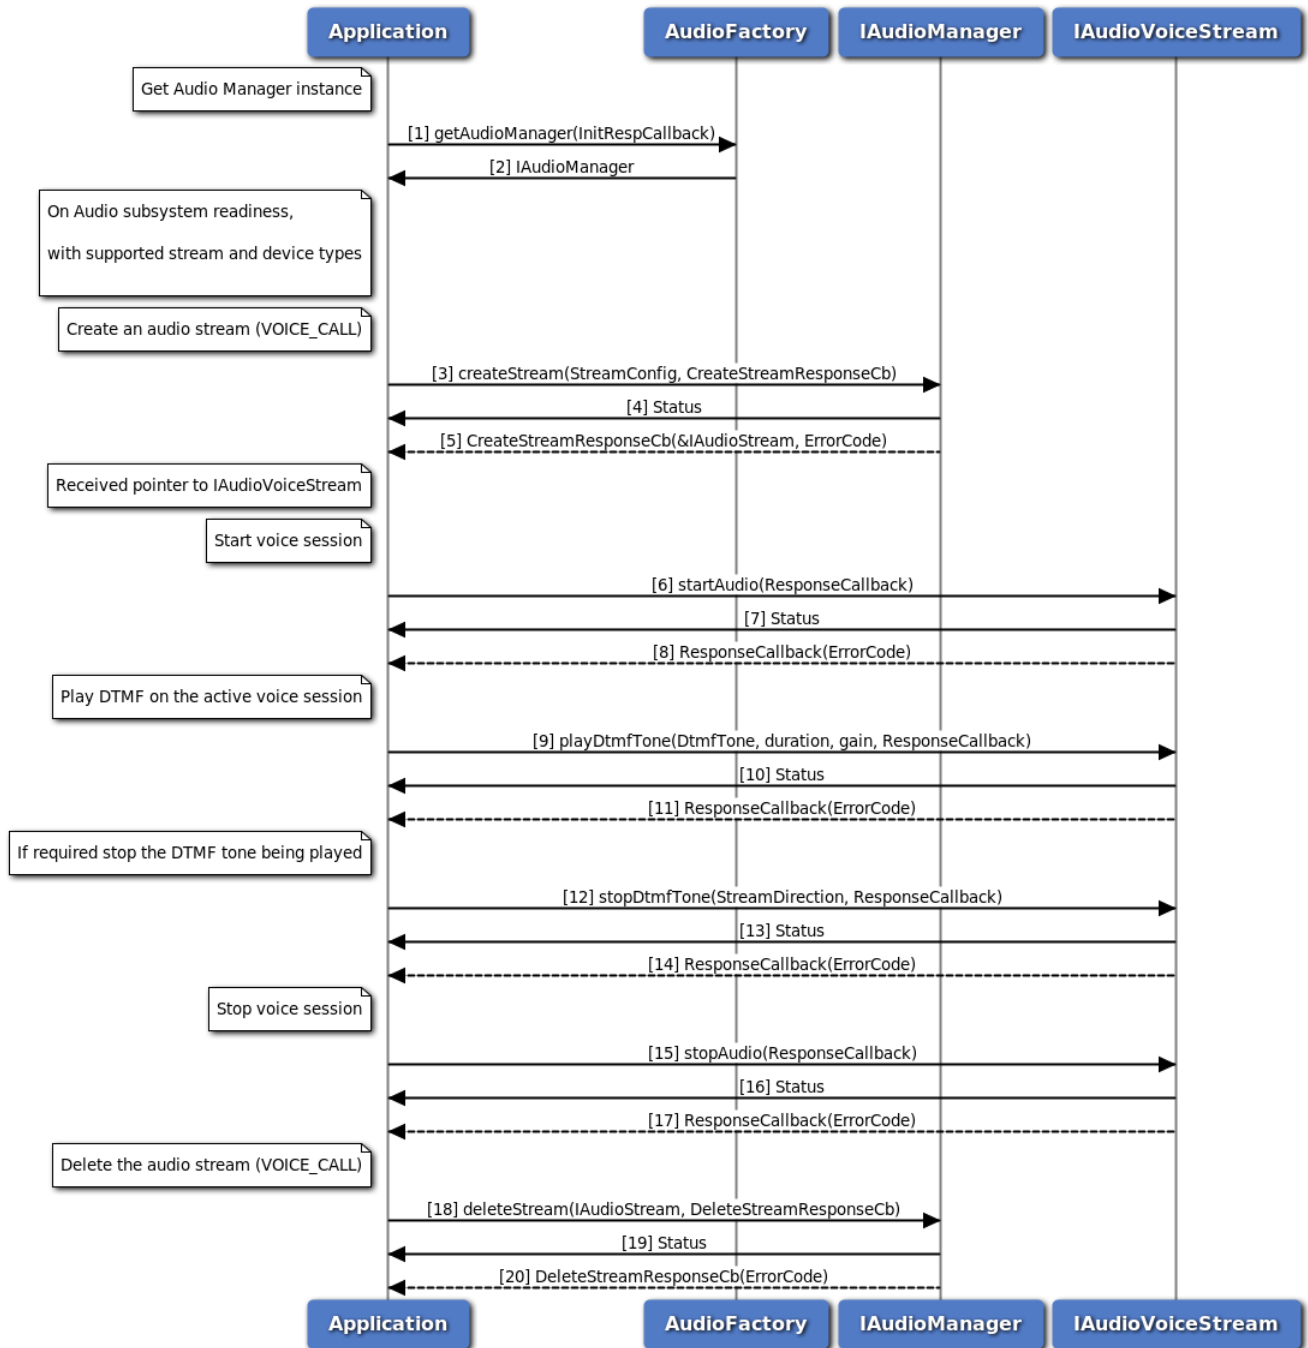


Figure 3-80 Call flow to play DTMF tone

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests to create a voice stream with streamType as VOICE_CALL.

4. Application receives synchronous status which indicates if the createStream request was sent successfully.
5. Application is notified of the createStream request status (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioVoiceStream.
6. Application requests to start voice session using startAudio method on IAudioVoiceStream.
7. Application receives synchronous status which indicates if the startAudio request was sent successfully.
8. Application is notified of the startAudio request status (either SUCCESS or FAILED) via the application-supplied callback.
9. Application requests to play a DTMF tone associated with the voice session
10. Application receives synchronous status which indicates if the playDtmfTone request was sent successfully.
11. Application is notified of the playDtmfTone request status (either SUCCESS or FAILED) via the application-supplied callback.
12. Application can optionally stop the DTMF tone being played, before its duration expires.
13. Application receives synchronous status which indicates if the stopDtmfTone request was sent successfully.
14. Application is notified of the stopDtmfTone request status (either SUCCESS or FAILED) via the application-supplied callback.
15. Application requests to stop the voice session using stopAudio method on IAudioVoiceStream.
16. Application receives synchronous Status which indicates if the stopAudio request was sent successfully.
17. Application is notified of the stopAudio request status(either SUCCESS or FAILED) via the application-supplied callback.
18. Application requests delete audio stream using deleteStream method.
19. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
20. Application is notified of the deleteStream request status(either SUCCESS or FAILED) via the application-supplied callback.

3.7.6 Call flow to detect DTMF tones


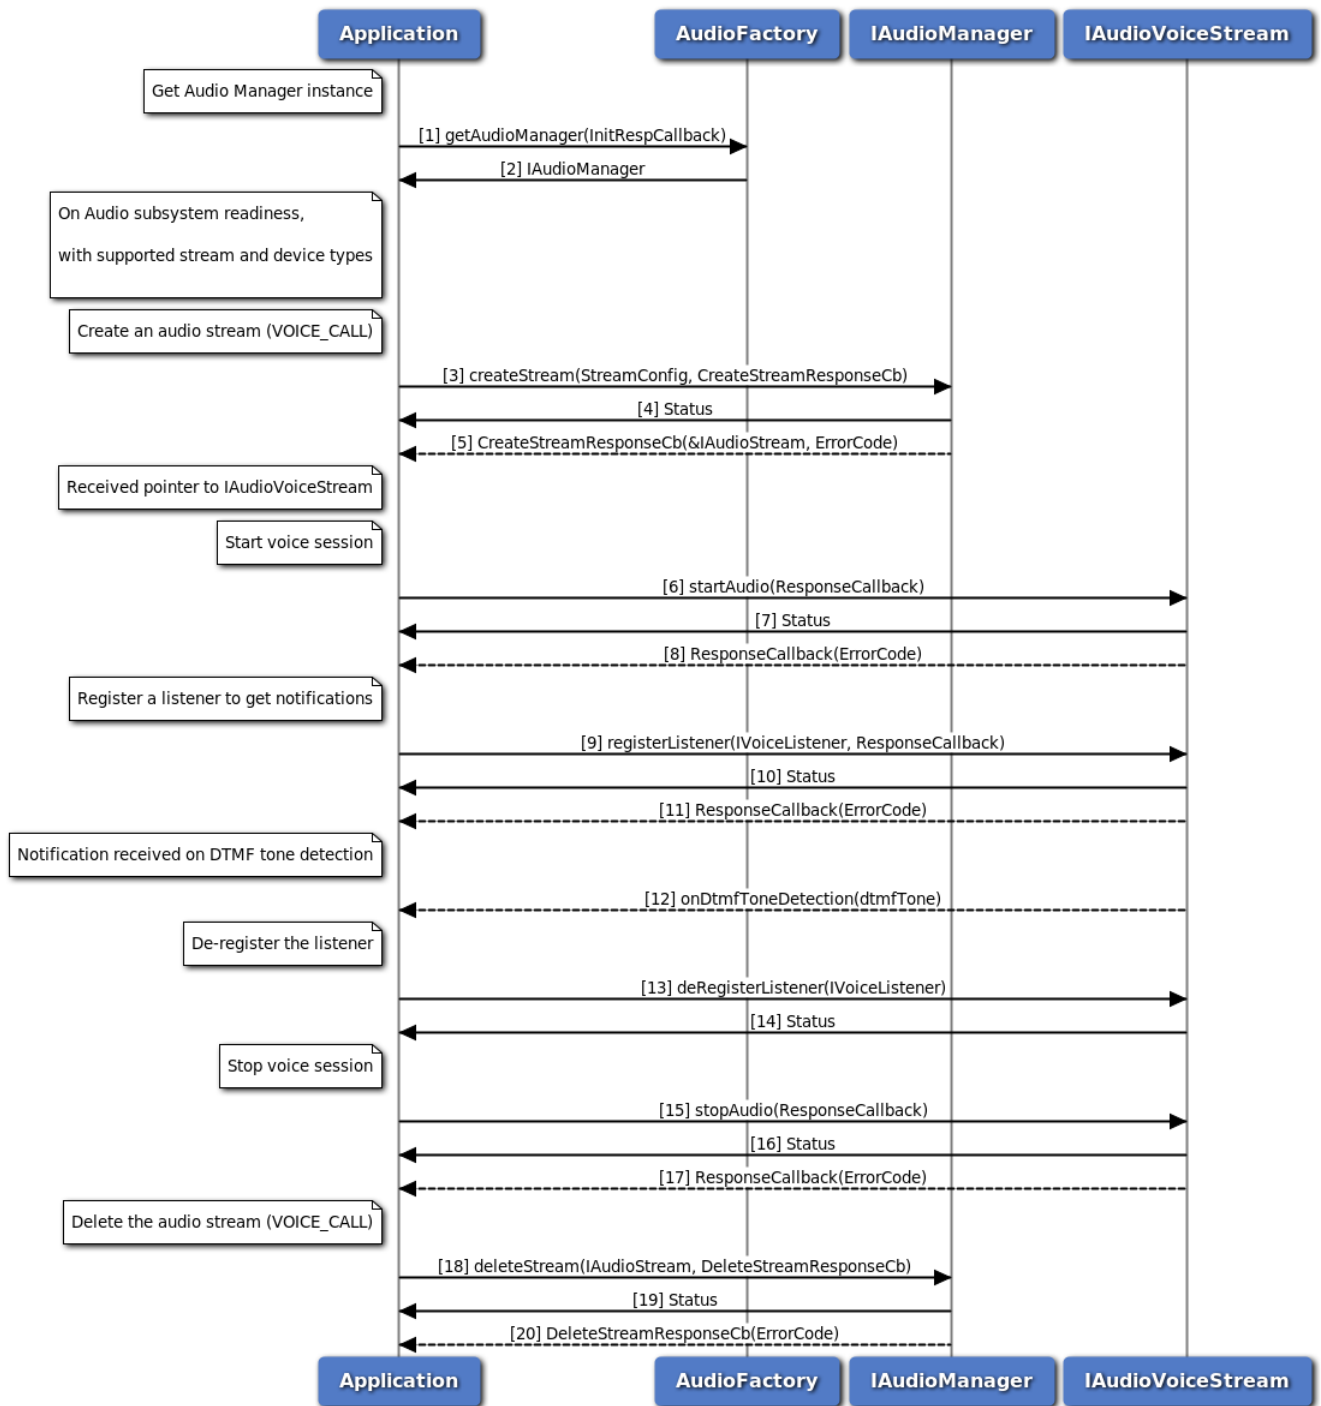


Figure 3-81 Call flow to detect DTMF tone

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.


3. On Readiness, Application requests to create a voice stream with streamType as VOICE_CALL.
4. Application receives synchronous status which indicates if the createStream request was sent successfully.
5. Application is notified of the createStream request status (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioVoiceStream.
6. Application requests to start voice session using startAudio method on IAudioVoiceStream.
7. Application receives synchronous status which indicates if the startAudio request was sent successfully.
8. Application is notified of the startAudio request status (either SUCCESS or FAILED) via the application-supplied callback.
9. Application registers a listener for getting notifications when DTMF tones are detected
10. Application receives synchronous status which indicates if the registerListener request was sent successfully.
11. Application is notified of the registerListener request status (either SUCCESS or FAILED) via the application-supplied callback.
12. Application receives onDtmfToneDetection notification when a DTMF tone is detected in the active voice call session
13. Application deregisters a listener to stop getting notifications
14. Application receives synchronous status which indicates if the deRegisterListener request was sent successfully.
15. Application requests to stop the voice session using stopAudio method on IAudioVoiceStream.
16. Application receives synchronous Status which indicates if the stopAudio request was sent successfully.
17. Application is notified of the stopAudio request status(either SUCCESS or FAILED) via the application-supplied callback.
18. Application requests delete audio stream using deleteStream method.
19. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
20. Application is notified of the deleteStream request status(either SUCCESS or FAILED) via the application-supplied callback.

3.7.7 Audio Playback call flow

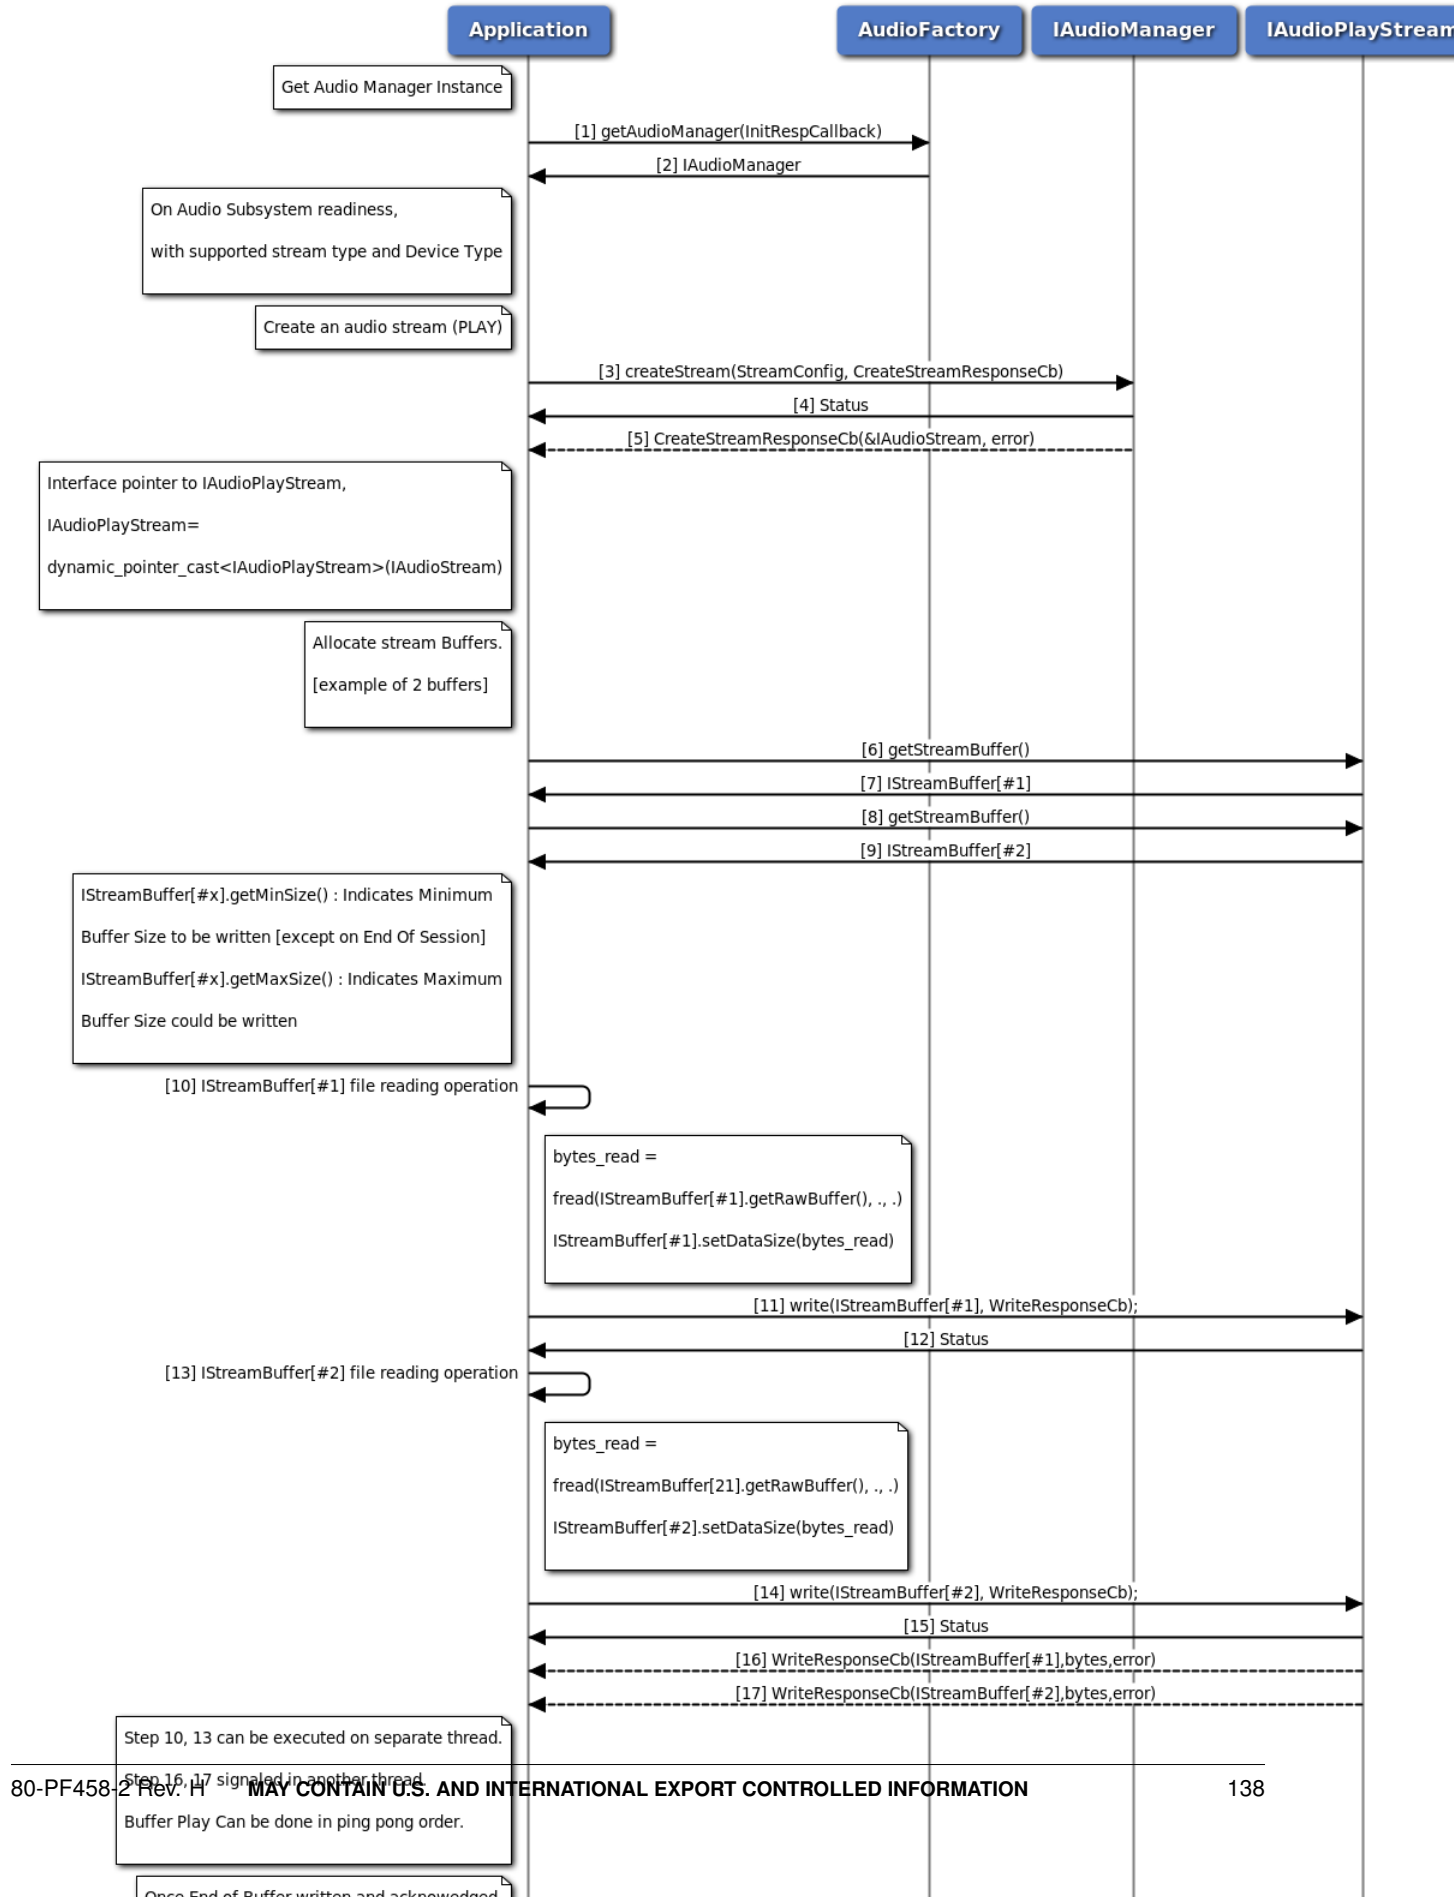

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests create audio playback stream using createStream method with streamType as PLAY.
4. Application receives synchronous Status which indicates if the createStream request was sent successfully.
5. Application is notified of the Status of the createStream request (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioPlayStream.
6. Application requests stream buffer#1 using getStreamBuffer method on IAudioPlayStream.
7. Application receives IStreamBuffer if Success.
8. Application requests stream buffer#2 using getStreamBuffer method on IAudioPlayStream.
9. Application receives IStreamBuffer if Success.
10. Application writes audio samples on buffer#1 using getRawBuffer method on IStreamBuffer.
11. Application writes buffer#1 on Playback session using write method on IAudioPlayStream.
12. Application receives synchronous Status which indicates if the write request was sent successfully.
13. Application writes audio samples on buffer#2 using getRawBuffer method on IStreamBuffer.
14. Application writes buffer#2 on Playback session using write method on IAudioPlayStream.
15. Application receives synchronous Status which indicates if the write request was sent successfully.
16. Application is notified of the buffer#1 write Status (either SUCCESS or FAILED) via the application-supplied write callback with successful bytes written.
17. Application is notified of the buffer#2 write Status (either SUCCESS or FAILED) via the application-supplied write callback with successful bytes written.
18. Application requests delete audio stream using deleteStream method.
19. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
20. Application is notified of the Status of the deleteStream request (either SUCCESS or FAILED) via the application-supplied callback.

3.7.8 Audio Capture call flow

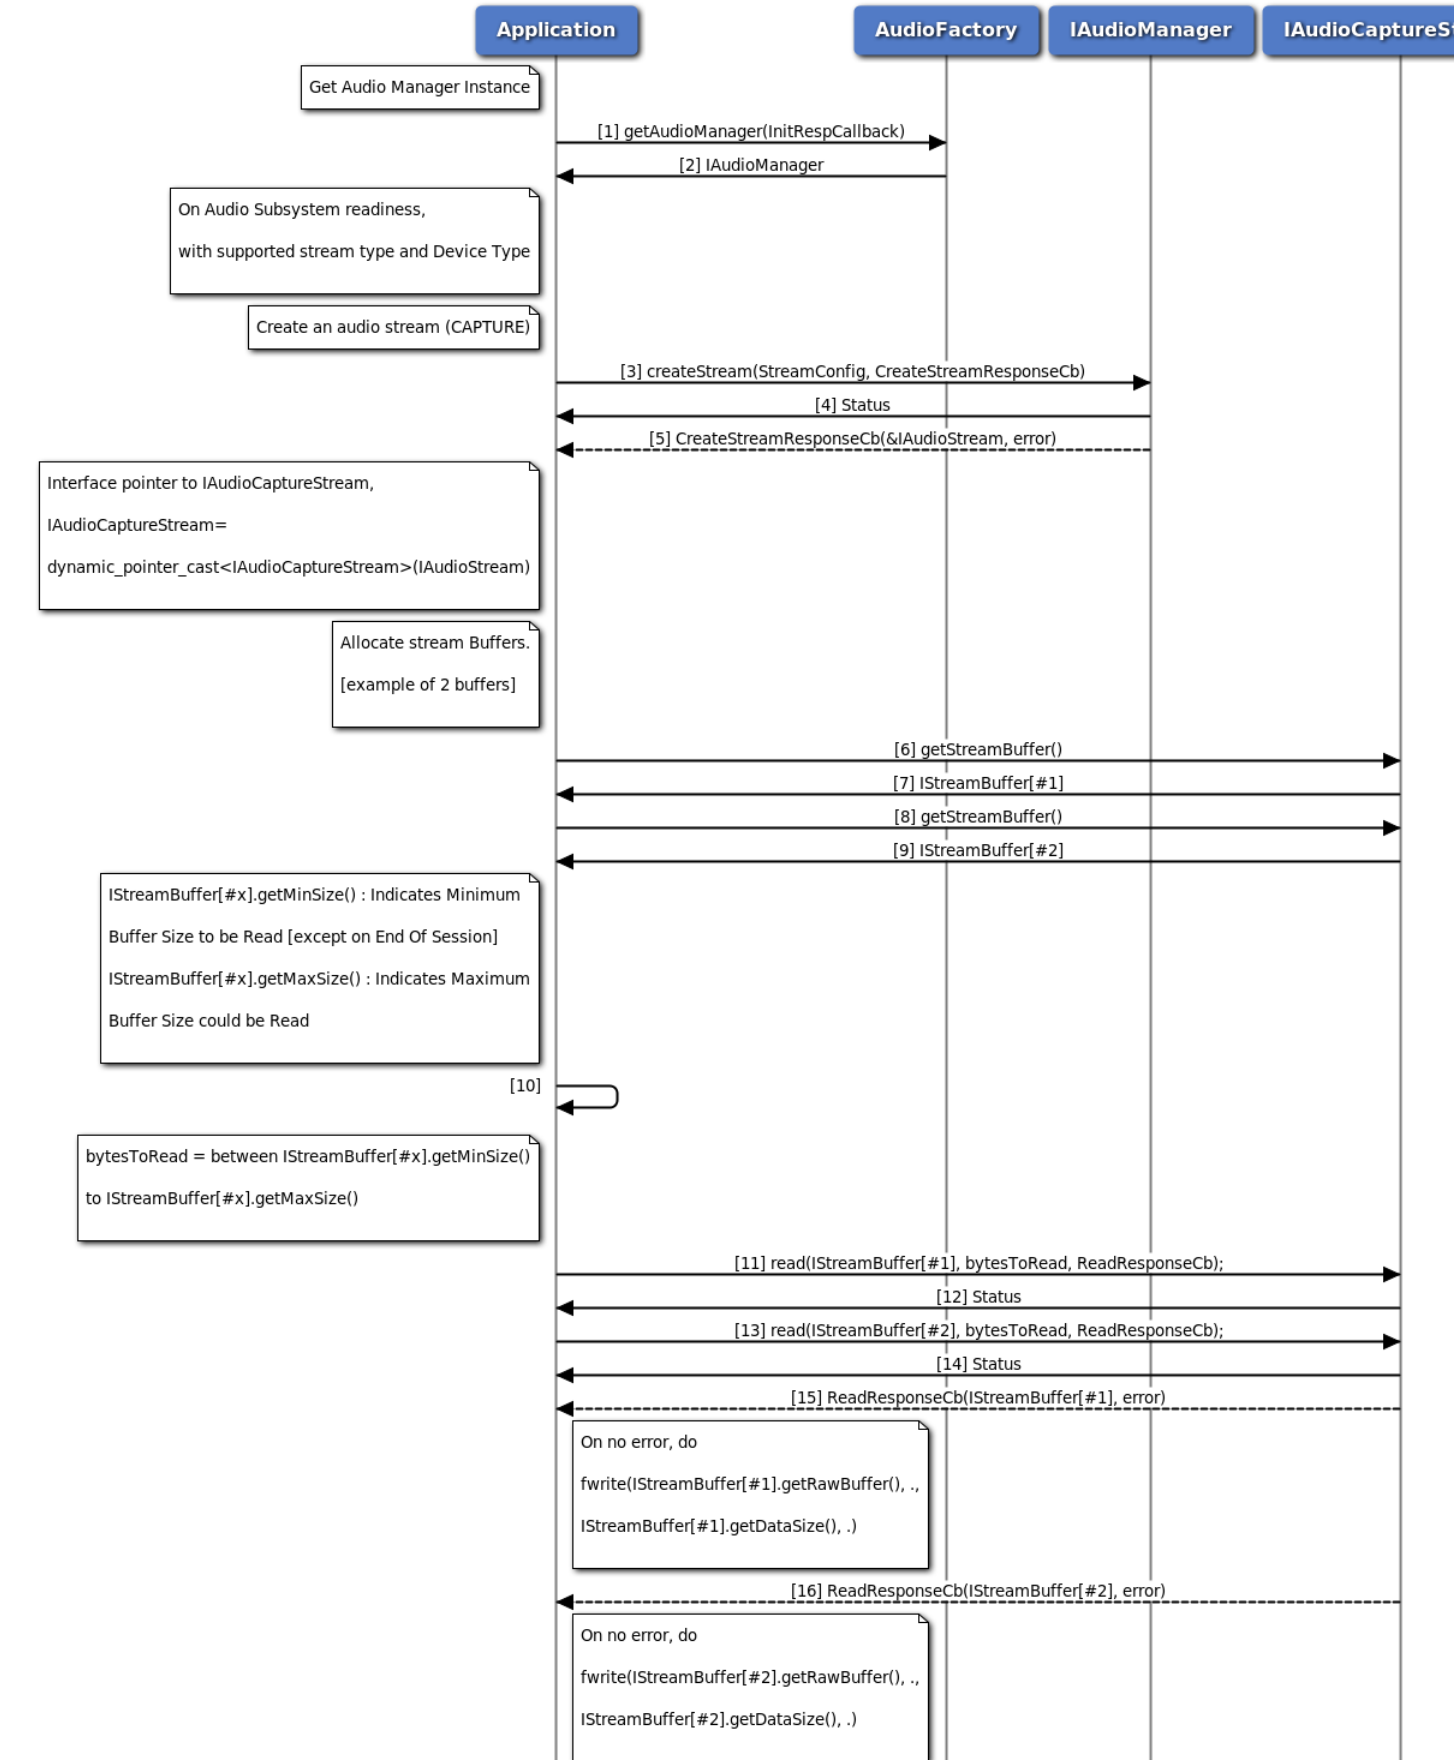

Step 10, 13 can be executed on separate threads.
Step 16, 17 signaled in another thread.
Buffer Capture Can be done in ping pong order.

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests create audio capture stream using createStream method with streamType as CAPTURE.
4. Application receives synchronous Status which indicates if the createStream request was sent successfully.
5. Application is notified of the Status of the createStream request (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioCaptureStream.
6. Application requests stream buffer#1 using getStreamBuffer method on IAudioCaptureStream.
7. Application receives IStreamBuffer if Success.
8. Application requests stream buffer#2 using getStreamBuffer method on IAudioCaptureStream.
9. Application receives IStreamBuffer if Success.
10. Application decides read sample size.
11. Application issue read audio samples on buffer#1 using read method on IAudioCaptureStream.
12. Application receives synchronous Status which indicates if the read request was sent successfully.
13. Application issue read audio samples on buffer#2 using read method on IAudioCaptureStream.
14. Application receives synchronous Status which indicates if the read request was sent successfully.
15. Application is notified of the buffer#1 write Status (either SUCCESS or FAILED) via the application-supplied read callback with successful bytes read.
16. Application is notified of the buffer#2 write Status (either SUCCESS or FAILED) via the application-supplied read callback with successful bytes read.
17. Application requests delete audio stream using deleteStream method.
18. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
19. Application is notified of the Status of the deleteStream request (either SUCCESS or FAILED) via the application-supplied callback.

3.7.9 Audio Tone Generator call flow

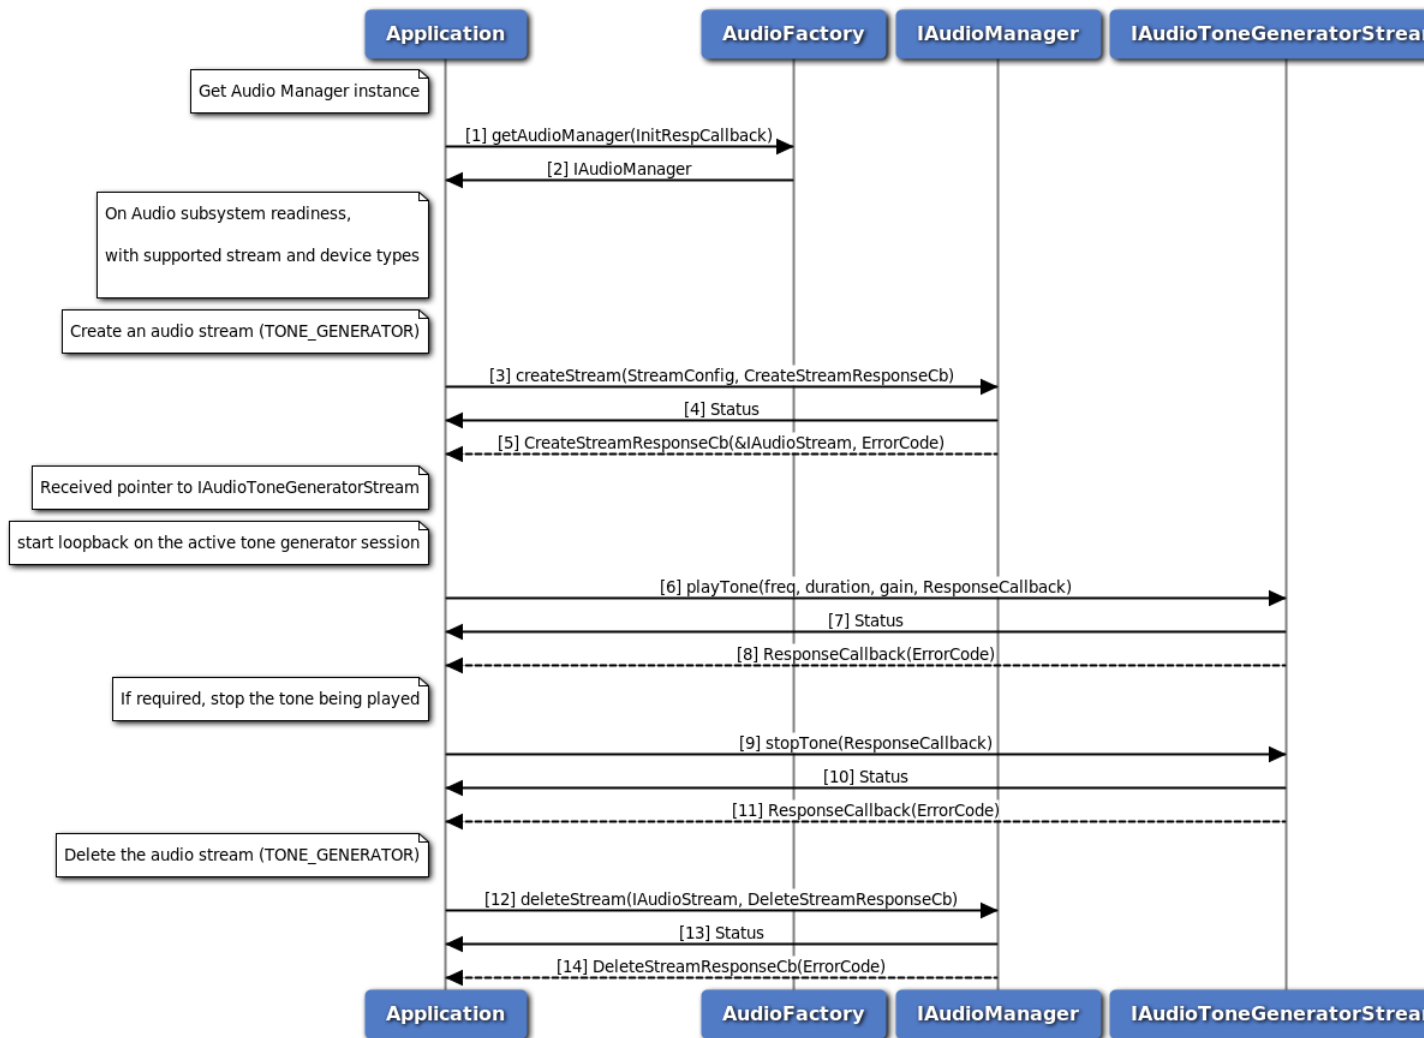


Figure 3-84 Call flow to play/stop tone on a sink device

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests to create a tone generator stream with streamType as TONE_GENERATOR.
4. Application receives synchronous status which indicates if the createStream request was sent successfully.
5. Application is notified of the createStream request status (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioToneGeneratorStream.
6. Application requests to play tone using playTone method on IAudioToneGeneratorStream.

7. Application receives synchronous status which indicates if the playTone request was sent successfully.
8. Application is notified of the playTone request status (either SUCCESS or FAILED) via the application-supplied callback.
9. Application can optionally stop the tone being played, before its duration expires.
10. Application receives synchronous status which indicates if the stopTone request was sent successfully.
11. Application is notified of the stopTone request status (either SUCCESS or FAILED) via the application-supplied callback.
12. Application requests delete audio stream using deleteStream method.
13. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
14. Application is notified of the deleteStream request status (either SUCCESS or FAILED) via the application-supplied callback.

3.7.10 Audio Loopback call flow

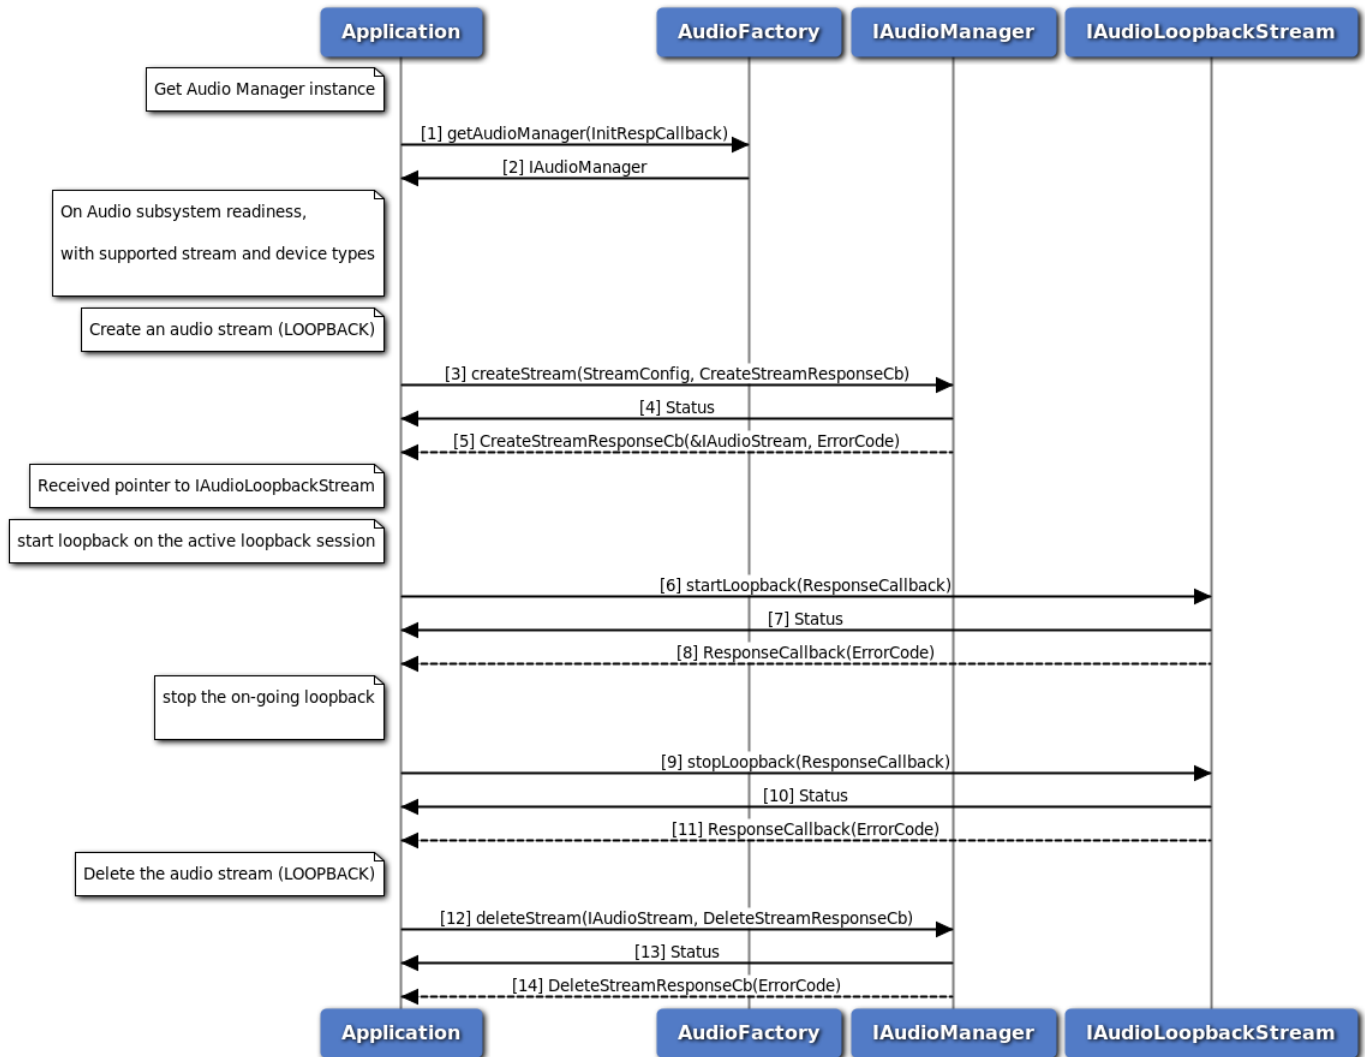


Figure 3-85 Call flow to start/stop loopback between source and sink devices

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests to create a loopback stream with streamType as LOOPBACK.
4. Application receives synchronous status which indicates if the createStream request was sent successfully.
5. Application is notified of the createStream request status (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioLoopbackStream.
6. Application requests to start loopback using startLoopback method on IAudioLoopbackStream.
7. Application receives synchronous status which indicates if the startLoopback request was sent successfully.

8. Application is notified of the startLoopback request status (either SUCCESS or FAILED) via the application-supplied callback.
9. Application requests to stop loopback using stopLoopback method on IAudioLoopbackStream.
10. Application receives synchronous status which indicates if the stopLoopback request was sent successfully.
11. Application is notified of the stopLoopback request status (either SUCCESS or FAILED) via the application-supplied callback.
12. Application requests delete audio stream using deleteStream method.
13. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
14. Application is notified of the deleteStream request status(either SUCCESS or FAILED) via the application-supplied callback.

3.7.11 Compressed audio format playback call flow

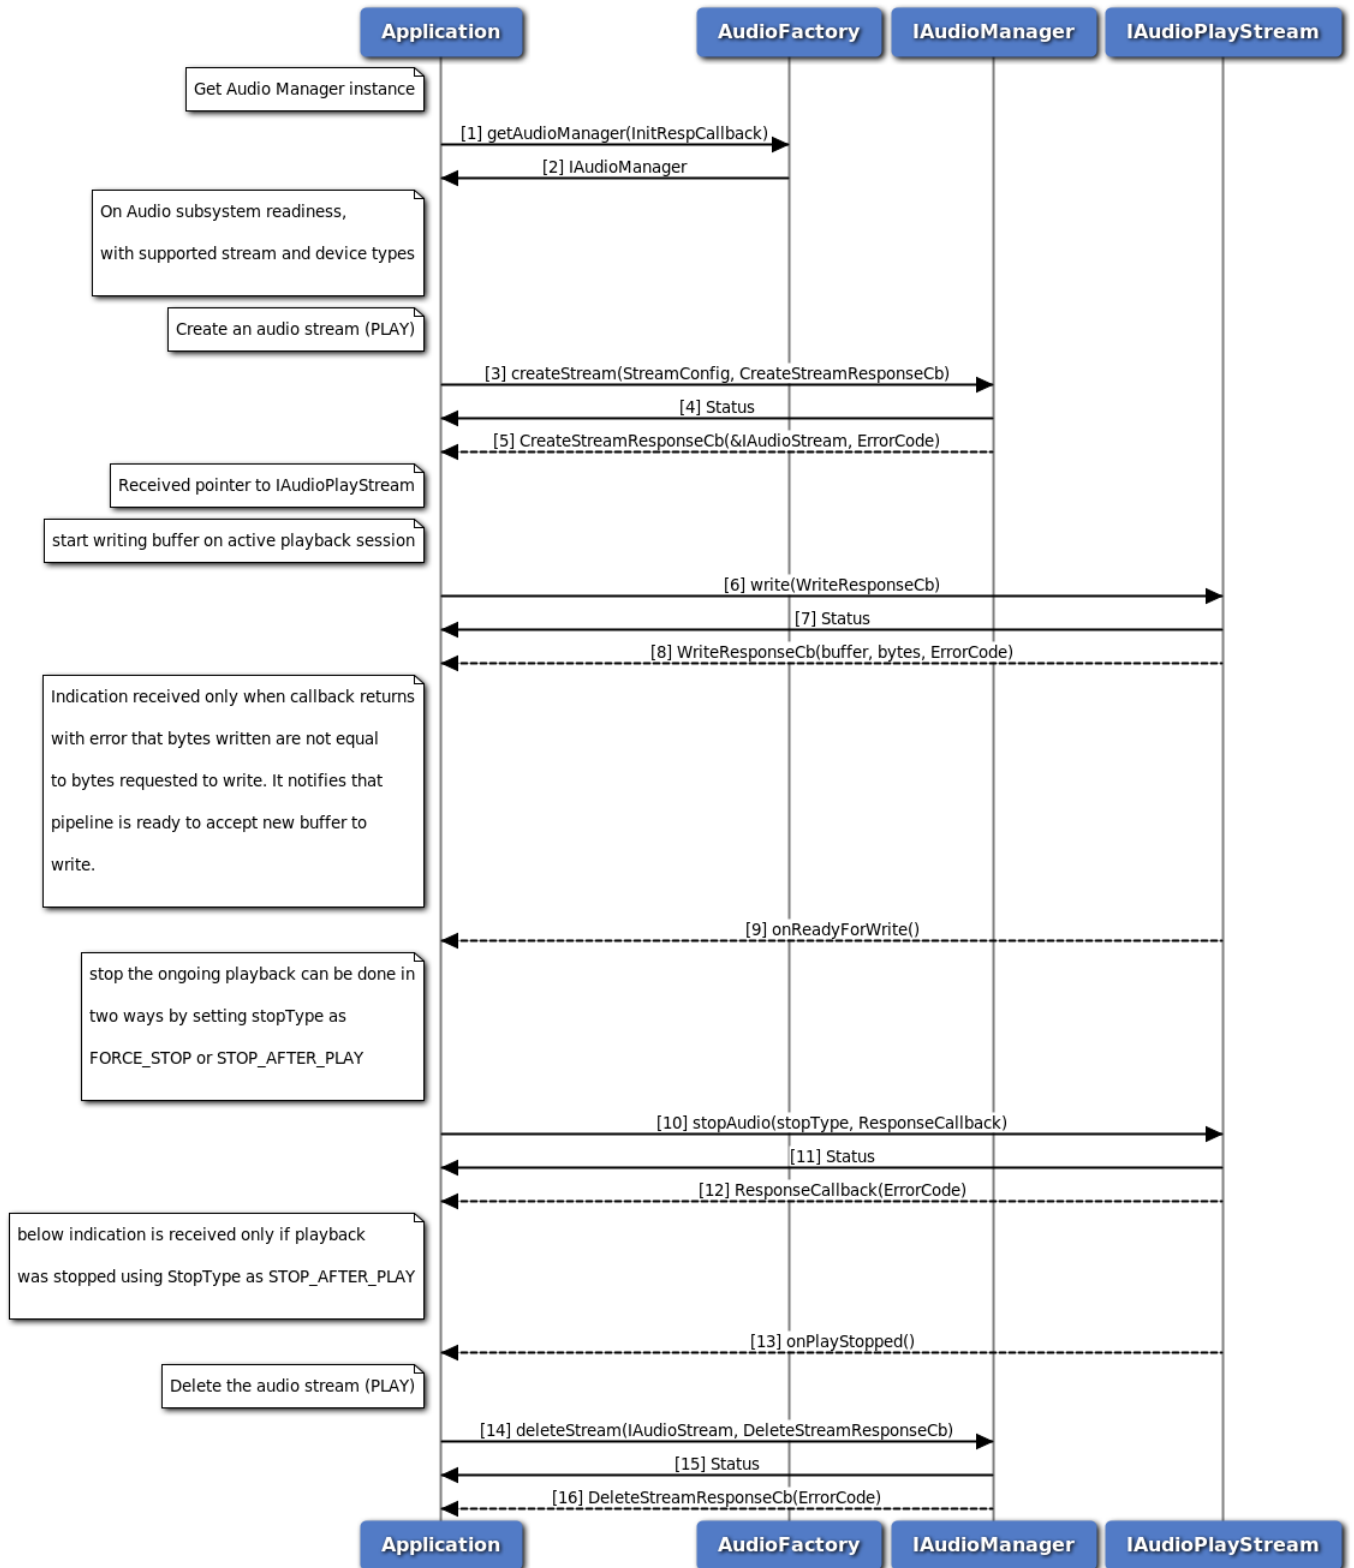


Figure 3-86 Call flow to play Compressed audio format

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests to create a play stream with streamType as PLAY.
4. Application receives synchronous status which indicates if the createStream request was sent successfully.
5. Application is notified of the createStream request status (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioPlayStream.
6. Application requests to write buffer using write method on IAudioPlayStream.
7. Application receives synchronous status which indicates if the write request was sent successfully.
8. Application is notified of the write request status (either SUCCESS or FAILED) via the application-supplied callback along with number of bytes written.
9. Application is notified of when pipeline is ready to accept new buffer if callback returns with error that number of bytes written are not equal to bytes requested.
10. Application send request to stop playback using stopAudio method of IAudioPlayStream.
11. Application receives synchronous status which indicates if the stopAudio request was sent successfully.
12. Application is notified of the stopAudio request status (either SUCCESS or FAILED) via the application-supplied callback.
13. Application is notified via indication that playback is stopped if StopType is STOP_AFTER_PLAY.
14. Application requests delete audio stream using deleteStream method.
15. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
16. Application is notified of the deleteStream request status(either SUCCESS or FAILED) via the application-supplied callback.

3.7.12 Audio Transcoding Operation Callflow

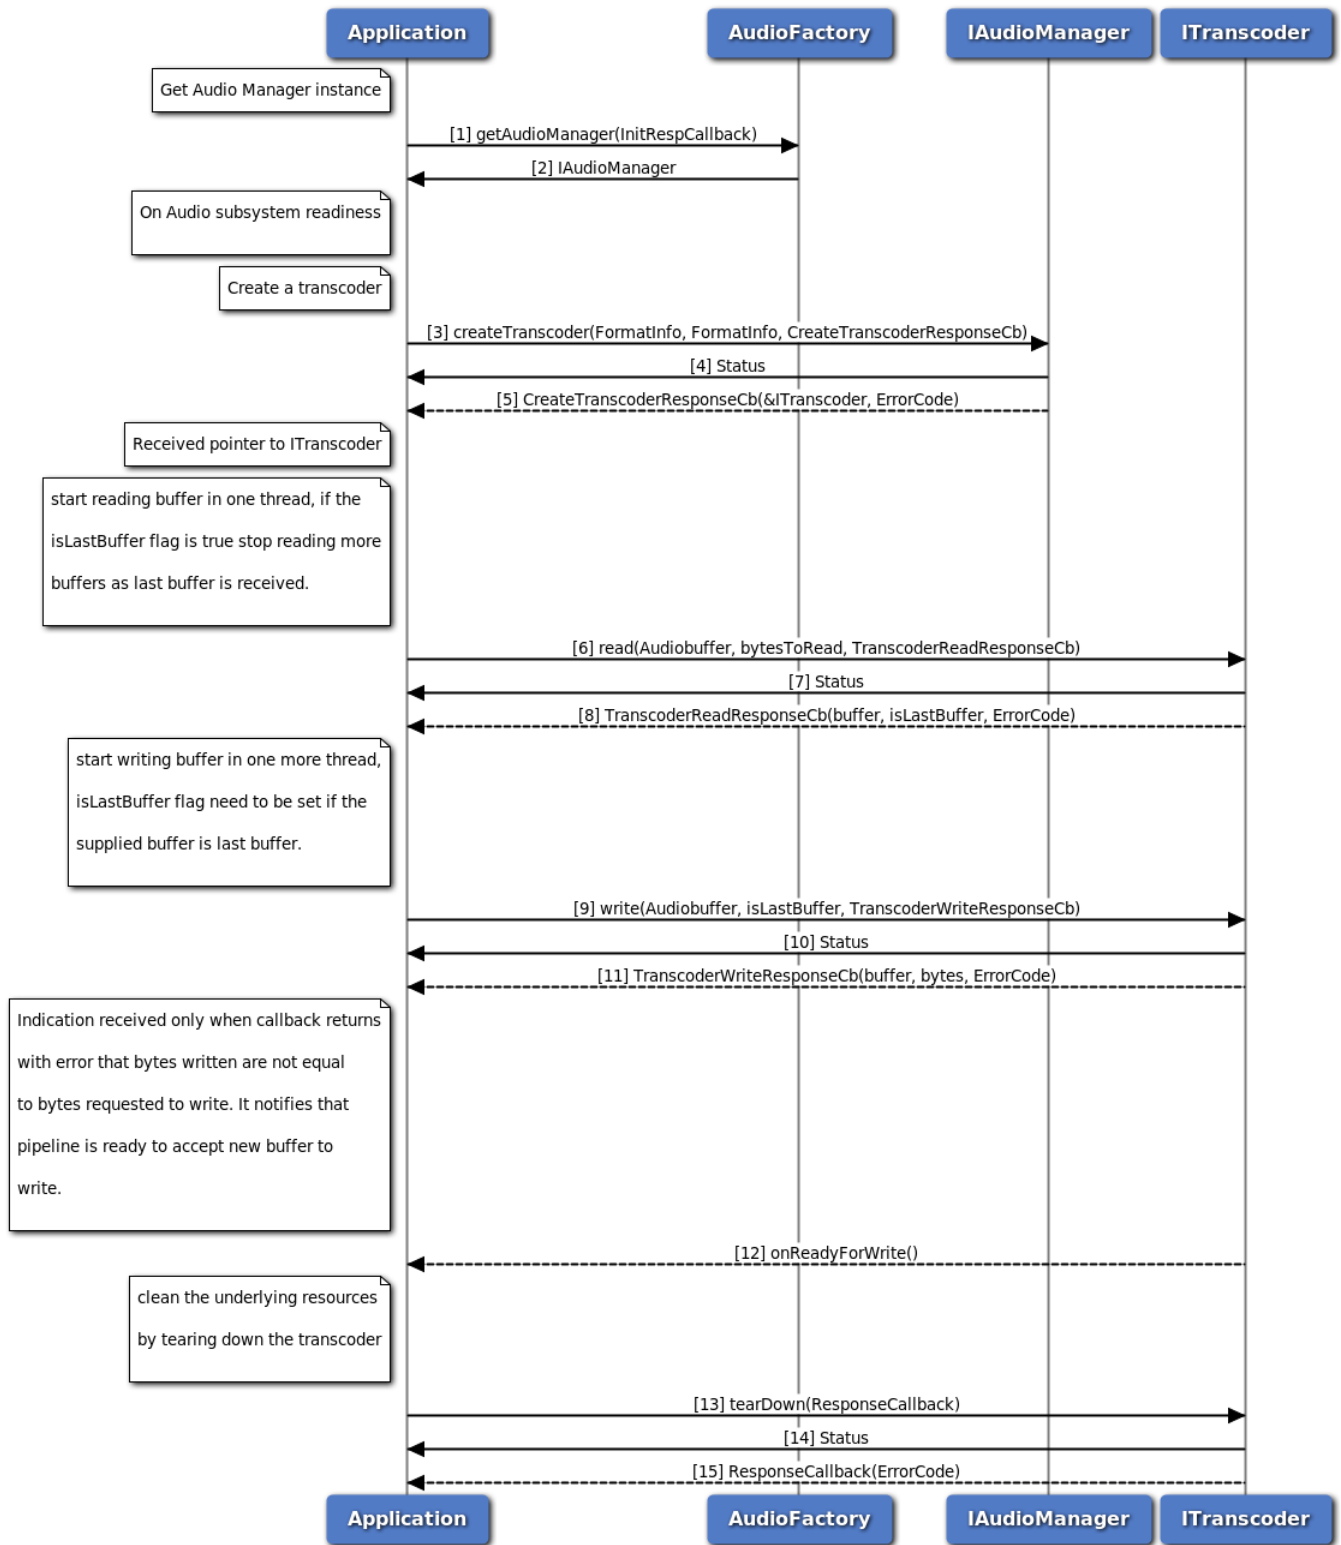


Figure 3-87 Audio Transcoding Operation Callflow

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests to create a transcoder.
4. Application receives synchronous status which indicates if the createTranscoder request was sent successfully.
5. Application is notified of the createTranscoder request status (either SUCCESS or FAILED) via the application-supplied callback, with pointer to transcoder interface referring to ITranscoder.
6. Application requests to read buffer using read method on ITranscoder.
7. Application receives synchronous status which indicates if the read request was sent successfully.
8. Application is notified of the read request status (either SUCCESS or FAILED) via the application-supplied callback along with isLastBuffer flag which indicates whether the buffer is last buffer to read or not.
9. Application requests to write buffer using write method on ITranscoder.
10. Application receives synchronous status which indicates if the write request was sent successfully. Application need to mark the isLastBuffer flag, whenever it is providing the last buffer to be write.
11. Application is notified of the write request status (either SUCCESS or FAILED) via the application-supplied callback along with number of bytes written.
12. Application is notified of when pipeline is ready to accept new buffer if callback returns with error that number of bytes written are not equal to bytes requested.
13. Once transcoding done, Application requests to tearDown transcoder as transcoder can not be used for multiple transcoding operations.
14. Application receives synchronous status which indicates if the tearDown request was sent successfully.
15. Application is notified of the tearDown request status (either SUCCESS or FAILED) via the application-supplied callback.

3.7.13 Compressed audio format playback on Voice Paths Callflow

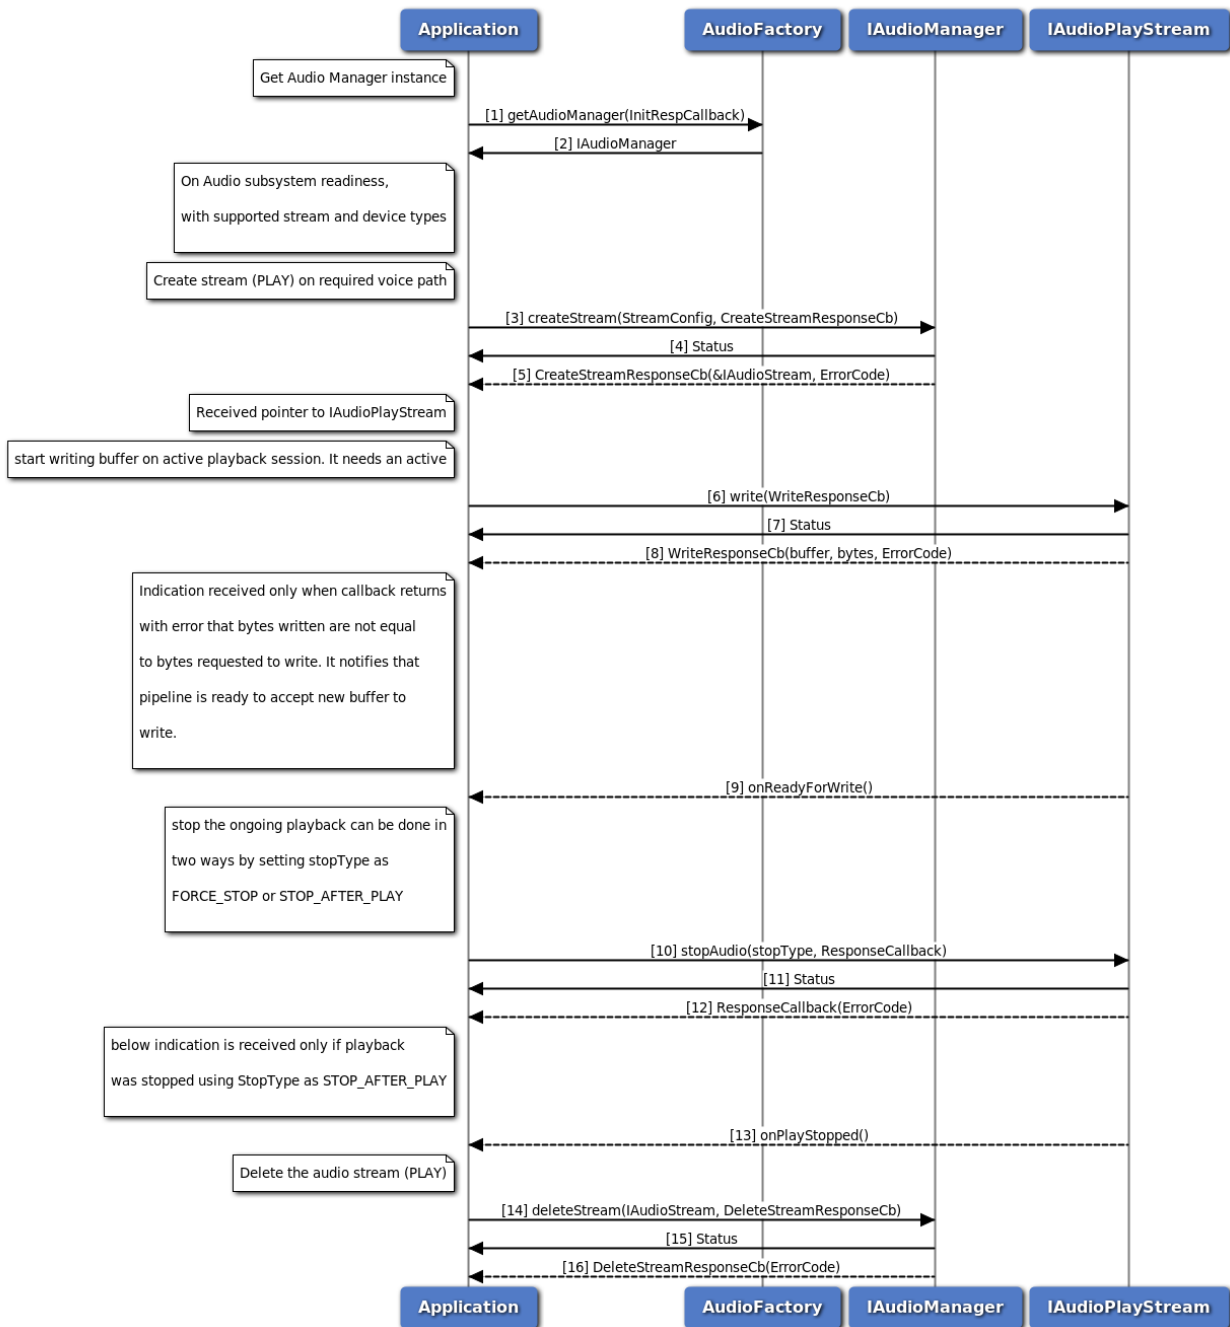


Figure 3-88 Compressed audio format playback on Voice Paths Callflow

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests to create a play stream with streamType as PLAY, voicePaths direction as TX or RX and no device is selected.

4. Application receives synchronous status which indicates if the createStream request was sent successfully.
5. Application is notified of the createStream request status (either SUCCESS or FAILED) via the application-supplied callback, with pointer to stream interface referring to IAudioPlayStream.
6. Application requests to write buffer using write method on IAudioPlayStream. It needs an active voice session to play over voice paths, refer IAudioVoiceStream for more details on how to create voice stream.
7. Application receives synchronous status which indicates if the write request was sent successfully.
8. Application is notified of the write request status (either SUCCESS or FAILED) via the application-supplied callback along with number of bytes written.
9. Application is notified of when pipeline is ready to accept new buffer if callback returns with error that number of bytes written are not equal to bytes requested.
10. Application send request to stop playback using stopAudio method of IAudioPlayStream.
11. Application receives synchronous status which indicates if the stopAudio request was sent successfully.
12. Application is notified of the stopAudio request status (either SUCCESS or FAILED) via the application-supplied callback.
13. Application is notified via indication that playback is stopped if StopType is STOP_AFTER_PLAY.
14. Application requests delete audio play stream using deleteStream method.
15. Application receives synchronous Status which indicates if the deleteStream request was sent successfully.
16. Application is notified of the deleteStream request status(either SUCCESS or FAILED) via the application-supplied callback.

3.7.14 Audio Subsystem Restart Callflow

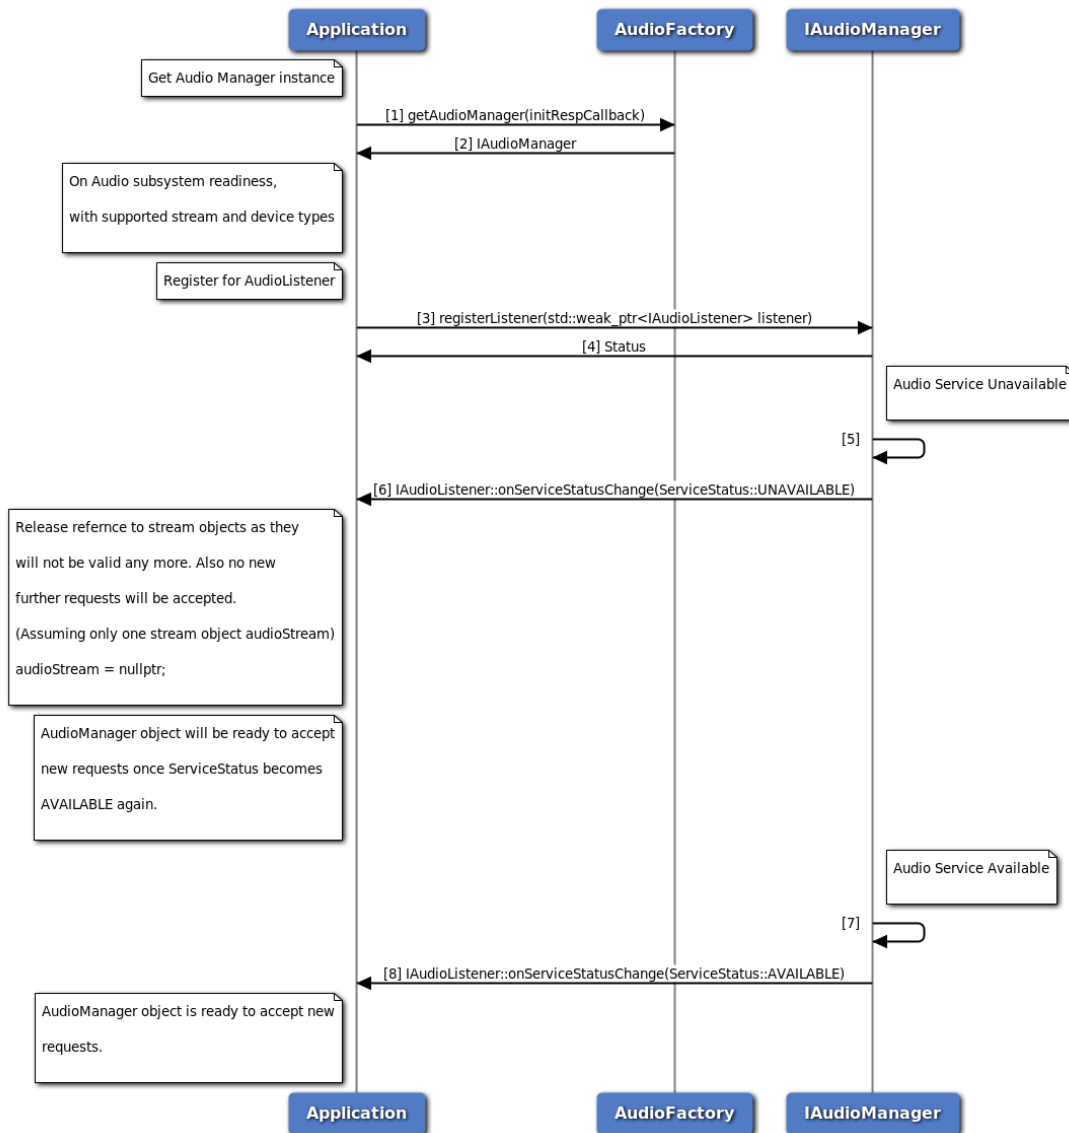


Figure 3-89 Audio Subsystem Restart Callflow

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On Readiness, Application requests to register listener to IAudioManager object.
4. Application receives synchronous status which indicates registerListener request was sent successfully.
5. IAudioManager is notified that audio service is unavailable.
6. Application receives a notification from the IAudioManager regarding service status as unavailable. Application is supposed to release references to all the IAudioStream/ITranscoder objects and related resources. Application should not send any new request to IAudioManager or

- IAudioStream/ITranscoder objects.
7. IAudioManager is notified that audio service is available.
 8. Application receives a notification from the IAudioManager regarding service status as available. IAudioManager object is now ready to accept new requests from application.

3.7.15 Audio calibration configuration status

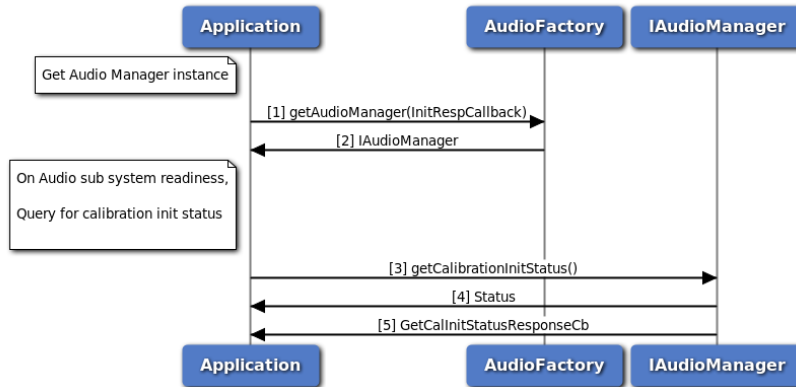


Figure 3-90 Audio calibration configuration status

1. Application requests Audio factory for an Audio Manager.
2. Audio factory return IAudioManager object to application.
3. On sub system Readiness, application requests for calibration init status using getCalibrationInitStatus API to IAudioManager.
4. Application receives synchronous status which indicates if the getCalibrationInitStatus request was sent successfully.
5. Application is notified with CalibrationInitStatus and suitable error code via the application supplied callback.

3.8 Thermal manager call flow

Thermal manager provides APIs to get list of thermal zones and cooling devices. It also contains APIs to get a particular thermal zone and a particular cooling device details with the given Id.

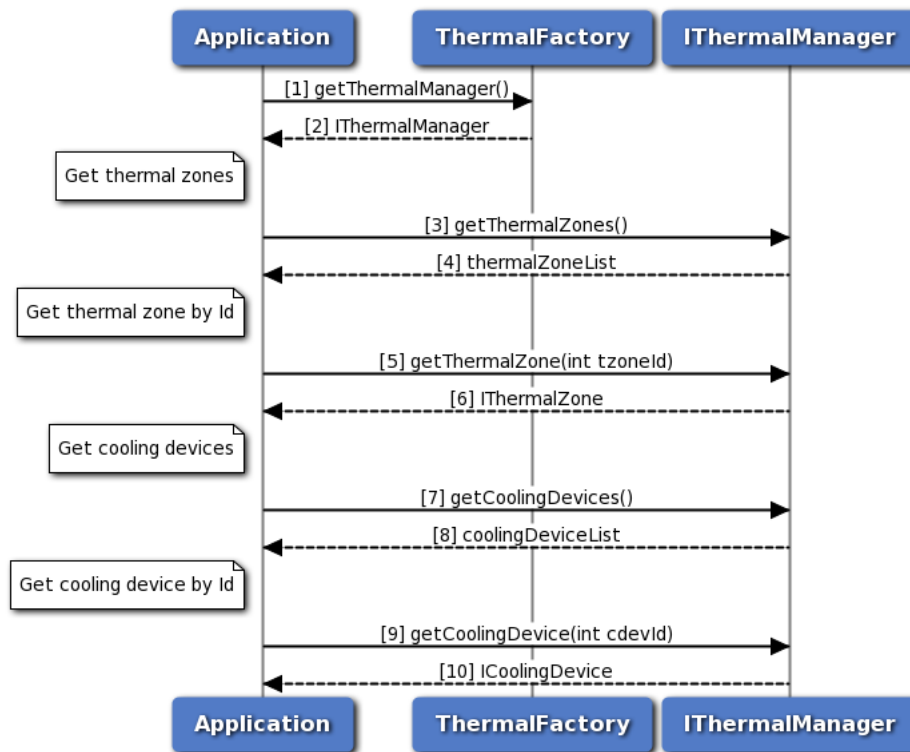


Figure 3-91 Thermal manager call flow

1. Application requests Thermal factory for Thermal Manager.
2. Thermal factory returns IThermalManager object to application.
3. Application sends request to get all thermal zones using IThermalManager object.
4. Thermal manager returns the list of thermal zones to the application.
5. Application requests for a particular thermal zone details by mentioning the thermal zone Id.
6. Application receives thermal zone details with the given Id from thermal manager.
7. Application sends request to get all cooling devices using IThermalManager object.
8. Thermal manager returns the list of cooling devices to the application.
9. Application requests for a particular cooling device details by passing the cooling device Id.
10. Thermal Manager sends cooling device details with the given Id to the application.

3.9 Thermal shutdown management

Thermal shutdown manager provides APIs to set/get auto thermal shutdown modes. It also has listener interface for notifications. Application will get the Thermal-shutdown manager object from thermal factory.

The application can register a listener for updates in thermal auto shutdown modes and its management service status. Also there is provision to set the desired thermal auto-shutdown mode.

When application is notified of service being unavailable, the thermal auto-shutdown mode updates are inactive. After service becomes available, the existing listener registrations will be maintained.

As a reference, auto-shutdown management in an eCall application is described in the below sections.

3.9.1 Call flow to register/remove listener for Thermal auto-shutdown mode updates.

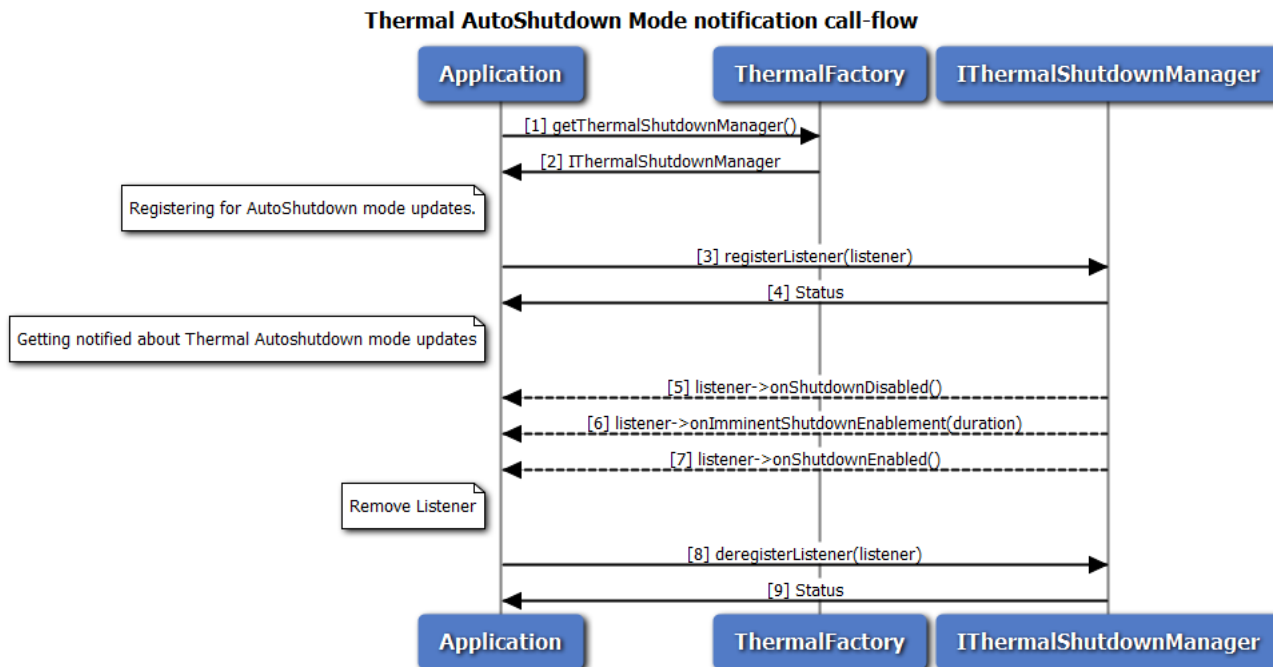


Figure 3-92 Call flow to register/remove listener for Thermal shutdown manager

1. Application requests thermal factory for Thermal Shutdown Manager.
2. Thermal factory returns IThermalShutdownManager object using which application will register or remove a listener.
3. Application can register a listener for getting notifications on Thermal auto-shutdown mode updates.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application receives a notification that thermal auto-shutdown mode is disabled.
6. Application receives a notification that thermal auto-shutdown mode is going to be enabled soon. The exact duration is also received as part of notification.
7. Application receives a notification that thermal auto-shutdown mode is enabled.
8. Application can remove listener.
9. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.9.2 Call flow to set/get the Thermal auto-shutdown mode

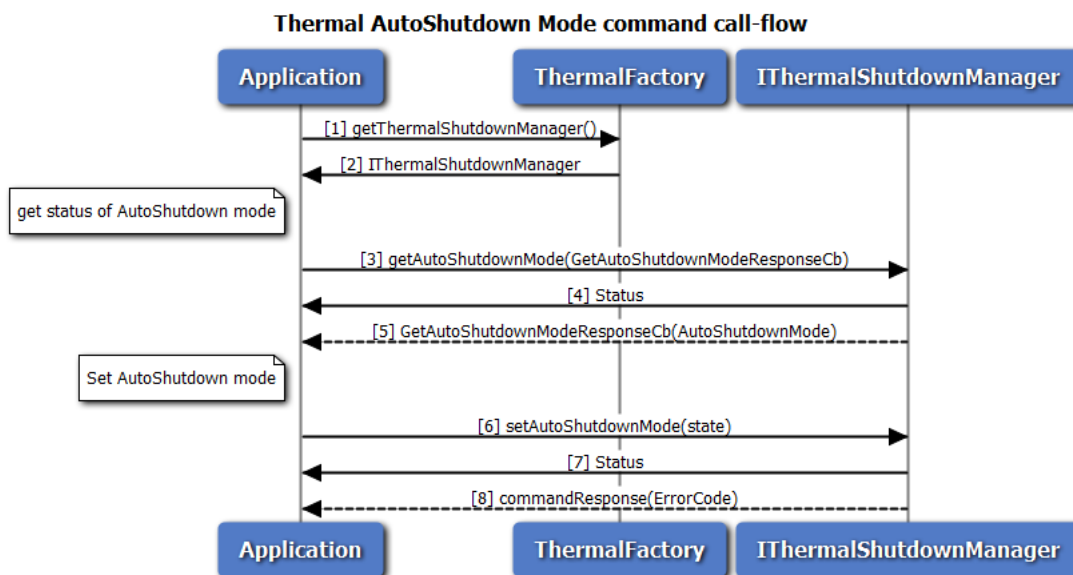


Figure 3-93 Call flow to set/get the Thermal auto-shutdown mode

1. Application requests thermal factory for Thermal Shutdown Manager object using which application will set/get the thermal auto-shutdown mode.
2. Thermal factory returns `IThermalShutdownManager` object.
3. Application can query the thermal auto-shutdown mode.
4. Application receives synchronous status which indicates if the request was sent successfully.
5. Application receives the auto-shutdown mode asynchronously.
6. Application can set the thermal auto-shutdown mode to ENABLE or DISABLE.
7. Application receives synchronous status which indicates if the request was sent successfully.
8. Optionally, the response to `setAutoShutdownMode` request can be received by the application.

3.9.3 Call flow to manage thermal auto-shutdown from an eCall application.

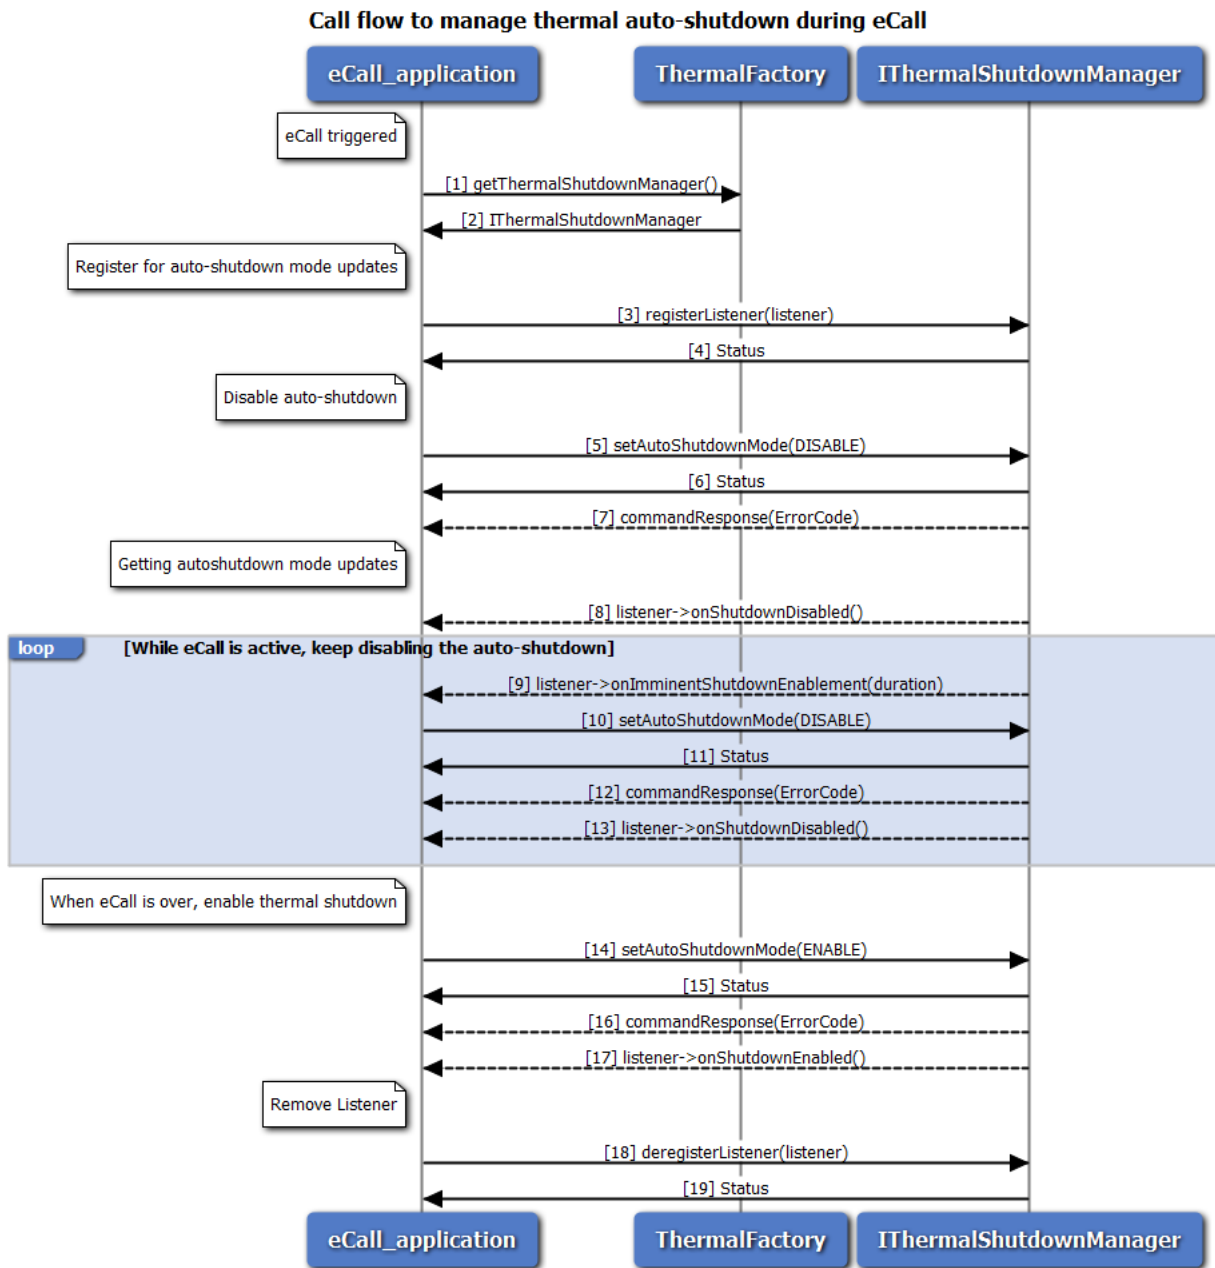


Figure 3-94 Call flow to manage thermal auto-shutdown from an eCall application

1. When eCall is triggered, application requests thermal factory for Thermal Shutdown Manager.
2. Thermal factory returns IThermalShutdownManager object.
3. Application can register a listener for getting notifications on Thermal auto-shutdown mode updates.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application disables auto-shutdown using setAutoShutdownMode API, to prevent a possible thermal

- auto-shutdown during eCall.
6. Application receives synchronous status which indicates if the request was sent successfully.
 7. Optionally, the response to setAutoShutdownMode request can be received by the application.
 8. Application receives a notification that thermal auto-shutdown mode is disabled.
 9. Application receives an imminent auto-shutdown enable notification and system will attempt to enable auto-shutdown after a certain period. This notification is received if application does not enable auto-shutdown due to an active eCall.
 10. If the eCall is still active, the application disables auto-shutdown before it gets enabled automatically.
 11. Application receives synchronous status which indicates if the request was sent successfully.
 12. Optionally, the response to setAutoShutdownMode request can be received by the application.
 13. Application receives a notification that thermal auto-shutdown mode is disabled. Steps 9 to 13 are repeated as long as the eCall is active.
 14. When the eCall is completed, the application immediately enables auto-shutdown using setAutoShutdownMode API.
 15. Application receives synchronous status which indicates if the request was sent successfully.
 16. Optionally, the response to setAutoShutdownMode request can be received by the application.
 17. Application receives a notification that thermal auto-shutdown mode is enabled.
 18. Application can remove listener.
 19. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.10 TCU Activity Management

Application will get appropriate TCU-activity manager object from power factory. A Master/Slave client can register a listener for updates on TCU-activity state and its management service status. A Master client application can also set the system to a desired activity state. When the application is notified about the service being unavailable, the TCU-activity state notifications will be inactive. After the service becomes available, the existing listener registrations will be maintained.

The framework can work in ACTIVE or PASSIVE mode, based on the configuration of TCU-activity management service. In ACTIVE mode, the management service leads the system into desired activity state after receiving the acknowledgements from all the clients or after the configured timeout. However, in PASSIVE mode, the framework just notifies the clients about the state transition and conveys their acknowledgement status back to the Master application that triggered the transition.

3.10.1 Call flow to register/remove listener for TCU-activity manager

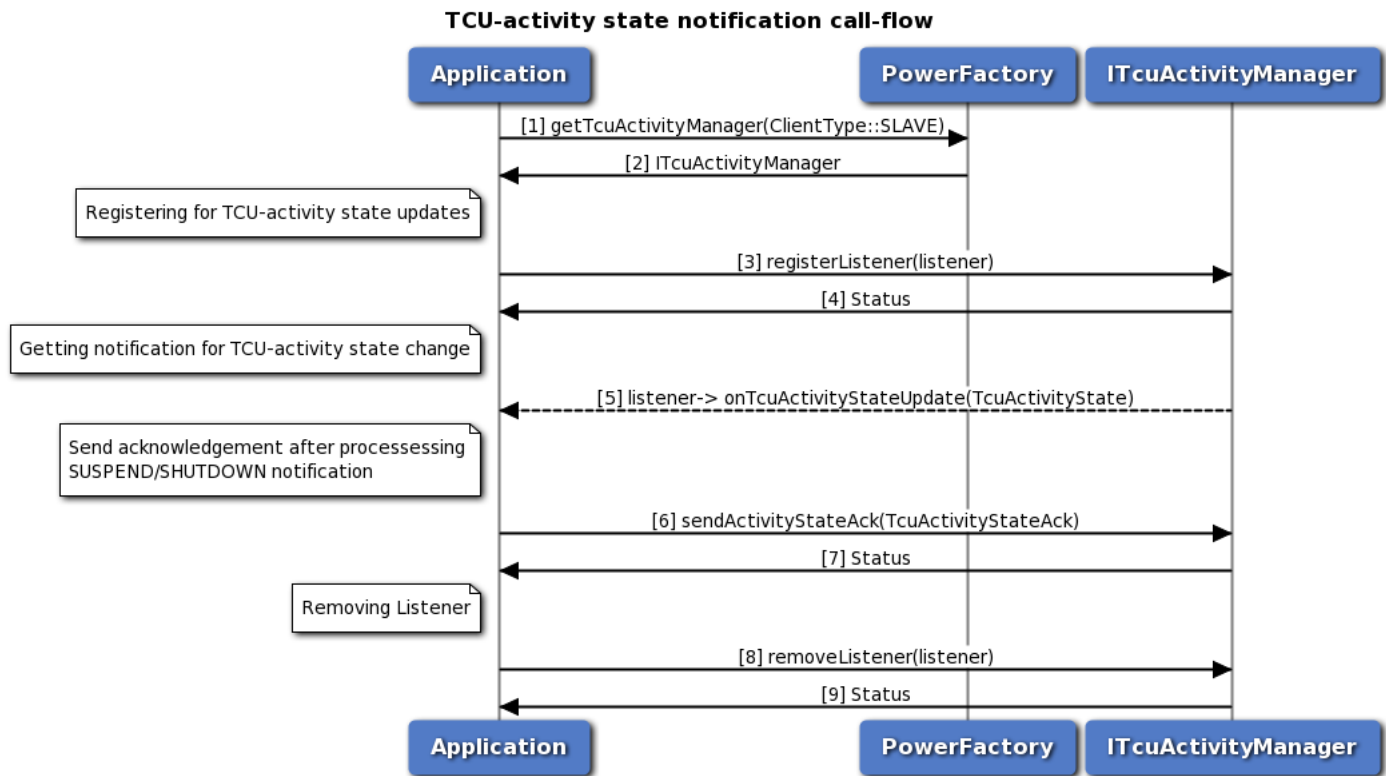


Figure 3-95 Call flow to register/remove listener for TCU-activity manager

1. Application requests power factory for TCU-activity manager object, with clientType as SLAVE.
2. Power factory returns ITcuActivityManager object using which application will register or remove a listener.
3. Application can register a listener for getting notifications on TCU-activity state updates.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application will get TCU-activity state notifications like SUSPEND, RESUME and SHUTDOWN.
6. Application will send one(despite multiple listeners) acknowledgement, after processing(save any required information) SUSPEND/SHUTDOWN notifications. This indicates the readiness of application for state-transition. However the TCU-activity management service doesn't wait for acknowledgement indefinitely, before performing the state transition.
7. Application receives synchronous status which indicates if the acknowledgement was sent successfully.
8. Application can remove listener.
9. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.10.2 Call flow to set the TCU-activity state in ACTIVE mode

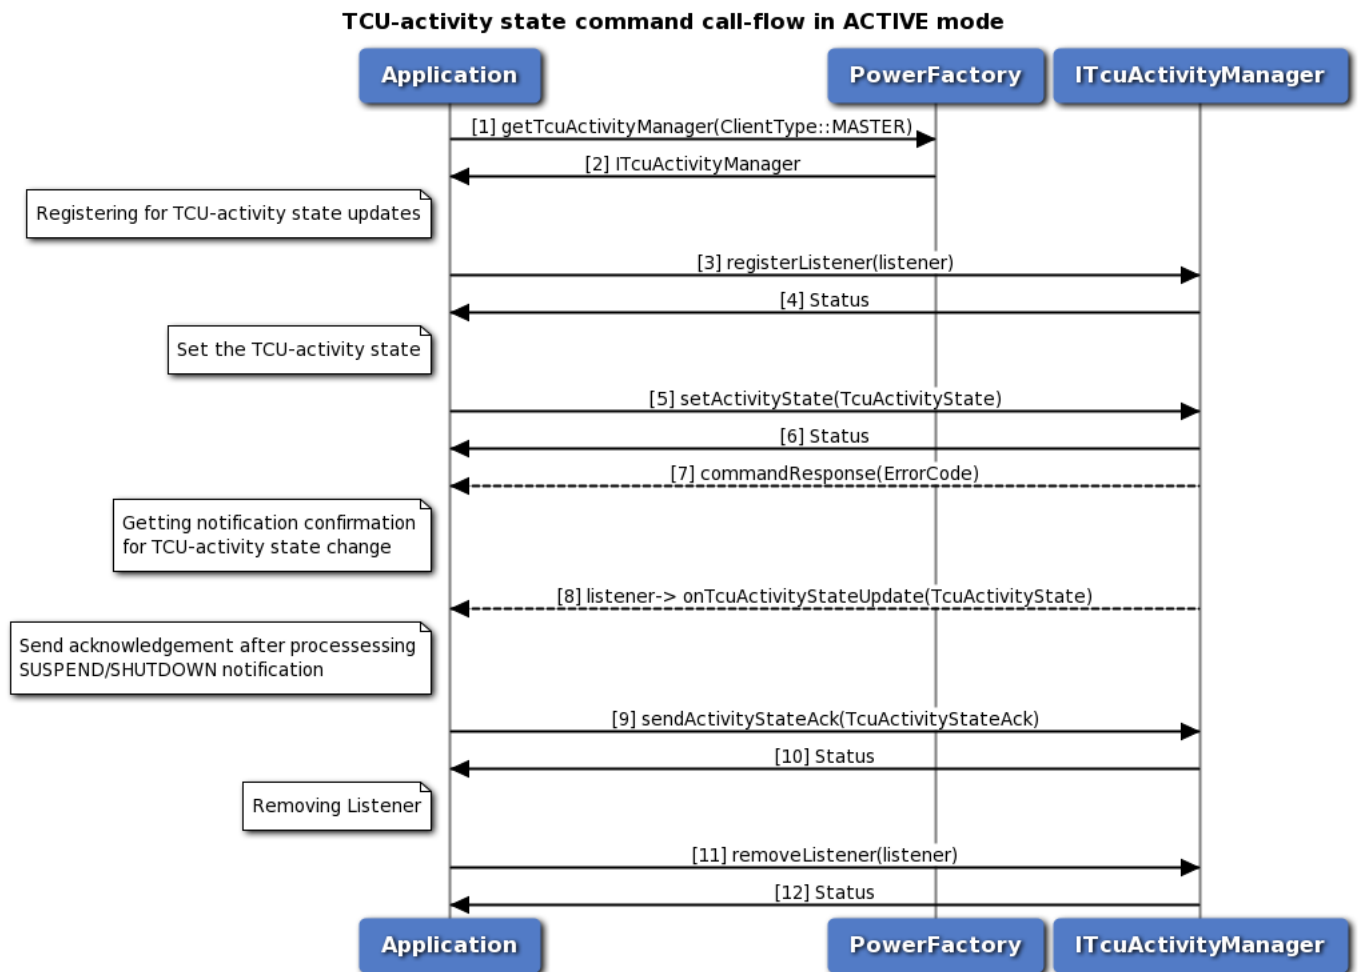


Figure 3-96 Call flow to set the TCU-activity state in ACTIVE mode

1. Application requests power factory for TCU-activity manager object, with clientType as MASTER.
2. Power factory returns ITcuActivityManager object using which application will set the TCU-activity state.
3. Application can register a listener for getting notifications on TCU-activity state.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application
5. Application can set the TCU-activity state to SUSPEND, RESUME or SHUTDOWN.
6. Application receives synchronous status which indicates if the request was sent successfully.
7. Optionally, the response to setActivityState request can be received by the application.
8. Application waits for TCU-activity state update to confirm the state change.
9. Application will send one (despite multiple listeners) acknowledgement, after processing (save any required information) SUSPEND/SHUTDOWN notifications. This indicates the readiness of application for state-transition. However the TCU-activity management service doesn't wait for

- acknowledgement indefinitely, before performing the state transition.
- 10. Application receives synchronous status which indicates if the acknowledgement was sent successfully.
- 11. Application can remove listener.
- 12. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.10.3 Call flow to set the TCU-activity state in PASSIVE mode

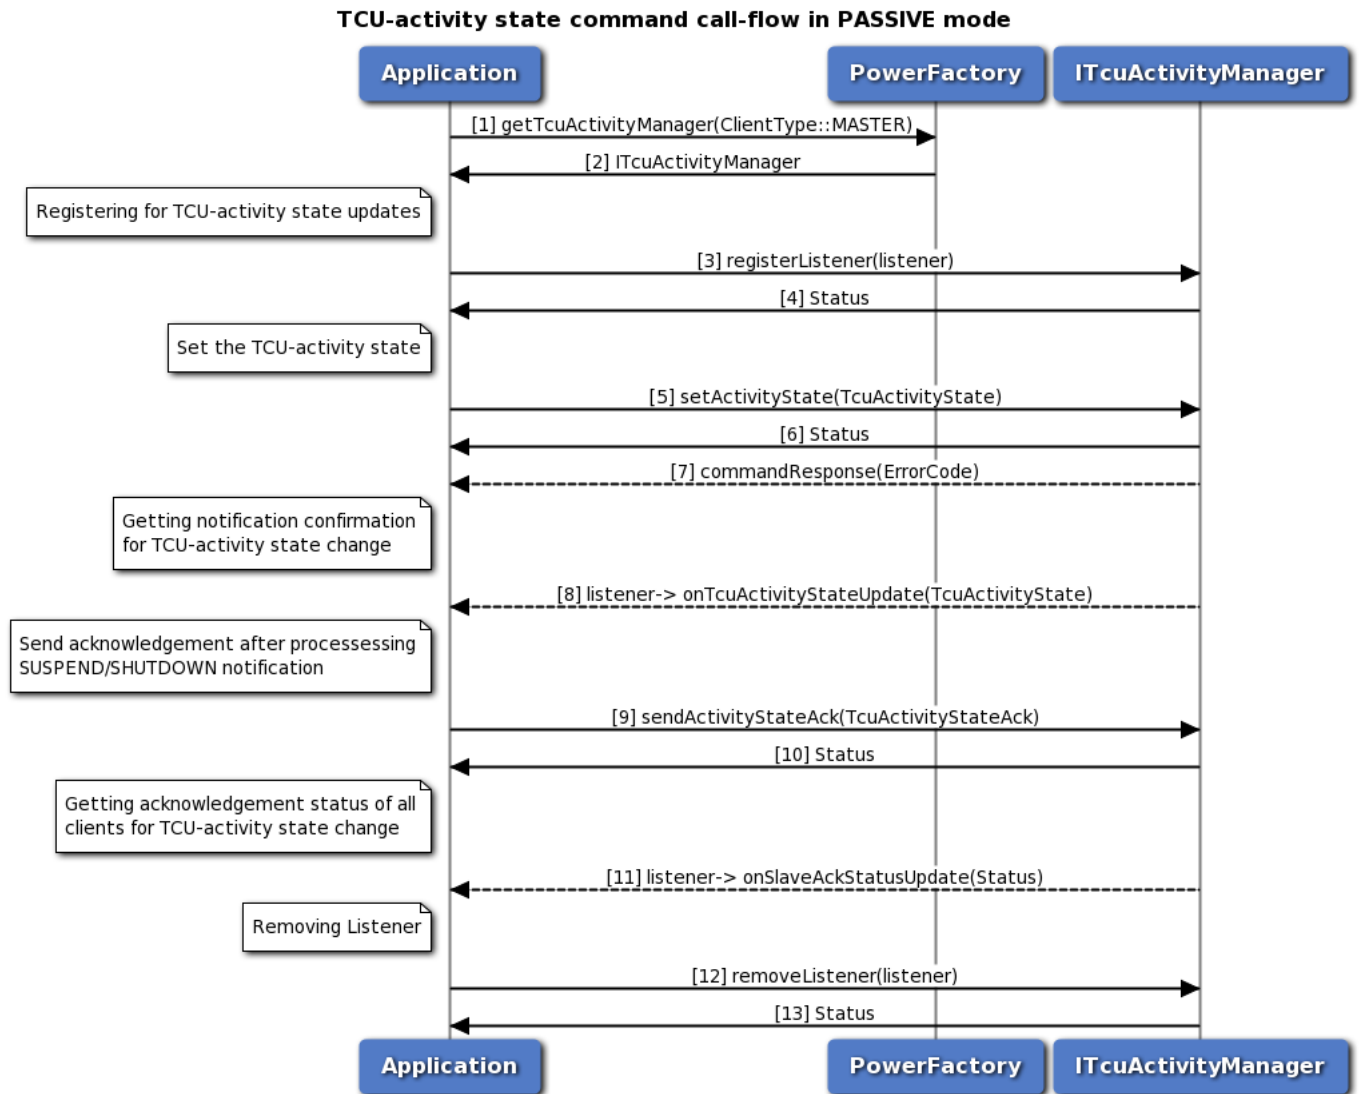


Figure 3-97 Call flow to set the TCU-activity state in PASSIVE mode

1. Application requests power factory for TCU-activity manager object, with clientType as MASTER.
2. Power factory returns ITcuActivityManager object using which application will set the TCU-activity state.
3. Application can register a listener for getting notifications on TCU-activity state.

4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application
5. Application can set the TCU-activity state to SUSPEND, RESUME or SHUTDOWN.
6. Application receives synchronous status which indicates if the request was sent successfully.
7. Optionally, the response to setActivityState request can be received by the application.
8. Application waits for TCU-activity state update to confirm the state change.
9. Application will send one(despite multiple listeners) acknowledgement, after processing(save any required information) SUSPEND/SHUTDOWN notifications. This indicates the readiness of application for state-transition. However the TCU-activity management service doesn't wait for acknowledgement indefinitely, before performing the state transition.
10. Application receives synchronous status which indicates if the acknowledgement was sent successfully.
11. Application waits for the acknowledgement status of all the clients, for the state transition in the system
12. Application can remove listener.
13. Status of remove listener i.e. either SUCCESS or FAILED will be returned to the application.

3.11 Remote SIM call flow

Application will get the remote SIM manager object from phone factory. The application must register a listener to receive commands/messages from the modem to send to the SIM. After sending the connection available message, a `onCardConnect()` notification tells the application to connect to the SIM and perform an Answer to Reset. After sending the card reset message (with the AtR bytes), APDU messages will begin

to be sent/received.

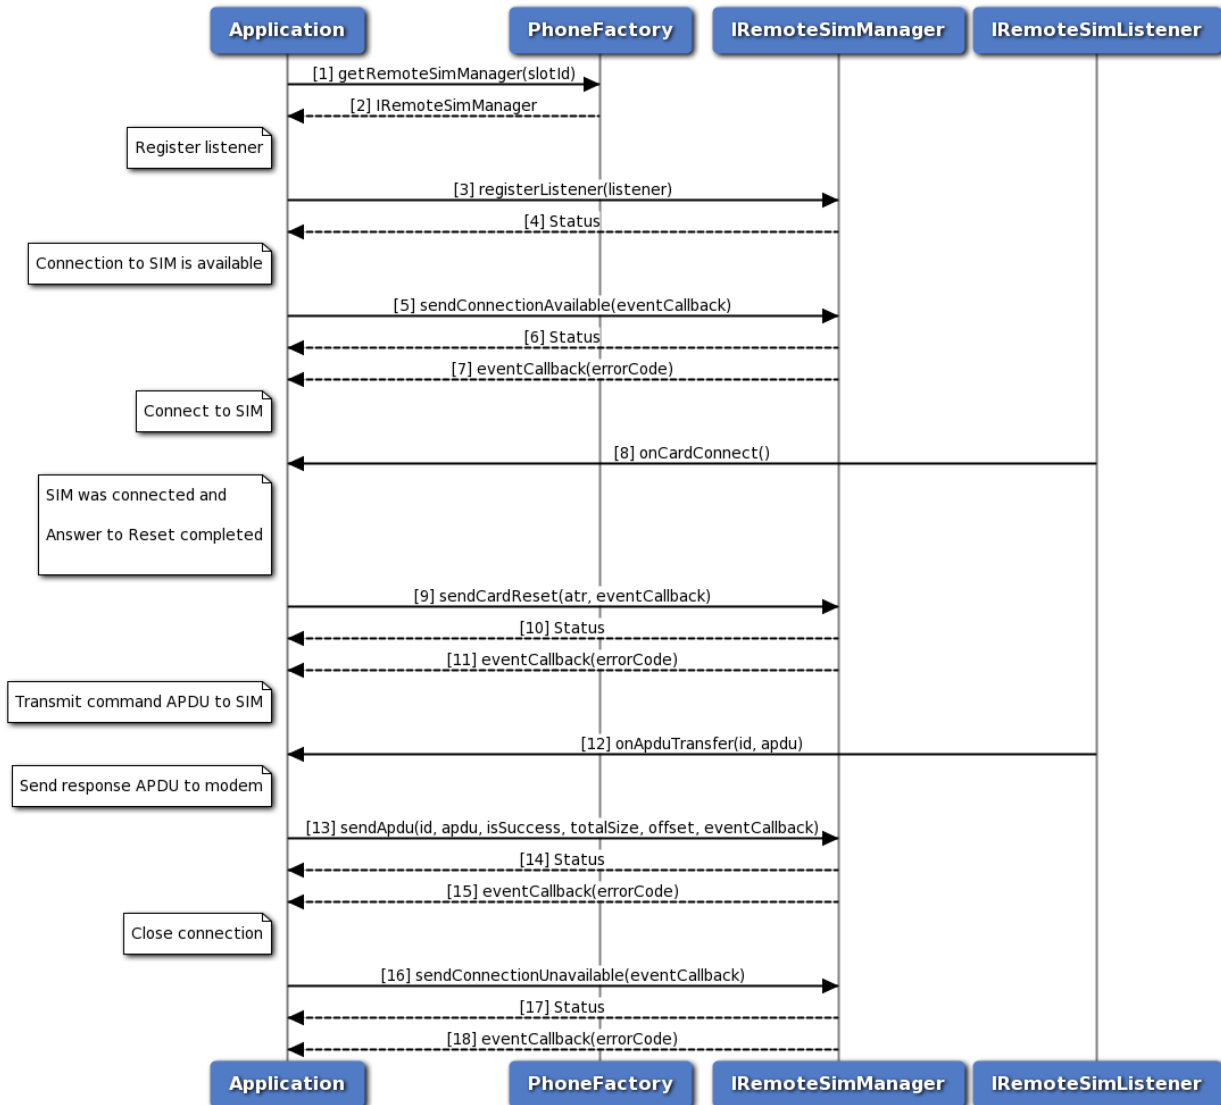


Figure 3-98 Remote SIM call flow

1. Application requests remote SIM manager object from phone factory, specifying a slot id.
2. Phone factory returns IRemoteSimManager object.
3. Application registers a listener to receive commands/messages from the modem to send to the SIM.
4. Status of register listener i.e. either SUCCESS or FAILED will be returned to the application.
5. Application sends a connection available message indicating that a SIM is available for use.
6. Status of send connection available i.e. either SUCCESS or FAILED will be returned to the application.
7. Optionally, the response to send connection available request can be received by the application.
8. Application will receive a card connect notification by the listener.

9. After the application successfully connects to the SIM and requests an AtR, it sends a card reset message with the AtR bytes.
10. Status of send card reset i.e. either SUCCESS or FAILED will be returned to the application.
11. Optionally, the response to send card reset request can be received by the application.
12. Application will receive an APDU transfer notification by the listener (with APDU message id).
13. After forwarding the APDU transfer to the SIM and receiving the response, application will send APDU response.
14. Status of send APDU i.e. either SUCCESS or FAILED will be returned to the application.
15. Optionally, the response to send APDU request can be received by the application.
16. To close the connection, application will send connection unavailable message.
17. Status of send connection unavailable i.e. either SUCCESS or FAILED will be returned to the application.
18. Optionally, the response to send connection unavailable can be received by the application.

3.12 Modem Config Call Flow

Modem Config manager provides APIs to request all configs from modem, load/delete modem config files from modem's storage, activate/deactivate a modem config file, get the active config details, set and get auto config selection mode. It also has listener interface for notifications for config activation update status. Application will get the Modem Config manager object from config factory. The application can register a listener for updates regarding modem config activation.

3.12.1 Call flow to load and activate a modem config file.

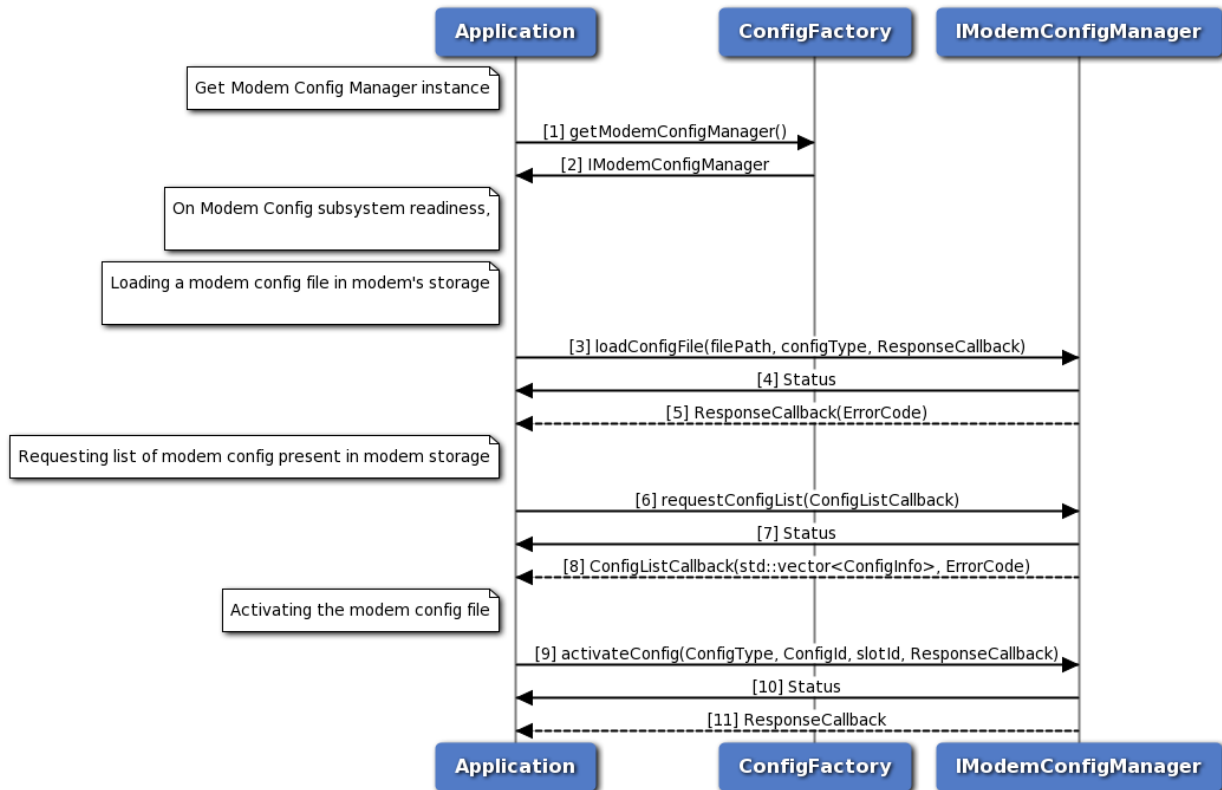


Figure 3-99 Modem Config load and activate call flow

1. Application requests modem config manager object from config factory.
2. Config factory returns IModemConfigManager object.
3. Application sends a request to load config file in modem's storage.
4. Application receives synchronous Status which indicates if the request to load config file was sent successfully.
5. Application is notified of the Status of the loadConfigFile request (either SUCCESS or FAILED) via the application-supplied callback.
6. Application sends a request to get list of all modem configs from modem's storage.
7. Application receives synchronous Status which indicates if the request to get config list was sent successfully.
8. Application is notified of the Status of the requestConfigList request (either SUCCESS or FAILED) via the application-supplied callback along with list of modem configs.
9. Application sends a request to activate config file.
10. Application receives synchronous Status which indicates if the request to activate config file was sent successfully.

- Application is notified of the Status of the activateConfig request (either SUCCESS or FAILED) via the application-supplied callback.

3.12.2 Call flow to deactivate and delete a modem config file.

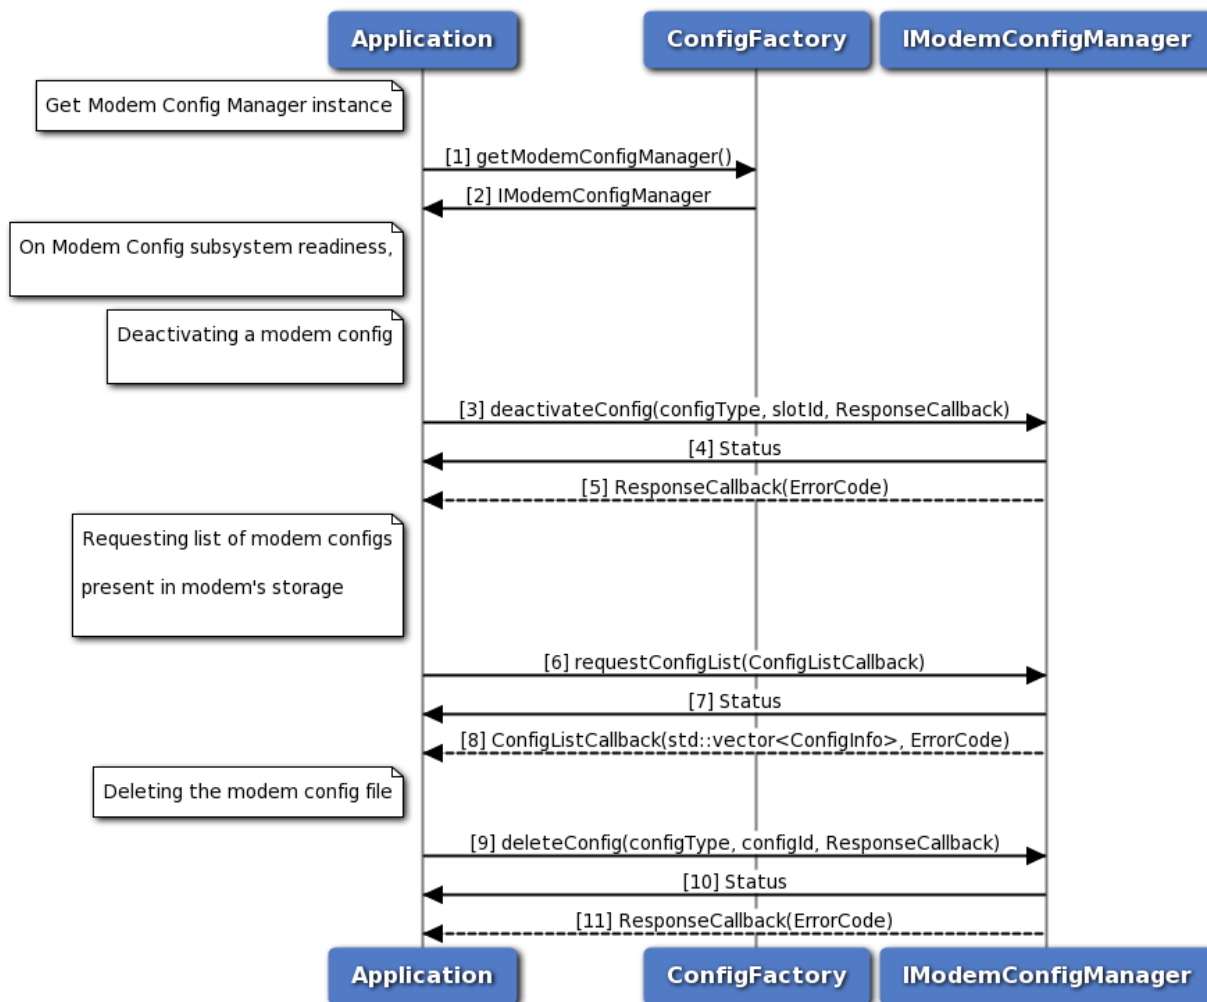


Figure 3-100 Modem Config deactivate and delete Call Flow

- Application requests modem config manager object from config factory.
- Config factory returns IModemConfigManager object.
- Application sends a request to deactivate config file.
- Application receives synchronous Status which indicates if the request to deactivate config file was sent successfully.
- Application is notified of the Status of the deactivateConfig request (either SUCCESS or FAILED) via the application-supplied callback.
- Application sends a request to get list of all modem configs from modem's storage.

7. Application receives synchronous Status which indicates if the request to get config list was sent successfully.
8. Application is notified of the Status of the requestConfigList request (either SUCCESS or FAILED) via the application-supplied callback along with list of modem configs.
9. Application sends a request to delete config file.
10. Application receives synchronous Status which indicates if the request to delete config file was sent successfully.
11. Application is notified of the Status of the deleteConfig request (either SUCCESS or FAILED) via the application-supplied callback.

3.12.3 Call flow to set and get config auto selection mode

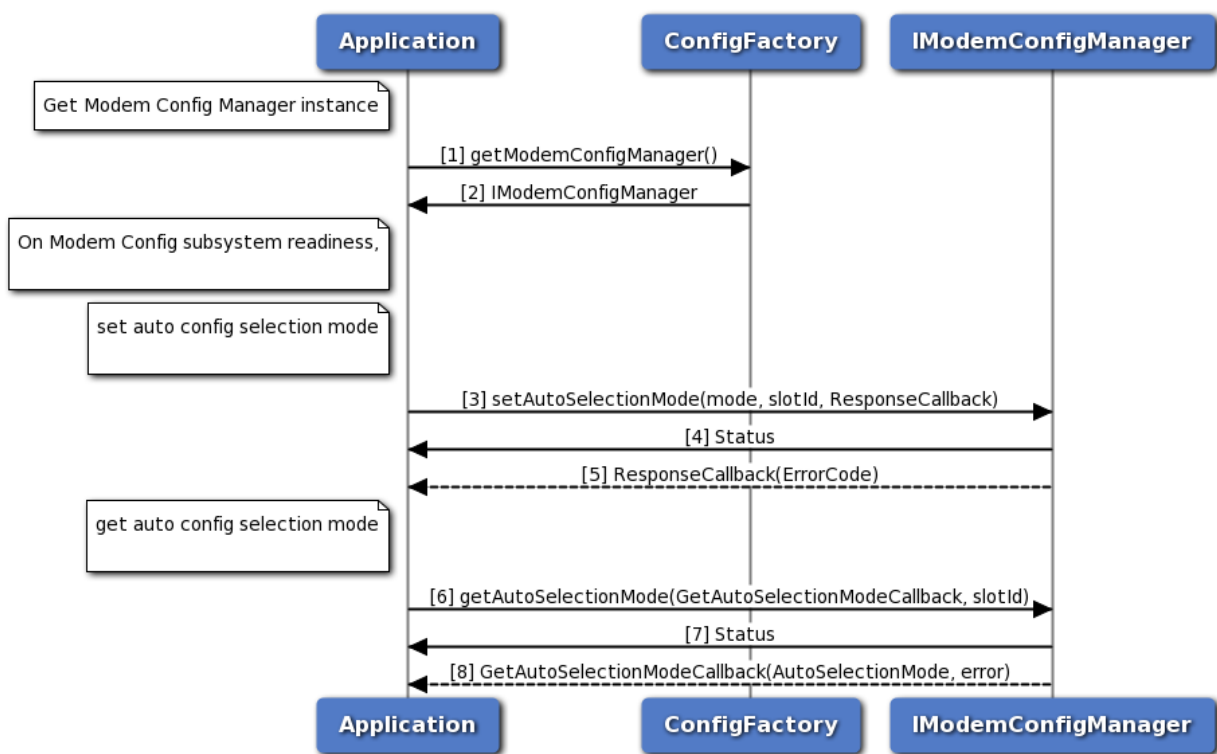


Figure 3-101 Modem Config get and set Auto Selection Mode Call Flow

1. Application requests modem config manager object from config factory.
2. Config factory returns IModemConfigManager object.
3. Application sends a request to set config auto selection mode.
4. Application receives synchronous Status which indicates if the request to set config auto selection mode was sent successfully.
5. Application is notified of the Status of the request setAutoSelectionMode (either SUCCESS or FAILED) via the application-supplied callback.

6. Application sends a request to get config auto selection mode.
7. Application receives synchronous Status which indicates if the request to get config auto selection mode was sent successfully.
8. Application is notified of the Status of the request setAutoSelectionMode (either SUCCESS or FAILED) via the application-supplied callback, along with mode and slot id.

3.13 Sensor

The sensor sub-system provides APIs to configure and acquire continuous stream of data from an underlying sensor, create multiple clients for a given sensor, each of which can have their own configuration (sampling rate, batch count) for data acquisition.

The sensor sub-system APIs are synchronous in nature.

3.13.1 Call flow for sensor sub-system start-up

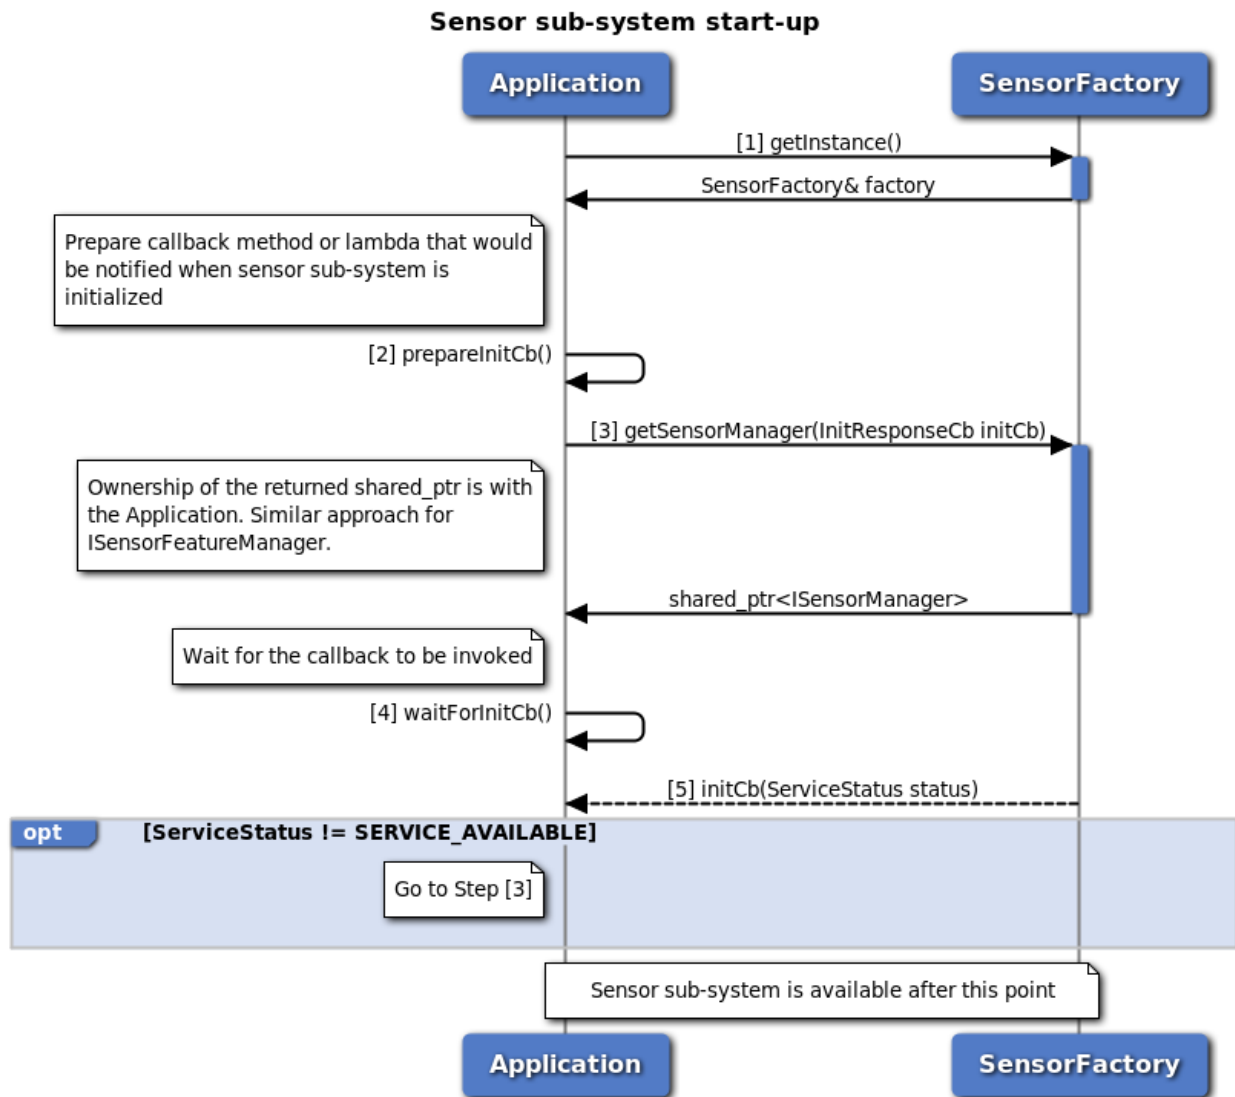


Figure 3-102 Sensor sub-system start-up call flow

1. Get the reference to the SensorFactory, with which we can further acquire other sensor sub-system objects.
2. Prepare an initialization callback method or lambda which will be called by the sensor sub-system once the initialization is complete.
3. Request for the SensorManager from SensorFactory and provide the initialization callback. Retain the SensorManager shared_ptr as long as necessary. SensorFactory does not hold on to the returned instance. If the received shared_ptr is released, SensorManager would be destroyed and requesting SensorFactory for SensorManager again would result in the creation of a new instance. Similar is the approach for SensorFeatureManager.
4. Wait for the initialization callback to be invoked.

- The sensor sub-system invokes the callback once the underlying sub-system and sensor framework is available for usage. If the service status is notified as SERVICE_FAILED, retry initialization starting with step (3). If the service status is notified as SERVICE_AVAILABLE, the sensor sub-system is ready for usage.

3.13.2 Call flow for sensor data acquisition

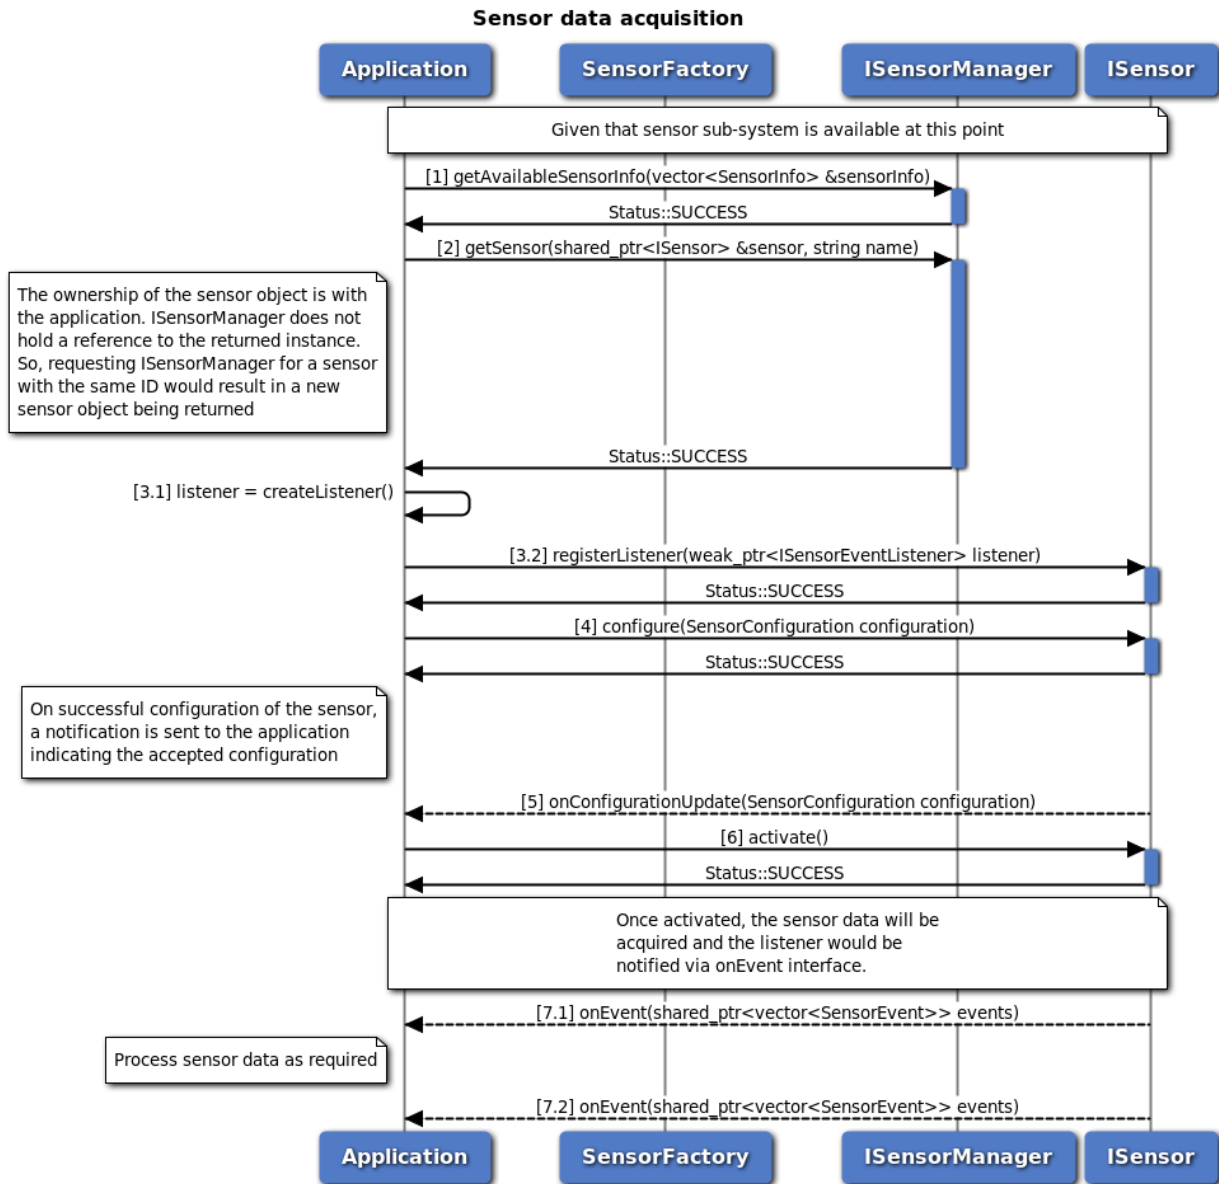


Figure 3-103 Sensor data acquisition call flow

The sensor sub-system should have been initialized successfully with SERVICE_AVAILABLE as a pre-requisite for sensor data acquisition and a valid SensorManager object is available.

- Get the information about available sensors from ISensorManager. The information will be provided in the sensorInfo parameter that would be passed by reference.

2. Given the information about different sensors, identify the required sensor (name of the sensor) using the provided attributes - type, name, vendor or required sampling frequency. Having identified the required sensor, request for the sensor object from ISensorManager with the required name of the sensor. If the request was successful, the provided reference to shared_ptr<ISensor> would be set by the ISensorManager which can be used to further configure and acquire data from the sensor. The ownership of the sensor object is with the application. SensorManager does not hold a reference to the returned instance. So, requesting ISensorManager for a sensor with the same name would result in a new sensor object being returned.
3. Create a listener of type ISensorEventListener which would receive notifications about updates to sensor configuration and sensor events. Register the created listener with the sensor object.
4. Create the desired sensor configuration. For continuous data acquisition samplingRate and batchCount are necessary attributes to be set in the configuration. Be sure to set the validityMask in the SensorConfiguration structure.
5. On successful configuration, a notification is sent to the registered listeners indicating the configuration set.
6. Activate the sensor for acquiring sensor data.
7. When the sensor is activated successfully, the sensor data is sent to the registered listeners.

3.13.3 Call flow for sensor reconfiguration

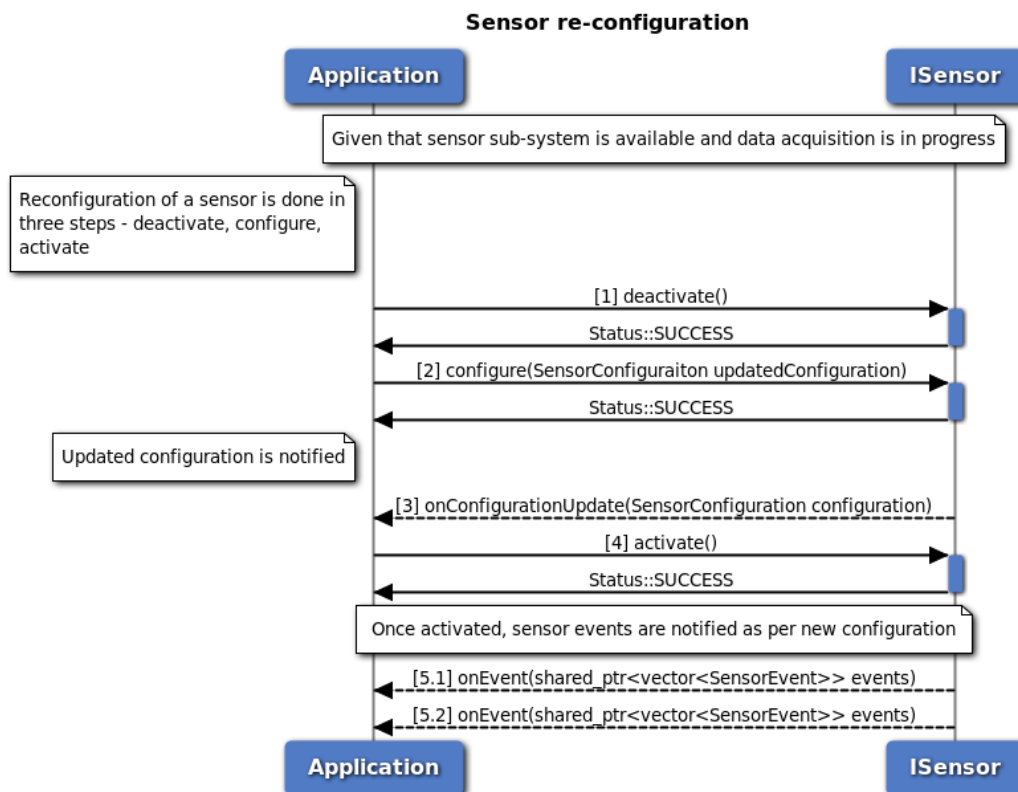


Figure 3-104 Sensor reconfiguration call flow

When the sensor sub-system has been initialized successfully with `SERVICE_AVAILABLE` and is already activated, reconfiguring the sensors involves the following steps.

1. Deactivate the sensor. This will stop the notifications about sensor events to the registered listeners.
2. Configure the sensor with the required attributes. Be sure to set the `validityMask` for the all required attributes in `SensorConfiguration`.
3. The underlying sub-system notifies the registered listeners about the new configuration set.
4. Activate the sensor.
5. When the sensor is activated successfully, the sensor data is sent to the registered listeners as per the new configuration.

3.13.4 Call flow for sensor sub-system cleanup

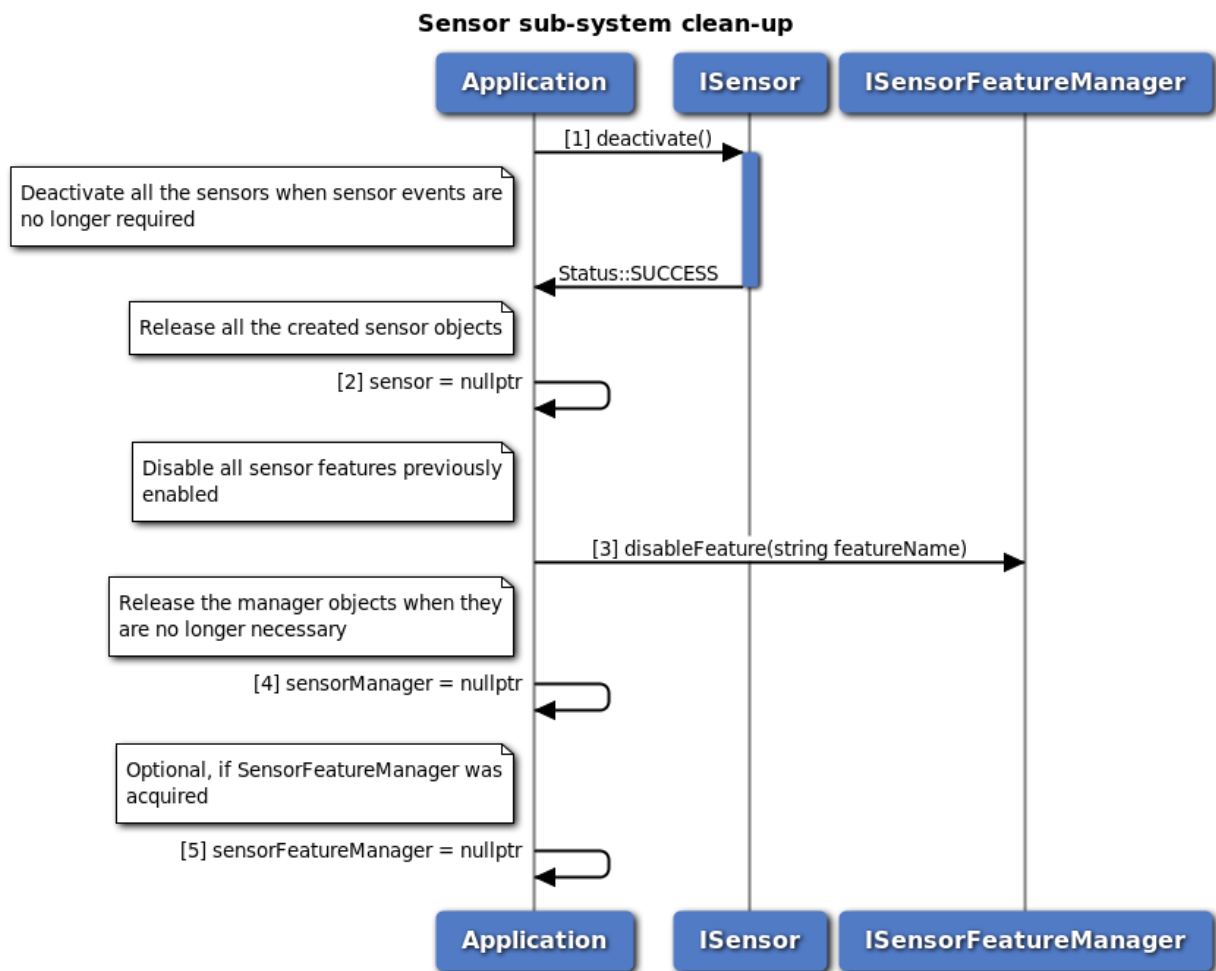


Figure 3-105 Sensor sub-system cleanup call flow

When the sensor sub-system has been initialized successfully with `SERVICE_AVAILABLE` and sensor objects have been created, the following steps ensure a cleanup of the sensor sub-system.

1. Deactivate all the sensors. With this, the registered listeners will no longer be notified of the sensor events.
2. Release all the sensor objects created by setting them to nullptr. Since the application owns the objects, this would result in all the sensor objects getting destroyed.
3. Disable all the sensor features that were previously enabled.
4. Release the instance of ISensorManager by setting it to nullptr. Since the application owns the object, this would result in the sensor manager getting destroyed.
5. Release the instance of ISensorFeatureManager by setting it to nullptr. Since the application owns the object, this would result in the sensor feature manager getting destroyed.

3.13.5 Call flow for sensor power control

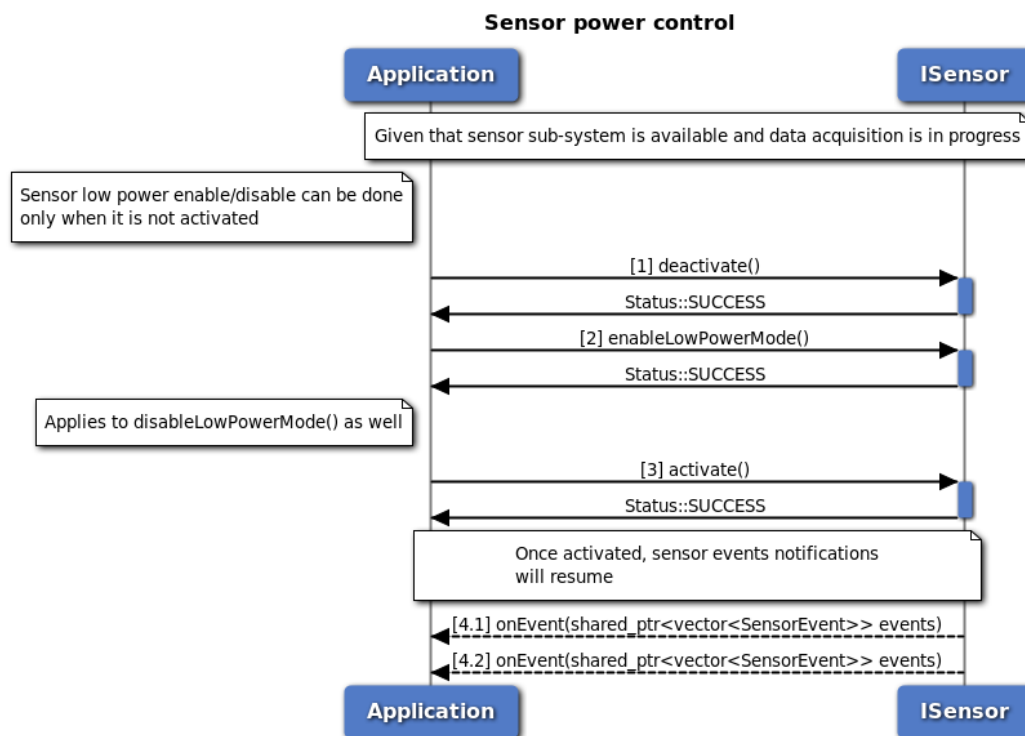


Figure 3-106 Sensor power control cleanup call flow

The below points are to be noted for sensor power control a) Power control is not offered by all sensor manufacturers. If the underlying hardware sensor does not support power control, the power control APIs fail. b) Enabling or disabling low power mode for the sensor is only possible when the sensor is not activated.

For achieving power control, the following steps are to be followed

1. Deactivate the sensor. This will stop the notifications about sensor events to the registered listeners.
2. Perform the required power control by enabling or disabling low power mode for the sensor.
3. Activate the sensor.

- When the sensor is activated successfully, the sensor data is sent to the registered listeners.

3.13.6 Call flow for sensor feature control

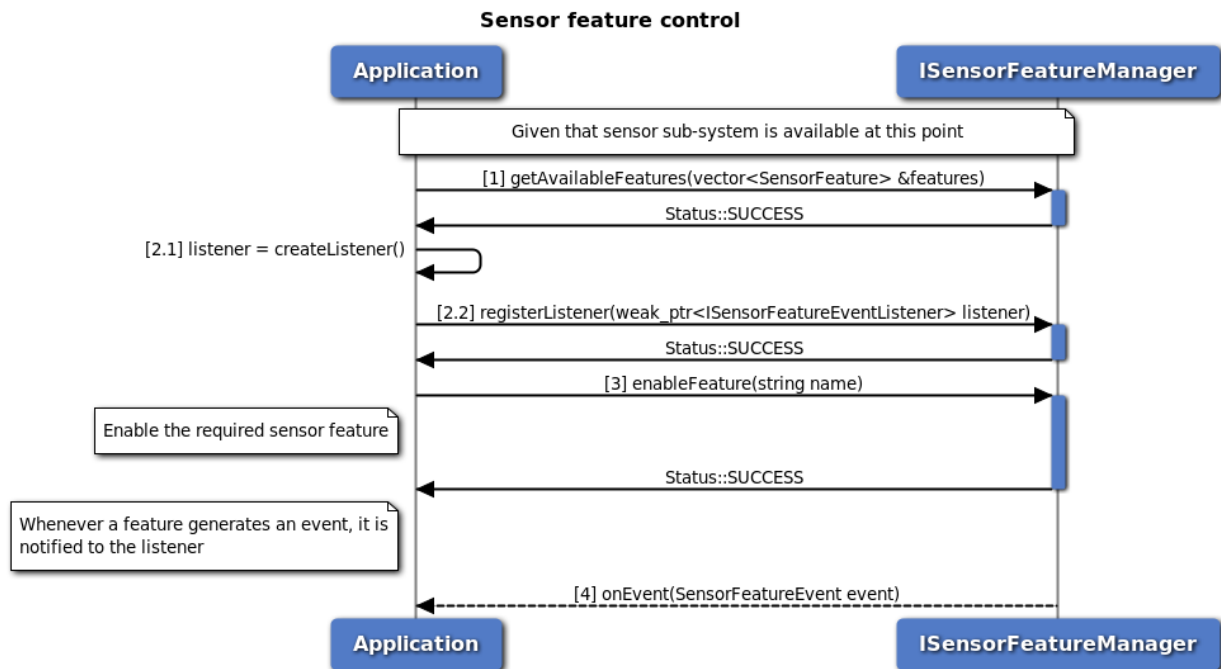


Figure 3-107 Sensor feature control cleanup call flow

The sensor sub-system offers certain features in addition to the data acquisition and these could be features offered by the underlying sensor hardware or the sensor software framework. If there are no features offered collectively, the sensor feature manager initialization would fail.

- Retrieve a list of features offered by the sensor sub-system and identify the required feature that needs to be enabled. If the feature that needs to be enabled is known, this step is optional.
- Create a sensor feature event listener, which would be notified of the different events that occur. Register this listener with the sensor feature manager.
- Enable the required feature.
- Once the feature is enabled and an event related to the feature occurs, the listener is notified.

3.14 Platform

The platform sub-system provides APIs to configure and control platform functionalities. This sub-system provides notifications about certain system related events, for instance filesystem events such as EFS restore and backup events.

3.14.1 Call flow for EFS restore notification registration and handling

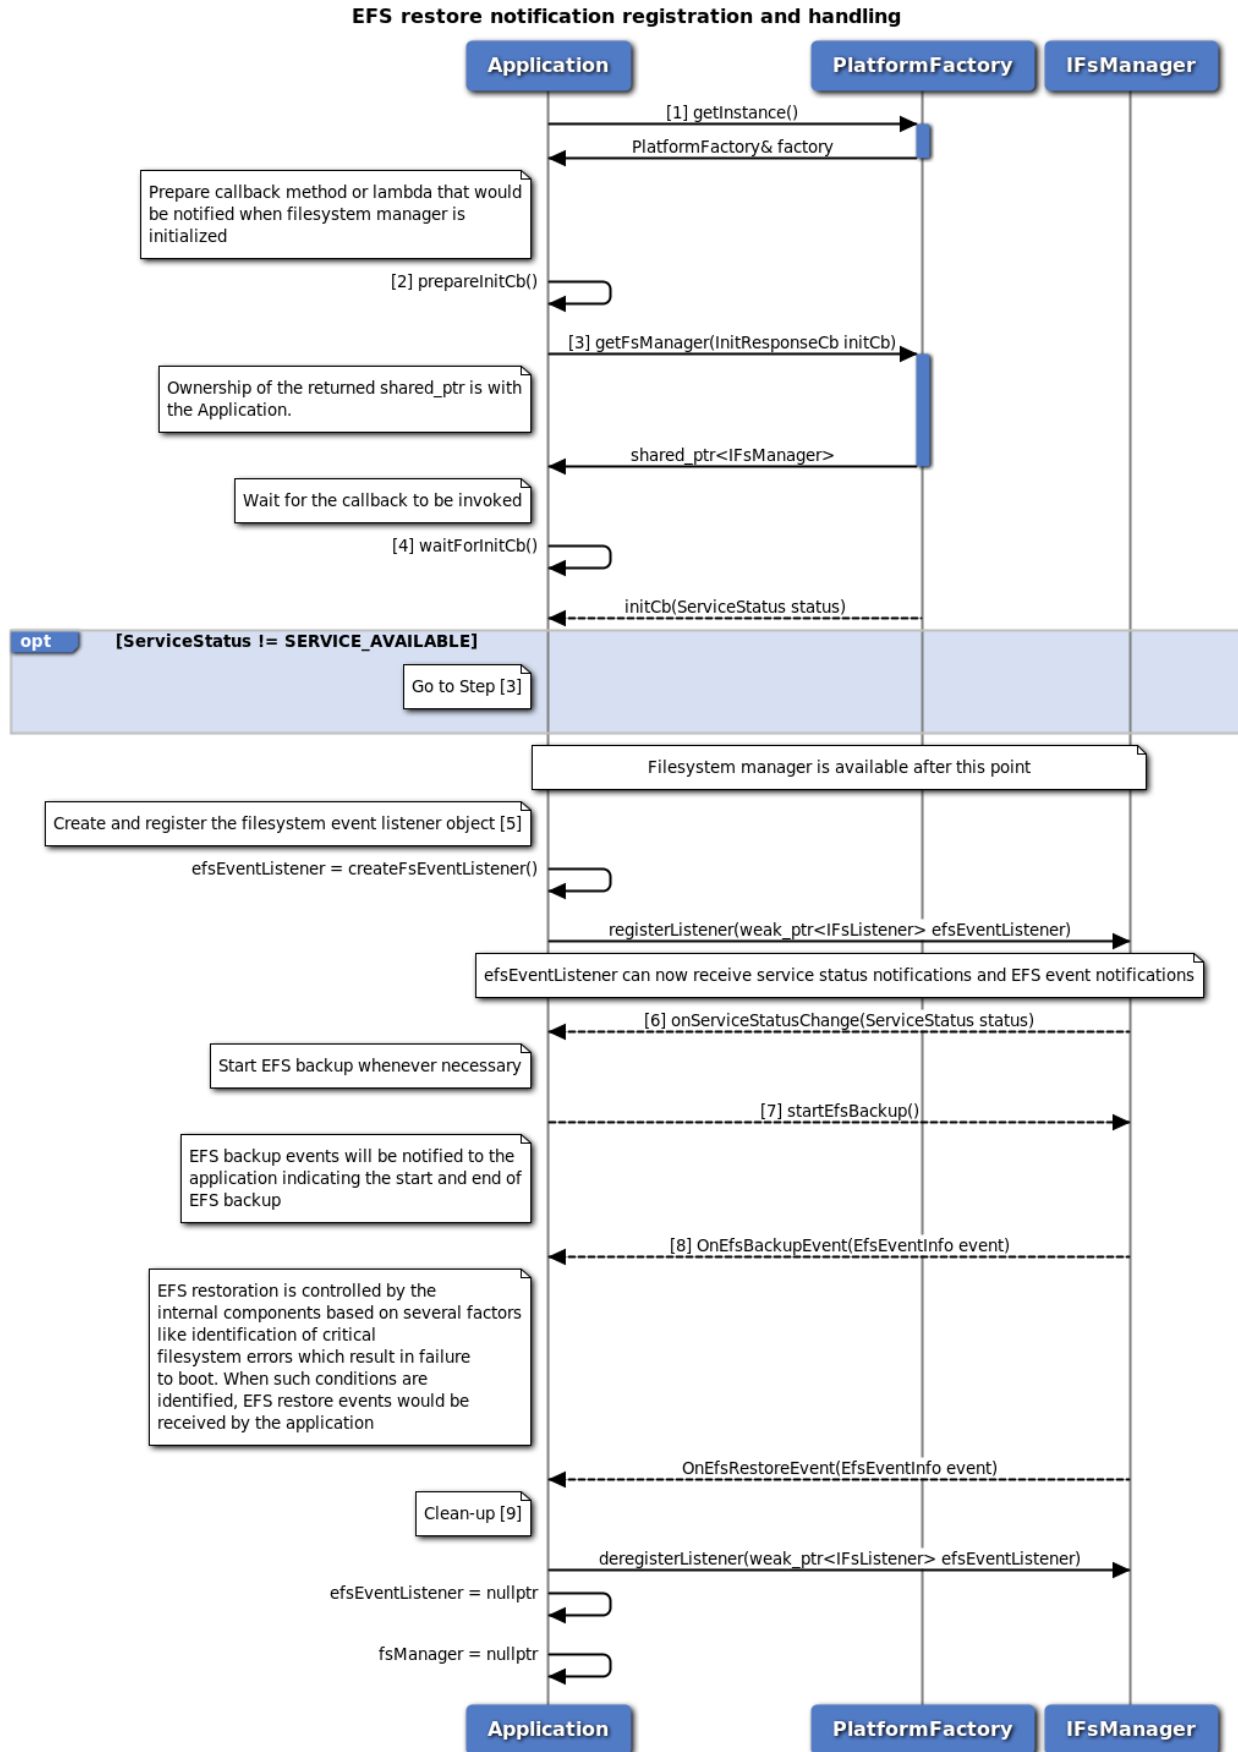


Figure 3-108 EFS restore notification registration and handling call flow

1. Get the reference to the PlatformFactory, with which we can further acquire other sub-system objects.
2. Prepare an initialization callback method or lambda which will be called by the platform sub-system once the initialization is complete.
3. Request for the IFsManager (filesystem manager) object from PlatformFactory and provide the initialization callback. Retain the IFsManager shared_ptr as long as necessary. PlatformFactory does not hold on to the returned instance. If the received shared_ptr is released, FsManager would be destroyed and requesting PlatformFactory for FsManager again would result in the creation of a new instance.
4. Wait for the initialization callback to be invoked. The platform sub-system invokes the callback once the underlying sub-system is available for usage. If the service status is notified as SERVICE_FAILED, retry initialization starting with step (3). If the service status is notified as SERVICE_AVAILABLE, the filesystem manager is ready for usage.
5. Create an listener object of type IFsListener and register with IFsManager for notifications. Once registered, the listener receives service status notifications and EFS restore event notifications.
6. If a service status notification with status SERVICE_UNAVAILABLE, the application should wait for service to be re-initialized and once done, SERVICE_AVAILABLE will be notified. If the service fails, SERVICE_FAILED is notified and the IFsManager object held is no longer usable. A new object of type IFsManager needs to be re-acquired from the PlatformFactory.
7. When the application finds it appropriate to trigger a EFS backup, startEfsBackup should be invoked, which would return immediately indicating the status of the request
8. Once EFS backup starts and completes, the notifications are sent out to the application. EFS restoration is controlled by the internal components based on several factors like identification of critical filesystem errors which result in failure to boot. When such conditions are identified, EFS restore events would be received by the application via the OnEfsRestoreEvent method and the application can make use of the information appropriately. The EFS restore notification also has information if the restore started or ended and if the restore was successful or a failure.
9. Once clean-up is necessary, deregister the registered listener, set all shared pointers to nullptr. This will make the underlying sub-system relinquish resources that are no longer necessary.

3.14.2 Call flow of control filesystem for ECALL operation

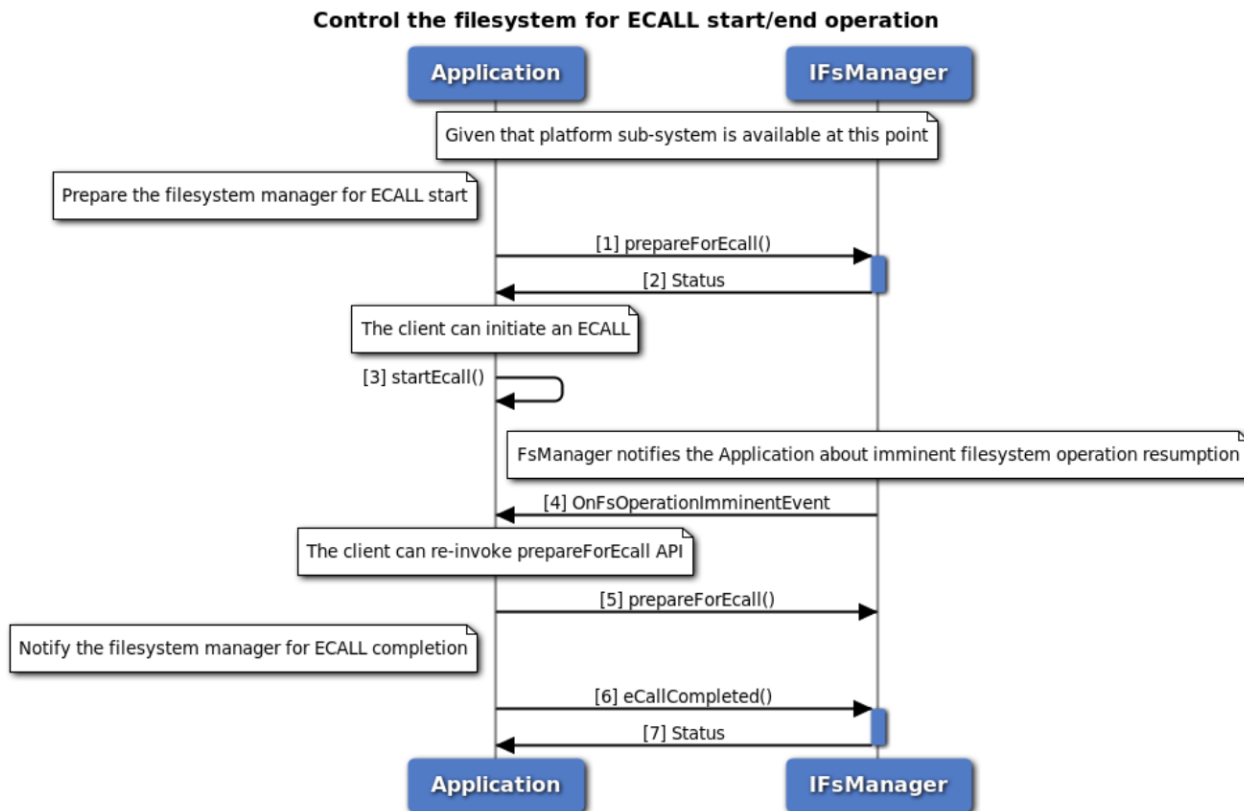


Figure 3-109 Control the filesystem for ECALL operation call flow

The platform sub-system should have been initialized successfully with SERVICE_AVAILABLE as a pre-requisite for any filesystem operations and a valid FilesystemManager object is available.

1. Before initiate an eCall, the application should prepare the filesystem for eCall operation, prepareForEcall should be invoked. If the status of this request fails, the client could re-invoke during an eCall ongoing.
2. The status of the request would return immediately indicating the preparation of the filesystem operation.
3. The client should start an eCall immediately even if the prepare for eCall request failed.
4. The filesystem manager shall notify the application when filesystem operation is about to resume.
5. If the client wants to suspend the filesystem operation to continue the eCall, they should invoke the prepareForEcall API.
6. Once an eCall completes, the client should notify eCall completion to the filesystem manager. eCallCompleted should be invoked.
7. The status of the request would return immediately indication the completion of the filesystem operation.

3.14.3 Call flow of control filesystem for OTA operation

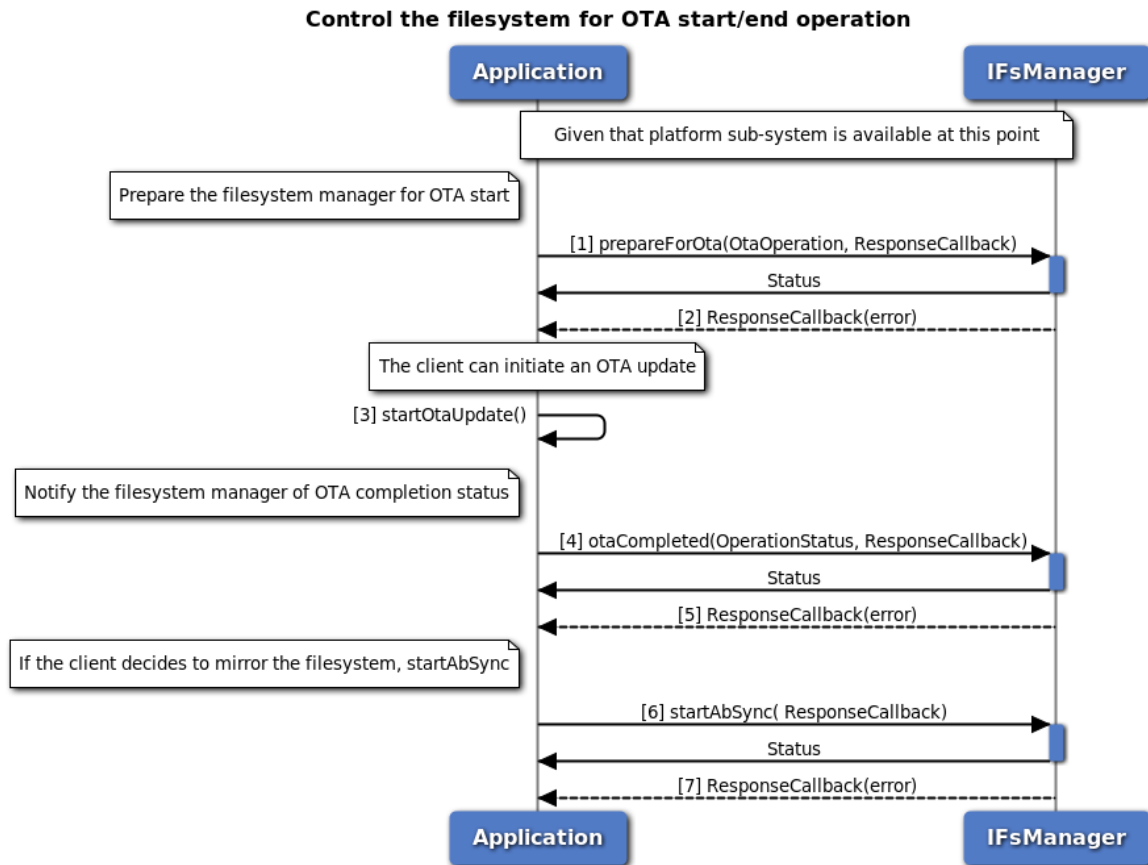


Figure 3-110 Control the filesystem for OTA operation call flow

The platform sub-system should have been initialized successfully with `SERVICE_AVAILABLE` as a pre-requisite for any filesystem operations and a valid `FileManager` object is available.

1. Before initiate an OTA update, the application should prepare the filesystem for the OTA operation, `prepareForOta` should be invoked, which would return immediately indicating the status of the request.
2. Once the filesystem has prepared for the OTA operation, the filesystem manager would invoke the callback which indicates the response of the API.
3. Once the filesystem has prepared for the OTA operation, the client could initiate an OTA update.
4. On OTA update completion, the client should notify the filesystem manager of the OTA completion status, `otaCompleted` should be invoked, which would return immediately indicating the status of the request.
5. The filesystem manager would intern update the OTA status, the callback would invoked which indicates the response of the API.
6. If the client decides to mirror the system, `startAbSync` should be invoked which would return immediately indicating the status of the request.

7. Once the filesystem partition sync operation complete, the filesystem manager would invoke the callback which indicates the response of the API.

4 Deprecated List

Global `telux::audio::IAudioManager::isSubsystemReady ()=0`

Use `getServiceStatus` API

Global `telux::audio::IAudioManager::onSubsystemReady ()=0`

Use `InitResponseCb` callback in factory API `getAudioManager`.

Global `telux::audio::StreamConfig::modemSubId`

Represents modem Subscription ID, Default set to 1. Applicable only for Voice Call

Global `telux::cv2x::ICv2xConfig::isReady ()=0`

use `getServiceStatus` instead

Global `telux::cv2x::ICv2xConfig::onReady ()=0`

the readiness can be notified via the callback passed to `Cv2xFactory::getCv2xConfig`.

Global `telux::cv2x::ICv2xListener::onStatusChanged (Cv2xStatus status)`

use `onStatusChanged(Cv2xStatusEx status)`

Global `telux::cv2x::ICv2xRadio::getCapabilities () const =0`

Use `requestCapabilities()` API

Global `telux::cv2x::ICv2xRadioListener::onSpsOffsetChanged (int spsId, MacDetails details)`

use `onSpsSchedulingChanged`

Global `telux::cv2x::ICv2xRadioListener::onStatusChanged (Cv2xStatusEx status)`

use `onStatusChanged` in `Cv2xListener`

Global `telux::cv2x::ICv2xRadioListener::onStatusChanged (Cv2xStatus status)`

use `onStatusChanged` in `Cv2xListener`

Global `telux::cv2x::ICv2xRadioManager::isReady ()=0`

use `getServiceStatus` instead

Global `telux::cv2x::ICv2xRadioManager::onReady ()=0`

the readiness can be notified via the callback passed to `Cv2xFactory::getCv2xRadioManager`.

Global `telux::cv2x::ICv2xRadioManager::requestCv2xStatus (RequestCv2xStatusCallback cb)=0`

use `requestCv2xStatus(RequestCv2xCalbackEx)`

Global `telux::cv2x::ICv2xRadioManager::updateConfiguration (const std::string &configFilePath, UpdateConfigurationCallback cb)=0`

Use `ICv2xConfig` instead

Global `telux::cv2x::RequestCv2xStatusCallback`

use `RequestCv2xStatusCallbackEx`

Global `telux::cv2x::TrustedUEInfo::timeConfidenceLevel`

Use `timeUncertainty` Time confidence level. Range from 0 to 127 with 0 being invalid/unavailable and 127 being the most confident.

Global `telux::data::IDataConnectionManager::isSubsystemReady ()=0`

Use `getServiceStatus` API.

Global `telux::data::IDataConnectionManager::onSubsystemReady ()=0`

Use `InitResponseCb` callback in factory API `getDataConnectionManager`.

Global `telux::data::IDataFilterManager::isReady ()=0`

Use `getServiceStatus` API.

Global `telux::data::IDataFilterManager::onReady ()=0`

Use `InitResponseCb` callback in factory API `getDataFilterManager`.

Global `telux::data::IDataProfileManager::isSubsystemReady ()=0`

Use `getServiceStatus` API.

Global `telux::data::IDataProfileManager::onSubsystemReady ()=0`

Use `InitResponseCb` callback in factory API `getDataProfileManager`.

Global `telux::data::net::IBridgeManager::isSubsystemReady ()=0`

Use `getServiceStatus` API.

Global `telux::data::net::IBridgeManager::onSubsystemReady ()=0`

Use `InitResponseCb` callback in factory API `getBridgeManager`.

Global `telux::data::net::IFirewallManager::isSubsystemReady ()=0`

Use `getServiceStatus` API.

Global `telux::data::net::IFirewallManager::onSubsystemReady ()=0`

Use `InitResponseCb` callback in factory API `getFirewallManager`.

Global `telux::data::net::INatManager::isSubsystemReady ()=0`

Use `getServiceStatus` API.

Global `telux::data::net::INatManager::onSubsystemReady ()=0`

Use `InitResponseCb` callback in factory API `getNatManager`.

Global [telux::data::net::ISocksManager::isSubsystemReady](#) ()=0

Use [getServiceStatus](#) API..

Global [telux::data::net::ISocksManager::onSubsystemReady](#) ()=0

Use [InitResponseCb](#) callback in factory API [getSocksManager](#).

Global [telux::data::net::IVlanManager::isSubsystemReady](#) ()=0

Use [getServiceStatus](#) API.

Global [telux::data::net::IVlanManager::onSubsystemReady](#) ()=0

Use [InitResponseCb](#) callback in factory API [getVlanManager](#).

Global [telux::loc::COMPASS](#)

constellation type is not supported.

Global [telux::loc::GNSS_LOC_SV_SYSTEM_COMPASS](#)

constellation type is not supported.

Global [telux::loc::IDgnssManager::isSubsystemReady](#) ()=0

use [getServiceStatus\(\)](#)

Global [telux::loc::IDgnssManager::onSubsystemReady](#) ()=0

The callback mechanism introduced in the [LocationFactory::getDgnssManager\(\)](#) API will provide the similar notification mechanism as [onSubsystemReady\(\)](#). This API will soon be removed from further releases.

Global [telux::loc::ILocationConfigurator::isSubsystemReady](#) ()=0

use [getServiceStatus\(\)](#)

Global [telux::loc::ILocationConfigurator::onSubsystemReady](#) ()=0

The callback mechanism introduced in the [LocationFactory::getLocationConfigurator\(\)](#) API will provide the similar notification mechanism as [onSubsystemReady\(\)](#). This API will soon be removed from further releases.

Global [telux::loc::ILocationManager::isSubsystemReady](#) ()=0

use [getServiceStatus\(\)](#)

Global [telux::loc::ILocationManager::onSubsystemReady](#) ()=0

The callback mechanism introduced in the [LocationFactory::getLocationManager\(\)](#) API will provide the similar notification mechanism as [onSubsystemReady\(\)](#). This API will soon be removed from further releases.

Global [telux::loc::LEVER_ARM_TYPE_VEPP_IMU_TO_GNSS](#)

enum type is not supported.

Global [telux::power::ITcuActivityManager::isReady](#) ()=0

Use [ITcuActivityManager::getServiceStatus\(\)](#) API.
[telux::power::ITcuActivityManager::getServiceStatus](#)

Global `telux::power::ITcuActivityManager::onReady ()=0`

Use `InitResponseCb` in `PowerFactory::getTcuActivityManager` instead, to get notified about subsystem readiness `telux::power::PowerFactory::getTcuActivityManager`

Global `telux::tel::GsmSignalStrengthInfo::getGsmBitErrorRate () const`

This API not being supported

Global `telux::tel::GsmSignalStrengthInfo::getTimingAdvance ()`

This API not being supported

Global `telux::tel::ICallListener::onECallMsdTransmissionStatus (int phoneId, telux::common::← ErrorCode errorCode)`

Use another `onECallMsdTransmissionStatus()` API with argument `ECallMsdTransmissionStatus`

Global `telux::tel::INetworkSelectionManager::isSubsystemReady ()=0`

Use `INetworkSelectionManager::getServiceStatus()` API.

Global `telux::tel::INetworkSelectionManager::onSubsystemReady ()=0`

Use `InitResponseCb` in `PhoneFactory::getNetworkSelectionManager` instead, to get notified about subsystem readiness.

Global `telux::tel::INetworkSelectionManager::performNetworkScan (NetworkScanCallback callback)=0`

Use `INetworkSelectionManager::performNetworkScan(common::ResponseCallback callback)` API instead

Global `telux::tel::IPhone::getRadioState ()=0`

Use `IPhoneManager::requestOperatingMode()` API instead

Global `telux::tel::IPhone::getServiceState ()=0`

Use `requestVoiceServiceState()` API

Global `telux::tel::IPhone::requestVoiceRadioTechnology (VoiceRadioTechResponseCb callback)=0`

Use `requestVoiceServiceState()` API to get `VoiceServiceInfo` which has API to get radio technology i.e `VoiceServiceInfo::getRadioTechnology()`

Global `telux::tel::IPhone::setRadioPower (bool enable, std::shared_ptr< telux::common::I← CommandResponseCallback > callback=nullptr)=0`

Use `IPhoneManager::setOperatingMode()` API instead

Global `telux::tel::IPhoneListener::onRadioStateChanged (int phoneId, RadioState radioState)`

Use `onOperatingModeChanged()` API instead

Global `telux::tel::IPhoneListener::onServiceStateChanged (int phoneId, ServiceState state)`

Use `onVoiceServiceStateChanged()` listener

Global [telux::tel::IPhoneListener::onVoiceRadioTechnologyChanged](#) (int phoneId, RadioTechnology radioTech)

Use [onVoiceServiceStateChanged\(\)](#) API instead

Global [telux::tel::ISapCardManager::getState](#) (SapState &sapState)=0

Use [requestSapState\(\)](#) API below to get SAP state

Global [telux::tel::IServingSystemManager::isSubsystemReady](#) ()=0

Use [IServingSystemManager::getServiceStatus\(\)](#) API.

Global [telux::tel::IServingSystemManager::onSubsystemReady](#) ()=0

Use [InitResponseCb](#) in [PhoneFactory::getServingSystemManager](#) instead, to get notified about subsystem readiness.

Global [telux::tel::ISubscription::getMcc](#) ()=0

Use [telux::tel::ISubscription::getMobileCountryCode\(\)](#) API instead

Global [telux::tel::ISubscription::getMnc](#) ()=0

Use [telux::tel::ISubscription::getMobileNetworkCode\(\)](#) API instead

Global [telux::tel::LteSignalStrengthInfo::getLteChannelQualityIndicator](#) () const

This API not being supported

Global [telux::tel::LteSignalStrengthInfo::getTimingAdvance](#) () const

This API not being supported

Global [telux::tel::ServiceState](#)

Use [requestVoiceServiceState\(\)](#) API or to know the status of phone

Global [telux::tel::VoiceRadioTechResponseCb](#)

Use [IVoiceServiceStateCallback](#) instead

Global [telux::tel::WcdmaSignalStrengthInfo::getBitErrorRate](#) () const

This API not being supported

Global [v2x_event_t](#)

This enum type is deprecated, please consider use [v2x_radio_status_ex_t](#) instead.

Global [v2x_radio_calls_t::v2x_radio_status_listener](#) (v2x_event_t event, void *context)

This callback is deprecated, please consider use [v2x_ext_radio_status_listener](#) instead.

Global [v2x_radio_init_v2](#) (traffic_ip_type_t ip_type, v2x_concurrency_sel_t mode, v2x_radio_calls_t *callbacks_p, void *ctx_p)

This API has been deprecated. Please use [v2x_radio_init_v3\(\)](#) instead.

5 Interfaces

5.1 Telematics SDK APIs

- [tel](#)
- [loc](#)
- [common](#)
- [audio](#)
- [therm](#)
- [power](#)
- [config](#)
- [sensor](#)
- [platform](#)
- [data](#)
- [cv2x](#)

5.2 tel

- [Phone Factory](#)
- [Phone](#)
- [Call](#)
- [SMS](#)
- [SIM Card Services](#)
- [Cell Broadcast](#)
- [IMS Settings](#)
- [Multi SIM](#)
- [Subscription Management](#)
- [Network Selection](#)
- [Serving System](#)
- [Remote SIM Provisioning](#)
- [Remote SIM](#)

This section contains APIs related to Telephony.

5.3 Phone Factory

This section contains APIs related to [PhoneFactory](#).

5.3.1 Data Structure Documentation

5.3.1.1 class telux::tel::PhoneFactory

[PhoneFactory](#) is the central factory to create all Telephony SDK Classes and services.

Public member functions

- `std::shared_ptr< IPhoneManager > getPhoneManager ()`
- `std::shared_ptr< ISmsManager > getSmsManager (int phoneId=DEFAULT_PHONE_ID, telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< ICallManager > getCallManager (telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< ICardManager > getCardManager ()`
- `std::shared_ptr< ISapCardManager > getSapCardManager (int slotId=DEFAULT_SLOT_ID)`
- `std::shared_ptr< ISubscriptionManager > getSubscriptionManager ()`
- `std::shared_ptr< IServingSystemManager > getServingSystemManager (int slotId=DEFAULT_SLOT_ID, telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< INetworkSelectionManager > getNetworkSelectionManager (int slotId=DEFAULT_SLOT_ID, telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< IRemoteSimManager > getRemoteSimManager (int slotId=DEFAULT_SLOT_ID)`
- `std::shared_ptr< IMultiSimManager > getMultiSimManager ()`
- `std::shared_ptr< ICellBroadcastManager > getCellBroadcastManager (SlotId slotId=DEFAULT_SLOT_ID)`
- `std::shared_ptr< ISimProfileManager > getSimProfileManager ()`
- `std::shared_ptr< IImSettingsManager > getImSettingsManager (telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< IHttpTransactionManager > getHttpTransactionManager (telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< IImServingSystemManager > getImServingSystemManager (SlotId slotId, telux::common::InitResponseCb callback=nullptr)`

Static Public Member Functions

- `static PhoneFactory & getInstance ()`

5.3.1.1.1 Member Function Documentation

5.3.1.1.1.1 static PhoneFactory& telux::tel::PhoneFactory::getInstance () [static]

Get Phone Factory instance.

5.3.1.1.1.2 std::shared_ptr<IPhoneManager> telux::tel::PhoneFactory::getPhoneManager ()

Get Phone Manager instance. Phone Manager is the main entry point into the telephony subsystem.

Returns

Pointer of [IPhoneManager](#) object.

5.3.1.1.1.3 std::shared_ptr<ISmsManager> telux::tel::PhoneFactory::getSmsManager (int *phoneId* = *DEFAULT_PHONE_ID*, telux::common::InitResponseCb *callback* = *nullptr*)

Get SMS Manager instance for Phone ID. SMSManager used to send and receive SMS messages.

Parameters

| | | |
|----|-----------------|---|
| in | <i>phoneId</i> | Unique identifier for the phone |
| in | <i>callback</i> | Optional callback pointer to get response of SMS Manager initialization. It will be invoked when initialization is either succeeded or failed. In case of failure response, the provided SMS Manager object will no more be a valid object. |

Returns

Pointer of [ISmsManager](#) object or nullptr in case of failure.

5.3.1.1.1.4 std::shared_ptr<ICallManager> telux::tel::PhoneFactory::getCallManager (telux↔::common::InitResponseCb *callback* = *nullptr*)

Get Call Manager instance to determine state of active calls and perform other functions like dial, conference, swap call.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Optional callback pointer to get response of CallManager initialization. It will be invoked when initialization is either succeeded or failed. In case of failure response, the provided Call Manager object will no more be a valid object. |
|----|-----------------|--|

Returns

Pointer of [ICallManager](#) object or nullptr in case of failure.

5.3.1.1.1.5 `std::shared_ptr<ICardManager> telux::tel::PhoneFactory::getCardManager ()`

Get Card Manager instance to handle services such as transmitting APDU, SIM IO and more.

Returns

Pointer of [ICardManager](#) object.

5.3.1.1.1.6 `std::shared_ptr<ISapCardManager> telux::tel::PhoneFactory::getSapCardManager (int slotId = DEFAULT_SLOT_ID)`

Get Sap Card Manager instance associated with the provided slot id. This object will handle services in SAP mode such as APDU, SIM Power On/Off and SIM reset.

Parameters

| | | |
|----|---------------|------------------------------------|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
|----|---------------|------------------------------------|

Returns

Pointer of [ISapCardManager](#) object.

5.3.1.1.1.7 `std::shared_ptr<ISubscriptionManager> telux::tel::PhoneFactory::getSubscriptionManager ()`

Get Subscription Manager instance to get device subscription details

Returns

Pointer of [ISubscriptionManager](#) object.

5.3.1.1.1.8 `std::shared_ptr<IServingSystemManager> telux::tel::PhoneFactory::getServingSystemManager (int slotId = DEFAULT_SLOT_ID, telux::common::InitResponseCb callback = nullptr)`

Get Serving System Manager instance to get and set preferred network type.

Parameters

| | | |
|----|-----------------|--|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
| in | <i>callback</i> | Optional callback pointer to get the response of the manager initialisation. |

Returns

Pointer of [IServingSystemManager](#) object.

5.3.1.1.1.9 `std::shared_ptr<INetworkSelectionManager> telux::tel::PhoneFactory::getNetworkSelectionManager (int slotId = DEFAULT_SLOT_ID, telux::common::InitResponseCb callback = nullptr)`

Get Network Selection Manager instance to get and set selection mode, get and set preferred networks and scan available networks.

Parameters

| | | |
|----|-----------------|--|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
| in | <i>callback</i> | Optional callback pointer to get the response of the manager initialisation. |

Returns

Pointer of [INetworkSelectionManager](#) object.

5.3.1.1.1.10 `std::shared_ptr<IRemoteSimManager> telux::tel::PhoneFactory::getRemoteSimManager (int slotId = DEFAULT_SLOT_ID)`

Get Remote SIM Manager instance to handle services like exchanging APDU, SIM Power On/Off, etc.

Parameters

| | | |
|----|---------------|------------------------------------|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
|----|---------------|------------------------------------|

Returns

Pointer of [IRemoteSimManager](#) object.

5.3.1.1.1.11 `std::shared_ptr<IMultiSimManager> telux::tel::PhoneFactory::getMultiSimManager ()`

Get Multi SIM Manager instance to handle operations like high capability switch.

Returns

Pointer of [IMultiSimManager](#) object.

5.3.1.1.1.12 `std::shared_ptr<ICellBroadcastManager> telux::tel::PhoneFactory::getCellBroadcastManager (SlotId slotId = DEFAULT_SLOT_ID)`

Get CellBroadcast Manager instance for Slot ID. CellBroadcast manager used to receive broadcast messages and configure broadcast messages.

Parameters

| | | |
|----|---------------|-----------------------|
| in | <i>SlotId</i> | telux::common::SlotId |
|----|---------------|-----------------------|

Returns

Pointer of [ICellBroadcastManager](#) object or nullptr in case of failure.

5.3.1.1.1.13 std::shared_ptr<ISimProfileManager> telux::tel::PhoneFactory::getSimProfileManager ()

Get SimProfileManager. SimProfileManager is a primary interface for remote eUICC(eSIM) provisioning and local profile assistance.

Returns

Pointer of [ISimProfileManager](#) object or nullptr in case of failure.

5.3.1.1.1.14 std::shared_ptr<IImSettingsManager> telux::tel::PhoneFactory::getImSettingsManager (telux::common::InitResponseCb callback = nullptr)

Get Ims Settings Manager instance to handle IMS service enable configuration parameters like enable/disable voIMS.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Optional callback pointer to get the response of the manager initialisation. |
|----|-----------------|--|

Returns

Pointer of [IImSettingsManager](#) object.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.3.1.1.1.15 std::shared_ptr<IHttpTransactionManager> telux::tel::PhoneFactory::getHttpTransactionManager (telux::common::InitResponseCb callback = nullptr)

Get HttpTransactionManager instance to handle HTTP related requests from the modem for SIM profile update related operations.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Optional callback pointer to get the response of the manager initialisation. |
|----|-----------------|--|

Returns

Pointer of [IHttpTransactionManager](#) object or nullptr in case of failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

```
5.3.1.1.1.16 std::shared_ptr<ImsServingSystemManager> telux::tel::PhoneFactory::getImsServingSystemManager ( SlotId slotId, telux::common::InitResponseCb callback = nullptr )
```

Get IMS Serving System Manager instance to query IMS registration status

Returns

Pointer of [ImsServingSystemManager](#) object or nullptr in case of failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4 Phone

This section contains APIs related to Phone, Signal Strength and interfaces to register global listeners to event notifications.

5.4.1 Data Structure Documentation

5.4.1.1 class telux::tel::GsmCellIdentity

[GsmCellIdentity](#) class provides methods to get mobile country code, mobile network code, location area code, cell identity, absolute RF channel number and base station identity code.

Public member functions

- [GsmCellIdentity](#) (int mcc, int mnc, int lac, int cid, int arfcn, int bsic)
- const int [getMcc](#) ()
- const int [getMnc](#) ()
- const int [getLac](#) ()
- const int [getIdentity](#) ()
- const int [getArfcn](#) ()
- const int [getBaseStationIdentityCode](#) ()

5.4.1.1.1 Constructors and Destructors

5.4.1.1.1 `telux::tel::GsmCellIdentity::GsmCellIdentity (int mcc, int mnc, int lac, int cid, int arfcn, int bsic)`

5.4.1.1.2 Member Function Documentation

5.4.1.1.2.1 `const int telux::tel::GsmCellIdentity::getMcc ()`

Get the Mobile Country Code.

Returns

Mcc value.

5.4.1.1.2.2 `const int telux::tel::GsmCellIdentity::getMnc ()`

Get the Mobile Network Code.

Returns

Mnc value.

5.4.1.1.2.3 `const int telux::tel::GsmCellIdentity::getLac ()`

Get the location area code.

Returns

Location area code.

5.4.1.1.2.4 `const int telux::tel::GsmCellIdentity::getIdentity ()`

Get the cell identity.

Returns

Cell identity.

5.4.1.1.2.5 `const int telux::tel::GsmCellIdentity::getArfcn ()`

Get the absolute RF channel number.

Returns

Absolute RF channel number.

5.4.1.1.2.6 `const int telux::tel::GsmCellIdentity::getBaseStationIdentityCode ()`

Get the base station identity code.

Returns

Base station identity code.

5.4.1.2 `class telux::tel::CdmaCellIdentity`

[CdmaCellIdentity](#) class provides methods to get the network identifier, system identifier, base station identifier, longitude and latitude.

Public member functions

- [CdmaCellIdentity](#) (int networkId, int systemId, int baseStationId, int longitude, int latitude)
- `const int getNid ()`
- `const int getSid ()`
- `const int getBaseStationId ()`
- `const int getLongitude ()`
- `const int getLatitude ()`

5.4.1.2.1 Constructors and Destructors

5.4.1.2.1.1 `telux::tel::CdmaCellIdentity::CdmaCellIdentity (int networkId, int systemId, int baseStationId, int longitude, int latitude)`

5.4.1.2.2 Member Function Documentation

5.4.1.2.2.1 `const int telux::tel::CdmaCellIdentity::getNid ()`

Get the network identifier.

Returns

Network identifier.

5.4.1.2.2.2 `const int telux::tel::CdmaCellIdentity::getSid ()`

Get the system identifier.

Returns

System identifier.

5.4.1.2.2.3 `const int telux::tel::CdmaCellIdentity::getBaseStationId ()`

Get the base station identifier.

Returns

Base station identifier.

5.4.1.2.2.4 `const int telux::tel::CdmaCellIdentity::getLongitude ()`

Get the longitude.

Returns

Longitude.

5.4.1.2.2.5 `const int telux::tel::CdmaCellIdentity::getLatitude ()`

Get the latitude.

Returns

Latitude.

5.4.1.3 class telux::tel::LteCellIdentity

[LteCellIdentity](#) class provides methods to get the mobile country code, mobile network code, cell identity, physical cell identifier, tracking area code and absolute Rf channel number.

Public member functions

- [LteCellIdentity](#) (int mcc, int mnc, int ci, int pci, int tac, int earfcn)
- const int [getMcc](#) ()
- const int [getMnc](#) ()
- const int [getIdentity](#) ()
- const int [getPhysicalCellId](#) ()
- const int [getTrackingAreaCode](#) ()
- const int [getEarfcn](#) ()

5.4.1.3.1 Constructors and Destructors

5.4.1.3.1.1 `telux::tel::LteCellIdentity::LteCellIdentity (int mcc, int mnc, int ci, int pci, int tac, int earfcn)`

5.4.1.3.2 Member Function Documentation

5.4.1.3.2.1 `const int telux::tel::LteCellIdentity::getMcc ()`

Get the Mobile Country Code.

Returns

Mcc value.

5.4.1.3.2.2 `const int telux::tel::LteCellIdentity::getMnc ()`

Get the Mobile Network Code.

Returns

Mnc value.

5.4.1.3.2.3 `const int telux::tel::LteCellIdentity::getIdentity ()`

Get the cell identity.

Returns

Cell identity.

5.4.1.3.2.4 `const int telux::tel::LteCellIdentity::getPhysicalCellId ()`

Get the physical cell identifier.

Returns

Physical cell identifier.

5.4.1.3.2.5 `const int telux::tel::LteCellIdentity::getTrackingAreaCode ()`

Get the tracking area code.

Returns

Tracking area code.

5.4.1.3.2.6 `const int telux::tel::LteCellIdentity::getEarfcn ()`

Get the absolute RF channel number.

Returns

Absolute RF channel number.

5.4.1.4 `class telux::tel::WcdmaCellIdentity`

[WcdmaCellIdentity](#) class provides methods to get the mobile country code, mobile network code, location area code, cell identifier, primary scrambling code and absolute RF channel number.

Public member functions

- [WcdmaCellIdentity](#) (int mcc, int mnc, int lac, int cid, int psc, int uarfcn)
- `const int getMcc ()`
- `const int getMnc ()`
- `const int getLac ()`
- `const int getIdentity ()`
- `const int getPrimaryScramblingCode ()`
- `const int getUarfcn ()`

5.4.1.4.1 Constructors and Destructors

5.4.1.4.1.1 `telux::tel::WcdmaCellIdentity::WcdmaCellIdentity (int mcc, int mnc, int lac, int cid, int psc, int uarfcn)`

5.4.1.4.2 Member Function Documentation

5.4.1.4.2.1 `const int telx::tel::WcdmaCellIdentity::getMcc ()`

Get the Mobile Country Code.

Returns

Mcc value.

5.4.1.4.2.2 `const int telx::tel::WcdmaCellIdentity::getMnc ()`

Get the Mobile Network Code.

Returns

Mnc value.

5.4.1.4.2.3 `const int telx::tel::WcdmaCellIdentity::getLac ()`

Get the location area code.

Returns

Location area code.

5.4.1.4.2.4 `const int telx::tel::WcdmaCellIdentity::getIdentity ()`

Get the cell identity.

Returns

Cell identity.

5.4.1.4.2.5 `const int telx::tel::WcdmaCellIdentity::getPrimaryScramblingCode ()`

Get the primary scrambling code.

Returns

Primary scrambling code.

5.4.1.4.2.6 `const int telx::tel::WcdmaCellIdentity::getUarfcn ()`

Get the absolute RF channel number.

Returns

Absolute RF channel number.

5.4.1.5 class telux::tel::TdscdmaCellIdentity

[TdscdmaCellIdentity](#) class provides methods to get the mobile country code, mobile network code, location area code, cell identity and cell parameters identifier.

Public member functions

- [TdscdmaCellIdentity](#) (int mcc, int mnc, int lac, int cid, int cpid)
- const int [getMcc](#) ()
- const int [getMnc](#) ()
- const int [getLac](#) ()
- const int [getIdentity](#) ()
- const int [getParametersId](#) ()

5.4.1.5.1 Constructors and Destructors

5.4.1.5.1.1 `telux::tel::TdscdmaCellIdentity::TdscdmaCellIdentity (int mcc, int mnc, int lac, int cid, int cpid)`

5.4.1.5.2 Member Function Documentation

5.4.1.5.2.1 `const int telux::tel::TdscdmaCellIdentity::getMcc ()`

Get the Mobile Country Code.

Returns

Mcc value.

5.4.1.5.2.2 `const int telux::tel::TdscdmaCellIdentity::getMnc ()`

Get the Mobile Network Code.

Returns

Mnc value.

5.4.1.5.2.3 `const int telux::tel::TdscdmaCellIdentity::getLac ()`

Get the location area code

Returns

Location area code.

5.4.1.5.2.4 `const int telux::tel::TdscdmaCellIdentity::getIdentity ()`

Get the cell identity.

Returns

Cell identity.

5.4.1.5.2.5 `const int telux::tel::TdscdmaCellIdentity::getParametersId ()`

Get the cell parameters identifier.

Returns

Cell parameters identifier.

5.4.1.6 `class telux::tel::Nr5gCellIdentity`

[Nr5gCellIdentity](#) class provides methods to get the mobile country code, mobile network code, cell identity, physical cell identifier, tracking area code and absolute RF channel number information of the Serving cell

Public member functions

- [Nr5gCellIdentity](#) (std::string mcc, std::string mnc, uint64_t ci, uint32_t pci, int32_t tac, int32_t arfcn)
- const std::string [getMobileCountryCode](#) ()
- const std::string [getMobileNetworkCode](#) ()
- const uint64_t [getIdentity](#) ()
- const uint32_t [getPhysicalCellId](#) ()
- const int32_t [getTrackingAreaCode](#) ()
- const int32_t [getArfcn](#) ()

5.4.1.6.1 Constructors and Destructors

5.4.1.6.1.1 `telux::tel::Nr5gCellIdentity::Nr5gCellIdentity (std::string mcc, std::string mnc, uint64_t ci, uint32_t pci, int32_t tac, int32_t arfcn)`

5.4.1.6.2 Member Function Documentation

5.4.1.6.2.1 `const std::string telux::tel::Nr5gCellIdentity::getMobileCountryCode ()`

Get the Mobile Country Code.

Returns

Mcc value.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.6.2.2 const std::string telux::tel::Nr5gCellIdentity::getMobileNetworkCode ()

Get the Mobile Network Code.

Returns

Mnc value.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.6.2.3 const uint64_t telux::tel::Nr5gCellIdentity::getIdentity ()

Get the cell identity.

Returns

Cell identity.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.6.2.4 const uint32_t telux::tel::Nr5gCellIdentity::getPhysicalCellId ()

Get the physical cell identifier.

Returns

Physical cell identifier.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.6.2.5 `const int32_t telux::tel::Nr5gCellIdentity::getTrackingAreaCode ()`

Get the tracking area code.

Returns

Tracking area code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.6.2.6 `const int32_t telux::tel::Nr5gCellIdentity::getArfcn ()`

Get the absolute RF channel number.

Returns

Absolute RF channel number. '-1' denotes that the value is unknown.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.7 `class telux::tel::CellInfo`

[CellInfo](#) class provides cell info type and checks whether the current cell is registered or not.

Public member functions

- virtual [CellType](#) `getType ()`
- virtual bool `isRegistered ()`

Protected Attributes

- [CellType](#) `type_`
- int `registered_`

5.4.1.7.1 Member Function Documentation

5.4.1.7.1.1 `virtual CellType telux::tel::CellInfo::getType () [virtual]`

Get the cell type.

Returns

CellType.

5.4.1.7.1.2 virtual bool telux::tel::CellInfo::isRegistered () [virtual]

Checks whether the current cell is registered or not.

Returns

If true cell is registered or vice-versa.

5.4.1.7.2 Field Documentation

5.4.1.7.2.1 CellType telux::tel::CellInfo::type_ [protected]

5.4.1.7.2.2 int telux::tel::CellInfo::registered_ [protected]

5.4.1.8 class telux::tel::GsmCellInfo

[GsmCellInfo](#) class provides methods to get cell type, cell registration status, cell identity and signal strength information.

Public member functions

- [GsmCellInfo](#) (int registered, [GsmCellIdentity](#) id, [GsmSignalStrengthInfo](#) ssInfo)
- [GsmCellIdentity](#) getCellIdentity ()
- [GsmSignalStrengthInfo](#) getSignalStrengthInfo ()

Additional Inherited Members

5.4.1.8.1 Constructors and Destructors

5.4.1.8.1.1 telux::tel::GsmCellInfo::GsmCellInfo (int *registered*, [GsmCellIdentity](#) *id*, [GsmSignalStrengthInfo](#) *ssInfo*)

[GsmCellInfo](#) constructor.

Parameters

| | | |
|----|-------------------|------------------------------------|
| in | <i>registered</i> | - Registration status of the cell. |
| in | <i>id</i> | - GSM cell identity. |
| in | <i>ssInfo</i> | - GSM cell signal strength. |

5.4.1.8.2 Member Function Documentation

5.4.1.8.2.1 [GsmCellIdentity](#) telux::tel::GsmCellInfo::getCellIdentity ()

Get GSM cell identity information.

Returns

[GsmCellIdentity](#).

5.4.1.8.2.2 `GsmSignalStrengthInfo` `telux::tel::GsmCellInfo::getSignalStrengthInfo ()`

Get GSM cell signal strength information.

Returns

[GsmSignalStrengthInfo](#).

5.4.1.9 class `telux::tel::CdmaCellInfo`

`CdmaCellInfo` class provides methods to get cell type, cell registration status, cell identity and signal strength information.

Public member functions

- `CdmaCellInfo` (int *registered*, `CdmaCellIdentity` *id*, `CdmaSignalStrengthInfo` *ssInfo*)
- `CdmaCellIdentity` `getCellIdentity ()`
- `CdmaSignalStrengthInfo` `getSignalStrengthInfo ()`

Additional Inherited Members

5.4.1.9.1 Constructors and Destructors

5.4.1.9.1.1 `telux::tel::CdmaCellInfo::CdmaCellInfo (int registered, CdmaCellIdentity id, CdmaSignalStrengthInfo ssInfo)`

`CdmaCellInfo` constructor

Parameters

| | | |
|----|-------------------|------------------------------------|
| in | <i>registered</i> | - Registration status of the cell. |
| in | <i>id</i> | - CDMA cell identity. |
| in | <i>ssInfo</i> | - CDMA cell signal strength. |

5.4.1.9.2 Member Function Documentation

5.4.1.9.2.1 `CdmaCellIdentity` `telux::tel::CdmaCellInfo::getCellIdentity ()`

Get CDMA cell identity information.

Returns

[CdmaCellIdentity](#).

5.4.1.9.2.2 CdmaSignalStrengthInfo telux::tel::CdmaCellInfo::getSignalStrengthInfo ()

Get CDMA cell signal strength information.

Returns

[CdmaSignalStrengthInfo](#).

5.4.1.10 class telux::tel::LteCellInfo

[LteCellInfo](#) class provides methods to get cell type, cell registration status, cell identity and signal strength information.

Public member functions

- [LteCellInfo](#) (int registered, [LteCellIdentity](#) id, [LteSignalStrengthInfo](#) ssInfo)
- [LteCellIdentity](#) getCellIdentity ()
- [LteSignalStrengthInfo](#) getSignalStrengthInfo ()

Additional Inherited Members

5.4.1.10.1 Constructors and Destructors

5.4.1.10.1.1 telux::tel::LteCellInfo::LteCellInfo (int *registered*, [LteCellIdentity](#) *id*, [LteSignalStrengthInfo](#) *ssInfo*)

[LteCellInfo](#) constructor.

Parameters

| | | |
|----|-------------------|------------------------------------|
| in | <i>registered</i> | - Registration status of the cell. |
| in | <i>id</i> | - LTE cell identity class. |
| in | <i>ssInfo</i> | - LTE cell signal strength. |

5.4.1.10.2 Member Function Documentation

5.4.1.10.2.1 LteCellIdentity telux::tel::LteCellInfo::getCellIdentity ()

Get LTE cell identity information.

Returns

[LteCellIdentity](#).

5.4.1.10.2.2 LteSignalStrengthInfo telux::tel::LteCellInfo::getSignalStrengthInfo ()

Get LTE cell signal strength information.

Returns

[LteSignalStrengthInfo](#).

5.4.1.11 class telux::tel::WcdmaCellInfo

[WcdmaCellInfo](#) class provides methods to get cell type, cell registration status, cell identity and signal strength information.

Public member functions

- [WcdmaCellInfo](#) (int registered, [WcdmaCellIdentity](#) id, [WcdmaSignalStrengthInfo](#) ssInfo)
- [WcdmaCellIdentity](#) getCellIdentity ()
- [WcdmaSignalStrengthInfo](#) getSignalStrengthInfo ()

Additional Inherited Members

5.4.1.11.1 Constructors and Destructors

5.4.1.11.1.1 telux::tel::WcdmaCellInfo::WcdmaCellInfo (int *registered*, [WcdmaCellIdentity](#) *id*, [WcdmaSignalStrengthInfo](#) *ssInfo*)

[WcdmaCellInfo](#) constructor.

Parameters

| | | |
|----|-------------------|------------------------------------|
| in | <i>registered</i> | - Registration status of the cell. |
| in | <i>id</i> | - WCDMA cell identity. |
| in | <i>ssInfo</i> | - WCDMA cell signal strength. |

5.4.1.11.2 Member Function Documentation

5.4.1.11.2.1 WcdmaCellIdentity telux::tel::WcdmaCellInfo::getCellIdentity ()

Get WCDMA cell identity information.

Returns

[WcdmaCellIdentity](#).

5.4.1.11.2.2 WcdmaSignalStrengthInfo telux::tel::WcdmaCellInfo::getSignalStrengthInfo ()

Get WCDMA cell signal strength information.

Returns

[WcdmaSignalStrengthInfo](#).

5.4.1.12 class telux::tel::TdscdmaCellInfo

[TdscdmaCellInfo](#) class provides methods to get cell type, cell registration status, cell identity and signal strength information.

Public member functions

- [TdscdmaCellInfo](#) (int registered, [TdscdmaCellIdentity](#) id, [TdscdmaSignalStrengthInfo](#) ssInfo)
- [TdscdmaCellIdentity](#) getCellIdentity ()
- [TdscdmaSignalStrengthInfo](#) getSignalStrengthInfo ()

Additional Inherited Members

5.4.1.12.1 Constructors and Destructors

5.4.1.12.1.1 telux::tel::TdscdmaCellInfo::TdscdmaCellInfo (int *registered*, [TdscdmaCellIdentity](#) *id*, [TdscdmaSignalStrengthInfo](#) *ssInfo*)

[TdscdmaCellInfo](#) constructor.

Parameters

| | | |
|----|-------------------|-----------------------------------|
| in | <i>registered</i> | - Registration status of the cell |
| in | <i>id</i> | - TDSCDMA cell identity. |
| in | <i>ssInfo</i> | - TDSCDMA cell signal strength. |

5.4.1.12.2 Member Function Documentation

5.4.1.12.2.1 TdscdmaCellIdentity telux::tel::TdscdmaCellInfo::getCellIdentity ()

Get TDSCDMA cell identity information.

Returns

[TdscdmaCellIdentity](#).

5.4.1.12.2.2 TdscdmaSignalStrengthInfo telux::tel::TdscdmaCellInfo::getSignalStrengthInfo ()

Get TDSCDMA cell signal strength information.

Returns

[TdscdmaSignalStrengthInfo](#).

5.4.1.13 class telux::tel::Nr5gCellInfo

[Nr5gCellInfo](#) class provides methods to get cell type, cell registration status, cell identity and signal strength information corresponding to the Serving cell.

Public member functions

- [Nr5gCellInfo](#) (int registered, [Nr5gCellIdentity](#) id, [Nr5gSignalStrengthInfo](#) ssInfo)
- [Nr5gCellIdentity](#) getCellIdentity ()
- [Nr5gSignalStrengthInfo](#) getSignalStrengthInfo ()

Additional Inherited Members

5.4.1.13.1 Constructors and Destructors

5.4.1.13.1.1 `telux::tel::Nr5gCellInfo::Nr5gCellInfo (int registered, Nr5gCellIdentity id, Nr5gSignalStrengthInfo ssInfo)`

5.4.1.13.2 Member Function Documentation

5.4.1.13.2.1 `Nr5gCellIdentity telux::tel::Nr5gCellInfo::getCellIdentity ()`

Get NR5G cell identity information.

Returns

[Nr5gCellIdentity](#).

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.13.2.2 `Nr5gSignalStrengthInfo telux::tel::Nr5gCellInfo::getSignalStrengthInfo ()`

Get NR5G cell signal strength information.

Returns

[Nr5gSignalStrengthInfo](#).

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.4.1.14 struct telux::tel::ECallMsdOptionals

Represents MsdOptionals class as per European eCall MSD standard. i.e. EN 15722.

Data fields

| Type | Field | Description |
|---|--|--|
| ECall↔ OptionalData↔ Type | optionalData↔ Type | Type of optional data |
| bool | optionalData↔ Present | Availability of Optional data: true - Present or false - Absent |
| bool | recentVehicle↔ LocationN1↔ Present | Availability of Recent Vehicle Location N1 data: true - Present or false - Absent |
| bool | recentVehicle↔ LocationN2↔ Present | Availability of Recent Vehicle Location N2 data: true - Present or false - Absent |
| bool | numberOf↔ Passengers↔ Present | Availability of number of seat belts fastened data: true - Present or false - Absent |

5.4.1.15 struct telux::tel::ECallMsdControlBits

Represents [ECallMsdControlBits](#) structure as per European eCall MSD standard. i.e. EN 15722.

Data fields

| Type | Field | Description |
|--|---------------------------|--|
| bool | automatic↔ Activation | auto / manual activation |
| bool | testCall | test / emergency call |
| bool | positionCan↔ BeTrusted | false if coincidence < 95% of reported pos within +/- 150m |
| ECallVehicle↔ Type | vehicleType: 5 | Represents a vehicle class as per EN 15722 |

5.4.1.16 struct telux::tel::ECallVehicleIdentificationNumber

Represents VehicleIdentificationNumber structure as per European eCall MSD standard. i.e. EN 15722. Vehicle Identification Number confirming ISO3779.

Data fields

| Type | Field | Description |
|--------|----------------------|--|
| string | isowmi | World Manufacturer Index (WMI) |
| string | isovds | Vehicle Type Descriptor (VDS) |
| string | isovis↔ Modelyear | Model year from Vehicle Identifier Section (VIS) |
| string | isovisSeqPlant | Plant code + sequential number from VIS |

5.4.1.17 struct telux::tel::ECallVehiclePropulsionStorageType

Represents VehiclePropulsionStorageType structure as per European eCall MSD standard. i.e. EN 15722. Vehicle Propulsion type (energy storage): True- Present, False - Absent

Data fields

| Type | Field | Description |
|------|----------------------------|--|
| bool | gasolineTank↔ Present | Represents the presence of Gasoline Tank in the vehicle. |
| bool | dieselTank↔ Present | Represents the presence of Diesel Tank in the vehicle |
| bool | compressed↔ NaturalGas | Represents the presence of CNG in the vehicle |
| bool | liquid↔ PropaneGas | Represents the presence of Liquid Propane Gas in the vehicle |
| bool | electric↔ EnergyStorage | Represents the presence of Electronic Storage in the vehicle |
| bool | hydrogen↔ Storage | Represents the presence of Hydrogen Storage in the vehicle |
| bool | otherStorage | Represents the presence of Other types of storage in the vehicle |

5.4.1.18 struct telux::tel::ECallVehicleLocation

Represents VehicleLocation structure as per European eCall MSD standard. i.e. EN 15722.

Data fields

| Type | Field | Description |
|---------|------------------------|---|
| int32_t | position↔ Latitude | latitude in value range (-2147483648 to 2147483647) |
| int32_t | position↔ Longitude | |

5.4.1.19 struct telux::tel::ECallVehicleLocationDelta

Represents VehicleLocationDelta structure as per European eCall MSD standard. i.e. EN 15722. Delta with respect to Current Vehicle location.

Data fields

| Type | Field | Description |
|---------|----------------|---|
| int16_t | latitudeDelta | (1 Unit = 100 milliarcseconds, range: -512 to 511) |
| int16_t | longitudeDelta | (1 Unit = 100 milliarcseconds, range: -512 to 511) |

5.4.1.20 struct telux::tel::ECallOptionalPdu

Optional information for the emergency rescue service.

Data fields

| Type | Field | Description |
|--------------------------|--------------------------|----------------------|
| ECallDefault↔ Options | eCallDefault↔ Options | Optional information |

5.4.1.21 struct telux::tel::ECallMsdData

Data structure to hold all details required to construct an MSD

Data fields

| Type | Field | Description |
|---|---------------------------------------|--|
| ECallMsd↔ Optionals | optionals | Indicates presence of optionals in ECall MSD |
| uint8_t | message↔ Identifier | Starts with 1 for each new , increment on retransmission |
| ECallMsd↔ ControlBits | control | ECallMsdControlBits structure as per European standard i.e. EN 15722 |
| ECallVehicle↔ Identification↔ Number | vehicle↔ Identification↔ Number | VIN (vehicle identification number) according to ISO3779 |
| ECallVehicle↔ Propulsion↔ StorageType | vehicle↔ Propulsion↔ Storage | VehiclePropulsionStorageType structure as per European standard i.e. EN 15722 |
| uint32_t | timestamp | Seconds elapsed since midnight 01.01.1970 UTC |
| ECallVehicle↔ Location | vehicleLocation | VehicleLocation structure as per European standard. i.e. EN 15722 |
| uint8_t | vehicle↔ Direction | Direction of travel in 2 degrees steps from magnetic north |
| ECallVehicle↔ LocationDelta | recentVehicle↔ LocationN1 | Change in latitude and longitude compared to the last MSD transmission |
| ECallVehicle↔ LocationDelta | recentVehicle↔ LocationN2 | Change in latitude and longitude compared to the last but one MSD transmission |
| uint8_t | numberOf↔ Passengers | Number of occupants in the vehicle |

| Type | Field | Description |
|--|-------------|--|
| ECall ↔ OptionalPdu | optionalPdu | Optional information for the emergency rescue service (103 bytes, ASN.1 encoded); may also point to an address, where this information is locatedOptional information for the emergency rescue service |

5.4.1.22 struct telux::tel::ECallModelInfo

Represents eCall operating mode information

Data fields

| Type | Field | Description |
|---|--------|---|
| ECallMode | mode | Represents eCall operating mode |
| ECallMode ↔ Reason | reason | Represents eCall operating mode change reason |

5.4.1.23 struct telux::tel::ECallHlapTimerStatus

Represents status of various eCall High Level Application Protocol(HLAP) timers that are maintained by UE state machine. This does not retrieve status of timers maintained by the PSAP. The timers are represented according to EN 16062:2015 standard.

Data fields

| Type | Field | Description |
|---|-------|------------------|
| HlapTimer ↔ Status | t2 | T2 Timer status |
| HlapTimer ↔ Status | t5 | T5 Timer status |
| HlapTimer ↔ Status | t6 | T6 Timer status |
| HlapTimer ↔ Status | t7 | T7 Timer status |
| HlapTimer ↔ Status | t9 | T9 Timer status |
| HlapTimer ↔ Status | t10 | T10 Timer status |

5.4.1.24 struct telux::tel::ECallHlapTimerEvents

Represents events that changes the status of various eCall High Level Application Protocol(HLAP) timers that are maintained by UE state machine. This does not retrieve events of timers maintained by the PSAP. The timers are represented according to EN 16062:2015 standard.

Data fields

| Type | Field | Description |
|--------------------------------------|-------|-----------------|
| HlapTimer↔ Event | t2 | T2 Timer event |
| HlapTimer↔ Event | t5 | T5 Timer event |
| HlapTimer↔ Event | t6 | T6 Timer event |
| HlapTimer↔ Event | t7 | T7 Timer event |
| HlapTimer↔ Event | t9 | T9 Timer event |
| HlapTimer↔ Event | t10 | T10 Timer event |

5.4.1.25 class telux::tel::IPhone

This class allows getting system information and registering for system events. Each Phone instance is associated with a single SIM. So on a dual SIM device you would have 2 Phone instances.

Public member functions

- virtual [telux::common::Status getPhoneId](#) (int &phId)=0
- virtual [RadioState getRadioState](#) ()=0
- virtual [telux::common::Status requestVoiceRadioTechnology](#) ([VoiceRadioTechResponseCb](#) callback)=0
- virtual [ServiceState getServiceState](#) ()=0
- virtual [telux::common::Status requestVoiceServiceState](#) (std::weak_ptr< [IVoiceServiceStateCallback](#) > callback)=0
- virtual [telux::common::Status setRadioPower](#) (bool enable, std::shared_ptr< [telux::common:: ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status requestCellInfo](#) ([CellInfoCallback](#) callback)=0
- virtual [telux::common::Status setCellInfoListRate](#) (uint32_t timeInterval, [common::ResponseCallback](#) callback)=0
- virtual [telux::common::Status requestSignalStrength](#) (std::shared_ptr< [ISignalStrengthCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status setECallOperatingMode](#) ([ECallMode](#) eCallMode, [telux::common::ResponseCallback](#) callback)=0
- virtual [telux::common::Status requestECallOperatingMode](#) ([ECallGetOperatingModeCallback](#) callback)=0
- virtual [~IPhone](#) ()

5.4.1.25.1 Constructors and Destructors

5.4.1.25.1.1 virtual `telux::tel::IPhone::~~IPhone ()` [virtual]

5.4.1.25.2 Member Function Documentation

5.4.1.25.2.1 virtual `telux::common::Status telux::tel::IPhone::getPhoneId (int & phId)` [pure virtual]

Get the Phone ID corresponding to phone.

Parameters

| | | |
|-----|----------------|---------------------------------|
| out | <i>phoneId</i> | Unique identifier for the phone |
|-----|----------------|---------------------------------|

Returns

Status of `getPhoneId` i.e. success or suitable error code.

5.4.1.25.2.2 virtual `RadioState telux::tel::IPhone::getRadioState ()` [pure virtual]

Get Radio state of device.

Returns

[RadioState](#)

Deprecated Use `IPhoneManager::requestOperatingMode()` API instead

5.4.1.25.2.3 virtual `telux::common::Status telux::tel::IPhone::requestVoiceRadioTechnology (VoiceRadioTechResponseCb callback)` [pure virtual]

Request for Radio technology type (3GPP/3GPP2) used for voice.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback pointer to get the response of radio power request telux::tel::VoiceRadioTechResponseCb |
|----|-----------------|---|

Returns

Status of `requestVoiceRadioTechnology` i.e. success or suitable error code [telux::common::Status](#).

Deprecated Use `requestVoiceServiceState()` API to get [VoiceServiceInfo](#) which has API to get radio technology i.e [VoiceServiceInfo::getRadioTechnology\(\)](#)

5.4.1.25.2.4 virtual ServiceState telux::tel::IPhone::getServiceState () [pure virtual]

Get service state of the phone.

Returns

[ServiceState](#)

Deprecated Use [requestVoiceServiceState\(\)](#) API

5.4.1.25.2.5 virtual telux::common::Status telux::tel::IPhone::requestVoiceServiceState (std::weak_ptr< IVoiceServiceStateCallback > callback) [pure virtual]

Request for voice service state to get the information of phone serving states

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback pointer to get the response of voice service state telux::tel::IVoiceServiceStateCallback . |
|----|-----------------|---|

Returns

Status of requestVoiceServiceState i.e. success or suitable error code [telux::common::Status](#).

5.4.1.25.2.6 virtual telux::common::Status telux::tel::IPhone::setRadioPower (bool enable, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]

Set the radio power on or off.

Parameters

| | | |
|----|-----------------|--|
| in | <i>enable</i> | Flag that determines whether to turn radio on or off |
| in | <i>callback</i> | Optional callback pointer to get the response of set radio power request |

Returns

Status of setRadioPower i.e. success or suitable error code.

Deprecated Use [IPhoneManager::setOperatingMode\(\)](#) API instead

5.4.1.25.2.7 virtual telux::common::Status telux::tel::IPhone::requestCellInfo (CellInfoCallback callback) [pure virtual]

Get the cell information about current serving cell and neighboring cells.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback to get the response of cell info request tel::CellInfoCallback |
|----|-----------------|--|

Returns

Status of requestCellInfo i.e. success or suitable error

5.4.1.25.2.8 virtual telux::common::Status telux::tel::IPhone::setCellInfoListRate (uint32_t *timeInterval*, common::ResponseCallback *callback*) [pure virtual]

Set the minimum time in milliseconds between when the cell info list should be received.

Parameters

| | | |
|----|---------------------|---|
| in | <i>timeInterval</i> | Value of 0 means receive cell info list when any info changes. Value of INT_MAX means never receive cell info list even on change. Default value is 0 |
| in | <i>callback</i> | Callback to get the response for set cell info list rate. |

Returns

Status of setCellInfoListRate i.e. success or suitable error

5.4.1.25.2.9 virtual telux::common::Status telux::tel::IPhone::requestSignalStrength (std::shared_ptr< ISignalStrengthCallback > *callback = nullptr*) [pure virtual]

Get current signal strength of the associated network.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Optional callback pointer to get the response of signal strength request |
|----|-----------------|--|

Returns

Status of requestSignalStrength i.e. success or suitable error code.

5.4.1.25.2.10 virtual telux::common::Status telux::tel::IPhone::setECallOperatingMode (ECallMode *eCallMode*, telux::common::ResponseCallback *callback*) [pure virtual]

Sets the eCall operating mode

Parameters

| | | |
|----|------------------|---|
| in | <i>eCallMode</i> | - ECallMode |
| in | <i>callback</i> | - Callback function to get the response for set eCall operating mode request. |

Returns

Status of setECallOperatingMode i.e. success or suitable error

5.4.1.25.2.11 virtual telux::common::Status telux::tel::IPhone::requestECallOperatingMode (ECallGetOperatingModeCallback *callback*) [pure virtual]

Get the eCall operating mode

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | - Callback function to get the response of eCall operating mode request |
|----|-----------------|---|

Returns

Status of requestECallOperatingMode i.e. success or suitable error

5.4.1.26 class telux::tel::ISignalStrengthCallback

Interface for Signal strength callback object. Client needs to implement this interface to get single shot responses for commands like get signal strength.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [signalStrengthResponse](#) (std::shared_ptr< [SignalStrength](#) > signalStrength, [telux::common::ErrorCode](#) error)
- virtual [~ISignalStrengthCallback](#) ()

5.4.1.26.1 Constructors and Destructors

5.4.1.26.1.1 virtual telux::tel::ISignalStrengthCallback::~~ISignalStrengthCallback () [virtual]

5.4.1.26.2 Member Function Documentation

5.4.1.26.2.1 virtual void telux::tel::ISignalStrengthCallback::signalStrengthResponse (std::shared_ptr< [SignalStrength](#) > *signalStrength*, [telux::common::ErrorCode](#) *error*) [virtual]

This function is called with the response to requestSignalStrength API.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>signalStrength</i> | Pointer to signal strength object |
| in | <i>error</i> | Return code for whether the operation succeeded or failed SUCCESS RADIO_NOT_AVAILABLE |

5.4.1.27 class telux::tel::IVoiceServiceStateCallback

Interface for voice service state callback object. Client needs to implement this interface to get single shot responses for commands like request voice radio technology.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [voiceServiceStateResponse](#) (const std::shared_ptr< [VoiceServiceInfo](#) > &serviceInfo, [telux::common::ErrorCode](#) error)
- virtual [~IVoiceServiceStateCallback](#) ()

5.4.1.27.1 Constructors and Destructors

5.4.1.27.1.1 virtual [telux::tel::IVoiceServiceStateCallback::~~IVoiceServiceStateCallback](#) ()
[virtual]

5.4.1.27.2 Member Function Documentation

5.4.1.27.2.1 virtual void [telux::tel::IVoiceServiceStateCallback::voiceServiceStateResponse](#) (const std::shared_ptr< [VoiceServiceInfo](#) > & *serviceInfo*, [telux::common::ErrorCode](#) *error*)
[virtual]

This function is called with the response to requestVoiceServiceState API.

Parameters

| | | |
|----|--------------------|---|
| in | <i>serviceInfo</i> | Pointer to voice service info object telux::tel::VoiceServiceInfo |
| in | <i>error</i> | Return code for whether the operation succeeded or failed <ul style="list-style-type: none"> • telux::common::ErrorCode::SUCCESS • telux::common::ErrorCode::RADIO_NOT_AVAILABLE • telux::common::ErrorCode::GENERIC_FAILURE |

5.4.1.28 struct telux::tel::SimRatCapability

Structure contains slotID and RAT capabilities corresponding to slot.

Data fields

| Type | Field | Description |
|---|--------------|-------------|
| int | slotId | |
| RAT↔ Capabilities↔ Mask | capabilities | |

5.4.1.29 struct telux::tel::CellularCapabilityInfo

Structure contains information about device capability.

Data fields

| Type | Field | Description |
|--|--------------------------|---|
| VoiceService ↔ Technologies ↔ Mask | voiceService↔ Techs | Indicates voice support capabilities |
| int | simCount | The maximum number of SIMs that can be supported simultaneously |
| int | maxActiveSims | The maximum number of SIMs that can be simultaneously active. If this number is less than numberOfSims, it implies that any combination of the SIMs can be active and the remaining can be in standby. |
| vector< Sim ↔ RatCapability > | simRat↔ Capabilities | A Sim inserted in a slot allows for certain rat capabilities. And the UE's HW allows for certain rat capabilities. This field lists the intersection of capabilities allowed by the Sim and the HW. The capabilities are indexed based on slotId. |
| vector< DeviceRat ↔ Capability > | deviceRat↔ Capability | This field lists the Rat capabilities supported by the HW on a given Sim slot. The capabilities are indexed based on slotId. |

5.4.1.30 class telux::tel::IPhoneListener

A listener class for monitoring changes in specific telephony states on the device, including service state and signal strength. Override the methods for the state that you wish to receive updates for.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onServiceStateChanged](#) (int phoneId, [ServiceState](#) state)
- virtual void [onSignalStrengthChanged](#) (int phoneId, std::shared_ptr< [SignalStrength](#) > signalStrength)
- virtual void [onCellInfoListChanged](#) (int phoneId, std::vector< std::shared_ptr< [CellInfo](#) >> cellInfoList)
- virtual void [onRadioStateChanged](#) (int phoneId, [RadioState](#) radioState)
- virtual void [onVoiceRadioTechnologyChanged](#) (int phoneId, [RadioTechnology](#) radioTech)
- virtual void [onVoiceServiceStateChanged](#) (int phoneId, const std::shared_ptr< [VoiceServiceInfo](#) > &serviceInfo)
- virtual void [onOperatingModeChanged](#) ([OperatingMode](#) mode)
- virtual void [onECallOperatingModeChange](#) (int phoneId, [telux::tel::ECallModeInfo](#) info)
- virtual [~IPhoneListener](#) ()

5.4.1.30.1 Constructors and Destructors

5.4.1.30.1.1 `virtual telux::tel::IPhoneListener::~~IPhoneListener () [virtual]`

5.4.1.30.2 Member Function Documentation

5.4.1.30.2.1 `virtual void telux::tel::IPhoneListener::onServiceStateChanged (int phoneId, ServiceState state) [virtual]`

This function is called when device service state changes.

Parameters

| | | |
|----|----------------|---|
| in | <i>phoneId</i> | Unique id of the phone on which service state changed. |
| in | <i>state</i> | Service state of the phone ServiceState |

Deprecated Use [onVoiceServiceStateChanged\(\)](#) listener

5.4.1.30.2.2 `virtual void telux::tel::IPhoneListener::onSignalStrengthChanged (int phoneId, std::shared_ptr< SignalStrength > signalStrength) [virtual]`

This function is called when network signal strength changes.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>phoneId</i> | Unique id of the phone on which signal strength state changed. |
| in | <i>signalStrength</i> | Pointer to signal strength object |

5.4.1.30.2.3 `virtual void telux::tel::IPhoneListener::onCellInfoListChanged (int phoneId, std::vector< std::shared_ptr< CellInfo >> cellInfoList) [virtual]`

This function is called when info pertaining to current or neighboring cells change.

Parameters

| | | |
|----|---------------------|--|
| in | <i>phoneId</i> | Unique id of the phone on which cell info changed. |
| in | <i>cellInfoList</i> | vector of shared pointers to cell info object |

5.4.1.30.2.4 `virtual void telux::tel::IPhoneListener::onRadioStateChanged (int phoneId, RadioState radioState) [virtual]`

This function is called when radio state changes on phone

Parameters

| | | |
|----|-------------------|---|
| in | <i>phone</i> | Unique id of the phone on which radio state changed |
| in | <i>radioState</i> | Radio state of the phone RadioState |

Deprecated Use [onOperatingModeChanged\(\)](#) API instead

5.4.1.30.2.5 `virtual void telux::tel::IPhoneListener::onVoiceRadioTechnologyChanged (int phoneId, RadioTechnology radioTech) [virtual]`

This function is called when the radio technology for voice service changes

Parameters

| | | |
|----|------------------|--|
| in | <i>phone</i> | Unique id of the phone on which radio technology changed |
| in | <i>radioTech</i> | Radio state of the phone telux::tel::RadioTechnology |

Deprecated Use [onVoiceServiceStateChanged\(\)](#) API instead

5.4.1.30.2.6 `virtual void telux::tel::IPhoneListener::onVoiceServiceStateChanged (int phoneId, const std::shared_ptr< VoiceServiceInfo > & serviceInfo) [virtual]`

This function is called when the service state for voice service changes

Parameters

| | | |
|----|--------------------|--|
| in | <i>phone</i> | Unique id of the phone on which radio technology changed |
| in | <i>serviceInfo</i> | pointer of voice service state info object telux::tel::VoiceServiceInfo |

5.4.1.30.2.7 `virtual void telux::tel::IPhoneListener::onOperatingModeChanged (OperatingMode mode) [virtual]`

This function is called when the operating mode changes

Parameters

| | | |
|----|-------------|--|
| in | <i>mode</i> | Operating mode OperatingMode . |
|----|-------------|--|

5.4.1.30.2.8 `virtual void telux::tel::IPhoneListener::onECallOperatingModeChange (int phoneId, telux::tel::ECallModeInfo info) [virtual]`

This function is called when eCall operating mode changes.

Parameters

| | | |
|----|----------------|--|
| in | <i>phoneId</i> | - Unique Id of phone for which eCall operating mode changed |
| in | <i>info</i> | - Indicates eCall operating mode change reason ECallModeInfo |

5.4.1.31 class telux::tel::IPhoneManager

Phone Manager creates one or more phones based on SIM slot count, it allows clients to register for notification of system events. Clients should check if the subsystem is ready before invoking any of the APIs.

Public member functions

- virtual bool `isSubsystemReady ()=0`
- virtual `std::future< bool > onSubsystemReady ()=0`
- virtual `telux::common::Status getPhoneIds (std::vector< int > &phoneIds)=0`
- virtual `int getPhoneIdFromSlotId (int slotId)=0`
- virtual `int getSlotIdFromPhoneId (int phoneId)=0`
- virtual `std::shared_ptr< IPhone > getPhone (int phoneId=DEFAULT_PHONE_ID)=0`
- virtual `telux::common::Status requestCellularCapabilityInfo (std::shared_ptr< ICellularCapabilityCallback > callback=nullptr)=0`
- virtual `telux::common::Status requestOperatingMode (std::shared_ptr< IOperatingModeCallback > callback=nullptr)=0`
- virtual `telux::common::Status setOperatingMode (OperatingMode operatingMode, telux::common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status registerListener (std::weak_ptr< IPhoneListener > listener)=0`
- virtual `telux::common::Status removeListener (std::weak_ptr< IPhoneListener > listener)=0`
- virtual `~IPhoneManager ()`

5.4.1.31.1 Constructors and Destructors

5.4.1.31.1.1 virtual `telux::tel::IPhoneManager::~~IPhoneManager () [virtual]`

5.4.1.31.2 Member Function Documentation

5.4.1.31.2.1 virtual bool `telux::tel::IPhoneManager::isSubsystemReady () [pure virtual]`

Checks the status of telephony subsystems and returns the result.

Returns

If true PhoneManager is ready for service (i.e Phone, Sms and Card).

5.4.1.31.2.2 `virtual std::future<bool> telux::tel::IPhoneManager::onSubsystemReady () [pure virtual]`

Wait for telephony subsystem to be ready.

Returns

A future that caller can wait on to be notified when telephony subsystem is ready.

5.4.1.31.2.3 `virtual telux::common::Status telux::tel::IPhoneManager::getPhoneIds (std::vector< int > & phoneIds) [pure virtual]`

Retrieves a list of Phone Ids. Each id is unique per phone. For example: on a dual SIM device, there would be 2 Phones.

Parameters

| | | |
|-----|-----------------|-------------------|
| out | <i>phoneIds</i> | List of phone ids |
|-----|-----------------|-------------------|

Returns

Status of getPhoneIds i.e. success or suitable error code.

5.4.1.31.2.4 `virtual int telux::tel::IPhoneManager::getPhoneIdFromSlotId (int slotId) [pure virtual]`

Get the Phone Id for a given Slot Id.

Parameters

| | | |
|----|---------------|------------------|
| in | <i>slotId</i> | SIM Card Slot Id |
|----|---------------|------------------|

Returns

Phone Id corresponding to the Slot Id.

5.4.1.31.2.5 `virtual int telux::tel::IPhoneManager::getSlotIdFromPhoneId (int phoneId) [pure virtual]`

Get the SIM Slot Id for a given Phone Id.

Parameters

| | | |
|----|----------------|-----------------------|
| in | <i>phoneId</i> | Phone Id of the phone |
|----|----------------|-----------------------|

Returns

Slot Id corresponding to the Phone Id.

5.4.1.31.2.6 `virtual std::shared_ptr<IPhone> telux::tel::IPhoneManager::getPhone (int phoneId = DEFAULT_PHONE_ID) [pure virtual]`

Get the phone instance for a given phone identifier.

Parameters

| | | |
|----|----------------|---|
| in | <i>phoneId</i> | Identifier for phone instance, retrieved from getPhoneIds API |
|----|----------------|---|

Returns

Pointer to Phone object corresponding to phoneId.

5.4.1.31.2.7 `virtual telux::common::Status telux::tel::IPhoneManager::requestCellularCapabilityInfo (std::shared_ptr< ICellularCapabilityCallback > callback = nullptr) [pure virtual]`

Get the information about cellular capability.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback pointer to get the response of cellular capability. |
|----|-----------------|---|

Returns

Status of requestCellularCapabilityInfo i.e. success or suitable error code.

5.4.1.31.2.8 `virtual telux::common::Status telux::tel::IPhoneManager::requestOperatingMode (std::shared_ptr< IOperatingModeCallback > callback = nullptr) [pure virtual]`

Get current operating mode of the device.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback pointer to get the response of operating mode request |
|----|-----------------|---|

Returns

Status of requestOperatingMode i.e. success or suitable error code.

5.4.1.31.2.9 `virtual telux::common::Status telux::tel::IPhoneManager::setOperatingMode (Operating↔ Mode operatingMode, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Set the operating mode of the device. Only valid transitions allowed from one mode to another.

Parameters

| | | |
|----|----------------------|--|
| in | <i>operatingMode</i> | Operating Mode to be set |
| in | <i>callback</i> | Optional callback pointer to get the response of set operatingmode request. In callback following error is returned. <ul style="list-style-type: none"> • telux::common::ErrorCode::INVALID_TRANSITION • telux::common::ErrorCode::INVALID_ARGUMENTS • telux::common::ErrorCode::DEVICE_IN_USE • telux::common::ErrorCode::NO_MEMORY |

Returns

Status of setOperatingMode i.e. success or suitable error code.

5.4.1.31.2.10 `virtual telux::common::Status telux::tel::IPhoneManager::registerListener (std::weak_ptr< IPhoneListener > listener) [pure virtual]`

Register a listener for specific events in the telephony subsystem.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to Phone Listener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener i.e. success or suitable error code.

5.4.1.31.2.11 `virtual telux::common::Status telux::tel::IPhoneManager::removeListener (std::weak_ptr< IPhoneListener > listener) [pure virtual]`

Remove a previously added listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer to Phone Listener object that needs to be removed |
|----|-----------------|---|

Returns

Status of removeListener i.e. success or suitable error code.

5.4.1.32 class telux::tel::ICellularCapabilityCallback

Interface for callback corresponding to cellular capability request. Client needs to implement this interface to get single shot responses for commands like get cellular capability.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void `cellularCapabilityResponse` (`CellularCapabilityInfo` capabilityInfo, `telux::common::ErrorCode` error)
- virtual `~ICellularCapabilityCallback` ()

5.4.1.32.1 Constructors and Destructors

5.4.1.32.1.1 virtual `telux::tel::ICellularCapabilityCallback::~ICellularCapabilityCallback` () [`virtual`]

5.4.1.32.2 Member Function Documentation

5.4.1.32.2.1 virtual void `telux::tel::ICellularCapabilityCallback::cellularCapabilityResponse` (`CellularCapabilityInfo` *capabilityInfo*, `telux::common::ErrorCode` *error*) [`virtual`]

This function is called with the response to requestCellularCapabilityInfo API.

Parameters

| | | |
|----|-----------------------|---|
| in | <i>capabilityInfo</i> | Cellular capability information. |
| in | <i>error</i> | Return code for whether the operation succeeded or failed <ul style="list-style-type: none"> • <code>telux::common::ErrorCode::SUCCESS</code> • <code>telux::common::ErrorCode::INTERNAL</code> • <code>telux::common::ErrorCode::NO_MEMORY</code> |

5.4.1.33 class telux::tel::IOperatingModeCallback

Interface for operating mode callback object. Client needs to implement this interface to get single shot responses for commands like request current operating mode.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void `operatingModeResponse` (`OperatingMode` operatingMode, `telux::common::ErrorCode` error)
- virtual `~IOperatingModeCallback` ()

5.4.1.33.1 Constructors and Destructors

5.4.1.33.1.1 virtual `telux::tel::IOperatingModeCallback::~IOperatingModeCallback` () [`virtual`]

5.4.1.33.2 Member Function Documentation

5.4.1.33.2.1 virtual void telux::tel::IOperatingModeCallback::operatingModeResponse (OperatingMode *operatingMode*, telux::common::ErrorCode *error*) [virtual]

This function is called with the response to requestOperatingMode API.

Parameters

| | | |
|----|----------------------|--|
| in | <i>operatingMode</i> | OperatingMode |
| in | <i>error</i> | Return code for whether the operation succeeded or failed <ul style="list-style-type: none"> telux::common::ErrorCode::SUCCESS telux::common::ErrorCode::INTERNAL_ERR telux::common::ErrorCode::NO_MEMORY |

5.4.1.34 class telux::tel::SignalStrength

[SignalStrength](#) class provides access to LTE, GSM, CDMA, WCDMA, TDSCDMA signal strengths.

Public member functions

- [SignalStrength](#) (std::shared_ptr< [LteSignalStrengthInfo](#) > lteSignalStrengthInfo, std::shared_ptr< [GsmSignalStrengthInfo](#) > gsmSignalStrengthInfo, std::shared_ptr< [CdmaSignalStrengthInfo](#) > cdmaSignalStrengthInfo, std::shared_ptr< [WcdmaSignalStrengthInfo](#) > wcdmaSignalStrengthInfo, std::shared_ptr< [TdscdmaSignalStrengthInfo](#) > tdscdmaSignalStrengthInfo, std::shared_ptr< [Nr5gSignalStrengthInfo](#) > nr5gSignalStrengthInfo)
- std::shared_ptr< [LteSignalStrengthInfo](#) > [getLteSignalStrength](#) ()
- std::shared_ptr< [GsmSignalStrengthInfo](#) > [getGsmSignalStrength](#) ()
- std::shared_ptr< [CdmaSignalStrengthInfo](#) > [getCdmaSignalStrength](#) ()
- std::shared_ptr< [WcdmaSignalStrengthInfo](#) > [getWcdmaSignalStrength](#) ()
- std::shared_ptr< [TdscdmaSignalStrengthInfo](#) > [getTdscdmaSignalStrength](#) ()
- std::shared_ptr< [Nr5gSignalStrengthInfo](#) > [getNr5gSignalStrength](#) ()

5.4.1.34.1 Constructors and Destructors

5.4.1.34.1.1 telux::tel::SignalStrength::SignalStrength (std::shared_ptr< [LteSignalStrengthInfo](#) > *lteSignalStrengthInfo*, std::shared_ptr< [GsmSignalStrengthInfo](#) > *gsmSignalStrengthInfo*, std::shared_ptr< [CdmaSignalStrengthInfo](#) > *cdmaSignalStrengthInfo*, std::shared_ptr< [WcdmaSignalStrengthInfo](#) > *wcdmaSignalStrengthInfo*, std::shared_ptr< [TdscdmaSignalStrengthInfo](#) > *tdscdmaSignalStrengthInfo*, std::shared_ptr< [Nr5gSignalStrengthInfo](#) > *nr5gSignalStrengthInfo*)

5.4.1.34.2 Member Function Documentation

5.4.1.34.2.1 `std::shared_ptr<LteSignalStrengthInfo> telux::tel::SignalStrength::getLteSignalStrength ()`

Gives LTE signal strength instance.

Returns

Pointer to LTE signal strength instance that can be used to get lte dbm, signal level values.

5.4.1.34.2.2 `std::shared_ptr<GsmSignalStrengthInfo> telux::tel::SignalStrength::getGsmSignalStrength ()`

Gives GSM signal strength instance.

Returns

Pointer to GSM signal strength instance that can be used to get GSM dbm, signal level values.

5.4.1.34.2.3 `std::shared_ptr<CdmaSignalStrengthInfo> telux::tel::SignalStrength::getCdmaSignalStrength ()`

Gives CDMA signal strength instance.

Returns

Pointer to CDMA signal strength instance that can be used to get cdma/evdo dbm, signal level values.

5.4.1.34.2.4 `std::shared_ptr<WcdmaSignalStrengthInfo> telux::tel::SignalStrength::getWcdmaSignalStrength ()`

Gives WCDMA signal strength instance.

Returns

Pointer to WCDMA signal strength instance that can be used to get WCDMA dbm, signal level values.

5.4.1.34.2.5 `std::shared_ptr<TdscdmaSignalStrengthInfo> telux::tel::SignalStrength::getTdscdmaSignalStrength ()`

Gives TDSWCDMA signal strength instance.

Returns

Pointer to TDSWCDMA signal strength instance that can be used to get TDSCDMA RSCP value.

5.4.1.34.2.6 `std::shared_ptr<Nr5gSignalStrengthInfo> telux::tel::SignalStrength::getNr5gSignalStrength ()`

Gives 5G NR signal strength instance.

Returns

Pointer to 5G NR signal strength instance that can be used to get 5G NR dbm and snr values.

5.4.1.35 `class telux::tel::LteSignalStrengthInfo`

LTE signal strength class provides methods to get details of lte signals like dbm, signal level, reference signal-to-noise ratio, channel quality indicator and signal strength.

Public member functions

- [LteSignalStrengthInfo](#) (int lteSignalStrength, int lteRsrp, int lteRsrq, int lteRssnr, int lteCqi, int timingAdvance)
- const [SignalStrengthLevel](#) `getLevel ()` const
- const int `getDbm ()` const
- const int `getLteSignalStrength ()` const
- const int `getLteReferenceSignalReceiveQuality ()` const
- const int `getLteReferenceSignalSnr ()` const
- const int `getLteChannelQualityIndicator ()` const
- const int `getTimingAdvance ()` const

5.4.1.35.1 Constructors and Destructors

5.4.1.35.1.1 `telux::tel::LteSignalStrengthInfo::LteSignalStrengthInfo (int lteSignalStrength, int lteRsrp, int lteRsrq, int lteRssnr, int lteCqi, int timingAdvance)`

5.4.1.35.2 Member Function Documentation

5.4.1.35.2.1 `const SignalStrengthLevel telux::tel::LteSignalStrengthInfo::getLevel ()` const

Get signal level in the range.

Returns

Signal levels indicates the quality of signal being received by the device.

5.4.1.35.2.2 `const int telux::tel::LteSignalStrengthInfo::getDbm ()` const

Get the signal strength in dBm. (Valid value range [-140, -44] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

LTE dBm value.

5.4.1.35.2.3 const int telux::tel::LteSignalStrengthInfo::getLteSignalStrength () const

Get the LTE signal strength. (Valid value range [0, 31] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

LTE signal strength.

5.4.1.35.2.4 const int telux::tel::LteSignalStrengthInfo::getLteReferenceSignalReceiveQuality () const

Get LTE reference signal receive quality in dB. (Valid value range [-20, -3] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

LteRsrq.

5.4.1.35.2.5 const int telux::tel::LteSignalStrengthInfo::getLteReferenceSignalSnr () const

Get LTE reference signal signal-to-noise ratio, multiply by 0.1 to get SNR in dB. (Valid value range [-200, +300] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable). (-200 = -20.0 dB, +300 = 30dB).

Returns

LteSnr.

5.4.1.35.2.6 const int telux::tel::LteSignalStrengthInfo::getLteChannelQualityIndicator () const

Get LTE channel quality indicator. (Valid value range [0, 15] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Deprecated This API not being supported

Returns

LteCqI.

5.4.1.35.2.7 const int telux::tel::LteSignalStrengthInfo::getTimingAdvance () const

Get the timing advance in micro seconds. (Valid value range [0, 0x7FFFFFFE] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Deprecated This API not being supported

Returns

Timing advance value.

5.4.1.36 class telux::tel::GsmSignalStrengthInfo

GSM signal strength provides methods to get GSM signal strength in dBm and GSM signal level.

Public member functions

- [GsmSignalStrengthInfo](#) (int gsmSignalStrength, int gsmBitErrorRate, int timingAdvance)
- const [SignalStrengthLevel](#) [getLevel](#) () const
- const int [getDbm](#) () const
- const int [getGsmSignalStrength](#) () const
- const int [getGsmBitErrorRate](#) () const
- const int [getTimingAdvance](#) ()

5.4.1.36.1 Constructors and Destructors

5.4.1.36.1.1 `telux::tel::GsmSignalStrengthInfo::GsmSignalStrengthInfo (int gsmSignalStrength, int gsmBitErrorRate, int timingAdvance)`

5.4.1.36.2 Member Function Documentation

5.4.1.36.2.1 `const SignalStrengthLevel telux::tel::GsmSignalStrengthInfo::getLevel () const`

Get signal level in the range.

Returns

Signal levels indicates the quality of signal being received by the device.

5.4.1.36.2.2 `const int telux::tel::GsmSignalStrengthInfo::getDbm () const`

Get the signal strength in dBm. (Valid value range [-113, -51] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

GSM signal strength in dBm.

5.4.1.36.2.3 `const int telux::tel::GsmSignalStrengthInfo::getGsmSignalStrength () const`

Get the GSM signal strength. (Valid value range [0, 31] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

GSM signal strength.

5.4.1.36.2.4 `const int telux::tel::GsmSignalStrengthInfo::getGsmBitErrorRate () const`

Get the GSM bit error rate. (Valid value range [0, 7] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Deprecated This API not being supported

Returns

GSM bit error rate.

5.4.1.36.2.5 `const int telux::tel::GsmSignalStrengthInfo::getTimingAdvance ()`

Get the timing advance in bit periods . 1 bit period = 48/13 us (Valid value range [0, 219] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Deprecated This API not being supported

Returns

timing advance.

5.4.1.37 `class telux::tel::CdmaSignalStrengthInfo`

CDMA signal strength provides methods to get details of CDMA and EVDO like signal strength in dBm and signal level.

Public member functions

- `CdmaSignalStrengthInfo` (int cdmaDbm, int cdmaEcio, int evdoDbm, int evdoEcio, int evdoSignalNoiseRatio)
- `const SignalStrengthLevel getLevel () const`
- `const int getDbm () const`
- `const int getCdmaEcio () const`
- `const int getEvdoEcio () const`
- `const int getEvdoSignalNoiseRatio () const`

5.4.1.37.1 Constructors and Destructors

5.4.1.37.1.1 `telux::tel::CdmaSignalStrengthInfo::CdmaSignalStrengthInfo (int cdmaDbm, int cdmaEcio, int evdoDbm, int evdoEcio, int evdoSignalNoiseRatio)`

5.4.1.37.2 Member Function Documentation

5.4.1.37.2.1 `const SignalStrengthLevel telux::tel::CdmaSignalStrengthInfo::getLevel () const`

Get signal level in the range.

Returns

Signal levels indicates the quality of signal being received by the device.

5.4.1.37.2.2 `const int telux::tel::CdmaSignalStrengthInfo::getDbm () const`

Get the signal strength in dBm.

Returns

Minimum value of Evdo dBm and Cdma dBm.

5.4.1.37.2.3 `const int telux::tel::CdmaSignalStrengthInfo::getCdmaEcio () const`

Get the CDMA Ec/Io in dB.

Returns

CDMA Ec/Io.

5.4.1.37.2.4 `const int telux::tel::CdmaSignalStrengthInfo::getEvdoEcio () const`

Get the EVDO Ec/Io in dB.

Returns

EVDO Ec/Io.

5.4.1.37.2.5 `const int telux::tel::CdmaSignalStrengthInfo::getEvdoSignalNoiseRatio () const`

Get the EVDO signal noise ratio. (Valid value range [0, 8] and 8 is the highest signal to noise ratio.

Returns

EVDO SNR.

5.4.1.38 class telux::tel::WcdmaSignalStrengthInfo

WCDMA signal strength provides methods to get WCDMA signal strength in dBm and WCDMA signal level.

Public member functions

- [WcdmaSignalStrengthInfo](#) (int signalStrength, int bitErrorRate)
- const [SignalStrengthLevel](#) getLevel () const
- const int getDbm () const
- const int getSignalStrength () const
- const int getBitErrorRate () const

5.4.1.38.1 Constructors and Destructors

5.4.1.38.1.1 `telux::tel::WcdmaSignalStrengthInfo::WcdmaSignalStrengthInfo (int signalStrength, int bitErrorRate)`

5.4.1.38.2 Member Function Documentation

5.4.1.38.2.1 `const SignalStrengthLevel telux::tel::WcdmaSignalStrengthInfo::getLevel () const`

Get signal level in the range.

Returns

Signal levels indicates the quality of signal being received by the device.

5.4.1.38.2.2 `const int telux::tel::WcdmaSignalStrengthInfo::getDbm () const`

Get the signal strength in dBm. (Valid value range [-113, -51] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

WCDMA signal strength in dBm.

5.4.1.38.2.3 `const int telux::tel::WcdmaSignalStrengthInfo::getSignalStrength () const`

Get the WCDMA signal strength. (Valid value range [0, 31] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

WCDMA signal strength.

5.4.1.38.2.4 `const int telux::tel::WcdmaSignalStrengthInfo::getBitErrorRate () const`

Get the WCDMA bit error rate. (Valid value range [0, 7] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Deprecated This API not being supported

Returns

WCDMA bit error rate.

5.4.1.39 `class telux::tel::TdscdmaSignalStrengthInfo`

Tdscdma signal strength provides methods to get received signal code power.

Public member functions

- [TdscdmaSignalStrengthInfo](#) (int rscp)
- `const int getRscp () const`

5.4.1.39.1 Constructors and Destructors

5.4.1.39.1.1 `telux::tel::TdscdmaSignalStrengthInfo::TdscdmaSignalStrengthInfo (int rscp)`

5.4.1.39.2 Member Function Documentation

5.4.1.39.2.1 `const int telux::tel::TdscdmaSignalStrengthInfo::getRscp () const`

Get TdScdma received signal code power in dBm. (Valid Range [-120,-25], and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable).

Returns

TdScdma signal code power.

5.4.1.40 `class telux::tel::Nr5gSignalStrengthInfo`

5G NR signal strength provides methods to get signal strength and signal-to-noise ratio.

Public member functions

- [Nr5gSignalStrengthInfo](#) (int rsrp, int rsrq, int rssnr)
- `const SignalStrengthLevel getLevel () const`
- `const int getDbm () const`
- `const int getReferenceSignalReceiveQuality () const`
- `const int getReferenceSignalSnr () const`

5.4.1.40.1 Constructors and Destructors

5.4.1.40.1.1 `telux::tel::Nr5gSignalStrengthInfo::Nr5gSignalStrengthInfo (int rsrp, int rsrq, int rssnr)`

5.4.1.40.2 Member Function Documentation

5.4.1.40.2.1 `const SignalStrengthLevel telux::tel::Nr5gSignalStrengthInfo::getLevel () const`

Get signal level in the range.

Returns

Signal levels indicates the quality of signal being received by the device.

5.4.1.40.2.2 `const int telux::tel::Nr5gSignalStrengthInfo::getDbm () const`

Get the signal strength in dBm. (Valid value range [-140, -44] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable). INVALID_SIGNAL_STRENGTH_VALUE indicates that modem is not in ENDC connected mode.

Returns

5G NR dBm value.

5.4.1.40.2.3 `const int telux::tel::Nr5gSignalStrengthInfo::getReferenceSignalReceiveQuality () const`

Get 5G NR reference signal receive quality in dB. (Valid value range [-20, -3] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable). INVALID_SIGNAL_STRENGTH_VALUE indicates that modem is not in ENDC connected mode.

Returns

5G NR rsrq.

5.4.1.40.2.4 `const int telux::tel::Nr5gSignalStrengthInfo::getReferenceSignalSnr () const`

Get 5G NR reference signal signal-to-noise ratio, multiply by 0.1 to get SNR in dB. (Valid value range [-200, +300] and INVALID_SIGNAL_STRENGTH_VALUE i.e. unavailable). (-200 = -20.0 dB, +300 = 30dB). INVALID_SIGNAL_STRENGTH_VALUE indicates that modem is not in ENDC connected mode.

Returns

5G NR signal-to-noise.

5.4.1.41 class telux::tel::VoiceServiceInfo

[VoiceServiceInfo](#) is a container class for obtaining serving state details like phone is registered to home network, roaming, in service, out of service or only emergency calls allowed.

Public member functions

- [VoiceServiceInfo](#) ([VoiceServiceState](#) voiceServiceState, [VoiceServiceDenialCause](#) denialCause, [RadioTechnology](#) radioTech)
- [VoiceServiceState](#) [getVoiceServiceState](#) ()
- [VoiceServiceDenialCause](#) [getVoiceServiceDenialCause](#) ()
- bool [isEmergency](#) ()
- bool [isInService](#) ()
- bool [isOutOfService](#) ()
- [RadioTechnology](#) [getRadioTechnology](#) ()

5.4.1.41.1 Constructors and Destructors

5.4.1.41.1.1 [telx::tel::VoiceServiceInfo::VoiceServiceInfo](#) ([VoiceServiceState](#) *voiceServiceState*, [VoiceServiceDenialCause](#) *denialCause*, [RadioTechnology](#) *radioTech*)

5.4.1.41.2 Member Function Documentation

5.4.1.41.2.1 [VoiceServiceState](#) [telx::tel::VoiceServiceInfo::getVoiceServiceState](#) ()

Get voice service state.

Returns

[VoiceServiceState](#)

5.4.1.41.2.2 [VoiceServiceDenialCause](#) [telx::tel::VoiceServiceInfo::getVoiceServiceDenialCause](#) ()

Get Voice service denial cause

Returns

[VoiceServiceDenialCause](#)

5.4.1.41.2.3 bool [telx::tel::VoiceServiceInfo::isEmergency](#) ()

Check if phone service is in emergency mode (i.e Only emergency numbers are allowed)

5.4.1.41.2.4 bool [telx::tel::VoiceServiceInfo::isInService](#) ()

Check if phone is registered to home network or roaming network, phone is in service mode

5.4.1.41.2.5 **bool** telux::tel::VoiceServiceInfo::isOutOfService ()

check if phone not registered, phone is in out of service mode

5.4.1.41.2.6 **RadioTechnology** telux::tel::VoiceServiceInfo::getRadioTechnology ()

Get voice radio technology

Returns

[RadioTechnology](#)

5.4.2 Enumeration Type Documentation

5.4.2.1 **enum** telux::tel::CellType [strong]

Defines all the cell info types.

Enumerator

GSM
CDMA
LTE
WCDMA
TDSCDMA
NR5G

5.4.2.2 **enum** telux::tel::ECallVariant [strong]

ECall Variant

Enumerator

ECALL_TEST Initiate a test voice eCall with a configured telephone number stored in the USIM.
ECALL_EMERGENCY Initiate an emergency eCall. The trigger can be a manually initiated eCall or automatically initiated eCall.
ECALL_VOICE Initiate a regular voice call with capability to transfer an MSD.

5.4.2.3 **enum** telux::tel::EmergencyCallType [strong]

Emergency Call Type

Enumerator

CALL_TYPE_ECALL eCall (0x0C)

5.4.2.4 **enum** telux::tel::ECallMsdtTransmissionStatus [strong]

MSD Transmission Status

Enumerator

SUCCESS In-band MSD transmission is successful
FAILURE In-band MSD transmission failed
MSD_TRANSMISSION_STARTED In-band MSD transmission started
NACK_OUT_OF_ORDER Out of order NACK message detected during in-band MSD transmission
ACK_OUT_OF_ORDER Out of order ACK message detected during in-band MSD transmission
START_RECEIVED SEND-MSD(START) is received and SYNC is locked during in-band MSD transmission
LL_ACK_RECEIVED Link-Layer Acknowledgement(LL-ACK) is received during in-band MSD transmission
OUTBAND_MSD_TRANSMISSION_STARTED Outband MSD transmission started in NG eCall
OUTBAND_MSD_TRANSMISSION_SUCCESS Outband MSD transmission succeeded in NG eCall
OUTBAND_MSD_TRANSMISSION_FAILURE Outband MSD transmission failed in NG eCall

5.4.2.5 enum telux::tel::ECallCategory [strong]

ECall category

Enumerator

VOICE_EMER_CAT_AUTO_ECALL Automatic emergency call
VOICE_EMER_CAT_MANUAL Manual emergency call

5.4.2.6 enum telux::tel::ECallVehicleType

Represents a vehicle class as per European eCall MSD standard. i.e. EN 15722.

Enumerator

PASSENGER_VEHICLE_CLASS_M1
BUSES_AND_COACHES_CLASS_M2
BUSES_AND_COACHES_CLASS_M3
LIGHT_COMMERCIAL_VEHICLES_CLASS_N1
HEAVY_DUTY_VEHICLES_CLASS_N2
HEAVY_DUTY_VEHICLES_CLASS_N3
MOTOR_CYCLES_CLASS_L1E
MOTOR_CYCLES_CLASS_L2E
MOTOR_CYCLES_CLASS_L3E
MOTOR_CYCLES_CLASS_L4E
MOTOR_CYCLES_CLASS_L5E
MOTOR_CYCLES_CLASS_L6E
MOTOR_CYCLES_CLASS_L7E

5.4.2.7 enum telux::tel::ECallOptionalDataType [strong]

Represents OptionalDataType class as per European eCall MSD standard. i.e. EN 15722.

Enumerator

ECALL_DEFAULT

5.4.2.8 enum telux::tel::ECallMode [strong]

Represents eCall operating mode

Enumerator

- NORMAL** eCall and normal voice calls are allowed
- ECALL_ONLY** Only eCall is allowed
- NONE** Invalid mode

5.4.2.9 enum telux::tel::ECallModeReason [strong]

Represents eCall operating mode change reason

Enumerator

- NORMAL** eCall operating mode changed due to normal operation like setting of eCall mode
- ERA_GLOASS** eCall operating mode changed due to ERA-GLONASS operation

5.4.2.10 enum telux::tel::HlapTimerStatus [strong]

Represents the status of an eCall High Level Application Protocol(HLAP) timer that is maintained by the UE state machine.

Enumerator

- UNKNOWN** Unknown
- INACTIVE** eCall Timer is Inactive i.e it has not started or it has stopped/expired
- ACTIVE** eCall Timer is Active i.e it has started but not yet stopped/expired

5.4.2.11 enum telux::tel::HlapTimerEvent [strong]

Represents an event causing a change in the the status of eCall High Level Application Protocol (HLAP) timer that is maintained by the UE state machine.

Timer STARTED notification is provided when the timer moves from INACTIVE to ACTIVE state. Timer STOPPED notification is provided when the timer moves from ACTIVE to INACTIVE state, after its underlying condition is satisfied. Timer EXPIRED notification is provided when the timer moves from ACTIVE to INACTIVE state, after its underlying condition not satisfied until its timeout.

Enumerator

- UNKNOWN** Unknown
- UNCHANGED** No change in timer status
- STARTED** eCall Timer is Started
- STOPPED** eCall Timer is Stopped
- EXPIRED** eCall Timer is expired

5.4.2.12 enum telux::tel::RadioState [strong]

Defines the radio state

Enumerator

RADIO_STATE_OFF Radio is explicitly powered off
RADIO_STATE_UNAVAILABLE Radio unavailable (eg, resetting or not booted)
RADIO_STATE_ON Radio is on

5.4.2.13 enum telux::tel::ServiceState [strong]

Defines the service states

Deprecated Use requestVoiceServiceState() API or to know the status of phone

Enumerator

EMERGENCY_ONLY Only emergency calls allowed
IN_SERVICE Normal operation, device is registered with a carrier and online
OUT_OF_SERVICE Device is not registered with any carrier
RADIO_OFF Device radio is off - Airplane mode for example

5.4.2.14 enum telux::tel::RadioTechnology [strong]

Defines all available radio access technologies

Enumerator

RADIO_TECH_UNKNOWN Network type is unknown
RADIO_TECH_GPRS Network type is GPRS
RADIO_TECH_EDGE Network type is EDGE
RADIO_TECH_UMTS Network type is UMTS
RADIO_TECH_IS95A Network type is IS95A
RADIO_TECH_IS95B Network type is IS95B
RADIO_TECH_1xRTT Network type is 1xRTT
RADIO_TECH_EVDO_0 Network type is EVDO revision 0
RADIO_TECH_EVDO_A Network type is EVDO revision A
RADIO_TECH_HSDPA Network type is HSDPA
RADIO_TECH_HSUPA Network type is HSUPA
RADIO_TECH_HSPA Network type is HSPA
RADIO_TECH_EVDO_B Network type is EVDO revision B
RADIO_TECH_EHRPD Network type is eHRPD
RADIO_TECH_LTE Network type is LTE
RADIO_TECH_HSPAP Network type is HSPA+
RADIO_TECH_GSM Network type is GSM, Only supports voice
RADIO_TECH_TD_SCDMA Network type is TD SCDMA
RADIO_TECH_IWLAN Network type is TD IWLAN
RADIO_TECH_LTE_CA Network type is LTE CA
RADIO_TECH_NR5G Network type is NR5G

5.4.2.15 enum telux::tel::RATCapability [strong]

Defines all available RAT capabilities for each subscription

Enumerator

AMPS
CDMA
HDR
GSM
WCDMA
LTE
TDS
NR5G NR5G NSA mode
NR5GSA NR5G SA mode

5.4.2.16 enum telux::tel::VoiceServiceTechnology [strong]

Defines all voice support available on device

Enumerator

VOICE_TECH_GW_CSFB
VOICE_TECH_1x_CSFB
VOICE_TECH_VOLTE

5.4.2.17 enum telux::tel::OperatingMode [strong]

Defines operating modes of the device.

Enumerator

ONLINE Online mode
AIRPLANE Low Power mode i.e temporarily disabled RF
FACTORY_TEST Special mode for manufacturer use
OFFLINE Device has deactivated RF and partially shutdown
RESETTING Device is in process of power cycling
SHUTTING_DOWN Device is in process of shutting down
PERSISTENT_LOW_POWER Persists low power mode even on reset

5.4.2.18 enum telux::tel::EcbMode [strong]

Emergency callback mode

Enumerator

NORMAL Device is not in emergency callback mode(ECBM)
EMERGENCY Device is in emergency callback mode(ECBM)

5.4.2.19 enum telux::tel::SignalStrengthLevel [strong]

Defines all the signal levels that [SignalStrength](#) class can return where level 1 is low and level 5 is high.

Enumerator

LEVEL_1

LEVEL_2
LEVEL_3
LEVEL_4
LEVEL_5
LEVEL_UNKNOWN

5.4.2.20 enum telux::tel::VoiceServiceState [strong]

Defines the voice service states

Enumerator

NOT_REG_AND_NOT_SEARCHING Not registered, MT is not currently searching a new operator to register
REG_HOME Registered, home network
NOT_REG_AND_SEARCHING Not registered, but MT is currently searching a new operator to register
REG_DENIED Registration denied
UNKNOWN Unknown
REG_ROAMING Registered, roaming
NOT_REG_AND_EMERGENCY_AVAILABLE_AND_NOT_SEARCHING Same as NOT_REG_AND_NOT_SEARCHING but indicates that emergency calls are enabled
NOT_REG_AND_EMERGENCY_AVAILABLE_AND_SEARCHING Same as NOT_REG_AND_SEARCHING but indicates that emergency calls are enabled
REG_DENIED_AND_EMERGENCY_AVAILABLE Same as REG_DENIED but indicates that emergency calls are enabled
UNKNOWN_AND_EMERGENCY_AVAILABLE Same as UNKNOWN but indicates that emergency calls are enabled

5.4.2.21 enum telux::tel::VoiceServiceDenialCause [strong]

Defines the voice service denial cause why voice service state registration was denied See 3GPP TS 24.008, 10.5.3.6 and Annex G.

Enumerator

UNDEFINED Undefined
GENERAL General
AUTH_FAILURE Authentication Failure
IMSI_UNKNOWN IMSI unknown in HLR
ILLEGAL_MS Illegal Mobile Station (MS), network refuses service to the MS either because an identity of the MS is not acceptable to the network or because the MS does not pass the authentication check
IMSI_UNKNOWN_VLR IMSI unknown in Visitors Location Register (VLR)
IMEI_NOT_ACCEPTED Network does not accept emergency call establishment using an IMEI or not accept attach procedure for emergency services using an IMEI
ILLEGAL_ME ME used is not acceptable to the network
GPRS_SERVICES_NOT_ALLOWED Not allowed to operate GPRS services.
GPRS_NON_GPRS_NOT_ALLOWED Not allowed to operate either GPRS or non-GPRS services
MS_IDENTITY_FAILED the network cannot derive the MS's identity from the P-TMSI/GUTI.
IMPLICITLY_DETACHED network has implicitly detached the MS

GPRS_NOT_ALLOWED_IN_PLMN GPRS services not allowed in this PLMN

MSC_TEMPORARILY_NOT_REACHABLE MSC temporarily not reachable

SMS_PROVIDED_VIA_GPRS SMS provided via GPRS in this routing area

NO_PDP_CONTEXT_ACTIVATED No PDP context activated

PLMN_NOT_ALLOWED if the network initiates a detach request or UE requests a services, in a PLMN where the MS, by subscription or due to operator determined barring is not allowed to operate.

LOCATION_AREA_NOT_ALLOWED network initiates a detach request, in a location area where the HPLMN determines that the MS, by subscription, is not allowed to operate or roaming subscriber the subscriber is denied service even if other PLMNs are available on which registration was possible

ROAMING_NOT_ALLOWED Roaming not allowed in this Location Area

NO_SUITABLE_CELLS No Suitable Cells in this Location Area

NOT_AUTHORIZED Not Authorized for this CSG

NETWORK_FAILURE Network Failure

MAC_FAILURE MAC failure

SYNC_FAILURE USIM detects that the SQN in the AUTHENTICATION REQUEST or AUTHENTICATION_AND_CIPHERING REQUEST message is out of range

CONGESTION network cannot serve a request from the MS because of congestion

GSM_AUTHENTICATION_UNACCEPTABLE GSM Authentication unacceptable

SERVICE_OPTION_NOT_SUPPORTED Service option not supported

SERVICE_OPTION_NOT_SUBSCRIBED Requested service option not subscribed

SERVICE_OPTION_OUT_OF_ORDER Service option temporarily out of order

CALL_NOT_IDENTIFIED Call cannot be identified

RETRY_FOR_NEW_CELL Retry upon entry into a new cell

INCORRECT_MESSAGE Semantically incorrect message

INVALID_INFO Invalid mandatory information

MSG_TYPE_NOT_IMPLEMENTED Message type non-existent or not implemented

MSG_NOT_COMPATIBLE Message not compatible with protocol state

INFO_NOT_IMPLEMENTED Information element non-existent or not implemented

CONDITIONAL_IE_ERROR Conditional IE error

PROTOCOL_ERROR_UNSPECIFIED Protocol error, unspecified

5.5 Call

This section contains APIs related to Call.

5.5.1 Data Structure Documentation

5.5.1.1 class telux::tel::ICall

ICall represents a call in progress. An **ICall** cannot be directly created by the client, rather it is returned as a result of instantiating a call or from the PhoneListener when receiving an incoming call.

Public member functions

- virtual [telux::common::Status answer](#) (std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status hold](#) (std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status resume](#) (std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status reject](#) (std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status reject](#) (const std::string &rejectSMS, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status hangup](#) (std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status playDtmfTone](#) (char tone, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status startDtmfTone](#) (char tone, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status stopDtmfTone](#) (std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [CallState getCallState](#) ()=0
- virtual int [getCallIndex](#) ()=0
- virtual [CallDirection getCallDirection](#) ()=0
- virtual std::string [getRemotePartyNumber](#) ()=0
- virtual [CallEndCause getCallEndCause](#) ()=0
- virtual int [getPhoneId](#) ()=0
- virtual bool [isMultiPartyCall](#) ()=0
- virtual [~ICall](#) ()

5.5.1.1.1 Constructors and Destructors

5.5.1.1.1.1 `virtual telux::tel::ICall::~ICall () [virtual]`

5.5.1.1.2 Member Function Documentation

5.5.1.1.2.1 `virtual telux::common::Status telux::tel::ICall::answer (std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Allows the client to answer the call. This is only applicable for `CallState::INCOMING` and `CallState::WAITING` calls. If a Waiting call is being answered and the existing call is Active, then existing call will move to Hold state. If the existing call is on Hold already, then it will remain on Hold. The waiting call state transition from Waiting to Active.

Parameters

| | | |
|-----------------|-----------------|---|
| <code>in</code> | <i>callback</i> | <p>- optional callback pointer to get the response of answer request below are possible error codes for callback response</p> <ul style="list-style-type: none"> • <code>SUCCESS</code> • <code>RADIO_NOT_AVAILABLE</code> • <code>NO_MEMORY</code> • <code>MODEM_ERR</code> • <code>INTERNAL_ERR</code> • <code>INVALID_STATE</code> • <code>INVALID_CALL_ID</code> • <code>INVALID_ARGUMENTS</code> • <code>OPERATION_NOT_ALLOWED</code> • <code>GENERIC_FAILURE</code> |
|-----------------|-----------------|---|

Returns

Status of hold function i.e. success or suitable error code.

5.5.1.1.2.2 `virtual telux::common::Status telux::tel::ICall::hold (std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Puts the ongoing call on hold.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | <p>- optional callback pointer to get the response of hold request below are possible error codes for callback response</p> <ul style="list-style-type: none"> • SUCCESS • RADIO_NOT_AVAILABLE • NO_MEMORY • MODEM_ERR • INTERNAL_ERR • INVALID_STATE • INVALID_CALL_ID • INVALID_ARGUMENTS • OPERATION_NOT_ALLOWED • GENERIC_FAILURE |
|----|-----------------|---|

Returns

Status of hold function i.e. success or suitable error code.

5.5.1.1.2.3 `virtual telux::common::Status telux::tel::lCall::resume (std::shared_ptr< telux::common::lCommandResponseCallback > callback = nullptr) [pure virtual]`

Resumes this call from on-hold state to active state

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | <p>- optional callback pointer to get the response of resume request below are possible error codes for callback response</p> <ul style="list-style-type: none"> • SUCCESS • RADIO_NOT_AVAILABLE • NO_MEMORY • MODEM_ERR • INTERNAL_ERR • INVALID_STATE • INVALID_CALL_ID • INVALID_ARGUMENTS • OPERATION_NOT_ALLOWED • GENERIC_FAILURE |
|----|-----------------|---|

Returns

Status of resume function i.e. success or suitable error code.

5.5.1.1.2.4 `virtual telux::common::Status telux::tel::lCall::reject (std::shared_ptr< telux::common::lCommandResponseCallback > callback = nullptr) [pure virtual]`

Reject the incoming/waiting call. Only applicable for [CallState::INCOMING](#) and [CallState::WAITING](#) calls.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | - optional callback pointer to get the response of reject request below are possible error codes for callback response <ul style="list-style-type: none"> • SUCCESS • RADIO_NOT_AVAILABLE • NO_MEMORY • MODEM_ERR • INTERNAL_ERR • INVALID_STATE • INVALID_CALL_ID • INVALID_ARGUMENTS • OPERATION_NOT_ALLOWED • GENERIC_FAILURE |
|----|-----------------|---|

Returns

Status of reject function i.e. success or suitable error code.

5.5.1.1.2.5 `virtual telux::common::Status telux::tel::ICall::reject (const std::string & rejectSMS, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Reject the call and send an SMS to caller. Only applicable for [CallState::INCOMING](#) and [CallState::WAITING](#) calls.

Parameters

| | | |
|----|------------------|--|
| in | <i>rejectSMS</i> | SMS string used to send in response to a call rejection. |
| in | <i>callback</i> | - optional callback pointer to get the response of rejectwithSMS request below are possible error codes for callback response <ul style="list-style-type: none"> • SUCCESS • RADIO_NOT_AVAILABLE • NO_MEMORY • MODEM_ERR • INTERNAL_ERR • INVALID_STATE • INVALID_CALL_ID • INVALID_ARGUMENTS • OPERATION_NOT_ALLOWED • GENERIC_FAILURE |

Returns

Status of success for call [reject\(\)](#) or suitable error code.

5.5.1.1.2.6 virtual telux::common::Status telux::tel::lCall::hangup (std::shared_ptr< telux::common::lCommandResponseCallback > *callback = nullptr*) [pure virtual]

Hangup the call if the call state is either active, hold, dialing, waiting or alerting.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | <p>- optional callback pointer to get the response of hangup request below are possible error codes for callback response</p> <ul style="list-style-type: none"> • SUCCESS • RADIO_NOT_AVAILABLE • NO_MEMORY • MODEM_ERR • INTERNAL_ERR • INVALID_STATE • INVALID_CALL_ID • INVALID_ARGUMENTS • OPERATION_NOT_ALLOWED • GENERIC_FAILURE |
|----|-----------------|---|

Returns

Status of hangup i.e. success or suitable error code.

5.5.1.1.2.7 virtual telux::common::Status telux::tel::lCall::playDtmfTone (char *tone*, std::shared_ptr< telux::common::lCommandResponseCallback > *callback = nullptr*) [pure virtual]

Play a DTMF tone and stop it. The interval for which the tone is played is dependent on the system implementation. If continuous DTMF tone is playing, it will be stopped. This API is used to play DTMF tone on TX path so that it is heard on far end. For DTMF playback on local device on the RX path use [telux::audio::IAudioVoiceStream::playDtmfTone](#)

Parameters

| | | |
|----|-----------------|---|
| in | <i>tone</i> | - a single character with one of 12 values: 0-9, *, #. |
| in | <i>callback</i> | - Optional callback pointer to get the result of playDtmfTones function |

Returns

Status of playDtmfTones i.e. success or suitable error code.

5.5.1.1.2.8 virtual telux::common::Status telux::tel::lCall::startDtmfTone (char *tone*, std::shared_ptr< telux::common::lCommandResponseCallback > *callback = nullptr*) [pure virtual]

Starts a continuous DTMF tone. To terminate the continuous DTMF tone, stopDtmfTone API needs to be invoked explicitly. This API is used to play DTMF tone on TX path so that it is heard on far end. For DTMF playback on local device on the RX path use [telux::audio::IAudioVoiceStream::playDtmfTone](#)

Parameters

| | | |
|----|-----------------|--|
| in | <i>tone</i> | - a single character with one of 12 values: 0-9, *, #. |
| in | <i>callback</i> | - Optional callback pointer to get the result of startDtmfTone function. |

Returns

Status of startDtmfTone i.e. success or suitable error code.

5.5.1.1.2.9 virtual telux::common::Status telux::tel::ICall::stopDtmfTone (std::shared_ptr< telux::common::ICommandResponseCallback > *callback* = nullptr) [pure virtual]

Stop the currently playing continuous DTMF tone.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | - Optional callback pointer to get the result of stopDtmfTone function. |
|----|-----------------|---|

Returns

Status of stopDtmfTone i.e. success or suitable error code.

5.5.1.1.2.10 virtual CallState telux::tel::ICall::getCallState () [pure virtual]

Get the current state of the call, such as ringing, in progress etc.

Returns

CallState - enumeration representing call State

5.5.1.1.2.11 virtual int telux::tel::ICall::getCallIndex () [pure virtual]

Get the unique index of the call assigned by Telephony subsystem

Returns

Call Index

5.5.1.1.2.12 virtual CallDirection telux::tel::ICall::getCallDirection () [pure virtual]

Get the direction of the call

Returns

CallDirection - enumeration representing call direction i.e. INCOMING/ OUTGOING

5.5.1.1.2.13 virtual std::string telux::tel::ICall::getRemotePartyNumber () [pure virtual]

Get the dialing number

Returns

Phone Number to which the call was dialed out Empty string in case of INCOMING call direction

5.5.1.1.2.14 virtual CallEndCause telux::tel::ICall::getCallEndCause () [pure virtual]

Get the cause of the termination of the call.

Returns

Enum representing call end cause.

5.5.1.1.2.15 virtual int telux::tel::ICall::getPhoneId () [pure virtual]

Get id of the phone object which represents the network/SIM on which the call is in progress.

Returns

Phone Id.

5.5.1.1.2.16 virtual bool telux::tel::ICall::isMultiPartyCall () [pure virtual]

To check if call is in multi party call(conference) or not

Returns

True if call is in conference otherwise false.

Note

Eval: This is a new API and is being evaluated.It is subject to change and could break backwards compatibility.

5.5.1.2 class telux::tel::ICallListener

A listener class for monitoring changes in call, including call state change and ECall state change. Override the methods for the state that you wish to receive updates for.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void `onIncomingCall` (std::shared_ptr< [ICall](#) > call)
- virtual void `onCallInfoChange` (std::shared_ptr< [ICall](#) > call)
- virtual void `onECallMsdTransmissionStatus` (int phoneId, [telux::common::ErrorCode](#) errorCode)
- virtual void `onECallMsdTransmissionStatus` (int phoneId, [telux::tel::ECallMsdTransmissionStatus](#) msdTransmissionStatus)
- virtual void `onECallHlapTimerEvent` (int phoneId, [ECallHlapTimerEvents](#) timersStatus)
- virtual void `onEmergencyNetworkScanFail` (int phoneId)
- virtual void `onEcbmChange` ([telux::tel::EcbMode](#) mode)
- virtual `~ICallListener` ()

5.5.1.2.1 Constructors and Destructors

5.5.1.2.1.1 virtual `telux::tel::ICallListener::~~ICallListener` () [`virtual`]

5.5.1.2.2 Member Function Documentation

5.5.1.2.2.1 virtual void `telux::tel::ICallListener::onIncomingCall` (std::shared_ptr< [ICall](#) > *call*) [`virtual`]

This function is called when device receives an incoming/waiting call.

Parameters

| | | |
|----|-------------|---|
| in | <i>call</i> | - Pointer to ICall instance |
|----|-------------|---|

5.5.1.2.2.2 virtual void `telux::tel::ICallListener::onCallInfoChange` (std::shared_ptr< [ICall](#) > *call*) [`virtual`]

This function is called when there is a change in call attributes

Parameters

| | | |
|----|-------------|---|
| in | <i>call</i> | - Pointer to ICall instance |
|----|-------------|---|

5.5.1.2.2.3 virtual void `telux::tel::ICallListener::onECallMsdTransmissionStatus` (int *phoneId*, [telux::common::ErrorCode](#) *errorCode*) [`virtual`]

This function is called when device completes MSD Transmission.

Parameters

| | | |
|----|----------------|---|
| in | <i>phoneId</i> | - Unique Id of phone on which MSD Transmission Status is being reported |
|----|----------------|---|

| | | |
|----|---------------|---|
| in | <i>status</i> | - Indicates MSD Transmission status i.e. success or failure |
|----|---------------|---|

Deprecated Use another [onECallMsdTransmissionStatus\(\)](#) API with argument `ECallMsdTransmissionStatus`

5.5.1.2.2.4 `virtual void telux::tel::ICallListener::onECallMsdTransmissionStatus (int phoneId, telux::tel::ECallMsdTransmissionStatus msdTransmissionStatus) [virtual]`

This function is called when MSD Transmission status is changed.

Parameters

| | | |
|----|------------------------------|---|
| in | <i>phoneId</i> | - Unique Id of phone on which MSD Transmission Status is being reported |
| in | <i>msdTransmissionStatus</i> | - Indicates MSD Transmission status <code>ECallMsdTransmissionStatus</code> |

5.5.1.2.2.5 `virtual void telux::tel::ICallListener::onECallHlapTimerEvent (int phoneId, ECallHlapTimerEvents timersStatus) [virtual]`

This function is called when the eCall High Level Application Protocol(HLAP) timers status is changed.

Parameters

| | | |
|----|---------------------|---|
| in | <i>phoneId</i> | - Unique Id of phone on which HLAP timer status is being reported |
| in | <i>timersStatus</i> | - Indicates the HLAP timer event ECallHlapTimerEvents |

5.5.1.2.2.6 `virtual void telux::tel::ICallListener::onEmergencyNetworkScanFail (int phoneId) [virtual]`

This function is called whenever there is a scan failure after one round of network scan during origination of emergency call or at any time during the emergency call.

During origination of an ecall or in between an ongoing ecall, if the UE is in an area of no/poor coverage and loses service, the modem will perform network scan and try to register on any available network. If the scan completes successfully and the device finds a suitable cell, the ecall will be placed and the call state changes to the active state. If the network scan fails then this function will be invoked after one round of network scan.

Parameters

| | | |
|----|----------------|--|
| in | <i>phoneId</i> | - Unique Id of phone on which network scan failure reported. |
|----|----------------|--|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.5.1.2.2.7 virtual void telux::tel::ICallListener::onEcbmChange (telux::tel::EcbMode *mode*) [virtual]

This function is called whenever emergency callback mode(ECBM) changes.

Parameters

| | | |
|----|-------------|---|
| in | <i>mode</i> | - Indicates the status of the ECBM. EcbMode |
|----|-------------|---|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.5.1.3 class telux::tel::ICallManager

Call Manager is the primary interface for call related operations Allows to conference calls, swap calls, make normal voice call and emergency call, send and update MSD pdu.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual [telux::common::Status](#) makeCall (int phoneId, const std::string &dialNumber, std::shared_ptr< [IMakeCallCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) makeECall (int phoneId, const [ECallMsdData](#) &eCallMsdData, int category, int variant, std::shared_ptr< [IMakeCallCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) makeECall (int phoneId, const std::string dialNumber, const [ECallMsdData](#) &eCallMsdData, int category, std::shared_ptr< [IMakeCallCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) makeECall (int phoneId, const std::vector< uint8_t > &msdPdu, int category, int variant, [MakeCallCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) makeECall (int phoneId, const std::string dialNumber, const std::vector< uint8_t > &msdPdu, int category, [MakeCallCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) makeECall (int phoneId, int category, int variant, [MakeCallCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) makeECall (int phoneId, const std::string dialNumber, int category, [MakeCallCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) updateECallMsd (int phoneId, const [ECallMsdData](#) &eCallMsd, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) updateECallMsd (int phoneId, const std::vector< uint8_t > &msdPdu, [telux::common::ResponseCallback](#) callback)=0
- virtual [telux::common::Status](#) requestECallHlapTimerStatus (int phoneId, [ECallHlapTimerStatusCallback](#) callback)=0
- virtual std::vector< std::shared_ptr< [ICall](#) > > [getInProgressCalls](#) ()=0

- virtual `telux::common::Status conference` (`std::shared_ptr< ICall > call1`, `std::shared_ptr< ICall > call2`, `std::shared_ptr< telux::common:: ICommandResponseCallback > callback=nullptr`)=0
- virtual `telux::common::Status swap` (`std::shared_ptr< ICall > callToHold`, `std::shared_ptr< ICall > callToActivate`, `std::shared_ptr< telux::common:: ICommandResponseCallback > callback=nullptr`)=0
- virtual `telux::common::Status hangupForegroundResumeBackground` (`int phoneId`, `common::ResponseCallback callback=nullptr`)=0
- virtual `telux::common::Status requestEcbm` (`int phoneId`, `EcbmStatusCallback callback`)=0
- virtual `telux::common::Status exitEcbm` (`int phoneId`, `common::ResponseCallback callback=nullptr`)=0
- virtual `telux::common::Status registerListener` (`std::shared_ptr< telux::tel:: ICallListener > listener`)=0
- virtual `telux::common::Status removeListener` (`std::shared_ptr< telux::tel:: ICallListener > listener`)=0
- virtual `~ICallManager` ()

5.5.1.3.1 Constructors and Destructors

5.5.1.3.1.1 virtual `telux::tel::ICallManager::~ICallManager` () [virtual]

5.5.1.3.2 Member Function Documentation

5.5.1.3.2.1 virtual `telux::common::ServiceStatus telux::tel::ICallManager::getServiceStatus` () [pure virtual]

This status indicates whether the `ICallManager` object is in a usable state.

Returns

`SERVICE_AVAILABLE` - If CallManager is ready for service. `SERVICE_UNAVAILABLE` - If CallManager is temporarily unavailable. `SERVICE_FAILED` - If CallManager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.5.1.3.2.2 virtual `telux::common::Status telux::tel::ICallManager::makeCall` (`int phoneId`, `const std::string & dialNumber`, `std::shared_ptr< IMakeCallCallback > callback = nullptr`) [pure virtual]

Initiate a voice call. This API can also be used for e911/e112 type of regular emergency call. This is not meant for an automotive eCall.

Parameters

| | | |
|----|-------------------|--|
| in | <i>phoneId</i> | Represents phone corresponding to which on make call operation is performed |
| in | <i>dialNumber</i> | String representing the dialing number |
| in | <i>callback</i> | Optional callback pointer to get the response of makeCall request. Possible(not exhaustive) error codes for callback response <ul style="list-style-type: none"> • <code>telux::common::ErrorCode::SUCCESS</code> • <code>telux::common::ErrorCode::RADIO_NOT_AVAILABLE</code> • <code>telux::common::ErrorCode::DIAL_MODIFIED_TO_USSD</code> • <code>telux::common::ErrorCode::DIAL_MODIFIED_TO_SS</code> • <code>telux::common::ErrorCode::DIAL_MODIFIED_TO_DIAL</code> • <code>telux::common::ErrorCode::INVALID_ARGUMENTS</code> • <code>telux::common::ErrorCode::NO_MEMORY</code> • <code>telux::common::ErrorCode::INVALID_STATE</code> • <code>telux::common::ErrorCode::NO_RESOURCES</code> • <code>telux::common::ErrorCode::INTERNAL_ERR</code> • <code>telux::common::ErrorCode::FDN_CHECK_FAILURE</code> • <code>telux::common::ErrorCode::MODEM_ERR</code> • <code>telux::common::ErrorCode::NO_SUBSCRIPTION</code> • <code>telux::common::ErrorCode::NO_NETWORK_FOUND</code> • <code>telux::common::ErrorCode::INVALID_CALL_ID</code> • <code>telux::common::ErrorCode::DEVICE_IN_USE</code> • <code>telux::common::ErrorCode::MODE_NOT_SUPPORTED</code> • <code>telux::common::ErrorCode::ABORTED</code> • <code>telux::common::ErrorCode::GENERIC_FAILURE</code> |

Returns

Status of makeCall i.e. success or suitable status code.

```
5.5.1.3.2.3 virtual telux::common::Status telux::tel::ICallManager::makeECall ( int phoneId, const E←
CallMsdData & eCallMsdData, int category, int variant, std::shared_ptr< IMakeCallCallback
> callback = nullptr ) [pure virtual]
```

Initiate an automotive eCall.

Parameters

| | | |
|----|---------------------|--|
| in | <i>phoneId</i> | Represents phone corresponding to which make eCall operation is performed |
| in | <i>eCallMsddata</i> | The structure containing required fields to create eCall Minimum Set of Data (MSD) |
| in | <i>category</i> | ECallCategory |
| in | <i>variant</i> | ECallVariant |
| in | <i>callback</i> | Optional callback pointer to get the response of makeECall request. Possible(not exhaustive) error codes for callback response <ul style="list-style-type: none"> • telux::common::ErrorCode::SUCCESS • telux::common::ErrorCode::RADIO_NOT_AVAILABLE • telux::common::ErrorCode::NO_MEMORY • telux::common::ErrorCode::MODEM_ERR • telux::common::ErrorCode::INTERNAL_ERR • telux::common::ErrorCode::INVALID_STATE • telux::common::ErrorCode::INVALID_CALL_ID • telux::common::ErrorCode::INVALID_ARGUMENTS • telux::common::ErrorCode::OPERATION_NOT_ALLOWED • telux::common::ErrorCode::GENERIC_FAILURE |

Returns

Status of makeECall i.e. success or suitable status code.

```
5.5.1.3.2.4 virtual telux::common::Status telux::tel::ICallManager::makeECall ( int phoneId, const std::string dialNumber, const ECallMsddata & eCallMsddata, int category, std::shared_ptr<IMakeCallCallback > callback = nullptr ) [pure virtual]
```

Initiate an automotive eCall to the specified phone number for TPS eCall. It will be treated like a regular voice call by the UE and the network.

Parameters

| | | |
|----|--------------------|--|
| in | <i>phoneId</i> | Represents phone corresponding to which make eCall operation is performed |
| in | <i>dialNumber</i> | String representing the dialing number |
| in | <i>eCallMsdata</i> | The structure containing required fields to create eCall Minimum Set of Data (MSD) |
| in | <i>category</i> | ECallCategory |
| in | <i>callback</i> | Optional callback pointer to get the response of makeECall request. Possible(not exhaustive) error codes for callback response <ul style="list-style-type: none"> • telux::common::ErrorCode::SUCCESS • telux::common::ErrorCode::RADIO_NOT_AVAILABLE • telux::common::ErrorCode::NO_MEMORY • telux::common::ErrorCode::MODEM_ERR • telux::common::ErrorCode::INTERNAL_ERR • telux::common::ErrorCode::INVALID_STATE • telux::common::ErrorCode::INVALID_CALL_ID • telux::common::ErrorCode::INVALID_ARGUMENTS • telux::common::ErrorCode::OPERATION_NOT_ALLOWED • telux::common::ErrorCode::GENERIC_FAILURE |

Returns

Status of makeECall i.e. success or suitable status code.

```
5.5.1.3.2.5 virtual telux::common::Status telux::tel::ICallManager::makeECall ( int phoneId, const
std::vector< uint8_t > & msdPdu, int category, int variant, MakeCallCallback callback =
nullptr ) [pure virtual]
```

Initiate an automotive eCall with raw MSD pdu.

Parameters

| | | |
|----|-----------------|---|
| in | <i>phoneId</i> | Represents phone corresponding to which on make eCall operation is performed |
| in | <i>msdPdu</i> | Encoded MSD(Minimum Set of Data) PDU as per spec EN 15722 2015 or GOST R 54620-2011/33464-2015 |
| in | <i>category</i> | ECallCategory |
| in | <i>variant</i> | ECallVariant |
| in | <i>callback</i> | <p>Callback function to get the response of makeECall request. Possible(not exhaustive) error codes for callback response</p> <ul style="list-style-type: none"> • telux::common::ErrorCode::SUCCESS • telux::common::ErrorCode::RADIO_NOT_AVAILABLE • telux::common::ErrorCode::NO_MEMORY • telux::common::ErrorCode::MODEM_ERR • telux::common::ErrorCode::INTERNAL_ERR • telux::common::ErrorCode::INVALID_STATE • telux::common::ErrorCode::INVALID_CALL_ID • telux::common::ErrorCode::INVALID_ARGUMENTS • telux::common::ErrorCode::OPERATION_NOT_ALLOWED • telux::common::ErrorCode::GENERIC_FAILURE |

Returns

Status of makeECall i.e. success or suitable status code.

5.5.1.3.2.6 `virtual telux::common::Status telux::tel::ICallManager::makeECall (int phoneId, const std::string dialNumber, const std::vector< uint8_t > & msdPdu, int category, MakeCallCallback callback = nullptr) [pure virtual]`

Initiate an automotive eCall with raw MSD pdu, to the specified phone number for TPS eCall. It will be treated like a regular voice call by the UE and the network.

Parameters

| | | |
|----|-------------------|---|
| in | <i>phoneId</i> | Represents phone corresponding to which on make eCall operation is performed |
| in | <i>dialNumber</i> | String representing the dialing number |
| in | <i>msdPdu</i> | Encoded MSD(Minimum Set of Data) PDU as per spec EN 15722 2015 or GOST R 54620-2011/33464-2015 |
| in | <i>category</i> | ECallCategory |
| in | <i>callback</i> | <p>Callback function to get the response of makeECall request. Possible(not exhaustive) error codes for callback response</p> <ul style="list-style-type: none"> • telux::common::ErrorCode::SUCCESS • telux::common::ErrorCode::RADIO_NOT_AVAILABLE • telux::common::ErrorCode::NO_MEMORY • telux::common::ErrorCode::MODEM_ERR • telux::common::ErrorCode::INTERNAL_ERR • telux::common::ErrorCode::INVALID_STATE • telux::common::ErrorCode::INVALID_CALL_ID • telux::common::ErrorCode::INVALID_ARGUMENTS • telux::common::ErrorCode::OPERATION_NOT_ALLOWED • telux::common::ErrorCode::GENERIC_FAILURE |

Returns

Status of makeECall i.e. success or suitable status code.

5.5.1.3.2.7 virtual telux::common::Status telux::tel::ICallManager::makeECall (int *phoneId*, int *category*, int *variant*, MakeCallCallback *callback* = nullptr) [pure virtual]

Initiate an automotive eCall without transmitting Minimum Set of Data (MSD) at call connect.

Parameters

| | | |
|----|-----------------|---|
| in | <i>phoneId</i> | Represents phone corresponding to which make eCall operation is performed |
| in | <i>category</i> | ECallCategory |
| in | <i>variant</i> | ECallVariant |

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback function to get the response of makeECall request. Possible(not exhaustive) error codes for callback response <ul style="list-style-type: none"> • telux::common::ErrorCode::SUCCESS • telux::common::ErrorCode::RADIO_NOT_AVAILABLE • telux::common::ErrorCode::NO_MEMORY • telux::common::ErrorCode::MODEM_ERR • telux::common::ErrorCode::INTERNAL_ERR • telux::common::ErrorCode::INVALID_STATE • telux::common::ErrorCode::INVALID_CALL_ID • telux::common::ErrorCode::INVALID_ARGUMENTS • telux::common::ErrorCode::OPERATION_NOT_ALLOWED • telux::common::ErrorCode::GENERIC_FAILURE |
|----|-----------------|---|

Returns

Status of makeECall i.e. success or suitable status code.

5.5.1.3.2.8 `virtual telux::common::Status telux::tel::ICallManager::makeECall (int phoneId, const std::string dialNumber, int category, MakeCallCallback callback = nullptr) [pure virtual]`

Initiate an automotive eCall to the specified phone number for TPS eCall, without transmitting Minimum Set of Data(MSD) at call connect. It will be treated like a regular voice call by the UE and the network.

Parameters

| | | |
|----|-------------------|---|
| in | <i>phoneId</i> | Represents phone corresponding to which make eCall operation is performed |
| in | <i>dialNumber</i> | String representing the dialing number |
| in | <i>category</i> | ECallCategory |
| in | <i>callback</i> | Optional callback function to get the response of makeECall request. Possible(not exhaustive) error codes for callback response <ul style="list-style-type: none"> • telux::common::ErrorCode::SUCCESS • telux::common::ErrorCode::RADIO_NOT_AVAILABLE • telux::common::ErrorCode::NO_MEMORY • telux::common::ErrorCode::MODEM_ERR • telux::common::ErrorCode::INTERNAL_ERR • telux::common::ErrorCode::INVALID_STATE • telux::common::ErrorCode::INVALID_CALL_ID • telux::common::ErrorCode::INVALID_ARGUMENTS • telux::common::ErrorCode::OPERATION_NOT_ALLOWED • telux::common::ErrorCode::GENERIC_FAILURE |

Returns

Status of makeECall i.e. success or suitable status code.

5.5.1.3.2.9 `virtual telux::common::Status telux::tel::ICallManager::updateECallMsd (int phoneId, const ECallMsdData & eCallMsd, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Update the eCall MSD in modem to be sent to Public Safety Answering [Point](#) (PSAP) when requested.

Parameters

| | | |
|----|-----------------|---|
| in | <i>phoneId</i> | Represents phone corresponding to which updateECallMsd operation is performed |
| in | <i>eCallMsd</i> | The data structure represents the Minimum Set of Data (MSD) |
| in | <i>callback</i> | Optional callback pointer to get the response of updateECallMsd. |

Returns

Status of updateECallMsd i.e. success or suitable error code.

5.5.1.3.2.10 `virtual telux::common::Status telux::tel::ICallManager::updateECallMsd (int phoneId, const std::vector< uint8_t > & msdPdu, telux::common::ResponseCallback callback) [pure virtual]`

Update the eCall MSD in modem to be sent to Public Safety Answering [Point](#) (PSAP) when requested.

Parameters

| | | |
|----|-----------------|--|
| in | <i>phoneId</i> | Represents phone corresponding to which updateECallMsd operation is performed |
| in | <i>msdPdu</i> | Encoded MSD(Minimum Set of Data) PDU as per spec EN 15722 2015 or GOST R 54620-2011/33464-2015 |
| in | <i>callback</i> | Callback function to get the response of updateECallMsd. |

Returns

Status of updateECallMsd i.e. success or suitable error code.

5.5.1.3.2.11 `virtual telux::common::Status telux::tel::ICallManager::requestECallHlapTimerStatus (int phoneId, ECallHlapTimerStatusCallback callback) [pure virtual]`

Request for status of eCall High Level Application Protocol(HLAP) timers that are maintained by the UE state machine. This does not retrieve status of timers maintained by the PSAP. The provided timers are as per EN 16062:2015 standard.

Parameters

| | | |
|----|-----------------|--|
| in | <i>phoneId</i> | Represents phone corresponding on which requestECallHlapTimerStatus operation is performed |
| in | <i>callback</i> | Callback function to get the response of requestECallHlapTimerStatus |

Returns

Status of requestECallHlapTimerStatus i.e. success or suitable error code.

5.5.1.3.2.12 `virtual std::vector<std::shared_ptr<ICall> > telux::tel::ICallManager::getInProgressCalls () [pure virtual]`

Get in-progress calls.

Returns

List of active calls.

5.5.1.3.2.13 `virtual telux::common::Status telux::tel::ICallManager::conference (std::shared_ptr< ICall > call1, std::shared_ptr< ICall > call2, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Merge two calls in a conference.

Parameters

| | | |
|----|-----------------|--|
| in | <i>call1</i> | Call object to conference. |
| in | <i>call2</i> | Call object to conference. |
| in | <i>callback</i> | Optional callback pointer to get the result of conference function |

Returns

Status of conference i.e. success or suitable error code.

5.5.1.3.2.14 `virtual telux::common::Status telux::tel::ICallManager::swap (std::shared_ptr< ICall > callToHold, std::shared_ptr< ICall > callToActivate, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Swap calls to make one active and put the another on hold.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>callToHold</i> | Active call object to swap to hold state. |
| in | <i>callToActivate</i> | Hold call object to swap to active state. |
| in | <i>callback</i> | Optional callback pointer to get the result of swap function |

Returns

Status of swap i.e. success or suitable error code.

5.5.1.3.2.15 `virtual telux::common::Status telux::tel::lCallManager::hangupForegroundResumeBackground (int phoneld, common::ResponseCallback callback = nullptr) [pure virtual]`

Hangup all the foreground call(s) if any and accept the background call as the active call. The foreground call here could be active call, incoming call or multiple active calls in case of conference and background call could be held call or waiting call.

If a call(s) is active, the active call(s) will be terminated or if a call is waiting, the waiting call will be accepted and becomes active. Otherwise, if a held call is present, the held call becomes active. In case of hold and waiting calls, the hold call will still be on hold and waiting call will be accepted. In case of hold, active and waiting scenario, the hold call will still be on hold, active call will be ended and waiting call will be accepted.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | <p>- optional callback pointer to get the response of hangup request below are possible error codes for callback response</p> <ul style="list-style-type: none"> • SUCCESS • RADIO_NOT_AVAILABLE • NO_MEMORY • MODEM_ERR • INTERNAL_ERR • INVALID_STATE • INVALID_CALL_ID • INVALID_ARGUMENTS • OPERATION_NOT_ALLOWED • GENERIC_FAILURE |
|----|-----------------|---|

Returns

Status of hangupForegroundResumeBackground i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.5.1.3.2.16 `virtual telux::common::Status telux::tel::lCallManager::requestEcbm (int phoneld, EcbmStatusCallback callback) [pure virtual]`

Request for emergency callback mode

Parameters

| | | |
|----|----------------|---|
| in | <i>phoneId</i> | Represents the phone corresponding to which the emergency callback mode(ECBM) status is requested. param [in] callback Callback pointer to get the result of ECBM status request |
|----|----------------|---|

Returns

Status of requestEcbm i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.5.1.3.2.17 virtual telux::common::Status telux::tel::ICallManager::exitEcbm (int *phoneId*, common::ResponseCallback *callback* = nullptr) [pure virtual]

Exit emergency callback mode.

Parameters

| | | |
|----|----------------|--|
| in | <i>phoneId</i> | Represents the phone corresponding to which the emergency callback mode(ECBM) exit is requested. param [in] callback Optional callback pointer to get the result of exit ECBM request |
|----|----------------|--|

Returns

Status of exitEcbm i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.5.1.3.2.18 virtual telux::common::Status telux::tel::ICallManager::registerListener (std::shared_ptr< telux::tel::ICallListener > *listener*) [pure virtual]

Add a listener to listen for incoming call, call info change and eCall MSD transmission status change.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer to ICallListener object which receives event corresponding to phone |
|----|-----------------|---|

Returns

Status of registerListener i.e. success or suitable error code.

5.5.1.3.2.19 virtual telux::common::Status telux::tel::ICallManager::removeListener (std::shared_ptr< telux::tel::ICallListener > *listener*) [pure virtual]

Remove a previously added listener.

Parameters

| | | |
|----|-----------------|-------------------------|
| in | <i>listener</i> | Listener to be removed. |
|----|-----------------|-------------------------|

Returns

Status of removeListener i.e. success or suitable error code.

5.5.1.4 class telux::tel::IMakeCallCallback

Interface for Make Call callback object. Client needs to implement this interface to get single shot responses for commands like make call.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [makeCallResponse](#) (telux::common::ErrorCode error, std::shared_ptr< ICall > call=nullptr)
- virtual [~IMakeCallCallback](#) ()

5.5.1.4.1 Constructors and Destructors

5.5.1.4.1.1 virtual telux::tel::IMakeCallCallback::~IMakeCallCallback () [virtual]

5.5.1.4.2 Member Function Documentation

5.5.1.4.2.1 virtual void telux::tel::IMakeCallCallback::makeCallResponse (telux::common::ErrorCode *error*, std::shared_ptr< ICall > *call = nullptr*) [virtual]

This function is called with the response to makeCall API.

Parameters

| | | |
|-----|--------------|--|
| out | <i>error</i> | ErrorCode |
| out | <i>call</i> | Pointer to Call object or nullptr in case of failure |

5.5.2 Enumeration Type Documentation

5.5.2.1 enum telux::tel::CallDirection [strong]

Defines type of call like incoming, outgoing and none.

Enumerator

INCOMING
OUTGOING
NONE

5.5.2.2 enum telux::tel::CallState [strong]

Defines the states a call can be in

Enumerator

CALL_IDLE idle call, default state of a newly created call object
CALL_ACTIVE active call
CALL_ON_HOLD on hold call
CALL_DIALING out going call, in dialing state and not yet connected, MO Call only
CALL_INCOMING incoming call, not yet answered
CALL_WAITING waiting call
CALL_ALERTING alerting call, MO Call only
CALL_ENDED call ended / disconnected

5.5.2.3 enum telux::tel::CallEndCause [strong]

Reason for the recently terminated call (either normally ended or failed)

Enumerator

UNOBTAINABLE_NUMBER
NO_ROUTE_TO_DESTINATION
CHANNEL_UNACCEPTABLE
OPERATOR_DETERMINED_BARRING
NORMAL
BUSY
NO_USER_RESPONDING
NO_ANSWER_FROM_USER
NOT_REACHABLE
CALL_REJECTED
NUMBER_CHANGED
PREEMPTION
DESTINATION_OUT_OF_ORDER
INVALID_NUMBER_FORMAT
FACILITY_REJECTED
RESP_TO_STATUS_ENQUIRY
NORMAL_UNSPECIFIED
CONGESTION
NETWORK_OUT_OF_ORDER
TEMPORARY_FAILURE

SWITCHING_EQUIPMENT_CONGESTION
ACCESS_INFORMATION_DISCARDED
REQUESTED_CIRCUIT_OR_CHANNEL_NOT_AVAILABLE
RESOURCES_UNAVAILABLE_OR_UNSPECIFIED
QOS_UNAVAILABLE
REQUESTED_FACILITY_NOT_SUBSCRIBED
INCOMING_CALLS_BARRED_WITHIN_CUG
BEARER_CAPABILITY_NOT_AUTHORIZED
BEARER_CAPABILITY_UNAVAILABLE
SERVICE_OPTION_NOT_AVAILABLE
BEARER_SERVICE_NOT_IMPLEMENTED
ACM_LIMIT_EXCEEDED
REQUESTED_FACILITY_NOT_IMPLEMENTED
ONLY_DIGITAL_INFORMATION_BEARER_AVAILABLE
SERVICE_OR_OPTION_NOT_IMPLEMENTED
INVALID_TRANSACTION_IDENTIFIER
USER_NOT_MEMBER_OF_CUG
INCOMPATIBLE_DESTINATION
INVALID_TRANSIT_NW_SELECTION
SEMANTICALLY_INCORRECT_MESSAGE
INVALID_MANDATORY_INFORMATION
MESSAGE_TYPE_NON_IMPLEMENTED
MESSAGE_TYPE_NOT_COMPATIBLE_WITH_PROTOCOL_STATE
INFORMATION_ELEMENT_NON_EXISTENT
CONDITIONAL_IE_ERROR
MESSAGE_NOT_COMPATIBLE_WITH_PROTOCOL_STATE
RECOVERY_ON_TIMER_EXPIRED
PROTOCOL_ERROR_UNSPECIFIED
INTERWORKING_UNSPECIFIED
CALL_BARRED
FDN_BLOCKED
IMSI_UNKNOWN_IN_VLR
IMEI_NOT_ACCEPTED
DIAL_MODIFIED_TO_USSD
DIAL_MODIFIED_TO_SS
DIAL_MODIFIED_TO_DIAL
CDMA_LOCKED_UNTIL_POWER_CYCLE
CDMA_DROP
CDMA_INTERCEPT
CDMA_REORDER
CDMA_SO_REJECT
CDMA_RETRY_ORDER
CDMA_ACCESS_FAILURE
CDMA_PREEMPTED
CDMA_NOT_EMERGENCY
CDMA_ACCESS_BLOCKED
ERROR_UNSPECIFIED

5.6 SMS

This section contains APIs related to Sending and Receiving SMS.

5.6.1 Data Structure Documentation

5.6.1.1 struct telux::tel::MessageAttributes

Contains structure of message attributes like encoding type, number of segments, characters left in last segment.

Data fields

| Type | Field | Description |
|-----------------------------|--|---------------------------------|
| SmsEncoding | encoding | Data encoding type |
| int | numberOf↔ Segments | Number of segments |
| int | segmentSize | Max size of each segment |
| int | numberOf↔ CharsLeftIn↔ LastSegment | characters left in last segment |

5.6.1.2 class telux::tel::SmsMessage

A Short Message Service message.

Public member functions

- [SmsMessage](#) (std::string text, std::string sender, std::string receiver, [SmsEncoding](#) encoding, std::string pdu)
- const std::string & [getText](#) () const
- const std::string & [getSender](#) () const
- const std::string & [getReceiver](#) () const
- [SmsEncoding](#) [getEncoding](#) () const
- const std::string & [getPdu](#) () const
- const std::string [toString](#) () const

5.6.1.2.1 Constructors and Destructors

5.6.1.2.1.1 `telux::tel::SmsMessage::SmsMessage (std::string text, std::string sender, std::string receiver, SmsEncoding encoding, std::string pdu)`

5.6.1.2.2 Member Function Documentation

5.6.1.2.2.1 const std::string& telux::tel::SmsMessage::getText () const

Get the message body.

Returns

String containing SMS message.

5.6.1.2.2.2 const std::string& telux::tel::SmsMessage::getSender () const

Get the originating address (sender) of this SMS message.

Returns

String containing sender address.

5.6.1.2.2.3 const std::string& telux::tel::SmsMessage::getReceiver () const

Get the destination address (receiver) of this SMS message.

Returns

String containing receiver address

5.6.1.2.2.4 SmsEncoding telux::tel::SmsMessage::getEncoding () const

Get encoding used for this SMS message.

Returns

SMS message encoding used.

5.6.1.2.2.5 const std::string& telux::tel::SmsMessage::getPdu () const

Get the raw PDU for the message.

Returns

String containing raw pdu data.

5.6.1.2.2.6 const std::string telux::tel::SmsMessage::toString () const

Get the text related informative representation of this object.

Returns

String containing informative string.

5.6.1.3 class telux::tel::ISmsManager

SMS Manager class is the primary interface to send and receive SMS messages. It allows to send an SMS in several formats and sizes.

Public member functions

- virtual [telux::common::ServiceStatus getServiceStatus \(\)](#)=0
- virtual [telux::common::Status sendSms](#) (const std::string &message, const std::string &receiver←Address, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > deliveryCallback=nullptr)=0
- virtual [telux::common::Status requestSmscAddress](#) (std::shared_ptr< [ISmscAddressCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status setSmscAddress](#) (const std::string &smscAddress, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [MessageAttributes calculateMessageAttributes](#) (const std::string &message)=0
- virtual int [getPhoneId](#) ()=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [ISmsListener](#) > listener)=0
- virtual [telux::common::Status removeListener](#) (std::weak_ptr< [ISmsListener](#) > listener)=0
- virtual [~ISmsManager](#) ()

5.6.1.3.1 Constructors and Destructors

5.6.1.3.1.1 virtual [telux::tel::ISmsManager::~~ISmsManager](#) () [[virtual](#)]

5.6.1.3.2 Member Function Documentation

5.6.1.3.2.1 virtual [telux::common::ServiceStatus telux::tel::ISmsManager::getServiceStatus](#) () [[pure virtual](#)]

This status indicates whether the [ISmsManager](#) object is in a usable state.

Returns

[telux::common::ServiceStatus](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.6.1.3.2.2 virtual telux::common::Status telux::tel::ISmsManager::sendSms (const std::string & message, const std::string & receiverAddress, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr, std::shared_ptr< telux::common::ICommandResponseCallback > deliveryCallback = nullptr) [pure virtual]

Send SMS to destination address. Only support UCS2 format, GSM 7 bit default alphabet and does not support National language shift tables.

Parameters

| | | |
|----|-------------------------|--|
| in | <i>message</i> | Message or payload text to be sent |
| in | <i>receiverAddress</i> | Receiver or destination address |
| in | <i>sentCallback</i> | Optional callback pointer to get the response of send SMS request, This callback gives possible error codes. |
| in | <i>deliveryCallback</i> | Optional callback pointer to get message delivery status |

Returns

Status of sendSms i.e. success or suitable error code.

5.6.1.3.2.3 virtual telux::common::Status telux::tel::ISmsManager::requestSmscAddress (std::shared_ptr< ISmscAddressCallback > callback = nullptr) [pure virtual]

Request for Short Messaging Service Center (SMSC) Address. Purpose of SMSC is to store, forward, convert and deliver Short Message Service (SMS) messages.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback pointer to get the response of Smsc address request |
|----|-----------------|---|

Returns

Status of getSmscAddress i.e. success or suitable error code.

5.6.1.3.2.4 virtual telux::common::Status telux::tel::ISmsManager::setSmscAddress (const std::string & smscAddress, telux::common::ResponseCallback callback = nullptr) [pure virtual]

Sets the Short Message Service Center(SMSC) address on the device.

This will change the SMSC address for all the SMS messages sent from any app.

Parameters

| | | |
|----|--------------------|---|
| in | <i>smscAddress</i> | SMSC address |
| in | <i>callback</i> | Optional callback pointer to get the response of set SMSC address |

Returns

Status of setSmscAddress i.e. success or suitable error code.

5.6.1.3.2.5 virtual MessageAttributes telux::tel::ISmsManager::calculateMessageAttributes (const std::string & message) [pure virtual]

Calculate message attributes for the given message.

Parameters

| | | |
|----|----------------|-----------------|
| in | <i>message</i> | Message to send |
|----|----------------|-----------------|

Returns

[MessageAttributes](#) structure containing encoding type, number of segments, max size of segment and characters left in last segment.

5.6.1.3.2.6 virtual int telux::tel::ISmsManager::getPhoneId () [pure virtual]

Get associated phone id for this SMSManager.

Returns

PhoneId.

5.6.1.3.2.7 virtual telux::common::Status telux::tel::ISmsManager::registerListener (std::weak_ptr< ISmsListener > listener) [pure virtual]

Register a listener for Sms events

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to ISmsListener object which receives event corresponding to SMS |
|----|-----------------|--|

Returns

Status of registerListener i.e. success or suitable error code.

5.6.1.3.2.8 virtual telux::common::Status telux::tel::ISmsManager::removeListener (std::weak_ptr< ISmsListener > listener) [pure virtual]

Remove a previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to ISmsListener object |
|----|-----------------|--|

Returns

Status of removeListener i.e. success or suitable error code.

5.6.1.4 class telux::tel::ISmsListener

A listener class for monitoring incoming SMS and notify subsystem status changes. Override the methods for the state that you wish to receive updates for.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onIncomingSms](#) (int phoneId, std::shared_ptr< [SmsMessage](#) > message)
- virtual [~ISmsListener](#) ()

5.6.1.4.1 Constructors and Destructors

5.6.1.4.1.1 virtual telux::tel::ISmsListener::~~ISmsListener () [[virtual](#)]

5.6.1.4.2 Member Function Documentation

5.6.1.4.2.1 virtual void telux::tel::ISmsListener::onIncomingSms (int *phoneId*, std::shared_ptr< [SmsMessage](#) > *message*) [[virtual](#)]

This function is called when device receives an incoming message

Parameters

| | | |
|----|----------------------------|--|
| in | <i>phoneId</i> | Unique identifier per phone |
| in | SmsMessage | Pointer to SmsMessage object |

5.6.1.5 class telux::tel::ISmscAddressCallback

Interface for SMS callback object. Client needs to implement this interface to get single shot responses for send SMS.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [smscAddressResponse](#) (const std::string &address, [telux::common::ErrorCode](#) error)=0

5.6.1.5.1 Member Function Documentation

5.6.1.5.1.1 virtual void telx::tel::ISmscAddressCallback::smscAddressResponse (const std::string & address, telx::common::ErrorCode error) [pure virtual]

This function is called with the response to the Smsc address request.

Parameters

| | | |
|----|----------------|--------------|
| in | <i>address</i> | Smsc address |
| in | <i>error</i> | ErrorCode |

5.6.2 Enumeration Type Documentation

5.6.2.1 enum telx::tel::SmsEncoding [strong]

Specifies the encoding of the SMS message.

Enumerator

GSM7 GSM 7-bit default alphabet encoding

GSM8 GSM 8-bit data encoding

UCS2 UCS-2 encoding

UNKNOWN Unknown encoding

5.7 SIM Card Services

This section contains APIs related to Card Services.

5.7.1 Data Structure Documentation

5.7.1.1 class telux::tel::ICardApp

Represents a single card application.

Public member functions

- virtual [AppType](#) `getAppType ()`=0
- virtual [AppState](#) `getAppState ()`=0
- virtual `std::string` `getAppId ()`=0
- virtual [telux::common::Status](#) `changeCardPassword (CardLockType lockType, std::string oldPwd, std::string newPwd, PinOperationResponseCb callback)`=0
- virtual [telux::common::Status](#) `unlockCardByPuk (CardLockType lockType, std::string puk, std::string newPin, PinOperationResponseCb callback)`=0
- virtual [telux::common::Status](#) `unlockCardByPin (CardLockType lockType, std::string pin, PinOperationResponseCb callback)`=0
- virtual [telux::common::Status](#) `queryPin1LockState (QueryPin1LockResponseCb callback)`=0
- virtual [telux::common::Status](#) `queryFdnLockState (QueryFdnLockResponseCb callback)`=0
- virtual [telux::common::Status](#) `setCardLock (CardLockType lockType, std::string password, bool isEnabled, PinOperationResponseCb callback)`=0
- virtual `~ICardApp ()`

5.7.1.1.1 Constructors and Destructors

5.7.1.1.1.1 virtual `telux::tel::ICardApp::~~ICardApp ()` [virtual]

5.7.1.1.2 Member Function Documentation

5.7.1.1.2.1 virtual `AppType telux::tel::ICardApp::getAppType ()` [pure virtual]

Get Application type like SIM, USIM, RUIM, CSIM or ISIM.

Returns

[AppType](#).

5.7.1.1.2.2 virtual AppState telux::tel::ICardApp::getAppState () [pure virtual]

Get Application state like PIN1, PUK required and others.

Returns

[AppState](#).

5.7.1.1.2.3 virtual std::string telux::tel::ICardApp::getAppId () [pure virtual]

Get application identifier.

Returns

Application Id.

5.7.1.1.2.4 virtual telux::common::Status telux::tel::ICardApp::changeCardPassword (CardLockType lockType, std::string oldPwd, std::string newPwd, PinOperationResponseCb callback) [pure virtual]

Change the password used in PIN1/PIN2 lock.

Parameters

| | | |
|----|-----------------|---|
| in | <i>lockType</i> | CardLockType. Applicable lock types are PIN1 and PIN2. |
| in | <i>oldPwd</i> | Old password |
| in | <i>newPwd</i> | New password |
| in | <i>callback</i> | Callback function to get the response of change pin password. |

5.7.1.1.2.5 virtual telux::common::Status telux::tel::ICardApp::unlockCardByPuk (CardLockType lockType, std::string puk, std::string newPin, PinOperationResponseCb callback) [pure virtual]

Unlock the Sim card for an app by entering PUK and new pin.

Parameters

| | | |
|----|-----------------|--|
| in | <i>lockType</i> | CardLockType. Applicable lock types are PUK1 and PUK2 |
| in | <i>puk</i> | PUK1/PUK2 |
| in | <i>pin</i> | New PIN1/PIN2 |
| in | <i>callback</i> | Callback function to get the response of unlock card lock. |

5.7.1.1.2.6 virtual telux::common::Status telux::tel::ICardApp::unlockCardByPin (CardLockType lockType, std::string pin, PinOperationResponseCb callback) [pure virtual]

Unlock the Sim card for an app by entering PIN.

Parameters

| | | |
|----|-----------------|--|
| in | <i>lockType</i> | CardLockType. Applicable lock types are PIN1 and PIN2. |
| in | <i>pin</i> | New PIN1/PIN2 |
| in | <i>callback</i> | Callback function to get the response of unlock card lock. |

**5.7.1.1.2.7 virtual telux::common::Status telux::tel::ICardApp::queryPin1LockState (QueryPin1Lock↔
ResponseCb *callback*) [pure virtual]**

Query Pin1 lock state.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Callback function to get the response of query pin1 lock state. |
|----|-----------------|---|

**5.7.1.1.2.8 virtual telux::common::Status telux::tel::ICardApp::queryFdnLockState (QueryFdnLock↔
ResponseCb *callback*) [pure virtual]**

Query FDN lock state.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback function to get the response of query fdn lock state. |
|----|-----------------|--|

**5.7.1.1.2.9 virtual telux::common::Status telux::tel::ICardApp::setCardLock (CardLockType *lockType*,
std::string *password*, bool *isEnabled*, PinOperationResponseCb *callback*) [pure
virtual]**

Enable or disable FDN or Pin1 lock.

Parameters

| | | |
|----|------------------|---|
| in | <i>lockType</i> | CardLockType. Applicable lock type such as PIN1 and FDN |
| in | <i>password</i> | Password of PIN1 and FDN |
| in | <i>isEnabled</i> | If true then enable else disable. |
| in | <i>callback</i> | Callback function to get the response of set card lock. |

5.7.1.2 struct telux::tel::lccResult

The APDU response with status for transmit APDU operation.

Public member functions

- const std::string [toString](#) () const

Data Fields

- int [sw1](#)
- int [sw2](#)
- std::string [payload](#)
- std::vector< int > [data](#)

5.7.1.2.1 Member Function Documentation

5.7.1.2.1.1 `const std::string telux::tel::lccResult::toString () const`

5.7.1.2.2 Field Documentation

5.7.1.2.2.1 `int telux::tel::lccResult::sw1`

Status word 1 for command processing status

5.7.1.2.2.2 `int telux::tel::lccResult::sw2`

Status word 2 for command processing qualifier

5.7.1.2.2.3 `std::string telux::tel::lccResult::payload`

response as a hex string

5.7.1.2.2.4 `std::vector<int> telux::tel::lccResult::data`

vector of raw data received as part of response to the card services request

5.7.1.3 class `telux::tel::ICardManager`

[ICardManager](#) provide APIs for slot count, retrieve slot ids, get card state and get card.

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status](#) [getSlotCount](#) (int &count)=0
- virtual [telux::common::Status](#) [getSlotIds](#) (std::vector< int > &slotIds)=0
- virtual std::shared_ptr< [ICard](#) > [getCard](#) (int slotId=DEFAULT_SLOT_ID, [telux::common::Status](#) *status=nullptr)=0
- virtual [telux::common::Status](#) [cardPowerUp](#) (SlotId slotId, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) [cardPowerDown](#) (SlotId slotId, [telux::common::ResponseCallback](#)

callback=nullptr)=0

- virtual `telux::common::Status registerListener (std::shared_ptr< ICardListener > listener)=0`
- virtual `telux::common::Status removeListener (std::shared_ptr< ICardListener > listener)=0`
- virtual `~ICardManager ()`

5.7.1.3.1 Constructors and Destructors

5.7.1.3.1.1 virtual `telux::tel::ICardManager::~ICardManager () [virtual]`

5.7.1.3.2 Member Function Documentation

5.7.1.3.2.1 virtual `bool telux::tel::ICardManager::isSubsystemReady () [pure virtual]`

Checks the status of telephony subsystems and returns the result.

Returns

If true then CardManager is ready for service.

5.7.1.3.2.2 virtual `std::future<bool> telux::tel::ICardManager::onSubsystemReady () [pure virtual]`

Wait for telephony subsystem to be ready.

Returns

A future that caller can wait on to be notified when card manager is ready.

5.7.1.3.2.3 virtual `telux::common::Status telux::tel::ICardManager::getSlotCount (int & count) [pure virtual]`

Get SIM slot count.

Parameters

| | | |
|-----|--------------|-----------------|
| out | <i>count</i> | SIM slot count. |
|-----|--------------|-----------------|

Returns

Status of getSlotCount i.e. success or suitable status code.

5.7.1.3.2.4 virtual `telux::common::Status telux::tel::ICardManager::getSlotIds (std::vector< int > & slotIds) [pure virtual]`

Get list of SIM slots.

Parameters

| | | |
|-----|----------------|-----------------------|
| out | <i>slotIds</i> | List of SIM slot ids. |
|-----|----------------|-----------------------|

Returns

Status of getSlotIds i.e. success or suitable status code.

5.7.1.3.2.5 `virtual std::shared_ptr<ICard> telux::tel::ICardManager::getCard (int slotId = DEFAULT_SLOT_ID, telux::common::Status * status = nullptr) [pure virtual]`

Get the Card corresponding to SIM slot.

Parameters

| | | |
|-----|---------------|---|
| in | <i>slotId</i> | Slot id corresponding to the card. |
| out | <i>status</i> | Status of getCard i.e. success or suitable status code. |

Returns

Pointer to [ICard](#) object.

5.7.1.3.2.6 `virtual telux::common::Status telux::tel::ICardManager::cardPowerUp (SlotId slotId, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Power on the SIM card.

Parameters

| | | |
|----|-----------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card which needs to be powered up. |
| in | <i>callback</i> | Optional callback pointer to get the result of cardPowerUp |

Returns

Status of cardPowerUp i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.7.1.3.2.7 `virtual telux::common::Status telux::tel::ICardManager::cardPowerDown (SlotId slotId, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Power off the SIM card. When the SIM card is powered down, the card state is absent and the SIM IO operations, PIN management API's like unlock card by pin, change card pin will fail.

Parameters

| | | |
|----|-----------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card which needs to be powered down. |
| in | <i>callback</i> | Optional callback pointer to get the result of CardPowerDown |

Returns

Status of cardPowerDown i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.7.1.3.2.8 virtual telux::common::Status telux::tel::ICardManager::registerListener (std::shared_ptr< ICardListener > *listener*) [pure virtual]

Register a listener for card events.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to ICardListener object that processes the notification. |
|----|-----------------|--|

Returns

Status of registerListener i.e. success or suitable status code.

5.7.1.3.2.9 virtual telux::common::Status telux::tel::ICardManager::removeListener (std::shared_ptr< ICardListener > *listener*) [pure virtual]

Remove a previously added listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer to ICardListener object that needs to be removed. |
|----|-----------------|---|

Returns

Status of removeListener i.e. success or suitable status code.

5.7.1.4 class telux::tel::ICard

[ICard](#) represents currently inserted UICC or eUICC.

Public member functions

- virtual `telux::common::Status getState (CardState &cardState)=0`
- virtual `std::vector< std::shared_ptr< ICardApp > > getApplications (telux::common::Status *status=nullptr)=0`
- virtual `telux::common::Status openLogicalChannel (std::string applicationId, std::shared_ptr< ICardChannelCallback > callback=nullptr)=0`
- virtual `telux::common::Status closeLogicalChannel (int channelId, std::shared_ptr< telux::common::ICommandResponseCallback > callback=nullptr)=0`
- virtual `telux::common::Status transmitApuLogicalChannel (int channel, uint8_t cla, uint8_t instruction, uint8_t p1, uint8_t p2, uint8_t p3, std::vector< uint8_t > data, std::shared_ptr< ICardCommandCallback > callback=nullptr)=0`
- virtual `telux::common::Status transmitApuBasicChannel (uint8_t cla, uint8_t instruction, uint8_t p1, uint8_t p2, uint8_t p3, std::vector< uint8_t > data, std::shared_ptr< ICardCommandCallback > callback=nullptr)=0`
- virtual `telux::common::Status exchangeSimIO (uint16_t fileId, uint8_t command, uint8_t p1, uint8_t p2, uint8_t p3, std::string filePath, std::vector< uint8_t > data, std::string pin2, std::string aid, std::shared_ptr< ICardCommandCallback > callback=nullptr)=0`
- virtual `int getSlotId ()=0`
- virtual `telux::common::Status requestEid (EidResponseCallback=nullptr)=0`

5.7.1.4.1 Member Function Documentation**5.7.1.4.1.1 virtual telux::common::Status telux::tel::ICard::getState (CardState & cardState) [pure virtual]**

Get the card state for the slot id.

Parameters

| | | |
|-----|------------------|---|
| out | <i>cardState</i> | <code>CardState</code> - state of the card. |
|-----|------------------|---|

Returns

Status of `getCardState` i.e. success or suitable status code.

5.7.1.4.1.2 virtual std::vector<std::shared_ptr<ICardApp> > telux::tel::ICard::getApplications (telux::common::Status * status = nullptr) [pure virtual]

Get card applications.

Parameters

| | | |
|-----|---------------|--|
| out | <i>status</i> | Status of <code>getApplications</code> i.e. success or suitable status code. |
|-----|---------------|--|

Returns

List of card applications.

5.7.1.4.1.3 `virtual telux::common::Status telux::tel::ICard::openLogicalChannel (std::string applicationId, std::shared_ptr< ICardChannelCallback > callback = nullptr) [pure virtual]`

Open a logical channel to the SIM.

Parameters

| | | |
|----|----------------------|--|
| in | <i>applicationId</i> | Application Id. |
| in | <i>callback</i> | Optional callback pointer to get the response of open logical channel request. |

Returns

Status of openLogicalChannel i.e. success or suitable status code.

5.7.1.4.1.4 `virtual telux::common::Status telux::tel::ICard::closeLogicalChannel (int channelId, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Close a previously opened logical channel to the SIM.

Parameters

| | | |
|----|------------------|---|
| in | <i>channelId</i> | The channel ID to be closed. |
| in | <i>callback</i> | Optional callback pointer to get the response of close logical channel request. |

Returns

Status of closeLogicalChannel i.e. success or suitable status code.

5.7.1.4.1.5 `virtual telux::common::Status telux::tel::ICard::transmitApduLogicalChannel (int channel, uint8_t cla, uint8_t instruction, uint8_t p1, uint8_t p2, uint8_t p3, std::vector< uint8_t > data, std::shared_ptr< ICardCommandCallback > callback = nullptr) [pure virtual]`

Transmit an APDU to the ICC card over a logical channel.

Parameters

| | | |
|----|--------------------|--|
| in | <i>channel</i> | Channel Id of the channel to use for communication. Has to be greater than zero. |
| in | <i>cla</i> | Class of the APDU command. |
| in | <i>instruction</i> | Instruction of the APDU command. |

| | | |
|----|-----------------|--|
| in | <i>p1</i> | Instruction Parameter 1 value of the APDU command. |
| in | <i>p2</i> | Instruction Parameter 2 value of the APDU command. |
| in | <i>p3</i> | Number of bytes present in the data field of the APDU command. If <i>p3</i> is negative, a 4 byte APDU is sent to the SIM. |
| in | <i>data</i> | Data to be sent with the APDU. |
| in | <i>callback</i> | Optional callback pointer to get the response of transmit APDU request. |

Returns

Status of transmitApuLogicalChannel i.e. success or suitable status code.

5.7.1.4.1.6 virtual telux::common::Status telux::tel::ICard::transmitApuBasicChannel (uint8_t *cla*, uint8_t *instruction*, uint8_t *p1*, uint8_t *p2*, uint8_t *p3*, std::vector< uint8_t > *data*, std::shared_ptr< ICardCommandCallback > *callback = nullptr*) [pure virtual]

Exchange APDUs with the SIM on a basic channel.

Parameters

| | | |
|----|--------------------|--|
| in | <i>cla</i> | Class of the APDU command. |
| in | <i>instruction</i> | Instruction of the APDU command. |
| in | <i>p1</i> | Instruction Param1 value of the APDU command. |
| in | <i>p2</i> | Instruction Param1 value of the APDU command. |
| in | <i>p3</i> | Number of bytes present in the data field of the APDU command. If <i>p3</i> is negative, a 4 byte APDU is sent to the SIM. |
| in | <i>data</i> | Data to be sent with the APDU. |
| in | <i>callback</i> | Optional callback pointer to get the response of transmit APDU request. |

Returns

Status of transmitApuBasicChannel i.e. success or suitable status code.

5.7.1.4.1.7 virtual telux::common::Status telux::tel::ICard::exchangeSimIO (uint16_t *fileId*, uint8_t *command*, uint8_t *p1*, uint8_t *p2*, uint8_t *p3*, std::string *filePath*, std::vector< uint8_t > *data*, std::string *pin2*, std::string *aid*, std::shared_ptr< ICardCommandCallback > *callback = nullptr*) [pure virtual]

Performs SIM IO operation, This is similar to the TS 27.007 "restricted SIM" operation where it assumes all of the EF selection will be done by the callee

Parameters

| | | |
|----|----------------|--|
| in | <i>fileId</i> | Elementary File Identifier |
| in | <i>command</i> | APDU Command for SIM IO operation |
| in | <i>p1</i> | Instruction Param1 value of the APDU command |
| in | <i>p2</i> | Instruction Param2 value of the APDU command |

| | | |
|----|-----------------|---|
| in | <i>p3</i> | Number of bytes present in the data field of APDU command. If p3 is negative, a 4 byte APDU is sent to the SIM. |
| in | <i>filePath</i> | Path of the file |
| in | <i>data</i> | Data to be sent with the APDU, send empty or null string in case no data |
| in | <i>pin2</i> | Pin value of the SIM. Invalid attempt of PIN2 value will lock the SIM. send empty or null string in case of no Pin2 value |
| in | <i>aid</i> | Application identifier, send empty or null string in case of no aid |
| in | <i>callback</i> | Optional callback pointer to get the response of SIM IO request |

Returns

- Status of exchangeSimIO i.e. success or suitable status code

5.7.1.4.1.8 virtual int telux::tel::ICard::getSlotId () [pure virtual]

Get associated slot id for [ICard](#)

Returns

SlotId

5.7.1.4.1.9 virtual telux::common::Status telux::tel::ICard::requestEid (EidResponseCallback = nullptr) [pure virtual]

Request eUICC identifier of eUICC card.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Callback function to get the result of request eid. |
|----|-----------------|---|

Returns

Status of request eid i.e. success or suitable error code.

Dependencies card should be eUICC capable**5.7.1.5 class telux::tel::ICardChannelCallback**

Interface for Card callback object. Client needs to implement this interface to get single shot responses for commands like open logical channel and close logical channel.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void `onChannelResponse` (int channel, `IccResult` result, `telux::common::ErrorCode` error)=0

5.7.1.5.1 Member Function Documentation

5.7.1.5.1.1 virtual void `telux::tel::IccChannelCallback::onChannelResponse` (int *channel*, `IccResult` *result*, `telux::common::ErrorCode` *error*) [pure virtual]

This function is called with the response to the open logical channel operation.

Parameters

| | | |
|----|----------------|---|
| in | <i>channel</i> | Channel Id for the logical channel. |
| in | <i>result</i> | <code>IccResult</code> of open logical channel. |
| in | <i>error</i> | <code>ErrorCode</code> of the request. |

5.7.1.6 class telux::tel::IccCommandCallback**Public member functions**

- virtual void `onResponse` (`IccResult` result, `telux::common::ErrorCode` error)=0

5.7.1.6.1 Member Function Documentation

5.7.1.6.1.1 virtual void `telux::tel::IccCommandCallback::onResponse` (`IccResult` *result*, `telux::common::ErrorCode` *error*) [pure virtual]

This function is called when SIM Card transmit APDU over Logical, Basic Channel and Exchange Sim IO.

Parameters

| | | |
|----|---------------|---|
| in | <i>result</i> | <code>IccResult</code> of transmit APDU command |
| in | <i>error</i> | <code>ErrorCode</code> of the request, Possible error codes are <ul style="list-style-type: none"> • <code>SUCCESS</code> • <code>INTERNAL</code> • <code>NO_MEMORY</code> • <code>INVALID_ARG</code> • <code>MISSING_ARG</code> |

5.7.1.7 class telux::tel::IccListener

Interface for SIM Card Listener object. Client needs to implement this interface to get access to card services notifications on card state change.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onCardInfoChanged](#) (int slotId)
- virtual [~ICardListener](#) ()

5.7.1.7.1 Constructors and Destructors

5.7.1.7.1.1 virtual [telux::tel::ICardListener::~~ICardListener](#) () [**virtual**]

5.7.1.7.2 Member Function Documentation

5.7.1.7.2.1 virtual void [telux::tel::ICardListener::onCardInfoChanged](#) (int *slotId*) [**virtual**]

This function is called when info of card gets updated.

Parameters

| | | |
|----|---------------|------------------|
| in | <i>slotId</i> | Slot identifier. |
|----|---------------|------------------|

5.7.1.8 struct telux::tel::CardReaderStatus

Structure contains identity of card reader status

Data fields

| Type | Field | Description |
|------|----------------------|----------------------------------|
| int | id | Card Reader ID |
| bool | isRemovable | Card reader is removable |
| bool | isPresent | Card reader is present |
| bool | isID1size | Card reader present is ID-1 size |
| bool | isCardPresent | Card is present in reader |
| bool | isCard↔ PoweredOn | Card in reader is powered |

5.7.1.9 class telux::tel::ISapCardManager

[ISapCardManager](#) provide APIs for SAP related operations.

Public member functions

- virtual bool [isReady](#) ()=0
- virtual std::future< bool > [onReady](#) ()=0
- virtual [telux::common::Status](#) [getState](#) (SapState &sapState)=0
- virtual [telux::common::Status](#) [requestSapState](#) (SapStateResponseCallback callback)=0
- virtual [telux::common::Status](#) [openConnection](#) (SapCondition sapCondition=SapCondition::SAP_CONDITION_BLOCK_VOICE_OR_DATA, std::shared_ptr<

- `telux::common::ICommandResponseCallback > callback=nullptr)=0`
- virtual `telux::common::Status closeConnection (std::shared_ptr< telux::common::ICommandResponseCallback > callback=nullptr)=0`
- virtual `telux::common::Status requestAtr (std::shared_ptr< IAtrResponseCallback > callback=nullptr)=0`
- virtual `telux::common::Status transmitApdu (uint8_t cla, uint8_t instruction, uint8_t p1, uint8_t p2, uint8_t lc, std::vector< uint8_t > data, uint8_t le=0, std::shared_ptr< ISapCardCommandCallback > callback=nullptr)=0`
- virtual `telux::common::Status requestSimPowerOff (std::shared_ptr< telux::common::ICommandResponseCallback > callback=nullptr)=0`
- virtual `telux::common::Status requestSimPowerOn (std::shared_ptr< telux::common::ICommandResponseCallback > callback=nullptr)=0`
- virtual `telux::common::Status requestSimReset (std::shared_ptr< telux::common::ICommandResponseCallback > callback=nullptr)=0`
- virtual `telux::common::Status requestCardReaderStatus (std::shared_ptr< ICardReaderCallback > callback=nullptr)=0`
- virtual `int getSlotId ()=0`
- virtual `telux::common::Status registerListener (std::shared_ptr< ISapCardListener > listener)=0`
- virtual `telux::common::Status removeListener (std::shared_ptr< ISapCardListener > listener)=0`
- virtual `~ISapCardManager ()`

5.7.1.9.1 Constructors and Destructors

5.7.1.9.1.1 virtual `telux::tel::ISapCardManager::~~ISapCardManager () [virtual]`

5.7.1.9.2 Member Function Documentation

5.7.1.9.2.1 virtual `bool telux::tel::ISapCardManager::isReady () [pure virtual]`

Checks the status of SIM access profile(SAP) subsystem and returns the result.

Returns

If true then SapCardManager is ready for service.

5.7.1.9.2.2 virtual `std::future<bool> telux::tel::ISapCardManager::onReady () [pure virtual]`

Wait for IM access profile(SAP) subsystem to be ready.

Returns

A future that caller can wait on to be notified when card manager is ready.

5.7.1.9.2.3 virtual telux::common::Status telux::tel::ISapCardManager::getState (SapState & *sapState*) [pure virtual]

Get SIM access profile (SAP) client connection state.

Parameters

| | | |
|-----|-----------------|--------------------------|
| out | <i>sapState</i> | SapState of the SIM Card |
|-----|-----------------|--------------------------|

Returns

Status of getState i.e. success or suitable status code.

Deprecated Use [requestSapState\(\)](#) API below to get SAP state

5.7.1.9.2.4 virtual telux::common::Status telux::tel::ISapCardManager::requestSapState (SapStateResponseCallback *callback*) [pure virtual]

Get SIM access profile(SAP) client connection state.

Parameters

| | | |
|-----|-----------------|---|
| out | <i>callback</i> | Callback function pointer to get the response of requestSapState. |
|-----|-----------------|---|

Returns

Status of requestSapState i.e. success or suitable status code.

5.7.1.9.2.5 virtual telux::common::Status telux::tel::ISapCardManager::openConnection (SapCondition *sapCondition* = SapCondition::SAP_CONDITION_BLOCK_VOICE_OR_DATA, std::shared_ptr< telux::common::ICommandResponseCallback > *callback* = nullptr) [pure virtual]

Establishes SIM access profile (SAP) client connection with SIM Card.

Parameters

| | | |
|----|---------------------|--|
| in | <i>sapCondition</i> | Condition to enable sap connection. |
| in | <i>callback</i> | Optional callback to get the response of open sap connection request or possible error codes i.e. <ul style="list-style-type: none"> • SUCCESS • INTERNAL • NO_MEMORY • INVALID_ARG • MISSING_ARG |

Returns

Status of openConnection i.e. success or suitable status code.

5.7.1.9.2.6 `virtual telux::common::Status telux::tel::ISapCardManager::closeConnection (std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Releases a SAP connection to SIM Card.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback to get the response of close sap connection request or possible error codes i.e. <ul style="list-style-type: none"> • SUCCESS • INTERNAL • NO_MEMORY • INVALID_ARG • MISSING_ARG |
|----|-----------------|---|

Returns

Status of closeConnection i.e. success or suitable status code

5.7.1.9.2.7 `virtual telux::common::Status telux::tel::ISapCardManager::requestAtr (std::shared_ptr< IAtrResponseCallback > callback = nullptr) [pure virtual]`

Request for SAP Answer To Reset command.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Optional callback to get the response of requestAtr. |
|----|-----------------|--|

Returns

Status of requestAtr i.e. success or suitable status code.

5.7.1.9.2.8 `virtual telux::common::Status telux::tel::ISapCardManager::transmitApdu (uint8_t cla, uint8_t instruction, uint8_t p1, uint8_t p2, uint8_t lc, std::vector< uint8_t > data, uint8_t le = 0, std::shared_ptr< ISapCardCommandCallback > callback = nullptr) [pure virtual]`

Send the Apdu on SAP mode.

Parameters

| | | |
|----|--------------------|--|
| in | <i>cla</i> | Class of the APDU command. |
| in | <i>instruction</i> | Instruction of the APDU command. |
| in | <i>p1</i> | Instruction Parameter 1 value of the APDU command. |

| | | |
|----|-----------------|--|
| in | <i>p2</i> | Instruction Parameter 1 value of the APDU command. |
| in | <i>lc</i> | Number of bytes present in the data field of the APDU command. If <i>lc</i> is negative, a 4 byte APDU is sent to the SIM. |
| in | <i>data</i> | List of data to be sent with the APDU. |
| in | <i>le</i> | Maximum number of bytes expected in the data field of the response to the command. |
| in | <i>callback</i> | Optional callback to send APDU in SAP mode. |

Returns

Status of transmitApdu i.e. success or suitable status code.

5.7.1.9.2.9 `virtual telux::common::Status telux::tel::ISapCardManager::requestSimPowerOff (std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Send the SAP SIM power off request.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Optional callback to get the response for SIM power off. |
|----|-----------------|--|

Returns

Status of requestSimPowerOff i.e. success or suitable status code.

5.7.1.9.2.10 `virtual telux::common::Status telux::tel::ISapCardManager::requestSimPowerOn (std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Send the SAP SIM power on request.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback to get the response for SIM power on. |
|----|-----------------|---|

Returns

Status of requestSimPowerOn i.e. success or suitable status code.

5.7.1.9.2.11 `virtual telux::common::Status telux::tel::ISapCardManager::requestSimReset (std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Send the SAP SIM reset request.

Parameters

| | | |
|-----------|-----------------|---|
| <i>in</i> | <i>callback</i> | Optional callback to get the response for SIM reset |
|-----------|-----------------|---|

Returns

Status of requestSimReset i.e. success or suitable status code.

5.7.1.9.2.12 `virtual telux::common::Status telux::tel::ISapCardManager::requestCardReaderStatus (std::shared_ptr< ICardReaderCallback > callback = nullptr) [pure virtual]`

Send the SAP Card Reader Status request command.

Parameters

| | | |
|-----------|-----------------|--|
| <i>in</i> | <i>callback</i> | Optional callback to get the response for card reader status |
|-----------|-----------------|--|

Returns

Status of requestCardReaderStatus i.e. success or suitable status code.

5.7.1.9.2.13 `virtual int telux::tel::ISapCardManager::getSlotId () [pure virtual]`

Get associated slot id for the SapCardManager.

Returns

SlotId

5.7.1.9.2.14 `virtual telux::common::Status telux::tel::ISapCardManager::registerListener (std::shared_ptr< ISapCardListener > listener) [pure virtual]`

Register a listener for SAP events.

Parameters

| | | |
|-----------|-----------------|---|
| <i>in</i> | <i>listener</i> | Pointer to ISapCardListener object that processes the notification. |
|-----------|-----------------|---|

Returns

Status of registerListener i.e. success or suitable status code.

5.7.1.9.2.15 `virtual telux::common::Status telux::tel::ISapCardManager::removeListener (std::shared_ptr< ISapCardListener > listener) [pure virtual]`

Remove a previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to ISapCardListener object that needs to be removed. |
|----|-----------------|--|

Returns

Status of removeListener i.e. success or suitable status code.

5.7.1.10 class telux::tel::IAtrResponseCallback**Public member functions**

- virtual void [atrResponse](#) (std::vector< int > responseAtr, [telux::common::ErrorCode](#) error)=0

5.7.1.10.1 Member Function Documentation**5.7.1.10.1.1 virtual void telux::tel::IAtrResponseCallback::atrResponse (std::vector< int > *responseAtr*, [telux::common::ErrorCode](#) *error*) [pure virtual]**

This function is called in response to requestAtr() request.

Parameters

| | | |
|----|--------------------|--|
| in | <i>responseAtr</i> | response ATR values |
| in | <i>error</i> | ErrorCode of the request possible error codes are <ul style="list-style-type: none"> • SUCCESS • INTERNAL • NO_MEMORY • INVALID_ARG • MISSING_ARG |

5.7.1.11 class telux::tel::ISapCardCommandCallback**Public member functions**

- virtual void [onResponse](#) ([IccResult](#) result, [telux::common::ErrorCode](#) error)=0

5.7.1.11.1 Member Function Documentation**5.7.1.11.1.1 virtual void telux::tel::ISapCardCommandCallback::onResponse ([IccResult](#) *result*, [telux::common::ErrorCode](#) *error*) [pure virtual]**

This function is called when SIM Card transmit APDU on SAP mode.

Parameters

| | | |
|----|---------------|---|
| in | <i>result</i> | IccResult of transmit APDU command |
| in | <i>error</i> | ErrorCode of the request, possible error codes are <ul style="list-style-type: none"> • SUCCESS • INTERNAL • NO_MEMORY • INVALID_ARG • MISSING_ARG |

5.7.1.12 class telux::tel::ICardReaderCallback**Public member functions**

- virtual void [cardReaderResponse](#) ([CardReaderStatus](#) cardReaderStatus, [telux::common::ErrorCode](#) error)=0

5.7.1.12.1 Member Function Documentation**5.7.1.12.1.1 virtual void telux::tel::ICardReaderCallback::cardReaderResponse ([CardReaderStatus](#) *cardReaderStatus*, [telux::common::ErrorCode](#) *error*) [pure virtual]**

This function is called in response to requestCardReaderStatus() method.

Parameters

| | | |
|----|-------------------------|--|
| in | <i>cardReaderStatus</i> | Structure contains the identity of the card reader |
| in | <i>error</i> | ErrorCode of the request |

5.7.1.13 class telux::tel::ISapCardListener

Interface for SAP Listener object. Client needs to implement this interface to get access to SAP service notifications like service status change.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual [~ISapCardListener](#) ()

5.7.1.13.1 Constructors and Destructors**5.7.1.13.1.1 virtual telux::tel::ISapCardListener::~~ISapCardListener () [virtual]**

5.7.2 Enumeration Type Documentation

5.7.2.1 enum telux::tel::CardState [strong]

Defines all state of Card like absent, present etc

Enumerator

CARDSTATE_UNKNOWN Unknown card state
CARDSTATE_ABSENT Card is absent
CARDSTATE_PRESENT Card is present
CARDSTATE_ERROR Card is having error, either card is removed and not readable
CARDSTATE_RESTRICTED Card is present but not usable due to carrier restrictions.

5.7.2.2 enum telux::tel::CardError [strong]

Defines the reasons for error in CardState

Enumerator

UNKNOWN Unknown error
POWER_DOWN Power down
POLL_ERROR Poll error
NO_ATR_RECEIVED No ATR received
VOLT_MISMATCH Volt mismatch
PARITY_ERROR Parity error
POSSIBLY_REMOVED Unknown, possibly removed
TECHNICAL_PROBLEMS Card returned technical problems
NULL_BYTES Card returned NULL bytes
SAP_CONNECTED Terminal in SAP mode
CMD_TIMEOUT Command timeout error

5.7.2.3 enum telux::tel::CardLockType [strong]

Defines all types of card locks which uses in PIN management APIs

Enumerator

PIN1 Lock type is PIN1
PIN2 Lock type is PIN2
PUK1 Lock type is Pin Unblocking Key1
PUK2 Lock type is Pin Unblocking Key2
FDN Lock type is Fixed Dialing Number

5.7.2.4 enum telux::tel::AppType

Defines all type of UICC application such as SIM, RUIM, USIM, CSIM and ISIM.

Enumerator

APPTYPE_UNKNOWN Unknown application type
APPTYPE_SIM UICC application type is SIM

APPTYPE_USIM UICC application type is USIM
APPTYPE_RUIM UICC application type is RSIM
APPTYPE_CSIM UICC application type is CSIM
APPTYPE_ISIM UICC application type is ISIM

5.7.2.5 enum telux::tel::AppState

Defines all application states.

Enumerator

APPSTATE_UNKNOWN Unknown application state
APPSTATE_DETECTED application state detected
APPSTATE_PIN If PIN1 or UPin is required
APPSTATE_PUK If PUK1 or Puk for UPin is required
APPSTATE_SUBSCRIPTION_PERSO PersoSubstate should be look at when application state is assigned to this value
APPSTATE_READY application State is ready

5.7.2.6 enum telux::tel::SapState [strong]

Defines all SIM access profile (SAP) connection states.

Enumerator

SAP_STATE_NOT_ENABLED SAP connection not enabled
SAP_STATE_CONNECTING SAP State is connecting
SAP_STATE_CONNECTED_SUCCESSFULLY SAP connection is successful
SAP_STATE_CONNECTION_ERROR SAP connection error
SAP_STATE_DISCONNECTING SAP state is disconnecting
SAP_STATE_DISCONNECTED_SUCCESSFULLY SAP state disconnection is successful

5.7.2.7 enum telux::tel::SapCondition [strong]

Indicates type of connection required, default behavior is to block a SAP connection when a voice or data call is active.

Enumerator

SAP_CONDITION_BLOCK_VOICE_OR_DATA Block a SAP connection when a voice or data call is active (Default)
SAP_CONDITION_BLOCK_DATA Block a SAP connection when a data call is active
SAP_CONDITION_BLOCK_VOICE Block a SAP connection when a voice call is active
SAP_CONDITION_BLOCK_NONE Allow Sap connection in all cases

5.8 Cell Broadcast

This section contains APIs related to configure, activate and receive 3GPP ETWS/CMAS cell broadcast messages.

5.8.1 Data Structure Documentation

5.8.1.1 struct telux::tel::CellBroadcastFilter

Defines cellbroadcast message filter. Refer spec 3GPP TS 23.041 9.4.1.2.2 for message identifier. Eg: If user want to receive from 0x1112 to 0x1116 then, startMessageId is 0x1112 and endMessageId is 0x1116. If user want to receive only 0x1112, then both startMessageId and endMessageId is 0x1112.

Data fields

| Type | Field | Description |
|------|----------------|--|
| int | startMessageId | Intended to receive start from which MessageType |
| int | endMessageId | Intended to receive upto which MessageType |

5.8.1.2 struct telux::tel::Point

[Point](#) represented by latitude and longitude.

Data fields

| Type | Field | Description |
|--------|-----------|-------------|
| double | latitude | |
| double | longitude | |

5.8.1.3 class telux::tel::Polygon

This class represents a simple polygon with different points.

Public member functions

- [Polygon](#) (std::vector< [Point](#) > vertices)
- std::vector< [Point](#) > [getVertices](#) ()

5.8.1.3.1 Constructors and Destructors

5.8.1.3.1.1 telux::tel::Polygon::Polygon (std::vector< Point > vertices)

[Polygon](#) constructor.

Parameters

| | | |
|----|----------|---|
| in | vertices | List of telux::tel::Point |
|----|----------|---|

5.8.1.3.2 Member Function Documentation

5.8.1.3.2.1 `std::vector<Point> telux::tel::Polygon::getVertices ()`

Get vertices of polygon.

Returns

List of [telux::tel::Point](#).

5.8.1.4 class `telux::tel::Circle`

This class represents a geometry represented as simple circle.

Public member functions

- [Circle](#) ([Point](#) center, double radius)
- [Point](#) `getCenter` ()
- double `getRadius` ()

5.8.1.4.1 Constructors and Destructors

5.8.1.4.1.1 `telux::tel::Circle::Circle (Point center, double radius)`

[Circle](#) constructor.

Parameters

| | | |
|----|---------------|---|
| in | <i>center</i> | Center of circle represented by telux::tel::Point |
| in | <i>radius</i> | Radius of circle in meters |

5.8.1.4.2 Member Function Documentation

5.8.1.4.2.1 `Point telux::tel::Circle::getCenter ()`

Get center point of circle.

Returns

Center of circle.

5.8.1.4.2.2 `double telux::tel::Circle::getRadius ()`

Get radius of circle.

Returns

Radius of circle.

5.8.1.5 class telux::tel::Geometry

This class represents warning area geometry to perform geofencing on alert.

Public member functions

- [Geometry](#) (std::shared_ptr< [Polygon](#) > polygon)
- [Geometry](#) (std::shared_ptr< [Circle](#) > circle)
- [GeometryType](#) [getType](#) () const
- std::shared_ptr< [Polygon](#) > [getPolygon](#) () const
- std::shared_ptr< [Circle](#) > [getCircle](#) () const

5.8.1.5.1 Constructors and Destructors

5.8.1.5.1.1 telux::tel::Geometry::Geometry (std::shared_ptr< [Polygon](#) > *polygon*)

[Geometry](#) constructor.

Parameters

| | | |
|----|----------------|-------------------------|
| in | <i>polygon</i> | Polygon |
|----|----------------|-------------------------|

5.8.1.5.1.2 telux::tel::Geometry::Geometry (std::shared_ptr< [Circle](#) > *circle*)

[Geometry](#) constructor.

Parameters

| | | |
|----|---------------|------------------------|
| in | <i>circle</i> | Circle |
|----|---------------|------------------------|

5.8.1.5.2 Member Function Documentation

5.8.1.5.2.1 GeometryType telux::tel::Geometry::getType () const

Get the geometry type.

Returns

[GeometryType](#).

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.8.1.5.2.2 `std::shared_ptr<Polygon> telux::tel::Geometry::getPolygon () const`

Get polygon geometry as warning area to perform geofencing. This method should be called only if geometry type returned by `getType()` API is `GeometryType::POLYGON`

Returns

`Polygon` geometry object.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.8.1.5.2.3 `std::shared_ptr<Circle> telux::tel::Geometry::getCircle () const`

Get circle geometry as warning area to perform geofencing. This method should be called only if geometry type returned by `getType()` API is `GeometryType::CIRCLE`

Returns

`Circle` geometry object.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.8.1.6 `class telux::tel::WarningAreaInfo`

This class represents warning area information for alert.

Public member functions

- `WarningAreaInfo` (int `maxWaitTime`, `std::vector< Geometry > geometries`)
- int `getGeoFenceMaxWaitTime` ()
- `std::vector< Geometry > getGeometries` ()

5.8.1.6.1 Constructors and Destructors

5.8.1.6.1.1 `telux::tel::WarningAreaInfo::WarningAreaInfo (int maxWaitTime, std::vector< Geometry > geometries)`

Warning Area Information constructor.

Parameters

| | | |
|----|--------------------|--|
| in | <i>maxWaitTime</i> | Maximum wait time allowed to determine position for alert Range is 0 to 255 where 0 means Zero wait time, 1 - 254 is Geo-Fencing Maximum Wait Time in seconds and 255 means use device default wait time. |
| in | <i>geometries</i> | Geometries to perform geofencing on alert |

5.8.1.6.2 Member Function Documentation**5.8.1.6.2.1 int telux::tel::WarningAreaInfo::getGeoFenceMaxWaitTime ()**

Get maximum wait time allowed to determine position for alert.

Returns

Maximum wait time for alert in seconds.

5.8.1.6.2.2 std::vector<Geometry> telux::tel::WarningAreaInfo::getGeometries ()

Get geometries to perform geofencing on alert.

Returns

List of [telux::tel::Geometry](#).

5.8.1.7 class telux::tel::EtwsInfo

Contains information elements for a GSM/UMTS/E-UTRAN/NG-RAN ETWS warning notification. Supported values for each element are defined in 3GPP TS 23.041.

Public member functions

- [EtwsInfo](#) ([GeographicalScope](#) geographicalScope, int msgId, int serialNumber, std::string languageCode, std::string messageText, [MessagePriority](#) priority, [EtwsWarningType](#) warningType, bool emergencyUserAlert, bool activatePopup, bool primary, std::vector< uint8_t > warningSecurityInformation)
- [GeographicalScope](#) [getGeographicalScope](#) () const
- int [getMessageId](#) () const
- int [getSerialNumber](#) () const
- std::string [getLanguageCode](#) () const
- std::string [getMessageBody](#) () const
- [MessagePriority](#) [getPriority](#) () const
- int [getMessageCode](#) () const

- int [getUpdateNumber](#) () const
- [EtwsWarningType](#) [getEtwsWarningType](#) ()
- bool [isEmergencyUserAlert](#) ()
- bool [isPopupAlert](#) ()
- bool [isPrimary](#) ()
- std::vector< uint8_t > [getWarningSecurityInformation](#) ()

5.8.1.7.1 Constructors and Destructors

5.8.1.7.1.1 `telux::tel::EtwsInfo::EtwsInfo (GeographicalScope geographicalScope, int msgId, int serialNumber, std::string languageCode, std::string messageText, MessagePriority priority, EtwsWarningType warningType, bool emergencyUserAlert, bool activatePopup, bool primary, std::vector< uint8_t > warningSecurityInformation)`

[EtwsInfo](#) constructor.

Parameters

| | | |
|----|---|--|
| in | <i>geographicalScope</i> | GeographicalScope |
| in | <i>msgId</i> | Unique message identifier |
| in | <i>serialNumber</i> | Serial number for message |
| in | <i>languageCode</i> | ISO-639-1 language code for message |
| in | <i>messageText</i> | Message text |
| in | <i>priority</i> | MessagePriority |
| in | <i>warningType</i> | EtwsWarningType |
| in | <i>emergencyUserAlert</i> | If true message is emergency user alert otherwise not |
| in | <i>activatePopup</i> | If true message message activate popup flag is set, otherwise popup flag is false. |
| in | <i>primary</i> | If true ETWS message is primary notification otherwise not |
| in | <i>warningSecurity↔ Information</i> | Buffer containing security information about ETWS primary notification such as timestamp and digital signature |

5.8.1.7.2 Member Function Documentation

5.8.1.7.2.1 `GeographicalScope telux::tel::EtwsInfo::getGeographicalScope () const`

Get the `geographicalScope` of cellbroadcast message.

Returns

[GeographicalScope](#).

5.8.1.7.2.2 `int telux::tel::EtwsInfo::getMessageId () const`

Get cellbroadcast message identifier. The message identifier identifies the type of the cell broadcast message defined in spec 3GPP TS 23.041 9.4.1.2.2

Returns

Message identifier.

5.8.1.7.2.3 int telux::tel::EtwsInfo::getSerialNumber () const

Get the serial number of broadcast (geographical scope + message code + update number for GSM/UMTS).

Returns

int containing cellbroadcast serial number.

5.8.1.7.2.4 std::string telux::tel::EtwsInfo::getLanguageCode () const

Get the ISO-639-1 language code for cell broadcast message, or empty string if unspecified. This is not applicable for ETWS primary notification.

Returns

Language code

5.8.1.7.2.5 std::string telux::tel::EtwsInfo::getMessageBody () const

Get the body of cell broadcast message, or empty string if no body available. For ETWS primary notification based on message identifier pre canned message will be sent.

Returns

body or empty string

5.8.1.7.2.6 MessagePriority telux::tel::EtwsInfo::getPriority () const

Get the priority for the cell broadcast message.

Returns

[MessagePriority](#).

5.8.1.7.2.7 int telux::tel::EtwsInfo::getMessageCode () const

Get the cellbroadcast message code.

Returns

int containing cellbroadcast message code.

5.8.1.7.2.8 int telux::tel::EtwsInfo::getUpdateNumber () const

Get the cellbroadcast message update number.

Returns

int containing cellbroadcast message's update number.

5.8.1.7.2.9 EtwsWarningType telux::tel::EtwsInfo::getEtwsWarningType ()

Get ETWS warning type.

Returns

[EtwsWarningType](#).

5.8.1.7.2.10 bool telux::tel::EtwsInfo::isEmergencyUserAlert ()

Returns the ETWS emergency user alert flag.

Returns

true to notify terminal to activate emergency user alert or false otherwise

5.8.1.7.2.11 bool telux::tel::EtwsInfo::isPopupAlert ()

Returns the ETWS activate popup flag.

Returns

true to notify terminal to activate display popup or false otherwise

5.8.1.7.2.12 bool telux::tel::EtwsInfo::isPrimary ()

Returns the ETWS format flag. This flag determine whether ETWS message is primary notification or not.

Returns

true if the message is primary message, otherwise secondary message

5.8.1.7.2.13 std::vector<uint8_t> telux::tel::EtwsInfo::getWarningSecurityInformation ()

Returns security information about ETWS primary notification such as timestamp and digital signature(applicable only for GSM).

Returns

byte buffer

5.8.1.8 class telux::tel::CmasInfo

Contains information elements for a GSM/UMTS/E-UTRAN/NG-RAN CMAS warning notification. Supported values for each element are defined in 3GPP TS 23.041.

Public member functions

- [CmasInfo](#) ([GeographicalScope](#) geographicalScope, int msgId, int serialNumber, std::string languageCode, std::string messageText, [MessagePriority](#) priority, [CmasMessageClass](#) messageClass, [CmasSeverity](#) severity, [CmasUrgency](#) urgency, [CmasCertainty](#) certainty, std::shared_ptr<[WarningAreaInfo](#) > warningAreaInfo)
- [GeographicalScope](#) getGeographicalScope () const
- int getMessageId () const
- int getSerialNumber () const
- std::string getLanguageCode () const
- std::string getMessageBody () const
- [MessagePriority](#) getPriority () const
- int getMessageCode () const
- int getUpdateNumber () const
- [CmasMessageClass](#) getMessageClass ()
- [CmasSeverity](#) getSeverity ()
- [CmasUrgency](#) getUrgency ()
- [CmasCertainty](#) getCertainty ()
- std::shared_ptr< [WarningAreaInfo](#) > getWarningAreaInfo ()

5.8.1.8.1 Constructors and Destructors

5.8.1.8.1.1 telux::tel::CmasInfo::CmasInfo ([GeographicalScope](#) *geographicalScope*, int *msgId*, int *serialNumber*, std::string *languageCode*, std::string *messageText*, [MessagePriority](#) *priority*, [CmasMessageClass](#) *messageClass*, [CmasSeverity](#) *severity*, [CmasUrgency](#) *urgency*, [CmasCertainty](#) *certainty*, std::shared_ptr< [WarningAreaInfo](#) > *warningAreaInfo*)

[CmasInfo](#) constructor.

Parameters

| | | |
|----|--------------------------|-------------------------------------|
| in | <i>geographicalScope</i> | GeographicalScope |
| in | <i>msgId</i> | Unique message identifier |
| in | <i>serialNumber</i> | Serial number for message |
| in | <i>languageCode</i> | ISO-639-1 language code for message |
| in | <i>messageText</i> | Message text |
| in | <i>priority</i> | MessagePriority |
| in | <i>messageClass</i> | CmasMessageClass |

| | | |
|----|------------------|-------------------------------|
| in | <i>severity</i> | CmasSeverity |
| in | <i>urgency</i> | CmasUrgency |
| in | <i>certainty</i> | CmasCertainty |

5.8.1.8.2 Member Function Documentation

5.8.1.8.2.1 GeographicalScope telux::tel::CmasInfo::getGeographicalScope () const

Get the geographicalScope of cellbroadcast message.

Returns

[GeographicalScope](#).

5.8.1.8.2.2 int telux::tel::CmasInfo::getMessageId () const

Get cellbroadcast message identifier. The message identifier identifies the type of the cell broadcast message defined in spec 3GPP TS 23.041 9.4.1.2.2

Returns

Message identifier.

5.8.1.8.2.3 int telux::tel::CmasInfo::getSerialNumber () const

Get the serial number of broadcast (geographical scope + message code + update number for GSM/UMTS).

Returns

int containing cellbroadcast serial number.

5.8.1.8.2.4 std::string telux::tel::CmasInfo::getLanguageCode () const

Get the ISO-639-1 language code for cell broadcast message, or empty string if unspecified. This is not applicable for ETWS primary notification.

Returns

Language code

5.8.1.8.2.5 std::string telux::tel::CmasInfo::getMessageBody () const

Get the body of cell broadcast message, or empty string if no body available. For ETWS primary notification based on message identifier pre canned message will be sent.

Returns

body or empty string

5.8.1.8.2.6 MessagePriority telux::tel::CmasInfo::getPriority () const

Get the priority for the cell broadcast message.

Returns

[MessagePriority](#).

5.8.1.8.2.7 int telux::tel::CmasInfo::getMessageCode () const

Get the cellbroadcast message code.

Returns

int containing cellbroadcast message code.

5.8.1.8.2.8 int telux::tel::CmasInfo::getUpdateNumber () const

Get the cellbroadcast message update number.

Returns

int containing cellbroadcast message's update number.

5.8.1.8.2.9 CmasMessageClass telux::tel::CmasInfo::getMessageClass ()

Get CMAS message class.

Returns

[CmasMessageClass](#).

5.8.1.8.2.10 CmasSeverity telux::tel::CmasInfo::getSeverity ()

Get CMAS message severity.

Returns

[CmasSeverity](#).

5.8.1.8.2.11 CmasUrgency telux::tel::CmasInfo::getUrgency ()

Get CMAS message urgency.

Returns

[CmasUrgency](#).

5.8.1.8.2.12 CmasCertainty telux::tel::CmasInfo::getCertainty ()

Get CMAS message certainty.

Returns

[CmasCertainty](#).

5.8.1.8.2.13 std::shared_ptr<WarningAreaInfo> telux::tel::CmasInfo::getWarningAreaInfo ()

Returns warning area information for alert. This is applicable for LTE and NR5G

Returns

pointer to [WarningAreaInfo](#) or null if there is no warning area information available.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.8.1.9 class telux::tel::CellBroadcastMessage

Cell Broadcast message.

Public member functions

- [CellBroadcastMessage](#) (std::shared_ptr< [EtwsInfo](#) > etwsInfo)
- [CellBroadcastMessage](#) (std::shared_ptr< [CmasInfo](#) > cmasInfo)
- [MessageType](#) [getMessageType](#) () const
- std::shared_ptr< [EtwsInfo](#) > [getEtwsInfo](#) () const
- std::shared_ptr< [CmasInfo](#) > [getCmasInfo](#) () const

5.8.1.9.1 Constructors and Destructors

5.8.1.9.1.1 telux::tel::CellBroadcastMessage::CellBroadcastMessage (std::shared_ptr< [EtwsInfo](#) > [etwsInfo](#))

[CellBroadcastMessage](#) constructor.

Parameters

| | | |
|----|-----------------|--------------------------|
| in | <i>etwsInfo</i> | EtwsInfo |
|----|-----------------|--------------------------|

5.8.1.9.1.2 `telux::tel::CellBroadcastMessage::CellBroadcastMessage (std::shared_ptr< CmasInfo > cmasInfo)`

[CellBroadcastMessage](#) constructor.

Parameters

| | | |
|----|-----------------|--------------------------|
| in | <i>cmasInfo</i> | CmasInfo |
|----|-----------------|--------------------------|

5.8.1.9.2 Member Function Documentation

5.8.1.9.2.1 `MessageType telux::tel::CellBroadcastMessage::getMessageType () const`

Get the cellbroadcast message type.

Returns

[MessageType](#).

5.8.1.9.2.2 `std::shared_ptr<EtwsInfo> telux::tel::CellBroadcastMessage::getEtwsInfo () const`

Get ETWS warning notification containing information about the ETWS warning type, the emergency user alert flag and the popup flag. This method should be called only if message type returned by [getMessageType\(\)](#) API is [MessageType::ETWS](#)

Returns

pointer to [EtwsInfo](#) or null if this is not an ETWS warning notification

5.8.1.9.2.3 `std::shared_ptr<CmasInfo> telux::tel::CellBroadcastMessage::getCmasInfo () const`

Get CMAS warning notification containing information about the CMAS message class, severity, urgency and certainty. This method should be called only if message type returned by [getMessageType\(\)](#) API is [MessageType::CMAS](#)

Returns

pointer to [CmasInfo](#) or null if this is not a CMAS warning notification

5.8.1.10 `class telux::tel::ICellBroadcastManager`

`CellBroadcastManager` class is primary interface to configure and activate emergency broadcast messages and receive broadcast messages.

Public member functions

- virtual bool `isSubsystemReady ()=0`
- virtual `std::future< bool > onSubsystemReady ()=0`
- virtual SlotId `getSlotId ()=0`
- virtual `telux::common::Status updateMessageFilters (std::vector< CellBroadcastFilter > filters, telux::common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status requestMessageFilters (RequestFiltersResponseCallback callback)=0`
- virtual `telux::common::Status setActivationStatus (bool activate, telux::common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status requestActivationStatus (RequestActivationStatusResponseCallback callback)=0`
- virtual `telux::common::Status registerListener (std::weak_ptr< ICellBroadcastListener > listener)=0`
- virtual `telux::common::Status deregisterListener (std::weak_ptr< ICellBroadcastListener > listener)=0`
- virtual `~ICellBroadcastManager ()`

5.8.1.10.1 Constructors and Destructors

5.8.1.10.1.1 virtual `telux::tel::ICellBroadcastManager::~~ICellBroadcastManager () [virtual]`

5.8.1.10.2 Member Function Documentation

5.8.1.10.2.1 virtual bool `telux::tel::ICellBroadcastManager::isSubsystemReady () [pure virtual]`

Checks the status of network subsystem and returns the result.

Returns

True if network subsystem is ready for service otherwise false.

5.8.1.10.2.2 virtual `std::future<bool> telux::tel::ICellBroadcastManager::onSubsystemReady () [pure virtual]`

Wait for network subsystem to be ready.

Returns

A future that caller can wait on to be notified when network subsystem is ready.

5.8.1.10.2.3 virtual SlotId telux::tel::ICellBroadcastManager::getSlotId () [pure virtual]

Get associated slot for this CellBroadcastManager.

Returns

SlotId

5.8.1.10.2.4 virtual telux::common::Status telux::tel::ICellBroadcastManager::updateMessageFilters (std::vector< CellBroadcastFilter > filters, telux::common::ResponseCallback callback = nullptr) [pure virtual]

Configures the broadcast messages to be received.

Parameters

| | | |
|----|-----------------|--|
| in | <i>filters</i> | List of filtered broadcast message identifiers. |
| in | <i>callback</i> | Optional callback to get the response of set cell broadcast filters. |

Returns

Status of updateMessageIdFilters i.e. success or suitable error code.

5.8.1.10.2.5 virtual telux::common::Status telux::tel::ICellBroadcastManager::requestMessageFilters (RequestFiltersResponseCallback callback) [pure virtual]

Retrieve configured message filters for which broadcast messages will be received.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Callback to get the response of get cell broadcast filters. |
|----|-----------------|---|

Returns

Status of requestMessageIdFilters i.e. success or suitable error code.

5.8.1.10.2.6 virtual telux::common::Status telux::tel::ICellBroadcastManager::setActivationStatus (bool activate, telux::common::ResponseCallback callback = nullptr) [pure virtual]

Allows activation and deactivation of configured broadcast messages.

Parameters

| | | |
|----|-----------------|--|
| in | <i>activate</i> | Activate/deactivate broadcast messages. |
| in | <i>callback</i> | Optional callback pointer to get the response. |

Returns

Status of setActivationStatus i.e. success or suitable error code.

5.8.1.10.2.7 virtual telux::common::Status telux::tel::ICellBroadcastManager::requestActivationStatus (RequestActivationStatusResponseCallback *callback*) [pure virtual]

Get activation status for configured broadcast messages.

Parameters

| | | |
|-----------|-----------------|---------------------------------------|
| <i>in</i> | <i>callback</i> | Callback pointer to get the response. |
|-----------|-----------------|---------------------------------------|

Returns

Status of requestActivationStatus i.e. success or suitable error code.

5.8.1.10.2.8 virtual telux::common::Status telux::tel::ICellBroadcastManager::registerListener (std::weak_ptr< ICellBroadcastListener > *listener*) [pure virtual]

Register a listener for cell broadcast messages.

Parameters

| | | |
|-----------|-----------------|--|
| <i>in</i> | <i>listener</i> | Pointer to ICellBroadcastListener object which receives broadcast message. |
|-----------|-----------------|--|

Returns

Status of registerListener i.e. success or suitable error code.

5.8.1.10.2.9 virtual telux::common::Status telux::tel::ICellBroadcastManager::deregisterListener (std::weak_ptr< ICellBroadcastListener > *listener*) [pure virtual]

De-register the listener.

Parameters

| | | |
|-----------|-----------------|------------------------------|
| <i>in</i> | <i>listener</i> | Listener to be de-registered |
|-----------|-----------------|------------------------------|

Returns

Status of deregisterListener i.e. success or suitable error code.

5.8.1.11 class telux::tel::ICellBroadcastListener

A listener class which monitors cell broadcast messages.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onIncomingMessage](#) (SlotId slotId, const std::shared_ptr< [CellBroadcastMessage](#) > cbMessage)
- virtual void [onMessageFilterChange](#) (SlotId slotId, std::vector< [CellBroadcastFilter](#) > filters)
- virtual [~ICellBroadcastListener](#) ()

5.8.1.11.1 Constructors and Destructors

5.8.1.11.1 virtual telux::tel::ICellBroadcastListener::~~ICellBroadcastListener () [virtual]

5.8.1.11.2 Member Function Documentation

5.8.1.11.2.1 virtual void telux::tel::ICellBroadcastListener::onIncomingMessage (SlotId *slotId*, const std::shared_ptr< [CellBroadcastMessage](#) > *cbMessage*) [virtual]

This function is called when device receives an incoming cell broadcast message.

Parameters

| | | |
|----|------------------|---|
| in | <i>slotId</i> | - Slot Id on which broadcast message is received. |
| in | <i>cbMessage</i> | - Broadcast message with information related to ETWS/CMAS notification. |

5.8.1.11.2.2 virtual void telux::tel::ICellBroadcastListener::onMessageFilterChange (SlotId *slotId*, std::vector< [CellBroadcastFilter](#) > *filters*) [virtual]

This function is called when there is change in broadcast configuration like updation of message filters by the client using [ICellBroadcastManager::updateMessageFilters](#).

Parameters

| | | |
|----|----------------|---|
| in | <i>slotId</i> | - Slot Id on which change in message filters is received. |
| in | <i>filters</i> | - Complete list of configured broadcast message filters. |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.8.2 Enumeration Type Documentation

5.8.2.1 enum telux::tel::GeographicalScope [strong]

Defines geographical scope of cell broadcast.

Enumerator

CELL_WIDE_IMMEDIATE Cell wide geographical scope with immediate display
PLMN_WIDE PLMN wide geographical scope
LA_WIDE
CELL_WIDE Location / Service/ Tracking area wide geographical scope
(GSM/UMTS/E-UTRAN/NG-RAN). Cell wide geographical scope

5.8.2.2 enum telux::tel::MessagePriority [strong]

Defines priority for cell broadcast message.

Enumerator

UNKNOWN Unknown message priority
NORMAL Normal message priority
EMERGENCY Emergency message priority

5.8.2.3 enum telux::tel::MessageType [strong]

Defines message type for cell broadcast message.

Enumerator

UNKNOWN Unknown message type
ETWS Earthquake and Tsunami Warning System
CMAS Commercial Mobile Alert System

5.8.2.4 enum telux::tel::EtwsWarningType [strong]

Defines warning type for ETWS cell broadcast message.

Enumerator

UNKNOWN Unknown ETWS warning type
EARTHQUAKE ETWS warning type for earthquake
TSUNAMI ETWS warning type for tsunami
EARTHQUAKE_AND_TSUNAMI ETWS warning type for earthquake and tsunami
TEST_MESSAGE ETWS warning type for test messages
OTHER_EMERGENCY ETWS warning type for other emergency types

5.8.2.5 enum telux::tel::CmasMessageClass [strong]

Defines message class for CMAS cell broadcast message.

Enumerator

UNKNOWN CMAS category for warning types that are reserved for future extension
PRESIDENTIAL_LEVEL_ALERT Presidential-level alert (Korean Public Alert System Class 0 message)
EXTREME_THREAT Extreme threat to life and property (Korean Public Alert System Class 1 message)
SEVERE_THREAT Severe threat to life and property (Korean Public Alert System Class 1 message).
CHILD_ABDUCTION_EMERGENCY Child abduction emergency (AMBER Alert)
REQUIRED_MONTHLY_TEST CMAS test message
CMAS_EXERCISE CMAS exercise
OPERATOR_DEFINED_USE CMAS category for operator defined use

5.8.2.6 enum telux::tel::CmasSeverity [strong]

Defines severity type for CMAS cell broadcast message.

Enumerator

UNKNOWN CMAS alert severity is unknown. The severity is available for all GSM/UMTS alerts except for the Presidential-level alert class (Korean Public Alert System Class 0).
EXTREME Extraordinary threat to life or property
SEVERE Significant threat to life or property

5.8.2.7 enum telux::tel::CmasUrgency [strong]

Defines urgency type for CMAS cell broadcast message.

Enumerator

UNKNOWN CMAS alert urgency is unknown. The urgency is available for all GSM/UMTS alerts except for the Presidential-level alert class (Korean Public Alert System Class 0).
IMMEDIATE Responsive action should be taken immediately
EXPECTED Responsive action should be taken within the next hour

5.8.2.8 enum telux::tel::CmasCertainty [strong]

Defines certainty type for CMAS cell broadcast message.

Enumerator

UNKNOWN CMAS alert certainty is unknown. The certainty is available for all GSM/UMTS alerts except for the Presidential-level alert class (Korean Public Alert System Class 0).
OBSERVED Determined to have occurred or to be ongoing.
LIKELY Likely (probability > ~50%)

5.8.2.9 enum telux::tel::GeometryType [strong]

Defines geometry type specified in wireless emergency alert.

Enumerator

UNKNOWN Unknown geometry type

POLYGON Polygon geometry type

CIRCLE Circle geometry type

5.9 IMS Settings

This section contains APIs related to IMS Configuration.

5.9.1 Data Structure Documentation

5.9.1.1 struct telux::tel::ImsServiceConfig

Defines the selected IMS service configuration parameters and their corresponding value

Data fields

| Type | Field | Description |
|---|-------------------------|--|
| ImsService↔ ConfigValidity | config↔ ValidityMask | Indicates the configurations type. Bit set to 1 denotes the config is valid. |
| bool | imsService↔ Enabled | Enable/Disable IMS service |
| bool | voImsEnabled | Enable/Disable VOIMS service |

5.9.1.2 class telux::tel::ImsSettingsManager

ImsSettingsManager allows IMS settings. For example enabling or disabling IMS service, VOIMS service.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual [telux::common::Status](#) requestServiceConfig (SlotId slotId, [ImsServiceConfigCb](#) callback)=0
- virtual [telux::common::Status](#) setServiceConfig (SlotId slotId, [ImsServiceConfig](#) config, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) registerListener (std::weak_ptr< [ImsSettingsListener](#) > listener)=0
- virtual [telux::common::Status](#) deregisterListener (std::weak_ptr< [ImsSettingsListener](#) > listener)=0
- virtual [~ImsSettingsManager](#) ()

5.9.1.2.1 Constructors and Destructors

5.9.1.2.1.1 virtual [telux::tel::ImsSettingsManager::~ImsSettingsManager](#) () [[virtual](#)]

5.9.1.2.2 Member Function Documentation

5.9.1.2.2.1 virtual [telux::common::ServiceStatus](#) [telux::tel::ImsSettingsManager::getServiceStatus](#) () [[pure virtual](#)]

This status indicates whether the [ImsSettingsManager](#) object is in a usable state.

Returns

SERVICE_AVAILABLE - If IMS settings manager is ready for service. SERVICE_UNAVAILABLE

- If IMS settings manager is temporarily unavailable. `SERVICE_FAILED` - If IMS settings manager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.9.1.2.2.2 `virtual telx::common::Status telx::tel::ImsSettingsManager::requestServiceConfig (SlotId slotId, ImsServiceConfigCb callback) [pure virtual]`

Request the IMS service configurations

Parameters

| | | |
|----|-----------------|--|
| in | <i>slotId</i> | Slot for which the IMS service configurations is requested. |
| in | <i>callback</i> | Callback function to get the response of request IMS service configurations. |

Returns

Status of `requestServiceConfig` i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.9.1.2.2.3 `virtual telx::common::Status telx::tel::ImsSettingsManager::setServiceConfig (SlotId slotId, ImsServiceConfig config, common::ResponseCallback callback = nullptr) [pure virtual]`

To configure the IMS service configurations. Also specify whether configuration needs to be enabled or disabled.

Parameters

| | | |
|----|-----------------|--|
| in | <i>slotId</i> | Slot for which the IMS service configuration is intended. |
| in | <i>config</i> | Indicates which configuration are configured currently and whether the config is enabled or disabled. ImsServiceConfig . |
| in | <i>callback</i> | Callback function to get the response of set IMS service configuration request. |

Returns

Status of `setServiceConfig` i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.9.1.2.2.4 virtual telux::common::Status telux::tel::IImSettingsManager::registerListener (std::weak_ptr< IImSettingsListener > *listener*) [pure virtual]

Register a listener for specific events in the IMS settings subsystem.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer to IImSettingsListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.9.1.2.2.5 virtual telux::common::Status telux::tel::IImSettingsManager::deregisterListener (std::weak_ptr< IImSettingsListener > *listener*) [pure virtual]

Deregister the previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to IImSettingsListener object that needs to be deregistered. |
|----|-----------------|--|

Returns

Status of deregisterListener i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.9.1.3 class telux::tel::IImSettingsListener

Listener class for getting IMS service configuration change notifications. The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onImsServiceConfigsChange](#) (SlotId slotId, [ImsServiceConfig](#) config)
- virtual void [onServiceStatusChange](#) ([telux::common::ServiceStatus](#) status)
- virtual [~ImsSettingsListener](#) ()

5.9.1.3.1 Constructors and Destructors

5.9.1.3.1.1 virtual [telux::tel::ImsSettingsListener::~~ImsSettingsListener](#) () [[virtual](#)]

Destructor of [ImsSettingsListener](#)

5.9.1.3.2 Member Function Documentation

5.9.1.3.2.1 virtual void [telux::tel::ImsSettingsListener::onImsServiceConfigsChange](#) (SlotId *slotId*, [ImsServiceConfig](#) *config*) [[virtual](#)]

This function is called whenever any IMS service configuration is changed.

Parameters

| | | |
|----|---------------|--|
| in | <i>slotId</i> | SIM corresponding to slot identifier for which the IMS service configuration has changed. |
| in | <i>config</i> | Indicates which configuration is valid and whether the config is enabled or disabled. ImsServiceConfig . |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.9.1.3.2.2 virtual void [telux::tel::ImsSettingsListener::onServiceStatusChange](#) ([telux::common::ServiceStatus](#) *status*) [[virtual](#)]

This function is called when [ImsSettingsManager](#) service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.9.2 Enumeration Type Documentation

5.9.2.1 enum telux::tel::ImsServiceConfigType

Defines the IMS service configuration parameters

Enumerator

IMSSETTINGS_VOIMS Voice calling support on LTE

IMSSETTINGS_IMS_SERVICE IMS Normal Registration configuration

5.10 Multi SIM

This section contains APIs related to Multi SIM DSDA Configuration.

5.10.1 Data Structure Documentation

5.10.1.1 struct telux::tel::SlotStatus

Represents status of a physical SIM slot

Data fields

| Type | Field | Description |
|---------------------------|-----------|--|
| SlotState | slotState | State of the physical SIM slot |
| CardState | cardState | Status of the card in the physical slot |
| CardError | cardError | Indicates the reason for the card error, and is valid only when the card state is CARDSTATE_ERROR. |

5.10.1.2 class telux::tel::IMultiSimManager

MultiSimManager allows to perform operation pertaining to devices which have more than one SIM/UICC card. Clients should check if the subsystem is ready before invoking any of the APIs as follows.

```
bool isReady = MultiSimManager->isSubsystemReady();
```

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status](#) [getSlotCount](#) (int &count)=0
- virtual [telux::common::Status](#) [requestHighCapability](#) ([HighCapabilityCallback](#) callback)=0
- virtual [telux::common::Status](#) [setHighCapability](#) (int slotId, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) [switchActiveSlot](#) (SlotId slotId, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) [requestSlotStatus](#) ([SlotStatusCallback](#) callback)=0
- virtual [telux::common::Status](#) [registerListener](#) (std::weak_ptr< [IMultiSimListener](#) > listener)=0
- virtual [telux::common::Status](#) [deregisterListener](#) (std::weak_ptr< [IMultiSimListener](#) > listener)=0
- virtual [~IMultiSimManager](#) ()

5.10.1.2.1 Constructors and Destructors

5.10.1.2.1.1 `virtual telux::tel::IMultiSimManager::~IMultiSimManager () [virtual]`

5.10.1.2.2 Member Function Documentation

5.10.1.2.2.1 `virtual bool telux::tel::IMultiSimManager::isSubsystemReady () [pure virtual]`

Checks the status of Multi SIM subsystem and returns the result.

Returns

If true MultiSimManager is ready.

5.10.1.2.2.2 `virtual std::future<bool> telux::tel::IMultiSimManager::onSubsystemReady () [pure virtual]`

Wait for Multi SIM subsystem to be ready.

Returns

A future that caller can wait on to be notified when Multi SIM subsystem is ready.

5.10.1.2.2.3 `virtual telux::common::Status telux::tel::IMultiSimManager::getSlotCount (int & count) [pure virtual]`

Get SIM slot count. The count can be used to determine whether the device supports multi SIM.

Parameters

| | | |
|-----|--------------|-------------|
| out | <i>count</i> | Slot count. |
|-----|--------------|-------------|

Returns

Status of getSlotCount i.e. success or suitable error code.

5.10.1.2.2.4 `virtual telux::common::Status telux::tel::IMultiSimManager::requestHighCapability (HighCapabilityCallback callback) [pure virtual]`

Request to find out which SIM/slot is allowed to use advance Radio Technology like 5G at a time. For example SIM/slot with high capability may allowed to use RAT capabilities like 5G/4G/3G/2G while the SIM/slot with low capability may be allowed to use RAT capabilities like 4G/2G.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Callback function to get the response of request high capability. |
|----|-----------------|---|

Returns

Status of requestHighCapability i.e. success or suitable error code.

5.10.1.2.2.5 **virtual telux::common::Status telux::tel::IMultiSimManager::setHighCapability (int *slotId*, common::ResponseCallback *callback* = nullptr) [pure virtual]**

Set SIM/slot with high capability asynchronously. On dual SIM devices, only one SIM may be allowed to use advanced Radio technology like 5G at a time. This API sets the SIM/slot that should be allowed the highest RAT capability. The other SIM/slot will be given lower RAT capabilities. For example, SIM in slot1 will be allowed 2G/3G/4G/5G and the SIM in slot2 will be allowed only 2G/4G.

Parameters

| | | |
|----|-----------------|---|
| in | <i>slotId</i> | Slot set with high capability. |
| in | <i>callback</i> | Callback function to get the response of set high capability request. |

Returns

Status of setHighCapability i.e. success or suitable error code.

5.10.1.2.2.6 **virtual telux::common::Status telux::tel::IMultiSimManager::switchActiveSlot (SlotId *slotId*, common::ResponseCallback *callback* = nullptr) [pure virtual]**

Choose the physical SIM slot to be used by modem on Single-SIM TCU platforms. After switching the slot, only the SIM on chosen physical slot can be used for WWAN functionality.

Parameters

| | | |
|----|-----------------|--|
| in | <i>slotId</i> | physical slot to be made active |
| in | <i>callback</i> | Callback function to get the response of slot switch request |

Returns

Status of switchActiveSlot i.e. success or suitable error code.

5.10.1.2.2.7 **virtual telux::common::Status telux::tel::IMultiSimManager::requestSlotStatus (SlotStatusCallback *callback*) [pure virtual]**

Request the status of physical slots.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback function to get the response of slot status request |
|----|-----------------|--|

Returns

Status of requestSlotStatus i.e. success or suitable error code.

5.10.1.2.2.8 `virtual telux::common::Status telux::tel::IMultiSimManager::registerListener (std::weak_ptr< IMultiSimListener > listener) [pure virtual]`

Register a listener for specific events in the Multi SIM subsystem.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer to IMultiSimListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener i.e. success or suitable error code.

5.10.1.2.2.9 `virtual telux::common::Status telux::tel::IMultiSimManager::deregisterListener (std::weak_ptr< IMultiSimListener > listener) [pure virtual]`

Deregister the previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to IMultiSimListener object that needs to be deregistered. |
|----|-----------------|--|

Returns

Status of deregisterListener i.e. success or suitable error code.

5.10.1.3 class telux::tel::IMultiSimListener

Listener class for getting high capability change notification. The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onHighCapabilityChanged](#) (int slotId)
- virtual void [onSlotStatusChanged](#) (std::map< SlotId, [SlotStatus](#) > slotStatus)
- virtual [~IMultiSimListener](#) ()

5.10.1.3.1 Constructors and Destructors

5.10.1.3.1.1 `virtual telux::tel::IMultiSimListener::~IMultiSimListener () [virtual]`

Destructor of [IMultiSimListener](#)

5.10.1.3.2 Member Function Documentation

5.10.1.3.2.1 virtual void telux::tel::IMultiSimListener::onHighCapabilityChanged (int *slotId*) [virtual]

This function is called whenever there is change in high capability for SIM/slot.

Parameters

| | | |
|----|---------------|---|
| in | <i>slotId</i> | SIM corresponding to slot identifier has high capability now. |
|----|---------------|---|

5.10.1.3.2.2 virtual void telux::tel::IMultiSimListener::onSlotStatusChanged (std::map< SlotId, SlotStatus > *slotStatus*) [virtual]

This function is called whenever there is change in physical SIM slots status.

Parameters

| | | |
|----|-------------------|---|
| in | <i>slotStatus</i> | list of slots status SlotStatus |
|----|-------------------|---|

5.10.2 Enumeration Type Documentation

5.10.2.1 enum telux::tel::SlotState [strong]

Represents state of the physical SIM slot

Enumerator

UNKNOWN

INACTIVE Slot is inactive

ACTIVE Slot is active

5.11 Subscription Management

This section contains APIs related to Subscription Management.

5.11.1 Data Structure Documentation

5.11.1.1 class telux::tel::ISubscription

Subscription returns information about network operator subscription details pertaining to a SIM card.

Public member functions

- virtual std::string [getCarrierName](#) ()=0
- virtual std::string [getIccId](#) ()=0
- virtual int [getMcc](#) ()=0
- virtual int [getMnc](#) ()=0
- virtual std::string [getMobileCountryCode](#) ()=0
- virtual std::string [getMobileNetworkCode](#) ()=0
- virtual std::string [getPhoneNumber](#) ()=0
- virtual int [getSlotId](#) ()=0
- virtual std::string [getImsi](#) ()=0
- virtual std::string [getGID1](#) ()=0
- virtual std::string [getGID2](#) ()=0
- virtual [~ISubscription](#) ()

5.11.1.1.1 Constructors and Destructors

5.11.1.1.1.1 virtual telux::tel::ISubscription::~~ISubscription () [virtual]

5.11.1.1.2 Member Function Documentation

5.11.1.1.2.1 virtual std::string telux::tel::ISubscription::getCarrierName () [pure virtual]

Retrieves the name of the carrier on which this subscription is made.

Returns

Name of the carrier.

5.11.1.1.2.2 virtual std::string telux::tel::ISubscription::getIccId () [pure virtual]

Retrieves the SIM's ICCID (Integrated Chip ID) - i.e SIM Serial Number.

Returns

Integrated Chip Id.

5.11.1.1.2.3 virtual int telux::tel::ISubscription::getMcc () [pure virtual]

Retrieves the mobile country code of the carrier to which the phone is connected.

Returns

Mobile Country Code.

Deprecated Use [telux::tel::ISubscription::getMobileCountryCode\(\)](#) API instead

5.11.1.1.2.4 virtual int telux::tel::ISubscription::getMnc () [pure virtual]

Retrieves the mobile network code of the carrier to which phone is connected.

Returns

Mobile Network Code.

Deprecated Use [telux::tel::ISubscription::getMobileNetworkCode\(\)](#) API instead

5.11.1.1.2.5 virtual std::string telux::tel::ISubscription::getMobileCountryCode () [pure virtual]

Retrieves the mobile country code(MCC) of the carrier to which the phone is connected.

Returns

mcc.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.11.1.1.2.6 virtual std::string telux::tel::ISubscription::getMobileNetworkCode () [pure virtual]

Retrieves the mobile network code(MNC) of the carrier to which the phone is connected.

Returns

mnc.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.11.1.1.2.7 virtual std::string telux::tel::ISubscription::getPhoneNumber () [pure virtual]

Retrieves the phone number for the SIM subscription.

Returns

PhoneNumber.

5.11.1.1.2.8 virtual int telux::tel::ISubscription::getSlotId () [pure virtual]

Retrieves SIM Slot index for the SIM pertaining to this subscription object.

Returns

SIM slotId.

5.11.1.1.2.9 virtual std::string telux::tel::ISubscription::getImsi () [pure virtual]

Retrieves IMSI (International Mobile Subscriber Identity) for the SIM. This will have home network MCC and MNC values.

Returns

imsi.

5.11.1.1.2.10 virtual std::string telux::tel::ISubscription::getGID1 () [pure virtual]

Retrieves the GID1(group identifier level1) on the SIM. It represents identifier for particular SIM and ME associations. It can be used to identify a group of SIMs for a particular application. Defined in 3GPP Spec 131.102 section 4.2.10

Returns

GID1 content in hex format.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.11.1.1.2.11 virtual std::string telux::tel::ISubscription::getGID2 () [pure virtual]

Retrieves the GID2(group identifier level2) content on the SIM. It represents identifier for particular SIM and ME associations. It can be used to identify a group of SIMs for a particular application. Defined in 3GPP Spec 131.102 section 4.2.11

Returns

GID2 content in hex format.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.11.1.2 class telux::tel::ISubscriptionListener

A listener class for receiving device subscription information. The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onSubscriptionInfoChanged](#) (std::shared_ptr< [ISubscription](#) > subscription)
- virtual void [onNumberOfSubscriptionsChanged](#) (int count)
- virtual [~ISubscriptionListener](#) ()

5.11.1.2.1 Constructors and Destructors**5.11.1.2.1.1 virtual telux::tel::ISubscriptionListener::~~ISubscriptionListener () [virtual]****5.11.1.2.2 Member Function Documentation****5.11.1.2.2.1 virtual void telux::tel::ISubscriptionListener::onSubscriptionInfoChanged (std::shared_ptr< [ISubscription](#) > *subscription*) [virtual]**

This function is called whenever there is a change in Subscription details.

Parameters

| | | |
|-----------|---------------------|--|
| <i>in</i> | <i>subscription</i> | Pointer to ISubscription Object. |
|-----------|---------------------|--|

5.11.1.2.2.2 virtual void telux::tel::ISubscriptionListener::onNumberOfSubscriptionsChanged (int *count*) [virtual]

This function called whenever there is a change in the subscription count. for example when a new subscription is discovered or an existing subscription goes away when SIM is inserted or removed respectively.

Parameters

| | | |
|----|--------------|-----------------------|
| in | <i>count</i> | count of subscription |
|----|--------------|-----------------------|

5.11.1.3 class telux::tel::ISubscriptionManager**Public member functions**

- virtual bool `isSubsystemReady ()=0`
- virtual `std::future< bool > onSubsystemReady ()=0`
- virtual `std::shared_ptr< ISubscription > getSubscription (int slotId=DEFAULT_SLOT_ID, telux::common::Status *status=nullptr)=0`
- virtual `std::vector< std::shared_ptr< ISubscription > > getAllSubscriptions (telux::common::Status *status=nullptr)=0`
- virtual `telux::common::Status registerListener (std::weak_ptr< ISubscriptionListener > listener)=0`
- virtual `telux::common::Status removeListener (std::weak_ptr< ISubscriptionListener > listener)=0`
- virtual `~ISubscriptionManager ()`

5.11.1.3.1 Constructors and Destructors

5.11.1.3.1.1 virtual `telux::tel::ISubscriptionManager::~~ISubscriptionManager () [virtual]`

5.11.1.3.2 Member Function Documentation

5.11.1.3.2.1 virtual bool `telux::tel::ISubscriptionManager::isSubsystemReady () [pure virtual]`

Checks the status of SubscriptionManager and returns the result.

Returns

If true then SubscriptionManager is ready for service.

5.11.1.3.2.2 virtual `std::future<bool> telux::tel::ISubscriptionManager::onSubsystemReady () [pure virtual]`

Wait for Subscription subsystem to be ready.

Returns

A future that caller can wait on to be notified when SubscriptionManager is ready.

5.11.1.3.2.3 `virtual std::shared_ptr<ISubscription> telux::tel::ISubscriptionManager::getSubscription (int slotId = DEFAULT_SLOT_ID, telux::common::Status * status = nullptr) [pure virtual]`

Get Subscription details of the SIM in the given SIM slot.

Parameters

| | | |
|-----|---------------|---|
| in | <i>slotId</i> | Slot id corresponding to the subscription. |
| out | <i>status</i> | Status of getSubscription i.e. success or suitable status code. |

Returns

Pointer to [ISubscription](#) object.

5.11.1.3.2.4 `virtual std::vector<std::shared_ptr<ISubscription> > telux::tel::ISubscriptionManager::getAllSubscriptions (telux::common::Status * status = nullptr) [pure virtual]`

Get all the subscription details of the device.

Parameters

| | | |
|-----|---------------|---|
| out | <i>status</i> | Status of getAllSubscriptions i.e. success or suitable status code. |
|-----|---------------|---|

Returns

list of [ISubscription](#) objects.

5.11.1.3.2.5 `virtual telux::common::Status telux::tel::ISubscriptionManager::registerListener (std::weak_ptr< ISubscriptionListener > listener) [pure virtual]`

Register a listener for Subscription events.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to ISubscriptionListener object that processes the notification. |
|----|-----------------|--|

Returns

Status of registerListener i.e. success or suitable status code.

5.11.1.3.2.6 `virtual telux::common::Status telux::tel::ISubscriptionManager::removeListener (std::weak_ptr< ISubscriptionListener > listener) [pure virtual]`

Remove a previously added listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer to ISubscriptionListener object that needs to be removed. |
|----|-----------------|---|

Returns

Status of removeListener i.e. success or suitable status code.

5.12 Network Selection

Network Selection Manager provides the interface to get and set network selection mode (Manual or Automatic), scan available networks and set and get preferred networks list.

5.12.1 Data Structure Documentation

5.12.1.1 struct telux::tel::PreferredNetworkInfo

Defines the preferred network information

Data fields

| Type | Field | Description |
|-------------------------|---------|---|
| uint16_t | mcc | mobile country code |
| uint16_t | mnc | mobile network code |
| RatMask | ratMask | bit mask denotes which of the radio access technologies are set |

5.12.1.2 struct telux::tel::OperatorStatus

Defines status of network operator

Data fields

| Type | Field | Description |
|---------------------------------------|-----------|--------------------------------------|
| InUseStatus | inUse | In-use status of network operator |
| RoamingStatus | roaming | Roaming status of network operator |
| Forbidden↔ Status | forbidden | Forbidden status of network operator |
| PreferredStatus | preferred | Preferred status of network operator |

5.12.1.3 struct telux::tel::NetworkScanInfo

Defines Network scan information

Data fields

| Type | Field | Description |
|---------------------------------------|----------|---|
| NetworkScan↔ Type | scanType | Network scan type |
| RatMask | ratMask | Bit mask denotes which of the radio access technologies are set. ratMask is valid/set only when scanType is provided as NetworkScanType::USER_SPECIFIED_RAT |

5.12.1.4 class telux::tel::INetworkSelectionManager

Network Selection Manager class provides the interface to get and set network selection mode, preferred network list and scan available networks.

Public member functions

- virtual bool `isSubsystemReady ()=0`
- virtual `std::future< bool > onSubsystemReady ()=0`
- virtual `telux::common::ServiceStatus getServiceStatus ()=0`
- virtual `telux::common::Status requestNetworkSelectionMode (SelectionModeResponseCallback callback)=0`
- virtual `telux::common::Status setNetworkSelectionMode (NetworkSelectionMode selectMode, std::string mcc, std::string mnc, common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status requestPreferredNetworks (PreferredNetworksCallback callback)=0`
- virtual `telux::common::Status setPreferredNetworks (std::vector< PreferredNetworkInfo > preferredNetworksInfo, bool clearPrevious, common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status performNetworkScan (NetworkScanCallback callback)=0`
- virtual `telux::common::Status performNetworkScan (NetworkScanInfo info, common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status registerListener (std::weak_ptr< INetworkSelectionListener > listener)=0`
- virtual `telux::common::Status deregisterListener (std::weak_ptr< INetworkSelectionListener > listener)=0`
- virtual `~INetworkSelectionManager ()`

5.12.1.4.1 Constructors and Destructors

5.12.1.4.1.1 virtual `telux::tel::INetworkSelectionManager::~~INetworkSelectionManager ()`
[virtual]

5.12.1.4.2 Member Function Documentation

5.12.1.4.2.1 virtual bool `telux::tel::INetworkSelectionManager::isSubsystemReady ()` [pure virtual]

Checks the status of network subsystem and returns the result.

Returns

True if network subsystem is ready for service otherwise false.

Deprecated Use `INetworkSelectionManager::getServiceStatus()` API.

5.12.1.4.2.2 virtual `std::future<bool> telux::tel::INetworkSelectionManager::onSubsystemReady ()`
[pure virtual]

Wait for network subsystem to be ready.

Returns

A future that caller can wait on to be notified when network subsystem is ready.

Deprecated Use `InitResponseCb` in `PhoneFactory::getNetworkSelectionManager` instead, to get notified about subsystem readiness.

5.12.1.4.2.3 `virtual telux::common::ServiceStatus telux::tel::INetworkSelectionManager::getService↔
Status () [pure virtual]`

This status indicates whether the `INetworkSelectionManager` object is in a usable state.

Returns

`SERVICE_AVAILABLE` - If Serving System manager is ready for service.

`SERVICE_UNAVAILABLE` - If Serving System manager is temporarily unavailable.

`SERVICE_FAILED` - If Serving System manager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.12.1.4.2.4 `virtual telux::common::Status telux::tel::INetworkSelectionManager::request↔
NetworkSelectionMode (SelectionModeResponseCallback callback) [pure
virtual]`

Get current network selection mode (i.e Manual or Automatic) asynchronously.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback function to get the response of get network selection mode request. |
|----|-----------------|--|

Returns

Status of `requestNetworkSelectionMode` i.e. success or suitable error code.

5.12.1.4.2.5 `virtual telux::common::Status telux::tel::INetworkSelectionManager::setNetwork↔
SelectionMode (NetworkSelectionMode selectMode, std::string mcc, std::string mnc,
common::ResponseCallback callback = nullptr) [pure virtual]`

Set current network selection mode and receive the response asynchronously.

Parameters

| | | |
|----|-------------------|--|
| in | <i>selectMode</i> | Selection mode for a network i.e. automatic or manual. If selection mode is automatic then MCC and MNC are ignored. If it is manual, client has to explicitly pass MCC and MNC as arguments. |
| in | <i>callback</i> | Optional callback function to get the response of set network selection mode request. |
| in | <i>mcc</i> | Mobile Country Code (Applicable only for MANUAL selection mode). |
| in | <i>mnc</i> | Mobile Network Code (Applicable only for MANUAL selection mode). |

Returns

Status of setNetworkSelectionMode i.e. success or suitable error code.

5.12.1.4.2.6 **virtual telx::common::Status telx::tel::INetworkSelectionManager::requestPreferredNetworks (PreferredNetworksCallback *callback*) [pure virtual]**

Get 3GPP preferred network list and static 3GPP preferred network list asynchronously. Higher priority networks appear first in the list. The networks that appear in the 3GPP Preferred Networks list get higher priority than the networks in the static 3GPP preferred networks list.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback function to get the response of get preferred networks request. |
|----|-----------------|--|

Returns

Status of requestPreferredNetworks i.e. success or suitable error code.

5.12.1.4.2.7 **virtual telx::common::Status telx::tel::INetworkSelectionManager::setPreferredNetworks (std::vector< PreferredNetworkInfo > *preferredNetworksInfo*, bool *clearPrevious*, common::ResponseCallback *callback* = nullptr) [pure virtual]**

Set 3GPP preferred network list and receive the response asynchronously. It overrides the existing preferred network list. The preferred network list affects network selection when automatic registration is performed by the device. Higher priority networks should appear first in the list.

Parameters

| | | |
|----|------------------------------|--|
| in | <i>preferredNetworksInfo</i> | List of 3GPP preferred networks. |
| in | <i>clearPrevious</i> | If flag is false then new 3GPP preferred network list is appended to existing preferred network list. If flag is true then old list is flushed and new 3GPP preferred network list is added. |

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback function to get the response of set preferred network list request. |
|----|-----------------|--|

Returns

Status of setPreferredNetworks i.e. success or suitable error code.

5.12.1.4.2.8 virtual telux::common::Status telux::tel::INetworkSelectionManager::performNetworkScan (NetworkScanCallback *callback*) [pure virtual]

Perform the network scan and returns a list of available networks.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Callback function to get the response of perform network scan request |
|----|-----------------|---|

Returns

Status of performNetworkScan i.e. success or suitable error code.

Deprecated Use [INetworkSelectionManager::performNetworkScan\(common::ResponseCallback callback\)](#) API instead

5.12.1.4.2.9 virtual telux::common::Status telux::tel::INetworkSelectionManager::performNetworkScan (NetworkScanInfo *info*, common::ResponseCallback *callback = nullptr*) [pure virtual]

Perform the network scan. The available networks list is returned incrementally as they become available, without waiting for the entire scan to complete through the indication API ([INetworkSelectionListener::onNetworkScanResults](#)). The scan status in indication will indicate if its a partial result or complete result.

Parameters

| | | |
|----|-----------------|---|
| in | <i>info</i> | Provides network scan type and if the network scan type is user preferred RAT, includes RAT(s) information. NetworkScanInfo |
| in | <i>callback</i> | Callback function to get the response of network scan request |

Returns

Status of performNetworkScan i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.12.1.4.2.10 virtual telux::common::Status telux::tel::INetworkSelectionManager::registerListener (std::weak_ptr< INetworkSelectionListener > *listener*) [pure virtual]

Register a listener for specific updates from network access service.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer of INetworkSelectionListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener i.e success or suitable status code.

5.12.1.4.2.11 virtual telux::common::Status telux::tel::INetworkSelectionManager::deregisterListener (std::weak_ptr< INetworkSelectionListener > *listener*) [pure virtual]

Deregister the previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Previously registered INetworkSelectionListener that needs to be removed |
|----|-----------------|--|

Returns

Status of removeListener success or suitable status code

5.12.1.5 class telux::tel::OperatorInfo

Operator Info class provides operator name, MCC, MNC and network status.

Public member functions

- [OperatorInfo](#) (std::string networkName, std::string mcc, std::string mnc, [OperatorStatus](#) operatorStatus)
- [OperatorInfo](#) (std::string networkName, std::string mcc, std::string mnc, [RadioTechnology](#) rat, [OperatorStatus](#) operatorStatus)
- std::string [getName](#) ()
- std::string [getMcc](#) ()
- std::string [getMnc](#) ()
- [RadioTechnology](#) [getRat](#) ()
- [OperatorStatus](#) [getStatus](#) ()

5.12.1.5.1 Constructors and Destructors

5.12.1.5.1.1 `telux::tel::OperatorInfo::OperatorInfo (std::string networkName, std::string mcc, std::string mnc, OperatorStatus operatorStatus)`

5.12.1.5.1.2 `telux::tel::OperatorInfo::OperatorInfo (std::string networkName, std::string mcc, std::string mnc, RadioTechnology rat, OperatorStatus operatorStatus)`

5.12.1.5.2 Member Function Documentation

5.12.1.5.2.1 `std::string telux::tel::OperatorInfo::getName ()`

Get Operator name or description

Returns

Operator name.

5.12.1.5.2.2 `std::string telux::tel::OperatorInfo::getMcc ()`

Get mcc from the operator numeric.

Returns

MCC.

5.12.1.5.2.3 `std::string telux::tel::OperatorInfo::getMnc ()`

Get mnc from operator numeric.

Returns

MNC.

5.12.1.5.2.4 `RadioTechnology telux::tel::OperatorInfo::getRat ()`

Get radio access technology.

Returns

Radio access technology(RAT) [RadioTechnology](#).

5.12.1.5.2.5 `OperatorStatus telux::tel::OperatorInfo::getStatus ()`

Get status of operator.

Returns

status of the operator [OperatorStatus](#).

5.12.1.6 class telux::tel::INetworkSelectionListener

Listener class for getting network selection mode change notification.

The methods in listener can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onSelectionModeChanged](#) ([NetworkSelectionMode](#) mode)
- virtual void [onNetworkScanResults](#) ([NetworkScanStatus](#) scanStatus, std::vector<[telux::tel::OperatorInfo](#) > operatorInfos)
- virtual [~INetworkSelectionListener](#) ()

5.12.1.6.1 Constructors and Destructors

5.12.1.6.1.1 virtual [telux::tel::INetworkSelectionListener::~~INetworkSelectionListener](#) () [[virtual](#)]

Destructor of [INetworkSelectionListener](#)

5.12.1.6.2 Member Function Documentation

5.12.1.6.2.1 virtual void [telux::tel::INetworkSelectionListener::onSelectionModeChanged](#) ([NetworkSelectionMode](#) *mode*) [[virtual](#)]

This function is called whenever network selection mode is changed.

Parameters

| | | |
|----|-------------|---|
| in | <i>mode</i> | Network selection mode NetworkSelectionMode |
|----|-------------|---|

5.12.1.6.2.2 virtual void [telux::tel::INetworkSelectionListener::onNetworkScanResults](#) ([NetworkScanStatus](#) *scanStatus*, std::vector< [telux::tel::OperatorInfo](#) > *operatorInfos*) [[virtual](#)]

This function is called in response to performNetworkScan API. This API will be invoked multiple times in case of partial network scan results. In case of network scan failure and network scan completed this API will not be invoked further.

Parameters

| | | |
|----|----------------------|---|
| in | <i>scanStatus</i> | Status of the network scan results NetworkScanStatus |
| in | <i>operatorInfos</i> | Operators info with details of network operator name, MCC, MNC, etc. In case of partial network scan results, the operator info will have the information of the new set of operator info along with previous partial network scan results. |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.12.2 Enumeration Type Documentation

5.12.2.1 enum telux::tel::RatType

Defines network RAT type for preferred networks. Each value represents corresponding bit for RatMask bitset.

Enumerator

UMTS UMTS

LTE LTE

LTE

GSM GSM

GSM

NR5G NR5G

NR5G

5.12.2.2 enum telux::tel::NetworkScanStatus [strong]

Defines the status of the network scan results

Enumerator

COMPLETE Network scan is successful and completed. No more indications are expected for the scan request

PARTIAL Network scan results are partial, further results are expected in subsequent indication

FAILED Network scan failed either due to radio link failure or it is aborted or due to problem in performing incremental search.

5.12.2.3 enum telux::tel::NetworkSelectionMode [strong]

Defines network selection mode

Enumerator

UNKNOWN Unknown

AUTOMATIC Device registers according to provisioned mcc and mnc

MANUAL Device registers to specified network as per provided mcc and mnc

5.12.2.4 enum telux::tel::InUseStatus [strong]

Defines in-use status of network operator

Enumerator

UNKNOWN Unknown

CURRENT_SERVING Current serving

AVAILABLE Available

5.12.2.5 enum telux::tel::RoamingStatus [strong]

Defines roaming status of network operator

Enumerator

UNKNOWN Unknown

HOME Home

ROAM Roaming

5.12.2.6 enum telux::tel::ForbiddenStatus [strong]

Defines forbidden status of network operator

Enumerator

UNKNOWN Unknown

FORBIDDEN Forbidden

NOT_FORBIDDEN Not forbidden

5.12.2.7 enum telux::tel::PreferredStatus [strong]

Defines preferred status of network operator

Enumerator

UNKNOWN Unknown

PREFERRED Preferred

NOT_PREFERRED Not preferred

5.12.2.8 enum telux::tel::NetworkScanType [strong]

Defines Network scan type

Enumerator

CURRENT_RAT_PREFERENCE Network scan based on current RAT preference

USER_SPECIFIED_RAT Network scan based on user specified RAT(s)

ALL_RATS Network scan on GSM/WCDMA/LTE/NR5G

5.13 Serving System

Serving System Manager class provides the interface to request and set service domain preference and radio access technology mode preference for searching and registering (CS/PS domain, RAT and operation mode)

5.13.1 Data Structure Documentation

5.13.1.1 struct telux::tel::DcStatus

Defines Dual Connectivity status

Data fields

| Type | Field | Description |
|-----------------------------------|-------------------|-------------------|
| Endc↔Availability | endc↔Availability | ENDC availability |
| DcnrRestriction | dcnrRestriction | DCNR restriction |

5.13.1.2 class telux::tel::IServingSystemManager

Serving System Manager class provides the API to request and set service domain preference and RAT preference.

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::ServiceStatus](#) [getServiceStatus](#) ()=0
- virtual [telux::common::Status](#) [setRatPreference](#) ([RatPreference](#) ratPref, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) [requestRatPreference](#) ([RatPreferenceCallback](#) callback)=0
- virtual [telux::common::Status](#) [setServiceDomainPreference](#) ([ServiceDomainPreference](#) serviceDomain, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) [requestServiceDomainPreference](#) ([ServiceDomainPreferenceCallback](#) callback)=0
- virtual [telux::tel::DcStatus](#) [getDcStatus](#) ()=0
- virtual [telux::common::Status](#) [registerListener](#) (std::weak_ptr< [IServingSystemListener](#) > listener)=0
- virtual [telux::common::Status](#) [deregisterListener](#) (std::weak_ptr< [IServingSystemListener](#) > listener)=0
- virtual [~IServingSystemManager](#) ()

5.13.1.2.1 Constructors and Destructors

5.13.1.2.1.1 `virtual telx::tel::IServingSystemManager::~~IServingSystemManager () [virtual]`

Destructor of [IServingSystemManager](#)

5.13.1.2.2 Member Function Documentation

5.13.1.2.2.1 `virtual bool telx::tel::IServingSystemManager::isSubsystemReady () [pure virtual]`

Checks the status of serving subsystem and returns the result.

Returns

True if serving subsystem is ready for service otherwise false.

Deprecated Use [IServingSystemManager::getServiceStatus\(\)](#) API.

5.13.1.2.2.2 `virtual std::future<bool> telx::tel::IServingSystemManager::onSubsystemReady () [pure virtual]`

Wait for serving subsystem to be ready.

Returns

A future that caller can wait on to be notified when serving subsystem is ready.

Deprecated Use `InitResponseCb` in [PhoneFactory::getServingSystemManager](#) instead, to get notified about subsystem readiness.

5.13.1.2.2.3 `virtual telx::common::ServiceStatus telx::tel::IServingSystemManager::getServiceStatus () [pure virtual]`

This status indicates whether the [IServingSystemManager](#) object is in a usable state.

Returns

`SERVICE_AVAILABLE` - If Serving System manager is ready for service.

`SERVICE_UNAVAILABLE` - If Serving System manager is temporarily unavailable.

`SERVICE_FAILED` - If Serving System manager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.13.1.2.2.4 virtual telux::common::Status telux::tel::IServingSystemManager::setRatPreference (RatPreference *ratPref*, common::ResponseCallback *callback = nullptr*) [pure virtual]

Set the preferred radio access technology mode that the device should use to acquire service.

Parameters

| | | |
|----|-----------------|---|
| in | <i>ratPref</i> | Radio access technology mode preference. |
| in | <i>callback</i> | Callback function to get the response of set RAT mode preference. |

Returns

Status of setRatPreference i.e. success or suitable error code.

5.13.1.2.2.5 virtual telux::common::Status telux::tel::IServingSystemManager::requestRatPreference (RatPreferenceCallback *callback*) [pure virtual]

Request for preferred radio access technology mode.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback function to get the response of request preferred RAT mode. |
|----|-----------------|--|

Returns

Status of requestRatPreference i.e. success or suitable error code.

5.13.1.2.2.6 virtual telux::common::Status telux::tel::IServingSystemManager::setServiceDomainPreference (ServiceDomainPreference *serviceDomain*, common::ResponseCallback *callback = nullptr*) [pure virtual]

Initiate service domain preference like CS, PS or CS_PS and receive the response asynchronously.

Parameters

| | | |
|----|----------------------|---|
| in | <i>serviceDomain</i> | ServiceDomainPreference . |
| in | <i>callback</i> | Callback function to get the response of set service domain preference request. |

Returns

Status of setServiceDomainPreference i.e. success or suitable error code.

5.13.1.2.2.7 virtual telux::common::Status telux::tel::IServingSystemManager::requestServiceDomainPreference (ServiceDomainPreferenceCallback *callback*) [pure virtual]

Request for Service Domain Preference asynchronously.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Callback function to get the response of request service domain preference. |
|----|-----------------|---|

Returns

Status of requestServiceDomainPreference i.e. success or suitable error code.

5.13.1.2.2.8 virtual telux::tel::DcStatus telux::tel::IServingSystemManager::getDcStatus () [pure virtual]

Request for Dual Connectivity status on 5G NR.

Returns

[DcStatus](#)

5.13.1.2.2.9 virtual telux::common::Status telux::tel::IServingSystemManager::registerListener (std::weak_ptr< IServingSystemListener > *listener*) [pure virtual]

Register a listener for specific updates from serving system.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of IServingSystemListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener i.e success or suitable status code.

5.13.1.2.2.10 virtual telux::common::Status telux::tel::IServingSystemManager::deregisterListener (std::weak_ptr< IServingSystemListener > *listener*) [pure virtual]

Deregister the previously added listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Previously registered IServingSystemListener that needs to be removed |
|----|-----------------|---|

Returns

Status of removeListener i.e. success or suitable status code

5.13.1.3 class telux::tel::IServingSystemListener

Listener class for getting radio access technology mode preference change notification.

The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onRatPreferenceChanged](#) ([RatPreference](#) preference)
- virtual void [onServiceDomainPreferenceChanged](#) ([ServiceDomainPreference](#) preference)
- virtual void [onDcStatusChanged](#) ([DcStatus](#) dcStatus)
- virtual [~IServingSystemListener](#) ()

5.13.1.3.1 Constructors and Destructors

5.13.1.3.1.1 virtual telux::tel::IServingSystemListener::~~IServingSystemListener () [virtual]

Destructor of [IServingSystemListener](#)

5.13.1.3.2 Member Function Documentation

5.13.1.3.2.1 virtual void telux::tel::IServingSystemListener::onRatPreferenceChanged ([RatPreference](#) *preference*) [virtual]

This function is called whenever RAT mode preference is changed.

Parameters

| | | |
|----|-------------------|-------------------------------|
| in | <i>preference</i> | RatPreference |
|----|-------------------|-------------------------------|

5.13.1.3.2.2 virtual void telux::tel::IServingSystemListener::onServiceDomainPreferenceChanged ([ServiceDomainPreference](#) *preference*) [virtual]

This function is called whenever service domain preference is changed.

Parameters

| | | |
|----|-------------------|---|
| in | <i>preference</i> | ServiceDomainPreference |
|----|-------------------|---|

5.13.1.3.2.3 virtual void telux::tel::IServingSystemListener::onDcStatusChanged (DcStatus *dcStatus*) [virtual]

This function is called whenever the Dual Connectivity status is changed on 5G NR.

Parameters

| | | |
|----|-----------------|----------|
| in | <i>dcStatus</i> | DcStatus |
|----|-----------------|----------|

5.13.2 Enumeration Type Documentation

5.13.2.1 enum telux::tel::ServiceDomainPreference [strong]

Defines service domain preference

Enumerator

UNKNOWN
CS_ONLY Circuit-switched only
PS_ONLY Packet-switched only
CS_PS Circuit-switched and packet-switched

5.13.2.2 enum telux::tel::RatPrefType

Defines the radio access technology mode preference.

Enumerator

PREF_CDMA_1X CDMA_1X
PREF_CDMA_EVDO CDMA_EVDO
PREF_GSM GSM
PREF_WCDMA WCDMA
PREF_LTE LTE
PREF_TDSCDMA TDSCDMA
PREF_NR5G NR5G

5.13.2.3 enum telux::tel::EndcAvailability [strong]

Defines ENDC(E-UTRAN New Radio-Dual Connectivity) Availability status on 5G NR

Enumerator

UNKNOWN Status unknown
AVAILABLE ENDC is Available
UNAVAILABLE ENDC is not Available

5.13.2.4 enum telux::tel::DcncRestriction [strong]

Defines DCNR(Dual Connectivity with NR) Restriction status on 5G NR

Enumerator

UNKNOWN Status unknown

RESTRICTED DCNR is Rescticted

UNRESTRICTED DCNR is not Restricted

5.14 Remote SIM Provisioning

This section contains APIs related to Remote SIM provisioning.

5.14.1 Data Structure Documentation

5.14.1.1 struct telux::tel::CustomHeader

Header information to be sent along with HTTP post request.

Data fields

| Type | Field | Description |
|--------|-------|--------------|
| string | name | Header name |
| string | value | Header value |

5.14.1.2 class telux::tel::IHttpTransactionListener

The interface listens for indication to perform HTTP request and send back the response for HTTP request to modem.

The methods in the listener can be invoked from multiple threads. It is client's responsibility to make sure the implementation is thread safe.

Public member functions

- virtual void [onNewHttpRequest](#) (const std::string &url, uint32_t tokenId, const std::vector< [CustomHeader](#) > &headers, const std::vector< uint8_t > &reqPayload)
- virtual [~IHttpTransactionListener](#) ()

5.14.1.2.1 Constructors and Destructors

5.14.1.2.1.1 virtual telux::tel::IHttpTransactionListener::~IHttpTransactionListener () [[virtual](#)]

Destructor of [IHttpTransactionListener](#)

5.14.1.2.2 Member Function Documentation

5.14.1.2.2.1 virtual void telux::tel::IHttpTransactionListener::onNewHttpRequest (const std::string & *url*, uint32_t *tokenId*, const std::vector< [CustomHeader](#) > & *headers*, const std::vector< uint8_t > & *reqPayload*) [[virtual](#)]

An application handling this indication should perform the HTTP request and call the [IHttpTransactionManager::sendHttpRequest](#) to provide the result of the HTTP transaction.

Parameters

| | | |
|----|----------------|--------------------------------|
| in | <i>url</i> | URL to sent HTTP post request. |
| in | <i>tokenId</i> | Token identifier. |

| | | |
|----|-------------------|---|
| in | <i>headers</i> | Header information to be sent along with HTTP post request. |
| in | <i>reqPayload</i> | Request payload. |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.3 class telux::tel::IHttpTransactionManager

[IHttpTransactionManager](#) is the interface to service HTTP related requests from the modem for SIM profile update related operations.

Public member functions

- virtual [telux::common::ServiceStatus](#) [getServiceStatus](#) ()=0
- virtual [telux::common::Status](#) [sendHttpTransactionResult](#) (uint32_t token, [HttpResult](#) result, const std::vector< [CustomHeader](#) > &headers, const std::vector< uint8_t > &response, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) [registerListener](#) (std::weak_ptr< [IHttpTransactionListener](#) > listener)=0
- virtual [telux::common::Status](#) [deregisterListener](#) (std::weak_ptr< [IHttpTransactionListener](#) > listener)=0
- virtual [~IHttpTransactionManager](#) ()

5.14.1.3.1 Constructors and Destructors

5.14.1.3.1.1 virtual [telux::tel::IHttpTransactionManager::~IHttpTransactionManager](#) () [**virtual**]

Destructor for [IHttpTransactionManager](#)

5.14.1.3.2 Member Function Documentation

5.14.1.3.2.1 virtual [telux::common::ServiceStatus](#) [telux::tel::IHttpTransactionManager::getServiceStatus](#) () [**pure virtual**]

This status indicates whether the [IHttpTransactionManager](#) object is in a usable state.

Returns

SERVICE_AVAILABLE - If HTTP transaction manager is ready for service.
 SERVICE_UNAVAILABLE - If HTTP transaction manager is temporarily unavailable.
 SERVICE_FAILED - If HTTP transaction manager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.3.2.2 `virtual telux::common::Status telux::tel::IHttpTransactionManager::sendHttpRequest(←
Result (uint32_t token, HttpRequest result, const std::vector< CustomHeader > &
headers, const std::vector< uint8_t > & response, common::ResponseCallback callback
= nullptr) [pure virtual]`

Send the result of HTTP Post request transaction to modem.

Parameters

| | | |
|----|-----------------|---|
| in | <i>token</i> | Token identifier for request and response pair. |
| in | <i>result</i> | HTTP transaction request result. |
| in | <i>headers</i> | Custom Headers in HTTP Response. |
| in | <i>response</i> | HTTP response payload. |
| in | <i>callback</i> | Callback function to get the result of send HTTP transaction request. |

Returns

Status of send HTTP transaction result i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.3.2.3 `virtual telux::common::Status telux::tel::IHttpTransactionManager::registerListener (←
std::weak_ptr< IHttpTransactionListener > listener) [pure virtual]`

Register a listener for specific events like perform HTTP Post request.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer of IHttpTransactionListener object that processes the notification. |
|----|-----------------|---|

Returns

Status of registerHttpListener success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.3.2.4 virtual telux::common::Status telux::tel::IHttpTransactionManager::deregisterListener (std::weak_ptr< IHttpTransactionListener > *listener*) [pure virtual]

De-register the listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer of IHttpTransactionListener object that needs to be deregistered. |
|----|-----------------|---|

Returns

Status of deregisterHttpListener success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.4 class telux::tel::SimProfile

[SimProfile](#) class represents single eUICC profile on the card.

Public member functions

- [SimProfile](#) (int profileId, [ProfileType](#) profileType, const std::string &iccid, bool [isActive](#), const std::string &nickName, const std::string &spn, const std::string &name, [IconType](#) iconType, std::vector< uint8_t > icon, [ProfileClass](#) profileClass, [PolicyRuleMask](#) policyRuleMask)
- int [getSlotId](#) ()
- int [getProfileId](#) ()
- [ProfileType](#) [getType](#) ()
- const std::string & [getIccid](#) ()
- bool [isActive](#) ()
- const std::string & [getNickName](#) ()
- const std::string & [getSPN](#) ()
- const std::string & [getName](#) ()
- [IconType](#) [getIconType](#) ()
- std::vector< uint8_t > [getIcon](#) ()
- [ProfileClass](#) [getClass](#) ()
- [PolicyRuleMask](#) [getPolicyRule](#) ()
- std::string [toString](#) ()

5.14.1.4.1 Constructors and Destructors

5.14.1.4.1.1 `telux::tel::SimProfile::SimProfile (int profileId, ProfileType profileType, const std::string & iccid, bool isActive, const std::string & nickName, const std::string & spn, const std::string & name, IconType iconType, std::vector< uint8_t > icon, ProfileClass profileClass, PolicyRuleMask policyRuleMask)`

5.14.1.4.2 Member Function Documentation

5.14.1.4.2.1 `int telux::tel::SimProfile::getSlotId ()`

Get slot id associated for this profile

Returns

SlotId

5.14.1.4.2.2 `int telux::tel::SimProfile::getProfileId ()`

Get profile identifier. The profile identifier is not persistently unique. It is unique for given snapshot of SIM profiles state. The profile identifier could change when any profile is deleted and added.

Returns

unique identifier for the profile

5.14.1.4.2.3 `ProfileType telux::tel::SimProfile::getType ()`

Get profile Type.

Returns

profile type

5.14.1.4.2.4 `const std::string& telux::tel::SimProfile::getIccid ()`

Get profile ICCID.

Returns

profile ICCID coded as in EF-ICCID

5.14.1.4.2.5 `bool telux::tel::SimProfile::isActive ()`

Indicates the profile state whether active or not.

Returns

true if profile is Active

5.14.1.4.2.6 const std::string& telux::tel::SimProfile::getNickName ()

Get profile nick name.

Returns

profile nick name

5.14.1.4.2.7 const std::string& telux::tel::SimProfile::getSPN ()

Get profile service provider name.

Returns

profile service provider name.

5.14.1.4.2.8 const std::string& telux::tel::SimProfile::getName ()

Get profile name.

Returns

profile name

5.14.1.4.2.9 IconType telux::tel::SimProfile::getIconType ()

Get profile icon type.

Returns

profile icon type

5.14.1.4.2.10 std::vector<uint8_t> telux::tel::SimProfile::getIcon ()

Get profile icon content.

Returns

profile icon content

5.14.1.4.2.11 ProfileClass telux::tel::SimProfile::getClass ()

Get profile class.

Returns

profile class

5.14.1.4.2.12 PolicyRuleMask telux::tel::SimProfile::getPolicyRule ()

Get profile policy rules.

Returns

mask of profile policy rules

5.14.1.4.2.13 std::string telux::tel::SimProfile::toString ()

Get the text related informative representation of this object.

Returns

String containing informative string.

5.14.1.5 class telux::tel::ISimProfileListener

The interface listens for profile download indication and keep track of download and install progress of profile.

The methods in the listener can be invoked from multiple threads. It is client's responsibility to make sure the implementation is thread safe.

Public member functions

- virtual void [onDownloadStatus](#) (SlotId slotId, [DownloadStatus](#) status, [DownloadErrorCause](#) cause)
- virtual void [onUserDisplayInfo](#) (SlotId slotId, bool userConsentRequired, [PolicyRuleMask](#) mask)
- virtual void [onConfirmationCodeRequired](#) (SlotId slotId, std::string profileName)
- virtual [~ISimProfileListener](#) ()

5.14.1.5.1 Constructors and Destructors

5.14.1.5.1.1 virtual telux::tel::ISimProfileListener::~~ISimProfileListener () [virtual]

Destructor of [ISimProfileListener](#)

5.14.1.5.2 Member Function Documentation

5.14.1.5.2.1 virtual void telux::tel::ISimProfileListener::onDownloadStatus (SlotId *slotId*, [DownloadStatus](#) *status*, [DownloadErrorCause](#) *cause*) [virtual]

This function is called when indication about status of profile download and installation comes.

Parameters

| | | |
|----|---------------|---|
| in | <i>slotId</i> | Slot on which profile get downloaded and installed. |
| in | <i>status</i> | telux::tel::DownloadStatus . |
| in | <i>cause</i> | telux::tel::DownloadErrorCause . |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.5.2.2 virtual void telux::tel::ISimProfileListener::onUserDisplayInfo (SlotId *slotId*, bool *userConsentRequired*, PolicyRuleMask *mask*) [virtual]

This function is invoked when information about user consent and profile policy rules is received. The client application is expected to provide user consent for download and install profile by calling [telux::tel::ISimProfileManager::provideUserConsent](#) if user consent is expected.

Parameters

| | | |
|----|----------------------------------|--|
| in | <i>slotId</i> | Slot on which profile get downloaded and installed. |
| in | <i>userConsent↔ Required</i> | User consent required or not. If true it means user is expected to provide consent for download and install. |
| in | <i>mask</i> | telux::tel::PprMask (Profile policy rules Mask) |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.5.2.3 virtual void telux::tel::ISimProfileListener::onConfirmationCodeRequired (SlotId *slotId*, std::string *profileName*) [virtual]

This function is invoked when confirmation code is required. The client application is expected to provide confirmation code for download and install profile by calling [telux::tel::ISimProfileManager::provideConfirmationCode](#)

Parameters

| | | |
|----|--------------------|--|
| in | <i>slotId</i> | Slot on which profile get downloaded and installed. |
| in | <i>profileName</i> | Profile name corresponding to which confirmation code is required. |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.6 class telux::tel::ISimProfileManager

[ISimProfileManager](#) is a primary interface for remote eUICCs (eSIMs or embedded SIMs) provisioning. This interface provides APIs to add, delete, set profile, update nickname, provide user consent, get Eid on the eUICC.

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status addProfile](#) (SlotId slotId, const std::string &activationCode, const std::string &confirmationCode="", bool userConsentSupported=false, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status deleteProfile](#) (SlotId slotId, int profileId, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status setProfile](#) (SlotId slotId, int profileId, bool enable=false, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status updateNickName](#) (SlotId slotId, int profileId, const std::string &nickName, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status requestProfileList](#) (SlotId slotId, [ProfileListResponseCb](#) callback)=0
- virtual [telux::common::Status requestEid](#) (SlotId slotId, [EidResponseCb](#) callback)=0
- virtual [telux::common::Status provideUserConsent](#) (SlotId slotId, bool userConsent, [UserConsentReasonType](#) reason, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status provideConfirmationCode](#) (SlotId slotId, std::string code, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status requestServerAddress](#) (SlotId slotId, [ServerAddressResponseCb](#) callback)=0
- virtual [telux::common::Status setServerAddress](#) (SlotId slotId, const std::string &smdpAddress, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status memoryReset](#) (SlotId slotId, [ResetOptionMask](#) mask, [common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [ISimProfileListener](#) > listener)=0
- virtual [telux::common::Status deregisterListener](#) (std::weak_ptr< [ISimProfileListener](#) > listener)=0
- virtual [~ISimProfileManager](#) ()

5.14.1.6.1 Constructors and Destructors

5.14.1.6.1.1 virtual [telux::tel::ISimProfileManager::~~ISimProfileManager](#) () [[virtual](#)]

Destructor for [ISimProfileManager](#)

5.14.1.6.2 Member Function Documentation

5.14.1.6.2.1 `virtual bool telux::tel::ISimProfileManager::isSubsystemReady () [pure virtual]`

Checks if the eUICC subsystem is ready.

Returns

True if [ISimProfileManager](#) is ready for service, otherwise returns false.

5.14.1.6.2.2 `virtual std::future<bool> telux::tel::ISimProfileManager::onSubsystemReady () [pure virtual]`

Wait for eUICC subsystem to be ready.

Returns

A future that caller can wait on to be notified when card manager is ready.

5.14.1.6.2.3 `virtual telux::common::Status telux::tel::ISimProfileManager::addProfile (SlotId slotId, const std::string & activationCode, const std::string & confirmationCode = "", bool userConsentSupported = false, common::ResponseCallback callback = nullptr) [pure virtual]`

Add new profile to eUICC card and download and install the profile on eUICC.

Parameters

| | | |
|----|-----------------------------|--|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>activationCode</i> | Activation code. |
| in | <i>confirmationCode</i> | Optional confirmation code required for downloading the profile. |
| in | <i>userConsentSupported</i> | Optional User consent supported or not. |
| in | <i>callback</i> | Optional callback function to get the result of add profile. |

Returns

Status of add profile i.e. success or suitable error code.

5.14.1.6.2.4 `virtual telux::common::Status telux::tel::ISimProfileManager::deleteProfile (SlotId slotId, int profileId, common::ResponseCallback callback = nullptr) [pure virtual]`

Delete profile from eUICC card.

1. Deletion of enabled profile a) This API will disable the profile first and then delete it. b) The profile is associated with profile policy rules (PPRs) so before disabling the profile, this API checks if the PPRs [telux::tel::PolicyRuleType](#) allow the operation. c) If the policy rules are not set, then first disabling of profile happens followed by deletion of profile. d) If disable succeeds but deletion fails, then the API

attempts to roll back the profile back to the original (enabled) state. e) If rollback fails due to any reason such as eUICC being in incompatible state then the profile will be in disabled state and the API will return `telux::common::ErrorCode::ROLLBACK_FAILED`

2. Deletion of disabled profile
 - a) This API checks the PPR `telux::tel::PolicyRuleType::PROFILE_DELETE_NOT_ALLOWED` before deletion of profile.
 - b) If the PPR is not set, then deletion of profile is performed. If the PPR is set, then the API returns `telux::common::ErrorCode::OPERATION_NOT_ALLOWED`.

Parameters

| | | |
|----|------------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>profileId</i> | Profile identifier |
| in | <i>callback</i> | Optional callback function to get the result of delete profile. |

Returns

Status of delete profile i.e. success or suitable error code.

5.14.1.6.2.5 `virtual telux::common::Status telux::tel::ISimProfileManager::setProfile (SlotId slotId, int profileId, bool enable = false, common::ResponseCallback callback = nullptr) [pure virtual]`

Enable or disable profile which allows to switch to other profile on eUICC card.

Parameters

| | | |
|----|------------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>profileId</i> | Profile identifier. |
| in | <i>enable</i> | Indicates whether a profile must be enabled or disabled. true - Enable and false - Disable. |
| in | <i>callback</i> | Optional callback function to get the result of set profile. |

Returns

Status of set profile i.e. success or suitable error code.

5.14.1.6.2.6 `virtual telux::common::Status telux::tel::ISimProfileManager::updateNickName (SlotId slotId, int profileId, const std::string & nickName, common::ResponseCallback callback = nullptr) [pure virtual]`

Update nick name of the profile

Parameters

| | | |
|----|------------------|--|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>profileId</i> | Profile identifier |
| in | <i>nickName</i> | New nick name for profile. |
| in | <i>callback</i> | Optional callback function to get the result of update nickname. |

Returns

Status of update nick name i.e. success or suitable error code.

5.14.1.6.2.7 **virtual telux::common::Status telux::tel::ISimProfileManager::requestProfileList (SlotId slotId, ProfileListResponseCb callback) [pure virtual]**

Request list of profiles supported by the eUICC card.

Parameters

| | | |
|----|-----------------|--|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>callback</i> | Callback function to get the result of request profile list. |

Returns

Status of request profile list i.e. success or suitable error code.

5.14.1.6.2.8 **virtual telux::common::Status telux::tel::ISimProfileManager::requestEid (SlotId slotId, EidResponseCb callback) [pure virtual]**

Request eUICC identifier(EID) for the slot.

Parameters

| | | |
|----|-----------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>callback</i> | Callback function to get the result of request EID. |

Returns

Status of request EID.e. success or suitable error code.

5.14.1.6.2.9 **virtual telux::common::Status telux::tel::ISimProfileManager::provideUserConsent (SlotId slotId, bool userConsent, UserConsentReasonType reason, common::ResponseCallback callback = nullptr) [pure virtual]**

Provide user consent required for downloading and installing profile. This API should be called in response to [telux::tel::ISimProfileListener::onUserDisplayInfo](#).

Parameters

| | | |
|----|--------------------|--|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>userConsent</i> | Consent for profile download and install. True means user consent given to download and install. |
| in | <i>reason</i> | Reason for not providing user consent to download and install. telux::tel::UserConsentReasonType |
| in | <i>callback</i> | Optional callback function to get the result of user consent request. |

Returns

Status of user consent request i.e. success or suitable error code.

5.14.1.6.2.10 `virtual telux::common::Status telux::tel::ISimProfileManager::provideConfirmationCode (SlotId slotId, std::string code, common::ResponseCallback callback = nullptr) [pure virtual]`

Provide confirmation code required for downloading and installing profile. This API should be called in response to [telux::tel::ISimProfileListener::onConfirmationCodeRequired](#).

Parameters

| | | |
|----|-----------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>code</i> | Confirmation code for profile download and install. |
| in | <i>callback</i> | Optional callback function to get the result of confirmation request. |

Returns

Status of provide confirmation code i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.6.2.11 `virtual telux::common::Status telux::tel::ISimProfileManager::requestServerAddress (SlotId slotId, ServerAddressResponseCb callback) [pure virtual]`

Get Subscription Manager Data Preparation (SM-DP+) address and the Subscription Manager Discovery Server (SMDS) address configured on the eUICC.

Parameters

| | | |
|----|-----------------|--|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>callback</i> | Callback function to get the result of server address request. |

Returns

Status of server address request i.e. success or suitable error code.

5.14.1.6.2.12 `virtual telux::common::Status telux::tel::ISimProfileManager::setServerAddress (SlotId slotId, const std::string & smdpAddress, common::ResponseCallback callback = nullptr) [pure virtual]`

Set Subscription Manager Data Preparation (SM-DP+) address on the eUICC. If SMDP+ address length is zero then the existing SM-DP+ address on the eUICC is removed

Parameters

| | | |
|----|--------------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>smdpAddress</i> | SM-DP+ address to be configured on the eUICC. |
| in | <i>callback</i> | Optional Callback function to get the result of set SM-DP+ request. |

Returns

Status of set server address request i.e. success or suitable error code.

5.14.1.6.2.13 `virtual telux::common::Status telux::tel::ISimProfileManager::memoryReset (SlotId slotId, ResetOptionMask mask, common::ResponseCallback callback = nullptr) [pure virtual]`

Resets the memory of the eUICC card based on [telux::tel::ResetOptionMask](#).

Parameters

| | | |
|----|-----------------|---|
| in | <i>slotId</i> | Slot identifier corresponding to the card. |
| in | <i>mask</i> | Memory reset options mask telux::tel::ResetOptionMask |
| in | <i>callback</i> | Optional Callback function to get the result of memory reset request. |

Returns

Status of memory reset request i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.14.1.6.2.14 `virtual telux::common::Status telux::tel::ISimProfileManager::registerListener (std::weak_ptr< ISimProfileListener > listener) [pure virtual]`

Register a listener to listen for status of specific events like download and installation of profile on eUICC.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of ISimProfileListener object that processes the notification. |
|----|-----------------|--|

Returns

Status of registerListener success or suitable status code

5.14.1.6.2.15 `virtual telux::common::Status telux::tel::ISimProfileManager::deregisterListener (std::weak_ptr< ISimProfileListener > listener) [pure virtual]`

De-register the listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of ISimProfileListener object that needs to be removed |
|----|-----------------|--|

Returns

Status of deregisterListener success or suitable status code

5.14.2 Enumeration Type Documentation

5.14.2.1 `enum telux::tel::HttpResult [strong]`

Defines the HTTP request result.

Enumerator

TRANSACTION_SUCCESSFUL HTTP request successful

UNKNOWN_ERROR Unknown error

HTTP_SERVER_ERROR Server error

HTTP_TLS_ERROR TLS error

HTTP_NETWORK_ERROR Network error

5.14.2.2 `enum telux::tel::ProfileType [strong]`

Indicates profile type of card

Enumerator

UNKNOWN

REGULAR Regular profile

EMERGENCY Emergency profile

5.14.2.3 `enum telux::tel::IconType [strong]`

Indicates profile icon type.

Enumerator

NONE No icon information

JPEG JPEG icon

PNG PNG icon

5.14.2.4 enum telux::tel::ProfileClass [strong]

Indicates profile class.

Enumerator

UNKNOWN No info about profile class
TEST Test profile
PROVISIONING Provisioning profile
OPERATIONAL Operational profile

5.14.2.5 enum telux::tel::DownloadStatus [strong]

Indicates profile download status.

Enumerator

DOWNLOAD_ERROR Profile download error
DOWNLOAD_INSTALLATION_COMPLETE Profile download and installation is complete

5.14.2.6 enum telux::tel::DownloadErrorCause [strong]

Indicates profile download error cause.

Enumerator

GENERIC Generic error
SIM Error from the SIM card
NETWORK Error from the network
MEMORY Error due to no memory
UNSUPPORTED_PROFILE_CLASS Unsupported profile class
PPR_NOT_ALLOWED Profile policy rules not allowed
END_USER_REJECTION End user rejection
END_USER_POSTPONED End user postponed

5.14.2.7 enum telux::tel::UserConsentReasonType [strong]

Indicates the reason for user consent not provided.

Enumerator

END_USER_REJECTION End user rejection
END_USER_POSTPONED End user postponed

5.14.2.8 enum telux::tel::PolicyRuleType

Defines profile policy rules(PPR). Each value represents corresponding bit for PprMask bitset.

Enumerator

PROFILE_DISABLE_NOT_ALLOWED Disabling of the profile is not allowed
PROFILE_DELETE_NOT_ALLOWED Deletion of the profile is not allowed

PROFILE_DELETE_ON_DISABLE Deletion of the profile is required on successful disabling

5.14.2.9 enum telux::tel::ResetOption

Defines memory reset options. Each value represents corresponding bit for ResetOptionMask bitset.

Enumerator

TEST_PROFILES Delete all the test profiles

OPERATIONAL_PROFILE Delete all operational profiles

DEFAULT_SMDP_ADDRESS Reset the default SM-DP+ address

5.15 Remote SIM

This section contains APIs related to Remote SIM operations.

5.15.1 Data Structure Documentation

5.15.1.1 class telux::tel::IRemoteSimListener

A listener class for getting remote SIM notifications.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onAduTransfer](#) (const unsigned int id, const std::vector< uint8_t > &apdu)
- virtual void [onCardConnect](#) ()
- virtual void [onCardDisconnect](#) ()
- virtual void [onCardPowerUp](#) ()
- virtual void [onCardPowerDown](#) ()
- virtual void [onCardReset](#) ()
- virtual [~IRemoteSimListener](#) ()

5.15.1.1.1 Constructors and Destructors

5.15.1.1.1.1 virtual telux::tel::IRemoteSimListener::~IRemoteSimListener () [virtual]

Destructor of [IRemoteSimListener](#)

5.15.1.1.2 Member Function Documentation

5.15.1.1.2.1 virtual void telux::tel::IRemoteSimListener::onAduTransfer (const unsigned int *id*, const std::vector< uint8_t > & *apdu*) [virtual]

This function is called when the modem wants to transmit a command APDU.

Parameters

| | | |
|----|-------------|--|
| in | <i>id</i> | Identifier for a command and response APDU pair |
| in | <i>apdu</i> | APDU request sent to the control point (max size = 261, per ETSI TS 102 221, section 10.1.4) |

5.15.1.1.2.2 virtual void telux::tel::IRemoteSimListener::onCardConnect () [virtual]

This function is called when the modem wants to establish a connection.

5.15.1.1.2.3 virtual void telux::tel::IRemoteSimListener::onCardDisconnect () [virtual]

This function is called when the modem wants to tear down a connection.

5.15.1.1.2.4 virtual void telux::tel::IRemoteSimListener::onCardPowerUp () [virtual]

This function is called when the modem wants to power up the card.

5.15.1.1.2.5 virtual void telux::tel::IRemoteSimListener::onCardPowerDown () [virtual]

This function is called when the modem wants to power down the card.

5.15.1.1.2.6 virtual void telux::tel::IRemoteSimListener::onCardReset () [virtual]

This function is called when the modem wants to warm reset the card.

5.15.1.2 class telux::tel::IRemoteSimManager

[IRemoteSimManager](#) provides APIs for remote SIM related operations. This allows a device to use a SIM card on another device for its WWAN modem functionality. The SIM provider service is the endpoint that interfaces with the SIM card (e.g. over bluetooth) and sends/receives data to the other endpoint, the modem. The modem sends requests to the SIM provider service to interact with the SIM card (e.g. power up, transmit APDU, etc.), and is notified of events (e.g. card errors, resets, etc.). This API is used by the SIM provider endpoint to provide a SIM card to the modem.

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status sendReset](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status sendConnectionAvailable](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status sendConnectionUnavailable](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status sendCardReset](#) (const std::vector< uint8_t > &atr, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status sendCardError](#) (const [CardErrorCause](#) cause=[CardErrorCause::INVALID](#), [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status sendCardInserted](#) (const std::vector< uint8_t > &atr, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status sendCardRemoved](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status sendCardWakeup](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0

- virtual `telux::common::Status sendApdu` (const unsigned int id, const std::vector< uint8_t > &apdu, const bool isSuccess=true, const unsigned int totalSize=0, const unsigned int offset=0, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status registerListener` (std::weak_ptr< `IRemoteSimListener` > listener)=0
- virtual `telux::common::Status deregisterListener` (std::weak_ptr< `IRemoteSimListener` > listener)=0
- virtual int `getSlotId` ()=0
- virtual `~IRemoteSimManager` ()

5.15.1.2.1 Constructors and Destructors

5.15.1.2.1.1 virtual `telux::tel::IRemoteSimManager::~IRemoteSimManager () [virtual]`

Destructor of `IRemoteSimManager`

5.15.1.2.2 Member Function Documentation

5.15.1.2.2.1 virtual bool `telux::tel::IRemoteSimManager::isSubsystemReady () [pure virtual]`

Checks the status of remote SIM subsystem and returns the result.

Returns

True if remote SIM subsystem is ready for service otherwise false.

5.15.1.2.2.2 virtual `std::future<bool> telux::tel::IRemoteSimManager::onSubsystemReady () [pure virtual]`

Wait for remote SIM subsystem to be ready.

Returns

A future that caller can wait on to be notified when remote SIM subsystem is ready.

5.15.1.2.2.3 virtual `telux::common::Status telux::tel::IRemoteSimManager::sendReset (telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Send reset command to the modem to reset state variables.

Parameters

| | | |
|-----|-----------------|---|
| out | <i>callback</i> | Callback function pointer to get the response of sendReset. |
|-----|-----------------|---|

Returns

Status of sendReset i.e. success or suitable status code.

5.15.1.2.2.4 virtual telux::common::Status telux::tel::IRemoteSimManager::sendConnectionAvailable (telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Send connection available event to the modem.

Parameters

| | | |
|-----|-----------------|--|
| out | <i>callback</i> | Callback function pointer to get the response. |
|-----|-----------------|--|

Returns

Status of sendConnectionAvailable i.e. success or suitable status code.

5.15.1.2.2.5 virtual telux::common::Status telux::tel::IRemoteSimManager::sendConnectionUnavailable (telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Send connection unavailable event to the modem.

Parameters

| | | |
|-----|-----------------|--|
| out | <i>callback</i> | Callback function pointer to get the response. |
|-----|-----------------|--|

Returns

Status of sendConnectionUnavailable i.e. success or suitable status code.

5.15.1.2.2.6 virtual telux::common::Status telux::tel::IRemoteSimManager::sendCardReset (const std::vector< uint8_t > & *atr*, telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Send card reset event to the modem.

Parameters

| | | |
|-----|-----------------|---|
| in | <i>atr</i> | Answer to Reset bytes (max size = 32, per ISO/IEC 7816-3:2006 section 8.1). |
| out | <i>callback</i> | Callback function pointer to get the response of sendCardReset. |

Returns

Status of sendCardReset i.e. success or suitable status code.

5.15.1.2.2.7 virtual telux::common::Status telux::tel::IRemoteSimManager::sendCardError (const CardErrorCause *cause* = CardErrorCause::INVALID, telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Send card error event to the modem.

Parameters

| | | |
|-----|-----------------|---|
| in | <i>cause</i> | Card Error cause. |
| out | <i>callback</i> | Callback function pointer to get the response of sendCardError. |

Returns

Status of sendCardError i.e. success or suitable status code.

5.15.1.2.2.8 `virtual telux::common::Status telux::tel::IRemoteSimManager::sendCardInserted (const std::vector< uint8_t > & atr, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Send card inserted event to the modem.

Parameters

| | | |
|-----|-----------------|---|
| in | <i>atr</i> | Answer to Reset bytes (max size = 32, per ISO/IEC 7816-3:2006 section 8.1). |
| out | <i>callback</i> | Callback function pointer to get the response of sendCardInserted. |

Returns

Status of sendCardInserted i.e. success or suitable status code.

5.15.1.2.2.9 `virtual telux::common::Status telux::tel::IRemoteSimManager::sendCardRemoved (telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Send card removed event to the modem.

Parameters

| | | |
|-----|-----------------|---|
| out | <i>callback</i> | Callback function pointer to get the response of sendCardRemoved. |
|-----|-----------------|---|

Returns

Status of sendCardRemoved i.e. success or suitable status code.

5.15.1.2.2.10 `virtual telux::common::Status telux::tel::IRemoteSimManager::sendCardWakeup (telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Send card wakeup event to the modem.

Parameters

| | | |
|-----|-----------------|--|
| out | <i>callback</i> | Callback function pointer to get the response of sendCardWakeup. |
|-----|-----------------|--|

Returns

Status of sendCardWakeup i.e. success or suitable status code.

5.15.1.2.2.11 `virtual telux::common::Status telux::tel::IRemoteSimManager::sendApdu (const unsigned int id, const std::vector< uint8_t > & apdu, const bool isSuccess = true, const unsigned int totalSize = 0, const unsigned int offset = 0, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Sends an APDU message to the modem, in response to a previous APDU sent by the modem.

Parameters

| | | |
|-----|------------------|--|
| in | <i>id</i> | Identifier for command and response APDU pair. |
| in | <i>apdu</i> | Response APDU (max size = 1024). |
| in | <i>isSuccess</i> | Whether APDU transaction completed successfully. |
| in | <i>totalSize</i> | Total length of the APDU message (used when the response is larger than 1024 bytes and must be passed in multiple segments). |
| in | <i>offset</i> | Offset of this APDU segment in the original message. |
| out | <i>callback</i> | Callback function pointer to get the response of sendApdu. |

Returns

Status of sendApdu i.e. success or suitable status code.

5.15.1.2.2.12 `virtual telux::common::Status telux::tel::IRemoteSimManager::registerListener (std::weak_ptr< IRemoteSimListener > listener) [pure virtual]`

Register a listener for specific updates from the modem.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of IRemoteSimListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener i.e success or suitable status code.

5.15.1.2.2.13 `virtual telux::common::Status telux::tel::IRemoteSimManager::deregisterListener (std::weak_ptr< IRemoteSimListener > listener) [pure virtual]`

Deregister the previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Previously registered IRemoteSimListener that needs to be deregistered |
|----|-----------------|--|

Returns

Status of deregisterListener success or suitable status code

5.15.1.2.2.14 virtual int telux::tel::IRemoteSimManager::getSlotId () [pure virtual]

Get associated slot ID for the RemoteSimManager

Returns

The slot ID associated with this [IRemoteSimManager](#)

5.15.2 Enumeration Type Documentation**5.15.2.1 enum telux::tel::CardErrorCause [strong]**

Defines the card error cause, sent to the modem by the SIM provider

Enumerator

INVALID Card error cause value will not be passed to modem

UNKNOWN_ERROR Unknown error

NO_LINK_ESTABLISHED No link was established

COMMAND_TIMEOUT Command timeout

POWER_DOWN Error due to a card power down

5.16 loc

- [Location Services](#)

This section contains APIs related to Location.

5.17 Location Services

This section contains APIs related to Location Services.

5.17.1 Data Structure Documentation

5.17.1.1 class `telux::loc::IDgnssStatusListener`

Listener class for getting RTCM injection event notification information.

Public member functions

- virtual void `onDgnssStatusUpdate` (`DgnssStatus` status)
- virtual `~IDgnssStatusListener` ()

5.17.1.1.1 Constructors and Destructors

5.17.1.1.1.1 virtual `telux::loc::IDgnssStatusListener::~~IDgnssStatusListener` () [`virtual`]

Destructor of `IRTCMStatusListener`

5.17.1.1.2 Member Function Documentation

5.17.1.1.2.1 virtual void `telux::loc::IDgnssStatusListener::onDgnssStatusUpdate` (`DgnssStatus status`) [`virtual`]

This function is called asynchronously to report RTCM injection status

Parameters

| | | |
|-----------------|---------------------|--------------------|
| <code>in</code> | <code>status</code> | - the status enum. |
|-----------------|---------------------|--------------------|

5.17.1.2 class `telux::loc::IDgnssManager`

`IRtcMManager` provides interface to inject RTCM data into modem, register event listener reported by `cdfw`(correction data framework).

Public member functions

- virtual bool `isSubsystemReady` ()=0
- virtual `telux::common::ServiceStatus` `getServiceStatus` ()=0
- virtual `std::future< bool >` `onSubsystemReady` ()=0
- virtual `telux::common::Status` `registerListener` (`std::weak_ptr< IDgnssStatusListener >` listener)=0
- virtual `telux::common::Status` `deRegisterListener` (void)=0
- virtual `telux::common::Status` `createSource` (`DgnssDataFormat` dataFormat)=0

- virtual [telux::common::Status releaseSource](#) (void)=0
- virtual [telux::common::Status injectCorrectionData](#) (const uint8_t *buffer, uint32_t bufferSize)=0
- virtual [~IDgnssManager](#) ()

5.17.1.2.1 Constructors and Destructors

5.17.1.2.1.1 virtual [telux::loc::IDgnssManager::~~IDgnssManager](#) () [**virtual**]

Destructor of IRtcmManager

5.17.1.2.2 Member Function Documentation

5.17.1.2.2.1 virtual **bool** [telux::loc::IDgnssManager::isSubsystemReady](#) () [**pure virtual**]

Checks the status of location subsystems and returns the result.

Returns

True if location subsystem is ready for service otherwise false.

Deprecated use [getServiceStatus\(\)](#)

5.17.1.2.2.2 virtual [telux::common::ServiceStatus telux::loc::IDgnssManager::getServiceStatus](#) () [**pure virtual**]

This status indicates whether the object is in a usable state.

Returns

SERVICE_AVAILABLE - If Dgnss manager is ready for service. SERVICE_UNAVAILABLE - If Dgnss manager is temporarily unavailable. SERVICE_FAILED - If Dgnss manager encountered an irrecoverable failure.

5.17.1.2.2.3 virtual **std::future<bool>** [telux::loc::IDgnssManager::onSubsystemReady](#) () [**pure virtual**]

Wait for location subsystem to be ready.

Returns

A future that caller can wait on to be notified when location subsystem is ready.

Deprecated The callback mechanism introduced in the [LocationFactory::getDgnssManager\(\)](#) API will provide the similar notification mechanism as [onSubsystemReady\(\)](#). This API will soon be removed from further releases.

5.17.1.2.2.4 `virtual telux::common::Status telux::loc::IDgnssManager::registerListener (std::weak_ptr< IDgnssStatusListener > listener) [pure virtual]`

Register a listener for Dgnss injection status update.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Pointer of IDgnssStatusListener object that processes the notification. |
|----|-----------------|---|

Returns

Status of registerListener i.e success or suitable status code.

5.17.1.2.2.5 `virtual telux::common::Status telux::loc::IDgnssManager::deRegisterListener (void) [pure virtual]`

deRegister a listener for Dgnss injection status update.

Returns

Status of registerListener i.e success or suitable status code.

5.17.1.2.2.6 `virtual telux::common::Status telux::loc::IDgnssManager::createSource (DgnssDataFormat dataFormat) [pure virtual]`

Create a Dgnss injection source. Only one source is permitted at any given time. If a new source is to be used, user must call [releaseSource\(\)](#) to release previous source before calling this function.

Parameters

| | | |
|----|---------------|------------------------------|
| in | <i>format</i> | Dgnss injection data format. |
|----|---------------|------------------------------|

Returns

Success of suitable status code

5.17.1.2.2.7 `virtual telux::common::Status telux::loc::IDgnssManager::releaseSource (void) [pure virtual]`

Release current Dgnss injection source (previously created by [createSource\(\)](#) call) This function is to be called if it's determined that current injection data is not suitable anymore, and a new source will be created and used as injection source.

Parameters

| | |
|-------------|--|
| <i>none</i> | |
|-------------|--|

Returns

none

5.17.1.2.2.8 virtual telux::common::Status telux::loc::IDgnssManager::injectCorrectionData (const uint8_t* *buffer*, uint32_t *bufferSize*) [pure virtual]

Inject correction data This function is to be called when a source has been created, either through a explicit call to [createSource\(\)](#), or after DgnssManager object was instantiated through the factory method(The factory method create a default source for DgnssManager object).

Parameters

| | | |
|----|-------------------|--|
| in | <i>buffer</i> | buffer contains the data to be injected. |
| in | <i>bufferSize</i> | size of the buffer. |

Returns

success or suitable status code.

5.17.1.3 class telux::loc::ILocationConfigurator

[ILocationConfigurator](#) allows for the enablement/disablement of the APIs such as CTunc, PACE, deleteAllAidingData, configureLeverArm, configureConstellations, configureRobustLocation, configureMinGpsWeek, requestMinGpsWeek, deleteAidingData, configureMinSVElevation, requestMinSVElevation, requestRobustLocation, configureSecondaryBand, requestSecondaryBandConfig, configureDR. [ILocationConfigurator](#) APIs strictly adheres to the principle of single client per process. [ILocationConfigurator](#) APIs follow the non persistence scheme, meaning when the processor crashes/reboots the settings need to be set again via the respective APIs.

Public Types

- using [GetSecondaryBandCallback](#) = std::function< void(const [telux::loc::ConstellationSet](#) set, [telux::common::ErrorCode](#) error)>
- using [GetMinGpsWeekCallback](#) = std::function< void(uint16_t minGpsWeek, [telux::common::ErrorCode](#) error)>
- using [GetMinSVElevationCallback](#) = std::function< void(uint8_t minSVElevation, [telux::common::ErrorCode](#) error)>
- using [GetRobustLocationCallback](#) = std::function< void(const [telux::loc::RobustLocationConfiguration](#) rLConfig, [telux::common::ErrorCode](#) error)>

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual [telux::common::ServiceStatus](#) [getServiceStatus](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status](#) [configureCTunc](#) (bool enable, [telux::common::ResponseCallback](#)

callback=nullptr, float timeUncertainty=DEFAULT_TUNC_THRESHOLD, uint32_t energyBudget=DEFAULT_TUNC_ENERGY_THRESHOLD)=0

- virtual `telux::common::Status configurePACE` (bool enable, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status deleteAllAidingData` (`telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status configureLeverArm` (const `LeverArmConfigInfo` &info, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status configureConstellations` (const `SvBlackList` &list, `telux::common::ResponseCallback` callback=nullptr, bool resetToDefault=false)=0
- virtual `telux::common::Status configureSecondaryBand` (const `ConstellationSet` &set, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status requestSecondaryBandConfig` (`GetSecondaryBandCallback` cb)=0
- virtual `telux::common::Status configureRobustLocation` (bool enable, bool enableForE911=false, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status requestRobustLocation` (`GetRobustLocationCallback` cb)=0
- virtual `telux::common::Status configureMinGpsWeek` (uint16_t minGpsWeek, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status requestMinGpsWeek` (`GetMinGpsWeekCallback` cb)=0
- virtual `telux::common::Status configureMinSVElevation` (uint8_t minSVElevation, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status requestMinSVElevation` (`GetMinSVElevationCallback` cb)=0
- virtual `telux::common::Status deleteAidingData` (`AidingData` aidingDataMask, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status configureDR` (const `DREngineConfiguration` &config, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status configureEngineState` (const `EngineType` engineType, const `LocationEngineRunState` engineState, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status provideConsentForTerrestrialPositioning` (bool userConsent, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `telux::common::Status configureNmeaTypes` (const `NmeaSentenceConfig` nmeaType, `telux::common::ResponseCallback` callback=nullptr)=0
- virtual `~ILocationConfigurator` ()

5.17.1.3.1 Member Typedef Documentation

5.17.1.3.1.1 using `telux::loc::ILocationConfigurator::GetSecondaryBandCallback = std::function<void(const telux::loc::ConstellationSet set, telux::common::ErrorCode error)>`

This function is called with the response to requestSecondaryBandConfig API.

Parameters

| | | |
|----|--------------|--|
| in | <i>set</i> | - disabled secondary band constellation configuration used by the GNSS standard position engine (SPE). |
| in | <i>error</i> | - Return code which indicates whether the operation succeeded or not. |

5.17.1.3.1.2 using `telux::loc::ILocationConfigurator::GetMinGpsWeekCallback = std::function<void(uint16_t minGpsWeek, telux::common::ErrorCode error)>`

This function is called with the response to requestMinGpsWeek API.

Parameters

| | | |
|----|-------------------|---|
| in | <i>minGpsWeek</i> | - minimum gps week. |
| in | <i>error</i> | - Return code which indicates whether the operation succeeded or not. |

5.17.1.3.1.3 using `telux::loc::ILocationConfigurator::GetMinSVElevationCallback = std::function<void(uint8_t minSVElevation, telux::common::ErrorCode error)>`

This function is called with the response to requestMinSVElevation API.

Parameters

| | | |
|----|-----------------------|---|
| in | <i>minSVElevation</i> | - minimum SV Elevation angle in units of degree. |
| in | <i>error</i> | - Return code which indicates whether the operation succeeded or not. |

5.17.1.3.1.4 using `telux::loc::ILocationConfigurator::GetRobustLocationCallback = std::function<void(const telux::loc::RobustLocationConfiguration rLConfig, telux::common::ErrorCode error)>`

This function is called with the response to requestRobustLocation API.

Parameters

| | | |
|----|-----------------|---|
| in | <i>rLConfig</i> | - robust location settings information. |
| in | <i>error</i> | - Return code which indicates whether the operation succeeded or not. |

5.17.1.3.2 Constructors and Destructors

5.17.1.3.2.1 `virtual telux::loc::ILocationConfigurator::~~ILocationConfigurator () [virtual]`

Destructor of [ILocationConfigurator](#)

5.17.1.3.3 Member Function Documentation

5.17.1.3.3.1 `virtual bool telux::loc::ILocationConfigurator::isSubsystemReady () [pure virtual]`

Checks the status of location configuration subsystems and returns the result.

Returns

True if location configuration subsystem is ready for service otherwise false.

Deprecated use [getServiceStatus\(\)](#)

5.17.1.3.3.2 `virtual telux::common::ServiceStatus telux::loc::ILocationConfigurator::getServiceStatus () [pure virtual]`

This status indicates whether the object is in a usable state.

Returns

`SERVICE_AVAILABLE` - If location configurator is ready for service. `SERVICE_UNAVAILABLE` - If location configurator is temporarily unavailable. `SERVICE_FAILED` - If location configurator encountered an irrecoverable failure.

5.17.1.3.3.3 `virtual std::future<bool> telux::loc::ILocationConfigurator::onSubsystemReady () [pure virtual]`

Wait for location configuration subsystem to be ready.

Returns

A future that caller can wait on to be notified when location configuration subsystem is ready.

Deprecated The callback mechanism introduced in the [LocationFactory::getLocationConfigurator\(\)](#) API will provide the similar notification mechanism as [onSubsystemReady\(\)](#). This API will soon be removed from further releases.

5.17.1.3.3.4 virtual telux::common::Status telux::loc::ILocationConfigurator::configureCTunc (bool *enable*, telux::common::ResponseCallback *callback* = nullptr, float *timeUncertainty* = DEFAULT_TUNC_THRESHOLD, uint32_t *energyBudget* = DEFAULT_TUNC_ENERGY_THRESHOLD) [pure virtual]

This API enables or disables the constrained time uncertainty(C-TUNC) feature. When the vehicle is turned off this API helps to put constraint on the time uncertainty. For multiple invocations of this API, client should wait for the command to finish, e.g.: via ResponseCallback received before issuing a second configureCTunc command. Behavior is not defined if client issues a second request of configureCTunc without waiting for the finish of the previous configureCTunc request.

Parameters

| | | |
|----|------------------------|--|
| in | <i>enable</i> | - true for enable C-TUNC feature and false for disable C-TUNC feature. |
| in | <i>callback</i> | - Optional callback to get the response of enablement/disablement of C-TUNC. |
| in | <i>timeUncertainty</i> | - specifies the time uncertainty threshold that gps engine needs to maintain, in unit of milli-seconds. This parameter is ignored when the request is to disable this feature. |
| in | <i>energyBudget</i> | - specifies the power budget that the GPS engine is allowed to spend to maintain the time uncertainty, in the unit of 100 micro watt second. If the power exceeds the energyBudget then this API is disabled. This is a cumulative energy budget. This parameter is ignored when the request is to disable this feature. |

Returns

Status of configureCTunc i.e. success or suitable status code.

5.17.1.3.3.5 virtual telux::common::Status telux::loc::ILocationConfigurator::configurePACE (bool *enable*, telux::common::ResponseCallback *callback* = nullptr) [pure virtual]

This API enables or disables position assisted clock estimator feature. For multiple invocations of this API, client should wait for the command to finish, e.g.: via ResponseCallback received before issuing a second configurePACE command. Behavior is not defined if client issues a second request of configurePACE without waiting for the finish of the previous configurePACE request.

Parameters

| | | |
|----|-----------------|--|
| in | <i>enable</i> | - to enable/disable position assisted clock estimator feature. |
| in | <i>callback</i> | - Optional callback to get the response of enablement/disablement of PACE. |

5.17.1.3.3.6 virtual telux::common::Status telux::loc::ILocationConfigurator::deleteAllAidingData (telux::common::ResponseCallback *callback* = nullptr) [pure virtual]

This API deletes all forms of aiding data from all position engines. This API deletes all assistance data used by GPS engine and force engine to do a cold start for next session. Invoking this API will trigger cold start

of all position engines on the device and will cause significant delay for the position engines to produce next fix and may have other performance impact. So, this API should only be exercised with caution and only for very limited usage scenario, e.g.: for performance test and certification process.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | - Optional callback to get the response of delete aiding data. |
|----|-----------------|--|

5.17.1.3.3.7 `virtual telux::common::Status telux::loc::ILocationConfigurator::configureLeverArm (const LeverArmConfigInfo & info, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API sets the lever arm parameters for the vehicle. LeverArm is system level parameters and it is not expected to change. So, it is needed to issue configureLeverArm once for every application processor boot-up. For multiple invocations of this API client should wait for the command to finish, e.g.: via ResponseCallback received before issuing a second configureLeverArm command. Behavior is not defined if client issues a second request of configureLeverArm without waiting for the finish of the previous configureLeverArm request.

Parameters

| | | |
|----|-----------------|---|
| in | <i>info</i> | - lever arm configuration info regarding below three types of lever arm info: a: GNSS Antenna with respect to the origin at the IMU (inertial measurement unit) for DR engine b: GNSS Antenna with respect to the origin at the IMU (inertial measurement unit) for VEPP engine c: VRP (Vehicle Reference Point) with respect to the origin (at the GNSS Antenna). Vehicle manufacturers prefer the position output to be tied to a specific point in the vehicle rather than where the antenna is placed (midpoint of the rear axle is typical). |
| in | <i>callback</i> | - Optional callback to get the response of configure lever arm. |

5.17.1.3.3.8 `virtual telux::common::Status telux::loc::ILocationConfigurator::configureConstellations (const SvBlackList & list, telux::common::ResponseCallback callback = nullptr, bool resetToDefault = false) [pure virtual]`

This API blacklists some constellations or subset of SVs from the constellation from being used by the GNSS standard position engine (SPE). Supported constellations for this API are GLONASS, QZSS, BEIDOU, GALILEO and SBAS. For other constellations NOTSUPPORTED status will be returned. For SBAS, SVs are not used in positioning by the GNSS standard position engine (SPE) by default. Blacklisting SBAS SV only blocks SBAS data demodulation and will not disable SBAS cross-correlation detection algorithms as they are necessary for optimal GNSS standard position engine (SPE) performance. When resetToDefault is false then the list is expected to contain the constellations or SVs that should be blacklisted. An empty list could be specified to allow all constellations/SVs (i.e. none will be blacklisted) in determining the fix. When resetToDefault is set to true, the device will revert to the default list of SV/constellations to be blacklisted. For multiple invocations of this API, client should wait for the command to finish, e.g.: via ResponseCallback received before issuing a second configureConstellations command. Behavior is not defined if client issues a second request of configureConstellations without waiting for the

finish of the previous `configureConstellations` request. This API call is not incremental and the new settings will completely overwrite the previous call.

Parameters

| | | |
|----|-----------------------|---|
| in | <i>list</i> | - specify the set of constellations and SVs that should not be used by the GNSS engine on modem. Constellations and SVs not specified in <code>blacklistedSvList</code> could get used by the GNSS engine on modem. |
| in | <i>callback</i> | - Optional callback to get the response of <code>configureConstellations</code> . |
| in | <i>resetToDefault</i> | - when set to true, the device will revert to the default list of SV/constellation to be blacklisted. When set to false, list will be inspected to determine what should be blacklisted. |

5.17.1.3.3.9 `virtual telux::common::Status telux::loc::ILocationConfigurator::configureSecondaryBand (const ConstellationSet & set, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API configures the secondary band constellations used by the GNSS standard position engine. This API call is not incremental and the new settings will completely overwrite the previous call. The set specifies the supported constellations whose secondary band information should be disabled. The absence of a constellation in the set will result in the secondary band being enabled for that constellation. The modem has its own configuration in NV (persistent memory) about which constellation's secondary bands are allowed to be enabled. When a constellation is omitted when this API is invoked the secondary band for that constellation will only be enabled if the modem configuration allows it. If not allowed then this API would be a no-op for that constellation. Passing an empty set to this API will result in all constellations as allowed by the modem configuration to be enabled. For multiple invocations of this API, client should wait for the command to finish, e.g.: via `ResponseCallback` received, before issuing a second `configureSecondaryBand` command. Behavior is not defined if client issues a second request of `configureSecondaryBand` without waiting for the finish of the previous `configureSecondaryBand` request.

Parameters

| | | |
|----|-----------------|--|
| in | <i>set</i> | - specifies the set of constellations whose secondary bands need to be disabled. |
| in | <i>callback</i> | - Optional callback to get the response of <code>configureSecondaryBand</code> . |

5.17.1.3.3.10 `virtual telux::common::Status telux::loc::ILocationConfigurator::requestSecondaryBandConfig (GetSecondaryBandCallback cb) [pure virtual]`

This API retrieves the secondary band configurations for constellation used by the standard GNSS engine (SPE).

Parameters

| | | |
|----|-----------|---|
| in | <i>cb</i> | - callback to retrieve secondary band information about constellations. |
|----|-----------|---|

Returns

Status of requestSecondaryBandConfig i.e. success or suitable status code.

5.17.1.3.3.11 `virtual telx::common::Status telx::loc::ILocationConfigurator::configureRobustLocation (bool enable, bool enableForE911 = false, telx::common::ResponseCallback callback = nullptr) [pure virtual]`

This API enables/disables robust location 2.0 feature and enables/disables robust location while device is on E911. When this API is enabled it reports confidence of the GNSS spoofing by the `getConformityIndex()` API defined in the [ILocationInfoEx](#) class, which is a measure of robustness of the underlying navigation solution. It indicates how well the various input data considered for navigation solution conform to expectations. In the presence of detected spoofed inputs, the navigation solution may take corrective actions to mitigate the spoofed inputs and improve robustness of the solution.

Parameters

| | | |
|----|----------------------|---|
| in | <i>enable</i> | - true to enable robust location and false to disable robust location. |
| in | <i>enableForE911</i> | - true to enable robust location when the device is on E911 session and false to disable on E911 session. This parameter is only valid if robust location is enabled. |
| in | <i>callback</i> | - Optional callback to get the response of configure robust location. |

5.17.1.3.3.12 `virtual telx::common::Status telx::loc::ILocationConfigurator::requestRobustLocation (GetRobustLocationCallback cb) [pure virtual]`

This API retrieves the robust location 2.0 settings and version info used by the GNSS standard position engine (SPE).

Parameters

| | | |
|----|-----------|---|
| in | <i>cb</i> | - callback to retrieve robust location information. |
|----|-----------|---|

Returns

Status of requestRobustLocation i.e. success or suitable status code.

5.17.1.3.3.13 `virtual telux::common::Status telux::loc::ILocationConfigurator::configureMinGpsWeek (uint16_t minGpsWeek, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API configures the minimum GPS week used by the modem GNSS standard position engine (SPE). If this API is called while GNSS standard position engine(SPE) is in middle of a session, ResponseCallback will still be invoked shortly to indicate the setting has been accepted by SPE engine, however the actual setting can not be applied until the current session ends, and this may take up to 255 seconds in poor GPS signal condition. Client should wait for the command to finish, e.g.: via ResponseCallback received before issuing a second configureMinGpsWeek command. Behavior is not defined if client issues a second request of configureMinGpsWeek without waiting for the previous configureMinGpsWeek to finish.

Parameters

| | | |
|----|-------------------|--|
| in | <i>minGpsWeek</i> | - minimum GPS week to be used by modem GNSS engine. |
| in | <i>callback</i> | - Optional callback to get the response of configure minimum GPS week. |

Returns

Status of configureMinGpsWeek i.e. success or suitable status code.

5.17.1.3.3.14 `virtual telux::common::Status telux::loc::ILocationConfigurator::requestMinGpsWeek (GetMinGpsWeekCallback cb) [pure virtual]`

This API retrieves the minimum GPS week configuration used by the modem GNSS standard position engine (SPE). If this API is called right after configureMinGpsWeek, the returned setting may not match the one specified in configureMinGpsWeek, as the setting configured via configureMinGpsWeek can not be applied to the GNSS standard position engine(SPE) when the engine is in middle of a session. In poor GPS signal condition, the session may take up to 255 seconds to finish. If after 255 seconds of invoking configureMinGpsWeek, the returned value still does not match, then the caller need to reapply the setting by invoking configureMinGpsWeek again.

Parameters

| | | |
|----|-----------|--|
| in | <i>cb</i> | - callback to retrieve the minimum gps week. |
|----|-----------|--|

Returns

Status of requestMinGpsWeek i.e. success or suitable status code.

5.17.1.3.3.15 `virtual telux::common::Status telux::loc::ILocationConfigurator::configureMinSVElevation (uint8_t minSVElevation, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API configures the minimum SV elevation angle setting used by the GNSS standard position engine. Configuring minimum SV elevation setting will not cause SPE to stop tracking low elevation SVs. It only controls the list of SVs that are used in the filtered position solution, so SVs with elevation below the setting will be excluded from use in the filtered position solution. Configuring this setting to large angle will cause

more SVs to get filtered out in the filtered position solution and will have negative performance impact.

This setting does not impact the SV information and SV measurement reports retrieved from APIs such as `IGnssSvInfo::getSVInfoList`, `ILocationListener::onGnssMeasurementsInfo`.

To apply the setting, the GNSS standard position engine(SPE) will require GNSS measurement engine and position engine to be turned off briefly. This may cause glitch for on-going tracking session and may have other performance impact. So, it is advised to use this API with caution and only for very limited usage scenario, e.g.: for performance test and certification process and for one-time device configuration.

Client should wait for the command to finish, e.g.: via `ResponseCallback` received, before issuing a second `configureMinElevation` command. If this API is called while the GNSS Position Engine is in the middle of a session, `ResponseCallback` will still be invoked shortly to indicate the setting has been received by the SPE engine. However the actual setting can not be applied until the current session ends, and this may take up to 255 seconds in poor GPS signal condition.

Parameters

| | | |
|----|-----------------------|---|
| in | <i>minSVElevation</i> | - minimum SV elevation to be used by GNSS standard position engine (SPE). Valid range is [0, 90] in unit of degree. |
| in | <i>callback</i> | - Optional callback to get the response of configure minimum SV Elevation angle. |

Returns

Status of `configureMinSVElevation` i.e. success or suitable status code.

5.17.1.3.3.16 virtual telux::common::Status telux::loc::ILocationConfigurator::requestMinSVElevation (GetMinSVElevationCallback cb) [pure virtual]

This API retrieves the minimum SV Elevation configuration used by the modem GNSS SPE engine. If this API is invoked right after the `configureMinSVElevation`, the returned setting may not match the one specified in `configureMinSVElevation`, as the setting received via `configureMinSVElevation` might not have been applied yet as it takes time to apply the setting if the GNSS SPE engine has an on-going session. In poor GPS signal condition, the session may take up to 255 seconds to finish. If after 255 seconds of invoking `configureMinSVElevation`, the returned value still does not match, then the caller need to reapply the setting by invoking `configureMinSVElevation` again.

Parameters

| | | |
|----|-----------|--|
| in | <i>cb</i> | - callback to retrieve the minimum SV elevation. |
|----|-----------|--|

Returns

Status of `requestMinSVElevation` i.e. success or suitable status code.

5.17.1.3.3.17 virtual telux::common::Status telux::loc::ILocationConfigurator::deleteAidingData (AidingData *aidingDataMask*, telux::common::ResponseCallback *callback = nullptr*) [pure virtual]

This API deletes specified aiding data from all position engines on the device. For example, removing ephemeris data may trigger GNSS engine to do a warm start. Invoking this API may cause noticeable delay for the position engine to produce first fix and may have other performance impact. So, this API should only be exercised with caution and only for very limited usage scenario, e.g.: for performance test and certification process.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>aidingDataMask</i> | - specify the set of aiding data to be deleted from all position engines. Currently, only ephemeris deletion is supported. |
| in | <i>callback</i> | - Optional callback to get the response of delete aiding data. |

Returns

Status of deleteAidingData i.e. success or suitable status code.

5.17.1.3.3.18 virtual telux::common::Status telux::loc::ILocationConfigurator::configureDR (const DREngineConfiguration & *config*, telux::common::ResponseCallback *callback = nullptr*) [pure virtual]

This API configures various parameters for dead reckoning position engine. Clients should wait for the command to finish e.g.: via ResponseCallback to be received before issuing a second configureDR command. Behavior is not defined if client issues a second request of configureDR without waiting for the completion of the previous configureDR request.

Parameters

| | | |
|----|-----------------|---|
| in | <i>config</i> | - specify dead reckoning engine configuration. |
| in | <i>callback</i> | - Optional callback to get the response of configureDR. |

Returns

Status of configureDR i.e. success or suitable status code.

5.17.1.3.3.19 virtual telux::common::Status telux::loc::ILocationConfigurator::configureEngineState (const EngineType *engineType*, const LocationEngineRunState *engineState*, telux::common::ResponseCallback *callback = nullptr*) [pure virtual]

This API is used to instruct the specified engine to be in the suspended/running state. When the engine is placed in suspended state, the engine will stop. If there is an on-going session, engine will no longer produce fixes. In the suspended state, calling API to delete aiding data from the paused engine may not have effect. Request to delete Aiding data shall be issued after engine resume.

Currently, only DR engine will support this request. The request to suspend/running DR engine can be made with or without an on-going session. With DR engine, on resume, GNSS position & heading re-acquisition may be needed for DR to engage.

Parameters

| | | |
|----|--------------------|--|
| in | <i>engineType</i> | - the engine that is instructed to change its run state. |
| in | <i>engineState</i> | - the new engine run state that the engine is instructed to be in. |
| in | <i>callback</i> | - Optional callback to get the response of configureEngineState. |

Returns

Status of configureEngineState i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.1.3.3.20 `virtual telux::common::Status telux::loc::ILocationConfigurator::provideConsentForTerrestrialPositioning (bool userConsent, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Clients can request Terrestrial Positioning using [ILocationManager::getTerrestrialPosition](#). Terrestrial Positioning requires sending device data to the cloud to get the position. This functionality requires user consent. This API needs to be invoked to provide the user consent.

The consent will remain effective across power cycles, until this API is called with a different value.

Parameters

| | | |
|----|--------------------|--|
| in | <i>userConsent</i> | - true indicates user consents to sending device data to cloud, false indicates user does not consent. |
| in | <i>callback</i> | - Optional callback to get the response of provideConsentForTerrestrialPositioning. |

Returns

Status of provideConsentForTerrestrialPositioning i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.1.3.3.21 `virtual telux::common::Status telux::loc::ILocationConfigurator::configureNmeaTypes (const NmeaSentenceConfig nmeaType, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API is used to configure the NMEA sentence types that clients will receive via [ILocationManager::startDetailedReports](#) or [ILocationManager::startDetailedEngineReports](#). Without prior invocation to this API, all NMEA sentences supported in the system will get generated and delivered to all the clients that register to receive NMEA sentences. The NMEA sentence type configuration is common across all clients and updating it will affect all clients. This API call is not incremental and the new NMEA

sentence types will completely overwrite the previous call to this API.

Parameters

| | | |
|----|-----------------|--|
| in | <i>nmeaType</i> | - specify the set of NMEA sentences |
| in | <i>callback</i> | - Optional callback to get the response of configureNmeaTypes. |

Returns

Status of configureNmeaTypes i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.1.4 struct telux::loc::GnssKinematicsData

Specifies kinematics related information related to device body frame parameters.

Data fields

| Type | Field | Description |
|--|------------------------|---|
| Kinematic↔ DataValidity | bodyFrame↔ DataMask | Contains Body frame data valid bits. |
| float | longAccel | Forward Acceleration in body frame (meters/second ²) |
| float | latAccel | Sideward Acceleration in body frame (meters/second ²) |
| float | vertAccel | Vertical Acceleration in body frame (meters/second ²) |
| float | yawRate | Heading Rate (Radians/second) |
| float | pitch | Body pitch (Radians) |
| float | longAccelUnc | Uncertainty of Forward Acceleration in body frame (meters/second ²) Uncertainty is defined with 68% confidence level. |
| float | latAccelUnc | Uncertainty of Side-ward Acceleration in body frame (meters/second ²) Uncertainty is defined with 68% confidence level. |
| float | vertAccelUnc | Uncertainty of Vertical Acceleration in body frame (meters/second ²) Uncertainty is defined with 68% confidence level. |
| float | yawRateUnc | Uncertainty of Heading Rate (Radians/second) Uncertainty is defined with 68% confidence level. |
| float | pitchUnc | Uncertainty of Body pitch (Radians) Uncertainty is defined with 68% confidence level. |
| float | pitchRate | Body pitch rate, in unit of radians/second. |
| float | pitchRateUnc | Uncertainty of pitch rate, in unit of radians/second. Uncertainty is defined with 68% confidence level. |
| float | roll | Roll of body frame, clockwise is positive, in unit of radian. |
| float | rollUnc | Uncertainty of roll, in unit of radian. Uncertainty is defined with 68% confidence level. |
| float | rollRate | Roll rate of body frame, clockwise is positive, in unit of radian/second. |

| Type | Field | Description |
|-------|-------------|---|
| float | rollRateUnc | Uncertainty of roll rate, in unit of radian/second. Uncertainty is defined with 68% confidence level. |
| float | yaw | Yaw of body frame, clockwise is positive, in unit of radian. |
| float | yawUnc | Uncertainty of yaw, in unit of radian. Uncertainty is defined with 68% confidence level. |

5.17.1.5 struct telux::loc::LLAInfo

The location info is calculated according to the vehicle's GNSS antenna where as Vehicle Reference Point (VRP) refers to a point on the vehicle where the display of the car sits. The VRP based info is calculated by adding that extra difference between GNSS antenna and the VRP on the top where the location info is received. The VRP parameters can be configured through [ILocationConfigurator::configureLeverArm](#). [LLAInfo](#) specifies latitude, longitude and altitude info of location for VRP-based.

Data fields

| Type | Field | Description |
|--------|-----------|---|
| double | latitude | Latitude, in unit of degrees, range [-90.0, 90.0]. |
| double | longitude | Longitude, in unit of degrees, range [-180.0, 180.0]. |
| float | altitude | Altitude above the WGS 84 reference ellipsoid, in unit of meters. |

5.17.1.6 struct telux::loc::TimelInfo

Specify non-Glonass Gns system time info.

Data fields

| Type | Field | Description |
|--|--|---|
| GnssTime ↔ Validity | validityMask | Validity mask for below fields |
| uint16_t | systemWeek | Extended week number at reference tick. Unit: Week. Set to 65535 if week number is unknown. For GPS: Calculated from midnight, Jan. 6, 1980. OTA decoded 10 bit GPS week is extended to map between: [NV6264 to (NV6264 + 1023)]. For BDS: Calculated from 00:00:00 on January 1, 2006 of Coordinated Universal Time (UTC). For GAL: Calculated from 00:00 UT on Sunday August 22, 1999 (midnight between August 21 and August 22). |
| uint32_t | systemMsec | Time in to the current week at reference tick. Unit: Millisecond. Range: 0 to 604799999. |
| float | systemClk ↔ TimeBias | System clock time bias Units: Millisecond Note: System time (TOW Millisecond) = systemMsec - systemClkTimeBias. |
| float | systemClk ↔ TimeUncMs | Single sided maximum time bias uncertainty Units: Millisecond |
| uint32_t | refFCount | FCount (free running HW timer) value. Don't use for relative time purpose due to possible discontinuities. Unit: Millisecond |
| uint32_t | numClock ↔ Resets | Number of clock resets/discontinuities detected, affecting the local hardware counter value. |

5.17.1.7 struct telux::loc::GlonassTimeInfo

Specifies Glonass system time info.

Data fields

| Type | Field | Description |
|------------------------------|----------------------|---|
| uint16_t | gloDays | GLONASS day number in four years. Refer to GLONASS ICD. Applicable only for GLONASS and shall be ignored for other constellations. If unknown shall be set to 65535 |
| TimeValidity | validityMask | Validity mask for GlonassTimeInfo fields |
| uint32_t | gloMsec | GLONASS time of day in Millisecond. Refer to GLONASS ICD. Units: Millisecond. |
| float | gloClkTime↔ Bias | GLONASS clock time bias. Units: Millisecond Note: GLO time (TOD Millisecond) = gloMsec - gloClkTimeBias. Check for gloClkTimeUncMs before use. |
| float | gloClkTime↔ UncMs | Single sided maximum time bias uncertainty Units: Millisecond |
| uint32_t | refFCount | FCount (free running HW timer) value. Don't use for relative time purpose due to possible discontinuities. Unit: Millisecond |
| uint32_t | numClock↔ Resets | Number of clock resets/discontinuities detected, affecting the local hardware counter value. |
| uint8_t | gloFourYear | GLONASS four year number from 1996. Refer to GLONASS ICD. Applicable only for GLONASS and shall be ignored for other constellations. |

5.17.1.8 union telux::loc::SystemTimeInfo

Union to hold GNSS system time from different constellations in [SystemTime](#).

Data fields

| Type | Field | Description |
|---------------------------------------|-------|--|
| TimeInfo | gps | System time info from GPS constellation. |
| TimeInfo | gal | System time info from GALILEO constellation. |
| TimeInfo | bds | System time info from BEIDOU constellation. |
| TimeInfo | qzss | System time info from QZSS constellation. |
| GlonassTime↔ Info | glo | System time info from GLONASS constellation. |
| TimeInfo | navic | System time info from NAVIC constellation. |

5.17.1.9 struct telux::loc::SystemTime

GNSS system time in [ILocationInfoEx](#).

Data fields

| Type | Field | Description |
|----------------------------|------------------------|--|
| GnssSystem | gnssSystem↔ TimeSrc | Specify the source constellation for GNSS system time. |

| Type | Field | Description |
|--------------------------------------|-------|---|
| SystemTime↔ Info | time | Specify the GNSS system time corresponding to the source. |

5.17.1.10 struct telux::loc::GnssMeasurementInfo

Specify the satellite vehicle measurements that are used to calculate location in [ILocationInfoEx](#).

Data fields

| Type | Field | Description |
|----------------------------|------------------------|---|
| GnssSignal | gnssSignalType | GnssSignalType mask |
| GnssSystem | gnss↔ Constellation | Specifies GNSS Constellation Type |
| uint16_t | gnssSvId | GNSS SV ID. For GPS: 1 to 32. For GLONASS: [65, 96] or [97, 110]. [65, 96] if orbital slot number(OSN) is known. [97, 110] as frequency channel number(FCN) [-7, 6] plus 104. i.e. encode FCN (-7) as 97, FCN (0) as 104, FCN (6) as 110. For SBAS: 120 to 158 and 183 to 191. For QZSS: 193 to 197. For BDS: 201 to 263. For GAL: 301 to 336. For NAVIC: 401 to 414. |

5.17.1.11 struct telux::loc::SvUsedInPosition

Specify the set of SVs that are used to calculate location in [ILocationInfoEx](#).

Data fields

| Type | Field | Description |
|----------|-------|---|
| uint64_t | gps | Specify the set of SVs from GPS constellation that are used to compute the position. Bit 0 to Bit 31 corresponds to GPS SV id 1 to 32. |
| uint64_t | glo | Specify the set of SVs from GLONASS constellation that are used to compute the position. Bit 0 to Bit 31 corresponds to GLO SV id 65 to 96. |
| uint64_t | gal | Specify the set of SVs from GALILEO constellation that are used to compute the position. Bit 0 to Bit 35 corresponds to GAL SV id 301 to 336. |
| uint64_t | bds | Specify the set of SVs from BEIDOU constellation that are used to compute the position. Bit 0 to Bit 62 corresponds to BDS SV id 201 to 263. |
| uint64_t | qzss | Specify the set of SVs from QZSS constellation that are used to compute the position. Bit 0 to Bit 4 corresponds to QZSS SV id 193 to 197. |
| uint64_t | navic | Specify the set of SVs from NAVIC constellation that are used to compute the position. Bit 0 to Bit 13 corresponds to NAVIC SV id 401 to 414. |

5.17.1.12 struct telux::loc::GnssData

Specify the additional GNSS data that can be provided during a tracking session, currently jammer and automatic gain control data are available.

Data fields

| Type | Field | Description |
|-----------------------|--|--|
| GnssData↔ Validity | gnssData↔ Mask[Gnss↔ DataSignal↔ Types::GNSS↔ _DATA_MA↔ X_NUMBER↔ _OF_SIGNA↔ L_TYPES] | bitwise OR of GnssDataValidityType |
| double | jammer↔ Ind[GnssData↔ SignalTypes::↔ GNSS_DAT↔ A_MAX_NU↔ MBER_OF_↔ SIGNAL_TY↔ PES] | Jammer Indication for each signal type. Each index represents the signal type in GnssDataSignalTypes. |
| double | agc[Gnss↔ DataSignal↔ Types::GNSS↔ _DATA_MA↔ X_NUMBER↔ _OF_SIGNA↔ L_TYPES] | Automatic gain control for each signal type. Each index corresponds to the signal type in GnssDataSignalTypes. |

5.17.1.13 struct telux::loc::SvBlackListInfo

Specify parameters related to enable/disable SVs

Data fields

| Type | Field | Description |
|---------------------------------|---------------|---|
| Gnss↔ Constellation↔ Type | constellation | constellation for the sv |
| uint32_t | svId | sv id for the constellation: 0 means blacklist for all SVIDs of a given constellation type GLONASS SV id range: 65 to 96 QZSS SV id range: 193 to 197 BDS SV id range: 201 to 237 GAL SV id range: 301 to 336 SBAS SV id range: 120 to 158 and 183 to 191 |

5.17.1.14 struct telux::loc::LeverArmParams

Specify parameters related to lever arm

Data fields

| Type | Field | Description |
|-------|----------------|--|
| float | forwardOffset | Offset along the vehicle forward axis, in unit of meters |
| float | sidewaysOffset | Offset along the vehicle starboard axis, in unit of meters |
| float | upOffset | Offset along the vehicle up axis, in unit of meters |

5.17.1.15 struct telux::loc::GnssMeasurementsData

Specify the signal measurement information such as satellite vehicle pseudo range, satellite vehicle time, carrier phase measurement etc. from GNSS positioning engine.

Data fields

| Type | Field | Description |
|---|--|---|
| Gnss↔Measurements↔DataValidity | valid | Bitwise OR of GnssMeasurementsDataValidityType to specify the valid fields in GnssMeasurementsData . |
| int16_t | svId | Specify satellite vehicle ID number. |
| Gnss↔Constellation↔Type | svType | SV constellation type. |
| double | timeOffsetNs | Time offset when the measurement was taken, in unit of nanoseconds. |
| Gnss↔Measurements↔StateValidity | stateMask | Bitwise OR of GnssMeasurementsStateValidityType to specify the GNSS measurement state. |
| int64_t | receivedSv↔TimeNs | Received GNSS time of the week in nanoseconds when the measurement was taken. Total time is: receivedSvTimeNs + receivedSvTimeSubNs . |
| float | receivedSv↔TimeSubNs | Sub nanoseconds portion of the received GNSS time of the week when the measurement was taken. Total time is: receivedSvTimeNs + receivedSvTimeSubNs . |
| int64_t | receivedSv↔Time↔UncertaintyNs | Satellite time. All SV times in the current measurement block are already propagated to a common reference time epoch, in unit of nano seconds. |
| double | carrierTo↔NoiseDbHz | Signal strength, carrier to noise ratio, in unit of dB-Hz. |
| double | pseudorange↔RateMps | Uncorrected pseudorange rate, in unit of metres/second. |
| double | pseudorange↔Rate↔Uncertainty↔Mps | Uncorrected pseudorange rate uncertainty, in unit of meters/second. |

| Type | Field | Description |
|---|--------------------------|---|
| Gnss↔Measurements↔AdrState↔Validity | adrStateMask | Bitwise OR of GnssMeasurementsAdrStateValidityType. |
| double | adrMeters | Accumulated delta range, in unit of meters. |
| double | adr↔Uncertainty↔Meters | Accumulated delta range uncertainty, in unit of meters. |
| float | carrier↔FrequencyHz | Carrier frequency of the tracked signal, in unit of Hertz. |
| int64_t | carrierCycles | The number of full carrier cycles between the receiver and the satellite. |
| double | carrierPhase | The RF carrier phase that the receiver has detected. |
| double | carrierPhase↔Uncertainty | The RF carrier phase uncertainty. |
| Gnss↔Measurements↔Multipath↔Indicator | multipath↔Indicator | Multipath indicator, could be unknown, present or not present. |
| double | signalTo↔NoiseRatioDb | Signal to noise ratio, in unit of dB. |
| double | agcLevelDb | Automatic gain control level, in unit of dB. |

5.17.1.16 struct telux::loc::GnssMeasurementsClock

Specify GNSS measurements clock. The main equation describing the relationship between various components is: $utcTimeNs = timeNs - (fullBiasNs + biasNs) - leapSecond * 1,000,000,000$

Data fields

| Type | Field | Description |
|---|------------------------|--|
| Gnss↔Measurements↔ClockValidity | valid | Bitwise OR of GnssMeasurementsClockValidityType. |
| int16_t | leapSecond | Leap second, in unit of seconds. |
| int64_t | timeNs | Time, monotonically increasing as long as the power is on, in unit of nanoseconds. |
| double | time↔UncertaintyNs | Time uncertainty (one sigma), in unit of nanoseconds. |
| int64_t | fullBiasNs | Full bias, in unit of nanoseconds. |
| double | biasNs | Sub-nanoseconds bias, in unit of nanoseconds. |
| double | bias↔UncertaintyNs | Bias uncertainty (one sigma), in unit of nanoseconds. |
| double | driftNsps | Clock drift, in unit of nanoseconds/second. |
| double | drift↔Uncertainty↔Nsps | Clock drift uncertainty (one sigma), in unit of nanoseconds/second. |

| Type | Field | Description |
|----------|-------------------------------------|--|
| uint32_t | hwClock↔ Discontinuity↔ Count | HW clock discontinuity count - incremented for each discontinuity in HW clock. |

5.17.1.17 struct telux::loc::GnssMeasurements

Specify GNSS measurements clock and data. [GnssMeasurementInfo](#) is used to convey the satellite vehicle info whose measurements are actually used to generate the current position report. While [GnssMeasurements](#) contains the satellite measurements that device observed during tracking session, regardless the measurement is used or not used to compute the fix. Furthermore [GnssMeasurements](#) contains much richer set of information which can enable other third party engines to utilize the measurements and compute the position by itself.

Data fields

| Type | Field | Description |
|--|--------------|-------------------------------|
| Gnss↔ Measurements↔ Clock | clock | GNSS measurements clock info. |
| vector< Gnss↔ Measurements↔ Data > | measurements | GNSS measurements data. |

5.17.1.18 struct telux::loc::LeapSecondChangeInfo

Specify leap second change event info.

Data fields

| Type | Field | Description |
|--------------------------|------------------------------|---|
| TimeInfo | timeInfo | GPS timestamp that corresponds to the last known leap second change event. The info can be available on two scenario: 1: This leap second change event has been scheduled and yet to happen 2: This leap second change event has already happened and next leap second change event has not yet been scheduled. |
| uint8_t | leapSeconds↔ BeforeChange | Number of leap seconds prior to the leap second change event that corresponds to the timestamp at timeInfo. |
| uint8_t | leapSeconds↔ AfterChange | Number of leap seconds after the leap second change event that corresponds to the timestamp at timeInfo. |

5.17.1.19 struct telux::loc::LeapSecondInfo

Specify leap second info, including current leap second and leap second change event info if available.

Data fields

| Type | Field | Description |
|--|---------|---|
| LeapSecondInfoValidity | valid | Validity of LeapSecondInfo fields. |
| uint8_t | current | Current leap seconds, in unit of seconds. This info will only be available only if the leap second change info is not available. |
| LeapSecondChangeInfo | info | Leap second change event info. The info can be available on two scenario: 1: this leap second change event has been scheduled and yet to happen 2: this leap second change event has already happened and next leap second change event has not yet been scheduled. If leap second change info is available, to figure out the current leap second info, compare current gps time with LeapSecondChangeInfo::timeInfo to know whether to choose LeapSecondBefore or LeapSecondAfter as current leap second. |

5.17.1.20 struct telux::loc::LocationSystemInfo

Specify location system information.

Data fields

| Type | Field | Description |
|--|-------|--|
| LocationSystemInfoValidity | valid | validity of LocationSystemInfo::info |
| LeapSecondInfo | info | Current leap second and leap second info. |

5.17.1.21 struct telux::loc::GnssEnergyConsumedInfo

Specify the info regarding energy consumed by GNSS engine.

Data fields

| Type | Field | Description |
|--|--------------------------------------|---|
| GnssEnergyConsumedInfoValidity | valid | Bitwise OR of GnssEnergyConsumedInfoValidityType to specify the valid fields in GnssEnergyConsumedInfo . |
| uint64_t | energySinceFirstBoot | Energy consumed by the modem GNSS engine since device first ever bootup, in unit of 0.1 milli watt seconds. For an invalid reading, <code>INVALID_ENERGY_CONSUMED</code> is returned. |

5.17.1.22 struct telux::loc::RobustLocationVersion

Specify the versioning info of robust location module for the GNSS standard position engine (SPE).

Data fields

| Type | Field | Description |
|----------|-------|-----------------------|
| uint8_t | major | Major version number. |
| uint16_t | minor | Minor version number. |

5.17.1.23 struct telux::loc::RobustLocationConfiguration

Specify the robust location configuration used by the GNSS standard position engine (SPE)

Data fields

| Type | Field | Description |
|---------------------------------------|----------------|---|
| RobustLocationConfig | validMask | Validity mask |
| bool | enabled | Specify whether robust location feature is enabled or not. |
| bool | enabledForE911 | Specify whether robust location feature is enabled or not when device is on E911 call. |
| RobustLocationVersion | version | Specify the version info of robust location module used by the GNSS standard position engine (SPE). |

5.17.1.24 struct telux::loc::BodyToSensorMountParams

Specify vehicle body-to-Sensor mount parameters for use by dead reckoning positioning engine.

Data fields

| Type | Field | Description |
|-------|-------------|---|
| float | rollOffset | The misalignment of the sensor board along the horizontal plane of the vehicle chassis measured looking from the vehicle to forward direction. In unit of degrees. Range: [-180.0, 180.0]. |
| float | yawOffset | The misalignment along the horizontal plane of the vehicle chassis measured looking from the vehicle to the right side. Positive pitch indicates vehicle is inclined such that forward wheels are at higher elevation than rear wheels. In unit of degrees. Range: [-180.0, 180.0]. |
| float | pitchOffset | The angle between the vehicle forward direction and the sensor axis as seen from the top of the vehicle, and measured in counterclockwise direction. In unit of degrees. Range: [-180.0, 180.0]. |
| float | offsetUnc | Single uncertainty number that may be the largest of the uncertainties for roll offset, pitch offset and yaw offset. In unit of degrees. Range: [-180.0, 180.0]. |

5.17.1.25 struct telux::loc::DREngineConfiguration

Specify the dead reckoning engine configuration parameters.

Data fields

| Type | Field | Description |
|---|---------------------|--|
| DRConfig ↔ Validity | validMask | Specify the valid fields. |
| BodyTo ↔ SensorMount ↔ Params | mountParam | Body to sensor mount parameters used by dead reckoning positioning engine. |
| float | speedFactor | Vehicle Speed Scale Factor configuration input for the dead reckoning positioning engine. The multiplicative scale factor is applied to the received Vehicle Speed value (in meter/second) to obtain the true Vehicle Speed. Range is [0.9 to 1.1]. Note: The scale factor is specific to a given vehicle make & model. |
| float | speedFactor↔ Unc | Vehicle Speed Scale Factor Uncertainty (68% confidence) configuration input for the dead reckoning positioning engine. Range is [0.0 to 0.1]. Note: The scale factor uncertainty is specific to a given vehicle make & model. |
| float | gyroFactor | Gyroscope Scale Factor configuration input for the dead reckoning positioning engine. The multiplicative scale factor is applied to received gyroscope value to obtain the true value. Range is [0.9 to 1.1]. Note: The scale factor is specific to the Gyroscope sensor and typically derived from either sensor data-sheet or from actual calibration. |
| float | gyroFactorUnc | Gyroscope Scale Factor uncertainty (68% confidence) configuration input for the dead reckoning positioning engine. Range is [0.0 to 0.1]. Note: The scale factor uncertainty is specific to the Gyroscope sensor and typically derived from either sensor data-sheet or from actual calibration. |

5.17.1.26 class telux::loc::ILocationInfoBase

[ILocationInfoBase](#) provides interface to get basic position related information like latitude, longitude, altitude, timestamp.

Public member functions

- virtual [LocationInfoValidity](#) [getLocationInfoValidity](#) ()=0
- virtual [LocationTechnology](#) [getTechMask](#) ()=0
- virtual float [getSpeed](#) ()=0
- virtual double [getLatitude](#) ()=0
- virtual double [getLongitude](#) ()=0
- virtual double [getAltitude](#) ()=0
- virtual float [getHeading](#) ()=0

- virtual float `getHorizontalUncertainty ()=0`
- virtual float `getVerticalUncertainty ()=0`
- virtual uint64_t `getTimeStamp ()=0`
- virtual float `getSpeedUncertainty ()=0`
- virtual float `getHeadingUncertainty ()=0`

5.17.1.26.1 Member Function Documentation

5.17.1.26.1.1 virtual LocationInfoValidity telux::loc::ILocationInfoBase::getLocationInfoValidity () [pure virtual]

Retrieves the validity of the Location basic Info.

Returns

Location basic validity mask.

5.17.1.26.1.2 virtual LocationTechnology telux::loc::ILocationInfoBase::getTechMask () [pure virtual]

Retrieves technology used in computing this fix.

Returns

Location technology mask.

5.17.1.26.1.3 virtual float telux::loc::ILocationInfoBase::getSpeed () [pure virtual]

Retrieves Speed.

Returns

speed in meters per second.

5.17.1.26.1.4 virtual double telux::loc::ILocationInfoBase::getLatitude () [pure virtual]

Retrieves latitude. Positive and negative values indicate northern and southern latitude respectively

- Units: Degrees
- Range: -90.0 to 90.0

Returns

Latitude if available else returns NaN.

5.17.1.26.1.5 virtual double telux::loc::ILocationInfoBase::getLongitude () [pure virtual]

Retrieves longitude. Positive and negative values indicate eastern and western longitude respectively

- Units: Degrees
- Range: -180.0 to 180.0

Returns

Longitude if available else returns NaN.

5.17.1.26.1.6 virtual double telux::loc::ILocationInfoBase::getAltitude () [pure virtual]

Retrieves altitude above the WGS 84 reference ellipsoid.

- Units: Meters

Returns

Altitude if available else returns NaN.

5.17.1.26.1.7 virtual float telux::loc::ILocationInfoBase::getHeading () [pure virtual]

Retrieves heading/bearing.

- Units: Degrees
- Range: 0 to 359.999

Returns

Heading if available else returns NaN.

5.17.1.26.1.8 virtual float telux::loc::ILocationInfoBase::getHorizontalUncertainty () [pure virtual]

Retrieves the horizontal uncertainty.

- Units: Meters Uncertainty is defined with 68% confidence level.

Returns

Horizontal uncertainty.

5.17.1.26.1.9 virtual float telux::loc::ILocationInfoBase::getVerticalUncertainty () [pure virtual]

Retrieves the vertical uncertainty.

- Units: Meters Uncertainty is defined with 68% confidence level.

Returns

Vertical uncertainty if available else returns NaN.

5.17.1.26.1.10 virtual uint64_t telux::loc::ILocationInfoBase::getTimeStamp () [pure virtual]

Retrieves UTC timeInfo for the location fix.

- Units: Milliseconds since Jan 1, 1970

Returns

TimeStamp in milliseconds if available else returns UNKNOWN_TIMESTAMP which is zero(as UTC timeStamp has elapsed since January 1, 1970, it cannot be 0)

5.17.1.26.1.11 virtual float telux::loc::ILocationInfoBase::getSpeedUncertainty () [pure virtual]

Retrieves 3-D speed uncertainty/accuracy.

- Units: Meters per Second Uncertainty is defined with 68% confidence level.

Returns

Speed uncertainty if available else returns NaN.

5.17.1.26.1.12 virtual float telux::loc::ILocationInfoBase::getHeadingUncertainty () [pure virtual]

Retrieves heading uncertainty.

- Units: Degrees
- Range: 0 to 359.999 Uncertainty is defined with 68% confidence level.

Returns

Heading uncertainty if available else returns NaN.

5.17.1.27 class telux::loc::ILocationInfoEx

[ILocationInfoEx](#) provides interface to get richer position related information like latitude, longitude, altitude and other information like time stamp, session status, dop, reliabilities, uncertainties etc.

Public member functions

- virtual [LocationInfoExValidity](#) getLocationInfoExValidity ()=0
- virtual float [getAltitudeMeanSeaLevel](#) ()=0
- virtual float [getPositionDop](#) ()=0
- virtual float [getHorizontalDop](#) ()=0
- virtual float [getVerticalDop](#) ()=0
- virtual float [getGeometricDop](#) ()=0
- virtual float [getTimeDop](#) ()=0
- virtual float [getMagneticDeviation](#) ()=0
- virtual [LocationReliability](#) getHorizontalReliability ()=0
- virtual [LocationReliability](#) getVerticalReliability ()=0
- virtual float [getHorizontalUncertaintySemiMajor](#) ()=0
- virtual float [getHorizontalUncertaintySemiMinor](#) ()=0
- virtual float [getHorizontalUncertaintyAzimuth](#) ()=0
- virtual float [getEastStandardDeviation](#) ()=0
- virtual float [getNorthStandardDeviation](#) ()=0
- virtual uint16_t [getNumSvUsed](#) ()=0
- virtual [SvUsedInPosition](#) getSvUsedInPosition ()=0
- virtual void [getSVIds](#) (std::vector< uint16_t > &idsOfUsedSVs)=0
- virtual [SbasCorrection](#) getSbasCorrection ()=0
- virtual [GnssPositionTech](#) getPositionTechnology ()=0
- virtual [GnssKinematicsData](#) getBodyFrameData ()=0
- virtual std::vector< [GnssMeasurementInfo](#) > [getmeasUsageInfo](#) ()=0
- virtual [SystemTime](#) getGnssSystemTime ()=0
- virtual float [getTimeUncMs](#) ()=0
- virtual [telux::common::Status](#) getLeapSeconds (uint8_t &leapSeconds)=0
- virtual [telux::common::Status](#) getVelocityEastNorthUp (std::vector< float > &velocityEastNorthUp)=0
- virtual [telux::common::Status](#) getVelocityUncertaintyEastNorthUp (std::vector< float > &velocityUncertaintyEastNorthUp)=0
- virtual uint8_t [getCalibrationConfidencePercent](#) ()=0
- virtual [DrCalibrationStatus](#) getCalibrationStatus ()=0
- virtual [LocationAggregationType](#) getLocOutputEngType ()=0

- virtual [PositioningEngine](#) `getLocOutputEngMask ()=0`
- virtual `float` [getConformityIndex \(\)=0](#)
- virtual [LLAInfo](#) `getVRPBasedLLA ()=0`
- virtual `std::vector< float >` [getVRPBasedENUVelocity \(\)=0](#)
- virtual [AltitudeType](#) `getAltitudeType ()=0`
- virtual [ReportStatus](#) `getReportStatus ()=0`

5.17.1.27.1 Member Function Documentation

5.17.1.27.1.1 virtual `LocationInfoExValidity` `telux::loc::ILocationInfoEx::getLocationInfoExValidity ()` `[pure virtual]`

Retrives the validity of the location info ex. It provides the validity of various information like dop, reliabilities, uncertainties etc.

Returns

Location ex validity mask

5.17.1.27.1.2 virtual `float` `telux::loc::ILocationInfoEx::getAltitudeMeanSeaLevel ()` `[pure virtual]`

Retrieves the altitude with respect to mean sea level.

- Units: Meters

Returns

Altitude with respect to mean sea level if available else returns NaN.

5.17.1.27.1.3 virtual `float` `telux::loc::ILocationInfoEx::getPositionDop ()` `[pure virtual]`

Retrieves position dilution of precision.

Returns

Position dilution of precision if available else returns NaN. Range: 1 (highest accuracy) to 50 (lowest accuracy)

5.17.1.27.1.4 virtual `float` `telux::loc::ILocationInfoEx::getHorizontalDop ()` `[pure virtual]`

Retrieves horizontal dilution of precision.

Returns

Horizontal dilution of precision if available else returns NaN. Range: 1 (highest accuracy) to 50 (lowest accuracy)

5.17.1.27.1.5 virtual float telux::loc::ILocationInfoEx::getVerticalDop () [pure virtual]

Retrieves vertical dilution of precision.

Returns

Vertical dilution of precision if available else returns NaN Range: 1 (highest accuracy) to 50 (lowest accuracy)

5.17.1.27.1.6 virtual float telux::loc::ILocationInfoEx::getGeometricDop () [pure virtual]

Retrieves geometric dilution of precision.

Returns

geometric dilution of precision.

5.17.1.27.1.7 virtual float telux::loc::ILocationInfoEx::getTimeDop () [pure virtual]

Retrieves time dilution of precision.

Returns

Time dilution of precision.

5.17.1.27.1.8 virtual float telux::loc::ILocationInfoEx::getMagneticDeviation () [pure virtual]

Retrieves the difference between the bearing to true north and the bearing shown on magnetic compass. The deviation is positive when the magnetic north is east of true north.

- Units: Degrees

Returns

Magnetic Deviation if available else returns NaN

5.17.1.27.1.9 virtual LocationReliability telux::loc::ILocationInfoEx::getHorizontalReliability () [pure virtual]

Specifies the reliability of the horizontal position.

Returns

[LocationReliability](#) of the horizontal position if available else returns UNKNOWN.

5.17.1.27.1.10 virtual LocationReliability telux::loc::ILocationInfoEx::getVerticalReliability () [pure virtual]

Specifies the reliability of the vertical position.

Returns

[LocationReliability](#) of the vertical position if available else returns UNKNOWN.

5.17.1.27.1.11 virtual float telux::loc::ILocationInfoEx::getHorizontalUncertaintySemiMajor () [pure virtual]

Retrieves semi-major axis of horizontal elliptical uncertainty.

- Units: Meters Uncertainty is defined with 39% confidence level.

Returns

Semi-major horizontal elliptical uncertainty if available else returns NaN.

5.17.1.27.1.12 virtual float telux::loc::ILocationInfoEx::getHorizontalUncertaintySemiMinor () [pure virtual]

Retrieves semi-minor axis of horizontal elliptical uncertainty.

- Units: Meters Uncertainty is defined with 39% confidence level.

Returns

Semi-minor horizontal elliptical uncertainty if available else returns NaN.

5.17.1.27.1.13 virtual float telux::loc::ILocationInfoEx::getHorizontalUncertaintyAzimuth () [pure virtual]

Retrieves elliptical horizontal uncertainty azimuth of orientation.

- Units: Decimal degrees
- Range: 0 to 180 Confidence for uncertainty is not specified.

Returns

Elliptical horizontal uncertainty azimuth of orientation if available else returns NaN.

5.17.1.27.1.14 virtual float telux::loc::ILocationInfoEx::getEastStandardDeviation () [pure virtual]

Retrieves east standard deviation.

- Units: Meters Uncertainty is defined with 68% confidence level.

Returns

East Standard Deviation.

5.17.1.27.1.15 `virtual float telux::loc::ILocationInfoEx::getNorthStandardDeviation () [pure virtual]`

Retrieves north standard deviation.

- Units: Meters Uncertainty is defined with 68% confidence level.

Returns

North Standard Deviation.

5.17.1.27.1.16 `virtual uint16_t telux::loc::ILocationInfoEx::getNumSvUsed () [pure virtual]`

Retrieves number of satellite vehicles used in position report.

Returns

number of Sv used.

5.17.1.27.1.17 `virtual SvUsedInPosition telux::loc::ILocationInfoEx::getSvUsedInPosition () [pure virtual]`

Retrives the set of satellite vehicles that are used to calculate position.

Returns

set of satellite vehicles for different constellations.

5.17.1.27.1.18 `virtual void telux::loc::ILocationInfoEx::getSVIds (std::vector< uint16_t > & idsOfUsedSVs) [pure virtual]`

Retrieves GNSS Satellite Vehicles used in position data.

Parameters

| | | |
|-----|---------------------|--|
| out | <i>idsOfUsedSVs</i> | Vector of Satellite Vehicle identifiers. |
|-----|---------------------|--|

5.17.1.27.1.19 `virtual SbasCorrection telux::loc::ILocationInfoEx::getSbasCorrection () [pure virtual]`

Retrieves navigation solution mask used to indicate SBAS corrections.

Returns

- SBAS (Satellite Based Augmentation System) Correction mask used.

5.17.1.27.1.20 virtual GnssPositionTech telux::loc::ILocationInfoEx::getPositionTechnology ()
[pure virtual]

Retrieves position technology mask used to indicate which technology is used.

Returns

- Position technology used in computing this fix.

5.17.1.27.1.21 virtual GnssKinematicsData telux::loc::ILocationInfoEx::getBodyFrameData () [pure virtual]

Retrieves position related information.

**5.17.1.27.1.22 virtual std::vector<GnssMeasurementInfo> telux::loc::ILocationInfoEx::getmeas↔
 UsageInfo () [pure virtual]**

Retrieves gnss measurement usage info.

5.17.1.27.1.23 virtual SystemTime telux::loc::ILocationInfoEx::getGnssSystemTime () [pure virtual]

Retrieves type of gnss system.

Returns

- Type of Gnss System.

5.17.1.27.1.24 virtual float telux::loc::ILocationInfoEx::getTimeUncMs () [pure virtual]

Retrieves time uncertainty. For PVT report from SPE engine, confidence level is at 99%. For PVT reports from other engines, confidence level is undefined.

Returns

- Time uncertainty in milliseconds.

**5.17.1.27.1.25 virtual telux::common::Status telux::loc::ILocationInfoEx::getLeapSeconds (uint8_t &
 leapSeconds) [pure virtual]**

Retrieves leap seconds if available.

Parameters

| | | |
|-----|--------------------|------------------------------------|
| out | <i>leapSeconds</i> | - leap seconds • Units: Seconds |
|-----|--------------------|------------------------------------|

Returns

Status of leap seconds.

5.17.1.27.1.26 `virtual telux::common::Status telux::loc::ILocationInfoEx::getVelocityEastNorthUp (std::vector< float > & velocityEastNorthUp) [pure virtual]`

Retrieves east, North, Up velocity if available.

Parameters

| | | |
|-----|----------------------------|--|
| out | <i>velocityEastNorthUp</i> | - east, North, Up velocity • Units: Meters/second |
|-----|----------------------------|--|

Returns

Status of availability of east, North, Up velocity.

5.17.1.27.1.27 `virtual telux::common::Status telux::loc::ILocationInfoEx::getVelocityUncertaintyEastNorthUp (std::vector< float > & velocityUncertaintyEastNorthUp) [pure virtual]`

Retrieves east, North, Up velocity uncertainty if available. Uncertainty is defined with 68% confidence level.

Parameters

| | | |
|-----|---|--|
| out | <i>velocity↔ UncertaintyEast↔ NorthUp</i> | - east, North, Up velocity uncertainty • Units: Meters/second |
|-----|---|--|

Returns

Status of availability of east, North, Up velocity uncertainty.

5.17.1.27.1.28 `virtual uint8_t telux::loc::ILocationInfoEx::getCalibrationConfidencePercent () [pure virtual]`

Sensor calibration confidence percent, range [0, 100].

Returns

the percentage of calibration taking all the parameters into account.

5.17.1.27.1.29 virtual DrCalibrationStatus telux::loc::ILocationInfoEx::getCalibrationStatus () [pure virtual]

Sensor calibration status.

Returns

mask indicating the calibration status with respect to different parameters.

5.17.1.27.1.30 virtual LocationAggregationType telux::loc::ILocationInfoEx::getLocOutputEngType () [pure virtual]

Location engine type. When the type is set to LOC_ENGINE_SRC_FUSED, the fix is the propagated/aggregated reports from all engines running on the system (e.g.: DR/SPE/PPE) based QTI algorithm. To check which location engine contributes to the fused output, check for locOutputEngMask.

Returns

the type of engine that was used for calculating the position fix.

5.17.1.27.1.31 virtual PositioningEngine telux::loc::ILocationInfoEx::getLocOutputEngMask () [pure virtual]

When loc output eng type is set to fused, this field indicates the set of engines contribute to the fix.

Returns

the combination of position engines used in calculating the position report when the loc output end type is set to fused.

5.17.1.27.1.32 virtual float telux::loc::ILocationInfoEx::getConformityIndex () [pure virtual]

When robust location is enabled, this field will indicate how well the various input data considered for navigation solution conforms to expectations.

Returns

values in the range [0.0, 1.0], with 0.0 for least conforming and 1.0 for most conforming.

5.17.1.27.1.33 virtual LLAInfo telux::loc::ILocationInfoEx::getVRPBasedLLA () [pure virtual]

Vehicle Reference Point(VRP) based latitude, longitude and altitude information.

5.17.1.27.1.34 `virtual std::vector<float> telux::loc::ILocationInfoEx::getVRPBasedENUVelocity () [pure virtual]`

VRP-based east, north and up velocity information.

Returns

- vector of directional velocities in this order {east velocity, north velocity, up velocity}

5.17.1.27.1.35 `virtual AltitudeType telux::loc::ILocationInfoEx::getAltitudeType () [pure virtual]`

Determination of altitude is assumed or calculated. ASSUMED means there may not be enough satellites to determine the precise altitude.

Returns

altitude type ASSUMED/CALCULATED or if not available then UNKNOWN.

5.17.1.27.1.36 `virtual ReportStatus telux::loc::ILocationInfoEx::getReportStatus () [pure virtual]`

Indicates the status of this report in terms of how optimally the report was calculated by the engine.

Returns

Status of the report. Returns [ReportStatus::UNKNOWN](#) if status is unavailable.

5.17.1.28 class telux::loc::ISVInfo

[ISVInfo](#) provides interface to retrieve information about Satellite Vehicles, their position and health status.

Public member functions

- virtual [GnssConstellationType](#) `getConstellation ()=0`
- virtual `uint16_t` `getId ()=0`
- virtual [SVHealthStatus](#) `getSVHealthStatus ()=0`
- virtual [SVStatus](#) `getStatus ()=0`
- virtual [SVInfoAvailability](#) `getHasEphemeris ()=0`
- virtual [SVInfoAvailability](#) `getHasAlmanac ()=0`
- virtual [SVInfoAvailability](#) `getHasFix ()=0`
- virtual `float` `getElevation ()=0`
- virtual `float` `getAzimuth ()=0`
- virtual `float` `getSnr ()=0`
- virtual `float` `getCarrierFrequency ()=0`

- virtual [GnssSignal](#) `getSignalType ()=0`
- virtual `uint16_t` [getGlonassFcn \(\)=0](#)

5.17.1.28.1 Member Function Documentation

5.17.1.28.1.1 virtual `GnssConstellationType` `telux::loc::ISVInfo::getConstellation ()` [pure virtual]

Indicates to which constellation this satellite vehicle belongs.

Returns

[GnssConstellationType](#) if available else returns UNKNOWN.

5.17.1.28.1.2 virtual `uint16_t` `telux::loc::ISVInfo::getId ()` [pure virtual]

GNSS satellite vehicle ID. SV id range of each supported constellations mentioned in [GnssMeasurementInfo](#).

Returns

Identifier of the satellite vehicle otherwise 0(as 0 is not an ID for any of the SVs)

5.17.1.28.1.3 virtual `SVHealthStatus` `telux::loc::ISVInfo::getSVHealthStatus ()` [pure virtual]

Health status of satellite vehicle.

Returns

HealthStatus of Satellite Vehicle if available else returns UNKNOWN.

- [SVHealthStatus](#)

5.17.1.28.1.4 virtual `SVStatus` `telux::loc::ISVInfo::getStatus ()` [pure virtual]

Status of satellite vehicle.

Note

This API is work-in-progress and is subject to change.

Returns

Satellite Vehicle Status if available else returns UNKNOWN.

- [SVStatus](#)

5.17.1.28.1.5 virtual SVInfoAvailability telux::loc::ISVInfo::getHasEphemeris () [pure virtual]

Indicates whether ephemeris information(which allows the receiver to calculate the satellite's position) is available.

Returns

[SVInfoAvailability](#) if Ephemeris exists or not else returns UNKNOWN.

5.17.1.28.1.6 virtual SVInfoAvailability telux::loc::ISVInfo::getHasAlmanac () [pure virtual]

Indicates whether almanac information(which allows receivers to know which satellites are available for tracking) is available.

Returns

[SVInfoAvailability](#) if almanac exists or not else returns UNKNOWN.

5.17.1.28.1.7 virtual SVInfoAvailability telux::loc::ISVInfo::getHasFix () [pure virtual]

Indicates whether the satellite is used in computing the fix.

Returns

[SVInfoAvailability](#), if satellite used or not else returns UNKNOWN.

5.17.1.28.1.8 virtual float telux::loc::ISVInfo::getElevation () [pure virtual]

Retrieves satellite vehicle elevation angle.

- Units: Degrees
- Range: 0 to 90

Returns

Elevation if available else returns NaN.

5.17.1.28.1.9 virtual float telux::loc::ISVInfo::getAzimuth () [pure virtual]

Retrieves satellite vehicle azimuth angle.

- Units: Degrees
- Range: 0 to 360

Returns

Azimuth if available else returns NaN.

5.17.1.28.1.10 virtual float telux::loc::ISVInfo::getSnr () [pure virtual]

Retrieves satellite vehicle signal-to-noise ratio.

- Units: dB-Hz

Returns

SNR if available else returns NaN.

5.17.1.28.1.11 virtual float telux::loc::ISVInfo::getCarrierFrequency () [pure virtual]

Indicates the carrier frequency of the signal tracked.

Returns

carrier frequency in Hz else returns UNKNOWN_CARRIER_FREQ frequency when not supported.

5.17.1.28.1.12 virtual GnssSignal telux::loc::ISVInfo::getSignalType () [pure virtual]

Indicates the validity for different types of signal for gps, galileo, beidou etc.

Returns

signalType mask else return UNKNOWN_SIGNAL_MASK when not supported.

5.17.1.28.1.13 virtual uint16_t telux::loc::ISVInfo::getGlonassFcn () [pure virtual]

Retrieves GLONASS frequency channel number in the range [1, 14] which is calculated as FCN [-7, 6] + 8.

Returns

GLONASS frequency channel number.

5.17.1.29 class telux::loc::IGnssSVInfo

[IGnssSVInfo](#) provides interface to retrieve the list of SV info available and whether altitude is assumed or calculated.

Public member functions

- virtual [AltitudeType](#) [getAltitudeType](#) ()=0
- virtual std::vector< std::shared_ptr< [ISVInfo](#) > > [getSVInfoList](#) ()=0

5.17.1.29.1 Member Function Documentation

5.17.1.29.1.1 virtual AltitudeType telux::loc::IGnssSVInfo::getAltitudeType () [pure virtual]

Indicates whether altitude is assumed or calculated.

Returns

[AltitudeType](#) if available else returns UNKNOWN.

5.17.1.29.1.2 virtual std::vector<std::shared_ptr<ISVInfo> > telux::loc::IGnssSVInfo::getSVInfoList () [pure virtual]

Pointer to satellite vehicles information for all GNSS constellations except GPS.

Returns

Vector of pointer of [ISVInfo](#) object if available else returns empty vector.

5.17.1.30 class telux::loc::IGnssSignalInfo

[IGnssSignalInfo](#) provides interface to retrieve GNSS data information like jammer metrics and automatic gain control for satellite signal type.

Public member functions

- virtual [GnssData](#) [getGnssData](#) ()=0

5.17.1.30.1 Member Function Documentation**5.17.1.30.1.1 virtual GnssData telux::loc::IGnssSignalInfo::getGnssData () [pure virtual]**

Retrieves jammer metric and Automatic Gain Control(AGC) corresponding to signal types. Jammer metric is linearly proportional to the sum of jammer and noise power at the GNSS antenna port.

Returns

List of jammer metric and a list of automatic gain control for signal type.

5.17.1.31 class telux::loc::LocationFactory

[LocationFactory](#) allows creation of location manager.

Public member functions

- `std::shared_ptr< ILocationManager > getLocationManager (telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< ILocationConfigurator > getLocationConfigurator (telux::common::InitResponseCb callback=nullptr)`
- `std::shared_ptr< IDgnssManager > getDgnssManager (DgnssDataFormat dataFormat=DgnssDataFormat::DATA_FORMAT_RTCM_3, telux::common::InitResponseCb callback=nullptr)`

Static Public Member Functions

- `static LocationFactory & getInstance ()`

5.17.1.31.1 Member Function Documentation**5.17.1.31.1.1 static LocationFactory& telux::loc::LocationFactory::getInstance () [static]**

Get Location Factory instance.

5.17.1.31.1.2 std::shared_ptr<ILocationManager> telux::loc::LocationFactory::getLocationManager (telux::common::InitResponseCb *callback = nullptr*)

Get instance of Location Manager

Parameters

| | | |
|-----------|-----------------|--|
| <i>in</i> | <i>callback</i> | Optional callback to get the response of the manager initialization. |
|-----------|-----------------|--|

Returns

Pointer of `ILocationManager` object.

5.17.1.31.1.3 std::shared_ptr<ILocationConfigurator> telux::loc::LocationFactory::getLocationConfigurator (telux::common::InitResponseCb *callback = nullptr*)

Get instance of Location Configurator.

Parameters

| | | |
|-----------|-----------------|--|
| <i>in</i> | <i>callback</i> | Optional callback pointer to get the response of the manager initialisation. |
|-----------|-----------------|--|

Returns

Pointer of `ILocationConfigurator` object.

```
5.17.1.31.1.4 std::shared_ptr<IDgnssManager> telux::loc::LocationFactory::getDgnssManager
( DgnssDataFormat dataFormat = DgnssDataFormat::DATA_FORMAT_RTCM_3,
  telux::common::InitResponseCb callback = nullptr )
```

Get instance of Dgnss manager

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Optional callback pointer to get the response of the manager initialisation. |
|----|-----------------|--|

Returns

Pointer of [IDgnssManager](#) object.

5.17.1.32 class telux::loc::ILocationListener

Listener class for getting location updates and satellite vehicle information.

The methods in listener can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onBasicLocationUpdate](#) (const std::shared_ptr< [ILocationInfoBase](#) > &locationInfo)
- virtual void [onDetailedLocationUpdate](#) (const std::shared_ptr< [ILocationInfoEx](#) > &locationInfo)
- virtual void [onDetailedEngineLocationUpdate](#) (const std::vector< std::shared_ptr< [ILocationInfoEx](#) > > &locationEngineInfo)
- virtual void [onGnssSVInfo](#) (const std::shared_ptr< [IGnssSVInfo](#) > &gnssSVInfo)
- virtual void [onGnssSignalInfo](#) (const std::shared_ptr< [IGnssSignalInfo](#) > &info)
- virtual void [onGnssNmeaInfo](#) (uint64_t timestamp, const std::string &nmea)
- virtual void [onGnssMeasurementsInfo](#) (const [telux::loc::GnssMeasurements](#) &measurementInfo)
- virtual [~ILocationListener](#) ()

5.17.1.32.1 Constructors and Destructors

```
5.17.1.32.1.1 virtual telux::loc::ILocationListener::~~ILocationListener ( ) [virtual]
```

Destructor of [ILocationListener](#)

5.17.1.32.2 Member Function Documentation

5.17.1.32.2.1 `virtual void telux::loc::ILocationListener::onBasicLocationUpdate (const std::shared_ptr< ILocationInfoBase > & locationInfo) [virtual]`

This function is called when device receives location update. When there are multiple engines running on the system, the received location information is fused report from all engines.

Parameters

| | | |
|----|---------------------|---|
| in | <i>locationInfo</i> | - Location information like latitude, longitude, timeInfo other information such as heading, altitude and velocity etc. |
|----|---------------------|---|

5.17.1.32.2.2 `virtual void telux::loc::ILocationListener::onDetailedLocationUpdate (const std::shared_ptr< ILocationInfoEx > & locationInfo) [virtual]`

This function is called when device receives Gns location update. When there are multiple engines running on the system, the received location information is fused report from all engines.

Parameters

| | | |
|----|---------------------|--|
| in | <i>locationInfo</i> | - Contains richer set of location information like latitude, longitude, timeInfo, heading, altitude, velocity and other information such as deviations, elliptical accuracies etc. |
|----|---------------------|--|

5.17.1.32.2.3 `virtual void telux::loc::ILocationListener::onDetailedEngineLocationUpdate (const std::vector< std::shared_ptr< ILocationInfoEx > > & locationEngineInfo) [virtual]`

This function is called when device receives multiple Gns location update from the different engine types requested, which are SPE/PPE/FUSED. This API will be called ONLY if we use startDetailedEngineReports.

Parameters

| | | |
|----|---------------------|--|
| in | <i>locationInfo</i> | - Contains a list of location infos. Each element in the list corresponds to one of SPE/PPE/FUSED. |
|----|---------------------|--|

5.17.1.32.2.4 `virtual void telux::loc::ILocationListener::onGnssSVInfo (const std::shared_ptr< IGnssSVInfo > & gnssSVInfo) [virtual]`

This function is called when device receives GNSS satellite information.

Parameters

| | | |
|----|-------------------|------------------------------|
| in | <i>gnssSVInfo</i> | - GNSS satellite information |
|----|-------------------|------------------------------|

5.17.1.32.2.5 `virtual void telux::loc::ILocationListener::onGnssSignalInfo (const std::shared_ptr< IGnssSignalInfo > & info) [virtual]`

This function is called when device receives GNSS data information like jammer metrics and automatic gain control for satellite signal type.

Parameters

| | | |
|----|-------------|--------------------|
| in | <i>info</i> | - GNSS signal info |
|----|-------------|--------------------|

5.17.1.32.2.6 `virtual void telux::loc::ILocationListener::onGnssNmeaInfo (uint64_t timestamp, const std::string & nmea) [virtual]`

This function is called when device receives GNSS NMEA sentences.

Parameters

| | | |
|----|------------------|-----------------|
| in | <i>timestamp</i> | - Timestamp |
| in | <i>nmea</i> | - Nmea sentence |

5.17.1.32.2.7 `virtual void telux::loc::ILocationListener::onGnssMeasurementsInfo (const telux::loc::GnssMeasurements & measurementInfo) [virtual]`

This function is called when device receives signal measurement information such as satellite vehicle pseudo range, satellite vehicle clock time, carrier phase measurement etc.

Parameters

| | | |
|----|------------------------|--------------------------------|
| in | <i>measurementInfo</i> | - GNSS measurement information |
|----|------------------------|--------------------------------|

5.17.1.33 class telux::loc::ILocationSystemInfoListener

Public member functions

- virtual void [onLocationSystemInfo](#) (const [LocationSystemInfo](#) &locationSystemInfo)
- virtual [~ILocationSystemInfoListener](#) ()

5.17.1.33.1 Constructors and Destructors

5.17.1.33.1.1 `virtual telux::loc::ILocationSystemInfoListener::~~ILocationSystemInfoListener () [virtual]`

Destructor of [ILocationSystemInfoListener](#)

5.17.1.33.2 Member Function Documentation

5.17.1.33.2.1 virtual void telux::loc::ILocationSystemInfoListener::onLocationSystemInfo (const LocationSystemInfo & *locationSystemInfo*) [virtual]

This function is called when device receives location related system information such as leap second change.

Parameters

| | | |
|----|---------------------------|--|
| in | <i>locationSystemInfo</i> | - contains location system information such as current leap seconds change |
|----|---------------------------|--|

5.17.1.34 class telux::loc::ILocationManager

[ILocationManager](#) provides interface to register and remove listeners. It also allows to set and get configuration/ criteria for position reports. The new APIs(registerListenerEx, deRegisterListenerEx, startDetailedReports, startBasicReports) and old/deprecated APIs(registerListener, removeListener, setPositionReportTimeout, setHorizontalAccuracyLevel, setMinIntervalForReports) should not be used interchangeably, either the new APIs should be used or the old APIs should be used.

Public Types

- using [GetEnergyConsumedCallback](#) = std::function< void(telux::loc::GnssEnergyConsumedInfo energyConsumed, telux::common::ErrorCode error)>
- using [GetYearOfHwCallback](#) = std::function< void(uint16_t yearOfHw, telux::common::ErrorCode error)>
- using [GetTerrestrialInfoCallback](#) = std::function< void(const std::shared_ptr< ILocationInfoBase > terrestrialInfo)>

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual [telux::common::ServiceStatus](#) [getServiceStatus](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status](#) [registerListenerEx](#) (std::weak_ptr< [ILocationListener](#) > listener)=0
- virtual [telux::common::Status](#) [deRegisterListenerEx](#) (std::weak_ptr< [ILocationListener](#) > listener)=0
- virtual [telux::common::Status](#) [startDetailedReports](#) (uint32_t interval, [telux::common::ResponseCallback](#) callback=nullptr, [GnssReportTypeMask](#) reportMask=DEFAULT_GNSS_REPORT)=0
- virtual [telux::common::Status](#) [startDetailedEngineReports](#) (uint32_t interval, [LocReqEngine](#) engineType, [telux::common::ResponseCallback](#) callback=nullptr, [GnssReportTypeMask](#) reportMask=DEFAULT_GNSS_REPORT)=0
- virtual [telux::common::Status](#) [startBasicReports](#) (uint32_t distanceInMeters, uint32_t intervalInMs, [telux::common::ResponseCallback](#) callback=nullptr)=0

- virtual `telux::common::Status registerForSystemInfoUpdates` (`std::weak_ptr< ILocationSystemInfoListener > listener`, `telux::common::ResponseCallback callback=nullptr`)=0
- virtual `telux::common::Status deRegisterForSystemInfoUpdates` (`std::weak_ptr< ILocationSystemInfoListener > listener`, `telux::common::ResponseCallback callback=nullptr`)=0
- virtual `telux::common::Status requestEnergyConsumedInfo` (`GetEnergyConsumedCallback cb`)=0
- virtual `telux::common::Status stopReports` (`telux::common::ResponseCallback callback=nullptr`)=0
- virtual `telux::common::Status getYearOfHw` (`GetYearOfHwCallback cb`)=0
- virtual `telux::common::Status getTerrestrialPosition` (`uint32_t timeoutMsec`, `TerrestrialTechnology techMask`, `GetTerrestrialInfoCallback cb`, `telux::common::ResponseCallback callback=nullptr`)=0
- virtual `telux::common::Status cancelTerrestrialPositionRequest` (`telux::common::ResponseCallback callback=nullptr`)=0
- virtual `~ILocationManager` ()

5.17.1.34.1 Member Typedef Documentation

5.17.1.34.1.1 `using telux::loc::ILocationManager::GetEnergyConsumedCallback = std::function<void(telux::loc::GnssEnergyConsumedInfo energyConsumed, telux::common::ErrorCode error)>`

This function is called with the response to `getEnergyConsumedInfoUpdate` API.

Parameters

| | | |
|----|-----------------------|---|
| in | <i>energyConsumed</i> | - Information regarding energy consumed by Gnss engine. |
| in | <i>error</i> | - Return code which indicates whether the operation succeeded or not. |

5.17.1.34.1.2 `using telux::loc::ILocationManager::GetYearOfHwCallback = std::function<void(uint16_t yearOfHw, telux::common::ErrorCode error)>`

This function is called with the response to `getYearOfHw` API.

Parameters

| | | |
|----|-----------------|---|
| in | <i>yearOfHw</i> | - Year of hardware information. |
| in | <i>error</i> | - Return code which indicates whether the operation succeeded or not. |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.1.34.1.3 using telux::loc::ILocationManager::GetTerrestrialInfoCallback = std::function<void(const std::shared_ptr<ILocationInfoBase> terrestrialInfo)>

This function is called with the response to getTerrestrialPosition API.

Parameters

| | | |
|----|------------------------|---------------------------------------|
| in | <i>terrestrialInfo</i> | - basic position related information. |
|----|------------------------|---------------------------------------|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.1.34.2 Constructors and Destructors

5.17.1.34.2.1 virtual telux::loc::ILocationManager::~~ILocationManager () [virtual]

Destructor of [ILocationManager](#)

5.17.1.34.3 Member Function Documentation

5.17.1.34.3.1 virtual bool telux::loc::ILocationManager::isSubsystemReady () [pure virtual]

Checks the status of location subsystems and returns the result.

Returns

True if location subsystem is ready for service otherwise false.

Deprecated use [getServiceStatus\(\)](#)

5.17.1.34.3.2 virtual telux::common::ServiceStatus telux::loc::ILocationManager::getServiceStatus () [pure virtual]

This status indicates whether the object is in a usable state.

Returns

SERVICE_AVAILABLE - If location manager is ready for service. SERVICE_UNAVAILABLE - If location manager is temporarily unavailable. SERVICE_FAILED - If location manager encountered an irrecoverable failure.

5.17.1.34.3.3 `virtual std::future<bool> telux::loc::ILocationManager::onSubsystemReady () [pure virtual]`

Wait for location subsystem to be ready.

Returns

A future that caller can wait on to be notified when location subsystem is ready.

Deprecated The callback mechanism introduced in the `LocationFactory::getLocationManager()` API will provide the similar notification mechanism as `onSubsystemReady()`. This API will soon be removed from further releases.

5.17.1.34.3.4 `virtual telux::common::Status telux::loc::ILocationManager::registerListenerEx (std::weak_ptr< ILocationListener > listener) [pure virtual]`

Register a listener for specific updates from location manager like location, jamming info and satellite vehicle info. If enhanced position, using Dead Reckoning etc., is enabled, enhanced fixes will be provided. Otherwise raw GNSS fixes will be provided. The position reports will start only when `startDetailedReports` or `startBasicReports` is invoked.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | - Pointer of ILocationListener object that processes the notification. |
|----|-----------------|--|

Returns

Status of registerListener i.e success or suitable status code.

5.17.1.34.3.5 `virtual telux::common::Status telux::loc::ILocationManager::deRegisterListenerEx (std::weak_ptr< ILocationListener > listener) [pure virtual]`

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Previously registered ILocationListener that needs to be removed. |
|----|-----------------|---|

Returns

Status of removeListener success or suitable status code

5.17.1.34.3.6 virtual telux::common::Status telux::loc::ILocationManager::startDetailedReports
 (`uint32_t interval`, `telux::common::ResponseCallback callback = nullptr`,
`GnssReportTypeMask reportMask = DEFAULT_GNSS_REPORT`) [`pure virtual`]

Starts the richer location reports by configuring the time between them as the interval. Any of the 3 APIs that is `startDetailedReports` or `startDetailedEngineReports` or `startBasicReports` can be called one after the other irrespective of order, without calling `stopReports` in between any of them and the API which is called last will be honored for providing the callbacks. In case of multiple clients invoking this API with different intervals, if the platforms is configured, then the clients will receive the reports at their requested intervals. If not configured then all the clients will be serviced at the smallest interval among all clients' intervals. The supported periodicities are 100ms, 200ms, 500ms, 1sec, 2sec, nsec and a periodicity that a caller send which is not one of these will result in the implementation picking one of these periodicities. Calling this Api will result in [ILocationListener::onDetailedLocationUpdate](#), [ILocationListener::onGnssSVInfo](#), [ILocationListener::onGnssSignalInfo](#), [ILocationListener::onGnssNmeaInfo](#) and [ILocationListener::onGnssMeasurementsInfo](#) APIs on the listener being invoked, assuming they have not been disabled using the `GnssReportTypeMask`. If a client issues second request to this API then new request for `GnssReportTypeMask` will over write the previous call to this API.

Parameters

| | | |
|----|-----------------|--|
| in | <i>interval</i> | - Minimum time interval between two consecutive reports in milliseconds. |
|----|-----------------|--|

E.g. If `minInterval` is 1000 milliseconds, reports will be provided with a periodicity of 1 second or more depending on the number of applications listening to location updates.

Parameters

| | | |
|----|-------------------|--|
| in | <i>callback</i> | - Optional callback to get the response of set minimum interval for reports. |
| in | <i>reportMask</i> | - Optional field to specify which reports a client is interested in. By default all the reports will be enabled. |

Returns

Status of `startDetailedReports` i.e. success or suitable status code.

5.17.1.34.3.7 virtual telux::common::Status telux::loc::ILocationManager::startDetailedEngineReports
 (`uint32_t interval`, `LocReqEngine engineType`, `telux::common::ResponseCallback callback = nullptr`,
`GnssReportTypeMask reportMask = DEFAULT_GNSS_REPORT`) [`pure virtual`]

Starts a session which may provide richer default combined position reports and position reports from other engines. The fused position report type will always be supported if at least one engine in the system is producing valid report. Any of the 3 APIs that is `startDetailedReports` or `startDetailedEngineReports` or `startBasicReports` can be called one after the other irrespective of order, without calling `stopReports` in between any of them and the API which is called last will be honored for providing the callbacks. In case of multiple clients invoking this API with different intervals, if the platforms is configured, then the clients will receive the reports at their requested intervals. If not configured then all the clients will be serviced at

the smallest interval among all clients' intervals. The supported periodicities are 100ms, 200ms, 500ms, 1sec, 2sec, nsec and a periodicity that a caller send which is not one of these will result in the implementation picking one of these periodicities. Calling this Api will result in [ILocationListener::onDetailedEngineLocationUpdate](#), [ILocationListener::onGnssSVInfo](#), [ILocationListener::onGnssSignalInfo](#), [ILocationListener::onGnssNmeaInfo](#) and [ILocationListener::onGnssMeasurementsInfo](#) APIs on the listener being invoked, assuming they have not been disabled using the GnssReportTypeMask. If a client issues second request to this API then new request for GnssReportTypeMask will over write the previous call to this API.

Parameters

| | | |
|----|-----------------|--|
| in | <i>interval</i> | - Minimum time interval between two consecutive reports in milliseconds. |
|----|-----------------|--|

E.g. If minInterval is 1000 milliseconds, reports will be provided with a periodicity of 1 second or more depending on the number of applications listening to location updates.

Parameters

| | | |
|----|-------------------|--|
| in | <i>engineType</i> | - The type of engine requested for fixes such as SPE or PPE or FUSED. The FUSED includes all the engines that are running to generate the fixes such as reports from SPE, PPE and DRE. |
| in | <i>callback</i> | - Optional callback to get the response of set minimum interval for reports. |
| in | <i>reportMask</i> | - Optional field to specify which reports a client is interested in. By default all the reports will be enabled. |

Returns

Status of startDetailedEngineReports i.e. success or suitable status code.

5.17.1.34.3.8 `virtual telux::common::Status telux::loc::ILocationManager::startBasicReports (uint32_t distanceInMeters, uint32_t intervalInMs, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Starts the Location report by configuring the time and distance between the consecutive reports. Any of the 3 APIs that is startDetailedReports or startDetailedEngineReports or startBasicReports can be called one after the other irrespective of order, without calling stopReports in between any of them and the API which is called last will be honored for providing the callbacks. In case of multiple clients invoking this API with different intervals, if the platforms is configured, then the clients will receive the reports at their requested intervals. If not configured then all the clients will be serviced at the smallest interval among all clients' intervals. The supported periodicities are 100ms, 200ms, 500ms, 1sec, 2sec, nsec and a periodicity that a caller send which is not one of these will result in the implementation picking one of these periodicities. This Api enables the onBasicLocationUpdate Api on the listener.

Parameters

| | | |
|----|-------------------------|--|
| in | <i>distanceInMeters</i> | - distanceInMeters between two consecutive reports in meters. intervalInMs - Minimum time interval between two consecutive reports in milliseconds. |
|----|-------------------------|--|

E.g. If intervalInMs is 1000 milliseconds and distanceInMeters is 100m, reports will be provided according to the condition that happens first. So we need to provide both the parameters for evaluating the report.

The underlying system may have a minimum distance threshold(e.g. 1 meter). Effective distance will not be smaller than this lower bound.

The effective distance may have a granularity level higher than 1 m, e.g. 5 m. So distanceInMeters being 59 may be honored at 60 m, depending on the system.

Where there is another application in the system having a session with shorter distance, this client may benefit and receive reports at that distance.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | - Optional callback to get the response of set minimum distance for reports. |
|----|-----------------|--|

Returns

Status of startBasicReports i.e. success or suitable status code.

5.17.1.34.3.9 virtual telux::common::Status telux::loc::ILocationManager::registerForSystemInfo↔
Updates (std::weak_ptr< ILocationSystemInfoListener > *listener*, telux::common::↔
ResponseCallback *callback* = nullptr) [pure virtual]

This API registers a [ILocationSystemInfoListener](#) listener and will receive information related to location system that are not tied with location fix session, e.g.: next leap second event. The startBasicReports, startDetailedReports, startDetailedEngineReports does not need to be called before calling this API, in order to receive updates.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | - Pointer of ILocationSystemInfoListener object. |
| in | <i>callback</i> | - Optional callback to get the response of location system info. |

Returns

Status of getLocationSystemInfo i.e success or suitable status code.

5.17.1.34.3.10 `virtual telux::common::Status telux::loc::ILocationManager::deRegisterForSystemInfoUpdates (std::weak_ptr< ILocationSystemInfoListener > listener, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API removes a previously registered listener and will also stop receiving informations related to location system for that particular listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Previously registered ILocationSystemInfoListener that needs to be removed. |
| in | <i>callback</i> | - Optional callback to get the response of location system info. |

Returns

Status of `deRegisterForSystemInfoUpdates` success or suitable status code.

5.17.1.34.3.11 `virtual telux::common::Status telux::loc::ILocationManager::requestEnergyConsumedInfo (GetEnergyConsumedCallback cb) [pure virtual]`

This API receives information on energy consumed by modem GNSS engine. If this API is called on this object while this is already a pending request, then it will overwrite the callback to be invoked and the callback from the previous invocation will not be called.

Parameters

| | | |
|----|-----------|--|
| in | <i>cb</i> | - callback to get the information of Gnss energy consumed. |
|----|-----------|--|

Returns

Status of `requestEnergyConsumedInfo` i.e success or suitable status code.

5.17.1.34.3.12 `virtual telux::common::Status telux::loc::ILocationManager::stopReports (telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API will stop reports started using `startDetailedReports` or `startBasicReports` or `registerListener` or `setMinIntervalForReports`.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | - Optional callback to get the response of stop reports. |
|----|-----------------|--|

Returns

Status of `stopReports` i.e. success or suitable status code.

5.17.1.34.3.13 virtual telux::common::Status telux::loc::ILocationManager::getYearOfHw (GetYearOfHwCallback *cb*) [pure virtual]

This API retrieves the year of hardware information.

Parameters

| | | |
|----|-----------|--|
| in | <i>cb</i> | - callback to get information of year of hardware. |
|----|-----------|--|

Returns

Status of getYearOfHw i.e success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.1.34.3.14 virtual telux::common::Status telux::loc::ILocationManager::getTerrestrialPosition (uint32_t *timeoutMsec*, TerrestrialTechnology *techMask*, GetTerrestrialInfoCallback *cb*, telux::common::ResponseCallback *callback = nullptr*) [pure virtual]

This API retrieves single-shot terrestrial position using the set of specified terrestrial technologies. This API can be invoked even while there is an on-going tracking session that was started using startBasicReports/startDetailedReports/startDetailedEngineReports. If this API is invoked while there is already a pending request for terrestrial position, the request will fail and ResponseCallback will get invoked with ErrorCode::OP_IN_PROGRESS. To cancel a pending request, use [ILocationManager::cancelTerrestrialPositionRequest](#). Before using this API, user consent needs to be set true via [ILocationConfigurator::provideConsentForTerrestrialPositioning](#).

Parameters

| | | |
|----|--------------------|---|
| in | <i>timeoutMsec</i> | - the time in milliseconds within which the client is expecting a response. If the system is unable to provide a report within this time, the ResponseCallback will be invoked with ErrorCode::OPERATION_TIMEOUT. |
| in | <i>techMask</i> | - the set of terrestrial technologies that are allowed to be used for producing the position. |
| in | <i>cb</i> | - callback to receive terrestrial position. This callback will only be invoked when ResponseCallback is invoked with SUCCESS. |
| in | <i>callback</i> | - Optional callback to get the response of getTerrestrialPosition. |

Returns

Status of getTerrestrialPosition i.e success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.1.34.3.15 virtual telux::common::Status telux::loc::ILocationManager::cancelTerrestrialPositionRequest (telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

This API cancels the pending request invoked by [ILocationManager::getTerrestrialPosition](#). If this API is invoked while there is no pending request for terrestrial position from [ILocationManager::getTerrestrialPosition](#), then ResponseCallback will be invoked with ErrorCode::INVALID_ARGUMENTS.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | - Optional callback to get the response of cancelTerrestrialPositionRequest. |
|----|-----------------|--|

Returns

Status of cancelTerrestrialPositionRequest i.e success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.17.2 Enumeration Type Documentation**5.17.2.1 enum telux::loc::DgnssDataFormat [strong]**

Defines RTCM injection data format

Enumerator

DATA_FORMAT_UNKNOWN Source data format is unknown
DATA_FORMAT_RTCM_3 Source data format is RTCM_3
DATA_FORMAT_3GPP_RTK_R15 Source data format is 3GPP RTK Rel-15

5.17.2.2 enum telux::loc::DgnssStatus [strong]

Defines status reported by cdfw for RTCM injection.

Enumerator

DATA_SOURCE_NOT_SUPPORTED Dgnss subsystem doesn't support the data source
DATA_FORMAT_NOT_SUPPORTED Dgnss subsystem doesn't support the data format
OTHER_SOURCE_IN_USE After the source injects the data, dgnss subsystem discovers there is another higher priority source injecting the data at the same time, and the current injected data is dropped

MESSAGE_PARSE_ERROR There is a parsing error such as unrecognized format, CRC check failure, value range check failure, etc.; the injected data is dropped
DATA_SOURCE_NOT_USABLE Data source is not usable anymore

5.17.2.3 enum telux::loc::HorizontalAccuracyLevel [strong]

Defines the horizontal accuracy level of the fix.

Enumerator

LOW Client requires low horizontal accuracy
MEDIUM Client requires medium horizontal accuracy
HIGH Client requires high horizontal accuracy

5.17.2.4 enum telux::loc::LocationReliability [strong]

Specifies the reliability of the position.

Enumerator

UNKNOWN Unknown location reliability
NOT_SET Location reliability is not set. The reliability of this position report could not be determined. It could be unreliable/reliable
VERY_LOW Location reliability is very low
LOW Location reliability is low, little or no cross-checking is possible
MEDIUM Location reliability is medium, limited cross-check passed
HIGH Location reliability is high, strong cross-check passed

5.17.2.5 enum telux::loc::SbasCorrectionType

Specify set of navigation solutions that contribute to Gnss Location. Defines Satellite Based Augmentation System(SBAS) corrections. SBAS contributes to improve the performance of GNSS system.

Enumerator

SBAS_CORRECTION_IONO Bit mask to specify whether SBAS ionospheric correction is used
SBAS_CORRECTION_FAST Bit mask to specify whether SBAS fast correction is used
SBAS_CORRECTION_LONG Bit mask to specify whether SBAS long correction is used
SBAS_INTEGRITY Bit mask to specify whether SBAS integrity information is used
SBAS_CORRECTION_DGNSS Bit mask to specify whether SBAS DGNSS correction is used
SBAS_CORRECTION_RTK Bit mask to specify whether SBAS RTK correction is used
SBAS_CORRECTION_PPP Bit mask to specify whether SBAS PPP correction is used
SBAS_CORRECTION_RTK_FIXED Bit mask to specify whether SBAS RTK fixed correction is used
SBAS_CORRECTION_ONLY_SBAS_CORRECTED_SV_USED_ Bit mask to specify only SBAS corrected SV is used
SBAS_COUNT Bitset

5.17.2.6 enum telux::loc::AltitudeType [strong]

Indicates whether altitude is assumed or calculated.

Enumerator

UNKNOWN Unknown altitude type

CALCULATED Altitude is calculated

ASSUMED Altitude is assumed, there may not be enough satellites to determine the precise altitude

5.17.2.7 enum telux::loc::GnssConstellationType [strong]

Defines constellation type of GNSS.

Enumerator

UNKNOWN Unknown constellation type

GPS GPS satellite

GALILEO GALILEO satellite

SBAS SBAS satellite

COMPASS COMPASS satellite.

Deprecated constellation type is not supported.

GLONASS GLONASS satellite

BDS BDS satellite

QZSS QZSS satellite

NAVIC NAVIC satellite

5.17.2.8 enum telux::loc::SVHealthStatus [strong]

Health status indicates whether satellite is operational or not. This information comes from the most recent data transmitted in satellite almanacs.

Enumerator

UNKNOWN Unknown sv health status

UNHEALTHY satellite is not operational and cannot be used in position calculations

HEALTHY satellite is fully operational

5.17.2.9 enum telux::loc::SVStatus [strong]

Satellite vehicle processing status.

Enumerator

UNKNOWN Unknown sv status

IDLE SV is not being actively processed

SEARCH The system is searching for this SV

TRACK SV is being tracked

5.17.2.10 enum telux::loc::SVInfoAvailability [strong]

Indicates whether Satellite Vehicle info like ephemeris and almanac are present or not

Enumerator

UNKNOWN Unknown sv info availability
YES Ephemeris or Almanac exists
NO Ephemeris or Almanac doesn't exist

5.17.2.11 enum telux::loc::GnssPositionTechType

Specifies which position technology was used to generate location information in the [ILocationInfoEx](#).

Enumerator

GNSS_DEFAULT Technology used to generate location info is unknown.
GNSS_SATELLITE Satellites-based technology was used to generate location info.
GNSS_CELLID Cell towers were used to generate location info.
GNSS_WIFI Wi-Fi access points were used to generate location info.
GNSS_SENSORS Sensors were used to generate location info.
GNSS_REFERENCE_LOCATION Reference location was used to generate location info.
GNSS_INJECTED_COARSE_POSITION Coarse position injected into the location engine was used to generate location info.
GNSS_AFLT AFLT was used to generate location info.
GNSS_HYBRID GNSS and network-provided measurements were used to generate location info.
GNSS_PPE Precise position engine was used to generate location info.

5.17.2.12 enum telux::loc::KinematicDataValidityType

Specifies related kinematics mask

Enumerator

HAS_LONG_ACCEL Navigation data has Forward Acceleration
HAS_LAT_ACCEL Navigation data has Sideward Acceleration
HAS_VERT_ACCEL Navigation data has Vertical Acceleration
HAS_YAW_RATE Navigation data has Heading Rate
HAS_PITCH Navigation data has Body pitch
HAS_LONG_ACCEL_UNC Navigation data has Forward Acceleration
HAS_LAT_ACCEL_UNC Navigation data has Sideward Acceleration
HAS_VERT_ACCEL_UNC Navigation data has Vertical Acceleration
HAS_YAW_RATE_UNC Navigation data has Heading Rate
HAS_PITCH_UNC Navigation data has Body pitch
HAS_PITCH_RATE_BIT Navigation data has Body pitch rate
HAS_PITCH_RATE_UNC_BIT Navigation data has Body pitch rate uncertainty
HAS_ROLL_BIT Navigation data has roll
HAS_ROLL_UNC_BIT Navigation data has roll uncertainty
HAS_ROLL_RATE_BIT Navigation data has roll rate
HAS_ROLL_RATE_UNC_BIT Navigation data has roll rate uncertainty
HAS_YAW_BIT Navigation data has yaw

HAS_YAW_UNC_BIT Navigation data has yaw uncertainty

5.17.2.13 enum telux::loc::GnssSystem [strong]

Specify the different types of constellation supported.

Enumerator

GNSS_LOC_SV_SYSTEM_UNKNOWN UNKNOWN satellite.

GNSS_LOC_SV_SYSTEM_GPS GPS satellite.

GNSS_LOC_SV_SYSTEM_GALILEO GALILEO satellite.

GNSS_LOC_SV_SYSTEM_SBAS SBAS satellite.

GNSS_LOC_SV_SYSTEM_COMPASS COMPASS satellite.

Deprecated constellation type is not supported.

GNSS_LOC_SV_SYSTEM_GLONASS GLONASS satellite.

GNSS_LOC_SV_SYSTEM_BDS BDS satellite.

GNSS_LOC_SV_SYSTEM_QZSS QZSS satellite.

GNSS_LOC_SV_SYSTEM_NAVIC NAVIC satellite.

5.17.2.14 enum telux::loc::GnssTimeValidityType

Validity field for different system time in struct [TimeInfo](#).

Enumerator

GNSS_SYSTEM_TIME_WEEK_VALID valid systemWeek.

GNSS_SYSTEM_TIME_WEEK_MS_VALID valid systemMsec

GNSS_SYSTEM_CLK_TIME_BIAS_VALID valid systemClkTimeBias

GNSS_SYSTEM_CLK_TIME_BIAS_UNC_VALID valid systemClkTimeUncMs

GNSS_SYSTEM_REF_FCOUNT_VALID valid refFCount

GNSS_SYSTEM_NUM_CLOCK_RESETS_VALID valid numClockResets

5.17.2.15 enum telux::loc::GlonassTimeValidity

Validity field for GLONASS time in struct [GlonassTimeInfo](#).

Enumerator

GNSS_GLO_DAYS_VALID valid gloDays

GNSS_GLOS_MSEC_VALID valid gloMsec

GNSS_GLO_CLK_TIME_BIAS_VALID valid gloClkTimeBias

GNSS_GLO_CLK_TIME_BIAS_UNC_VALID valid gloClkTimeUncMs

GNSS_GLO_REF_FCOUNT_VALID valid refFCount

GNSS_GLO_NUM_CLOCK_RESETS_VALID valid numClockResets

GNSS_GLO_FOUR_YEAR_VALID valid gloFourYear

5.17.2.16 enum telux::loc::GnssSignalType

Specify GNSS Signal Type and RF Band used in struct [GnssMeasurementInfo](#) and [ISVInfo](#) class.

Enumerator

GPS_L1CA Gnss signal is of GPS L1CA RF Band.
GPS_L1C Gnss signal is of GPS L1C RF Band.
GPS_L2 Gnss signal is of GPS L2 RF Band.
GPS_L5 Gnss signal is of GPS L5 RF Band.
GLONASS_G1 Gnss signal is of GLONASS G1 (L1OF) RF Band.
GLONASS_G2 Gnss signal is of GLONASS G2 (L2OF) RF Band.
GALILEO_E1 Gnss signal is of GALILEO E1 RF Band.
GALILEO_E5A Gnss signal is of GALILEO E5A RF Band.
GALILEO_E5B Gnss signal is of GALILEO E5B RF Band.
BEIDOU_B1 Gnss signal is of BEIDOU B1 RF Band.
BEIDOU_B2 Gnss signal is of BEIDOU B2 RF Band.
QZSS_L1CA Gnss signal is of QZSS L1CA RF Band.
QZSS_L1S Gnss signal is of QZSS L1S RF Band.
QZSS_L2 Gnss signal is of QZSS L2 RF Band.
QZSS_L5 Gnss signal is of QZSS L5 RF Band.
SBAS_L1 Gnss signal is of SBAS L1 RF Band.
BEIDOU_B1I Gnss signal is of BEIDOU B1I RF Band.
BEIDOU_B1C Gnss signal is of BEIDOU B1C RF Band.
BEIDOU_B2I Gnss signal is of BEIDOU B2I RF Band.
BEIDOU_B2AI Gnss signal is of BEIDOU B2AI RF Band.
NAVIC_L5 Gnss signal is of NAVIC L5 RF Band.
BEIDOU_B2AQ Gnss signal is of BEIDOU B2A_Q RF Band.

5.17.2.17 enum telux::loc::LocationTechnologyType

Specify the set of technologies that contribute to [ILocationInfoBase](#).

Enumerator

LOC_GNSS Location was calculated using GNSS-based technology.
LOC_CELL Location was calculated using Cell-based technology.
LOC_WIFI Location was calculated using WiFi-based technology.
LOC_SENSORS Location was calculated using Sensors-based technology.
LOC_REFERENCE_LOCATION Location was calculated using Reference location.
LOC_INJECTED_COARSE_POSITION Location was calculated using Coarse position injected into the location engine.
LOC_AFLT Location was calculated using AFLT.
LOC_HYBRID Location was calculated using GNSS and network-provided measurements.
LOC_PPE Location was calculated using Precise position engine.
LOC_VEH Location was calculated using Vehicular data.
LOC_VIS Location was calculated using Visual data.

5.17.2.18 enum telux::loc::LocationValidityType

Specify the valid fields in LocationInfoValidity User should determine whether a field in LocationInfoValidity is valid or not by checking the corresponding bit is set or not.

Enumerator

HAS_LAT_LONG_BIT Location has valid latitude and longitude.
HAS_ALTITUDE_BIT Location has valid altitude.
HAS_SPEED_BIT Location has valid speed.
HAS_HEADING_BIT Location has valid heading.
HAS_HORIZONTAL_ACCURACY_BIT
HAS_VERTICAL_ACCURACY_BIT Location has valid vertical accuracy.
HAS_SPEED_ACCURACY_BIT Location has valid speed accuracy.
HAS_HEADING_ACCURACY_BIT Location has valid heading accuracy.
HAS_TIMESTAMP_BIT Location has valid timestamp.

5.17.2.19 enum telux::loc::LocationInfoExValidityType

Specify the valid fields in LocationInfoExValidityType. User should determine whether a field in LocationInfoExValidityType is valid or not by checking the corresponding bit is set or not.

Enumerator

HAS_ALTITUDE_MEAN_SEA_LEVEL valid altitude mean sea level
HAS_DOP valid pdop, hdop, and vdop
HAS_MAGNETIC_DEVIATION valid magnetic deviation
HAS_HOR_RELIABILITY valid horizontal reliability
HAS_VER_RELIABILITY valid vertical reliability
HAS_HOR_ACCURACY_ELIP_SEMI_MAJOR valid elipsode semi major
HAS_HOR_ACCURACY_ELIP_SEMI_MINOR valid elipsode semi minor
HAS_HOR_ACCURACY_ELIP_AZIMUTH valid accuracy elipsode azimuth
HAS_GNSS_SV_USED_DATA valid gnss sv used in pos data
HAS_NAV_SOLUTION_MASK valid navSolutionMask
HAS_POS_TECH_MASK valid LocPosTechMask
HAS_SV_SOURCE_INFO valid LocSvInfoSource
HAS_POS_DYNAMICS_DATA valid position dynamics data
HAS_EXT_DOP valid gdop, tdop
HAS_NORTH_STD_DEV valid North standard deviation
HAS_EAST_STD_DEV valid East standard deviation
HAS_NORTH_VEL valid North Velocity
HAS_EAST_VEL valid East Velocity
HAS_UP_VEL valid Up Velocity
HAS_NORTH_VEL_UNC valid North Velocity Uncertainty
HAS_EAST_VEL_UNC valid East Velocity Uncertainty
HAS_UP_VEL_UNC valid Up Velocity Uncertainty
HAS_LEAP_SECONDS valid leap_seconds
HAS_TIME_UNC valid timeUncMs
HAS_NUM_SV_USED_IN_POSITION valid number of sv used
HAS_CALIBRATION_CONFIDENCE_PERCENT valid sensor calibrationConfidencePercent
HAS_CALIBRATION_STATUS valid sensor calibrationConfidence
HAS_OUTPUT_ENG_TYPE valid output engine type
HAS_OUTPUT_ENG_MASK valid output engine mask
HAS_CONFORMITY_INDEX_FIX valid conformity index
HAS_LLA_VRP_BASED valid lla vrp based
HAS_ENU_VELOCITY_VRP_BASED valid enu velocity vrp based

HAS_ALTITUDE_TYPE valid altitude type
HAS_REPORT_STATUS valid report status

5.17.2.20 enum telux::loc::GnssDataSignalTypes

Specify the GNSS signal type and RF band for jammer info and automatic gain control metric in [GnssData](#).

Enumerator

GNSS_DATA_SIGNAL_TYPE_GPS_L1CA GPS L1CA RF Band.
GNSS_DATA_SIGNAL_TYPE_GPS_L1C GPS L1C RF Band.
GNSS_DATA_SIGNAL_TYPE_GPS_L2C_L GPS L2C_L RF Band.
GNSS_DATA_SIGNAL_TYPE_GPS_L5_Q GPS L5_Q RF Band.
GNSS_DATA_SIGNAL_TYPE_GLONASS_G1 GLONASS G1 (L1OF) RF Band.
GNSS_DATA_SIGNAL_TYPE_GLONASS_G2 GLONASS G2 (L2OF) RF Band.
GNSS_DATA_SIGNAL_TYPE_GALILEO_E1_C GALILEO E1_C RF Band.
GNSS_DATA_SIGNAL_TYPE_GALILEO_E5A_Q GALILEO E5A_Q RF Band.
GNSS_DATA_SIGNAL_TYPE_GALILEO_E5B_Q GALILEO E5B_Q RF Band.
GNSS_DATA_SIGNAL_TYPE_BEIDOU_B1_I BEIDOU B1_I RF Band.
GNSS_DATA_SIGNAL_TYPE_BEIDOU_B1C BEIDOU B1C RF Band.
GNSS_DATA_SIGNAL_TYPE_BEIDOU_B2_I BEIDOU B2_I RF Band.
GNSS_DATA_SIGNAL_TYPE_BEIDOU_B2A_I BEIDOU B2A_I RF Band.
GNSS_DATA_SIGNAL_TYPE_QZSS_L1CA QZSS L1CA RF Band.
GNSS_DATA_SIGNAL_TYPE_QZSS_L1S QZSS L1S RF Band.
GNSS_DATA_SIGNAL_TYPE_QZSS_L2C_L QZSS L2C_L RF Band.
GNSS_DATA_SIGNAL_TYPE_QZSS_L5_Q QZSS L5_Q RF Band.
GNSS_DATA_SIGNAL_TYPE_SBAS_L1_CA SBAS L1_CA RF Band.
GNSS_DATA_SIGNAL_TYPE_NAVIC_L5 NAVIC L5 RF Band.
GNSS_DATA_SIGNAL_TYPE_BEIDOU_B2A_Q BEIDOU B2A_Q RF Band. Maximum number of signal types.
GNSS_DATA_MAX_NUMBER_OF_SIGNAL_TYPES

5.17.2.21 enum telux::loc::GnssDataValidityType

Specify valid mask of data fields in [GnssData](#).

Enumerator

HAS_JAMMER Jammer Indicator is available
HAS_AGC AGC is available

5.17.2.22 enum telux::loc::DrCalibrationStatusType

Specify the sensor calibration status in [ILocationInfoEx](#).

Enumerator

DR_ROLL_CALIBRATION_NEEDED Indicate that roll calibration is needed. Need to take more turns on level ground.
DR_PITCH_CALIBRATION_NEEDED Indicate that pitch calibration is needed. Need to take more turns on level ground.

DR_YAW_CALIBRATION_NEEDED Indicate that yaw calibration is needed. Need to accelerate in a straight line.

DR_ODO_CALIBRATION_NEEDED Indicate that odo calibration is needed. Need to accelerate in a straight line.

DR_GYRO_CALIBRATION_NEEDED Indicate that gyro calibration is needed. Need to take more turns on level ground.

5.17.2.23 enum telux::loc::LocReqEngineType

Specifies the set of engines whose position reports are requested via startDetailedEngineReports.

Enumerator

LOC_REQ_ENGINE_FUSED_BIT Indicate that the fused/default position is needed to be reported back for the tracking sessions. The default position is the propagated/aggregated reports from all engines running on the system (e.g.: DR/SPE/PPE) according to QTI algorithm.

LOC_REQ_ENGINE_SPE_BIT Indicate that the unmodified SPE position is needed to be reported back for the tracking sessions.

LOC_REQ_ENGINE_PPE_BIT Indicate that the unmodified PPE position is needed to be reported back for the tracking sessions.

LOC_REQ_ENGINE_VPE_BIT Indicate that the unmodified VPE position is needed to be reported back for the tracking sessions.

5.17.2.24 enum telux::loc::LocationAggregationType

Specifies the type of engine for the reported fixes

Enumerator

LOC_OUTPUT_ENGINE_FUSED This is the propagated/aggregated report from the fixes of all engines running on the system (e.g.: DR/SPE/PPE).

LOC_OUTPUT_ENGINE_SPE This fix is the unmodified fix from modem GNSS engine

LOC_OUTPUT_ENGINE_PPE This is the unmodified fix from PPP engine

LOC_OUTPUT_ENGINE_VPE This is the unmodified fix from VPE engine.

5.17.2.25 enum telux::loc::PositioningEngineType

Specifies the type of engine responsible for fixes when the engine type is fused

Enumerator

STANDARD_POSITIONING_ENGINE For standard GNSS position engines.

DEAD_RECKONING_ENGINE For dead reckoning position engines.

PRECISE_POSITIONING_ENGINE For precise position engines.

VP_POSITIONING_ENGINE For VP position engine.

5.17.2.26 enum telux::loc::LeverArmType

Lever ARM type

Enumerator

- LEVER_ARM_TYPE_GNSS_TO_VRP** Lever arm parameters regarding the VRP (Vehicle Reference Point) w.r.t the origin (at the GNSS Antenna)
- LEVER_ARM_TYPE_DR_IMU_TO_GNSS** Lever arm regarding GNSS Antenna w.r.t the origin at the IMU (inertial measurement unit) for DR (dead reckoning engine)
- LEVER_ARM_TYPE_VEPP_IMU_TO_GNSS** Lever arm regarding GNSS Antenna w.r.t the origin at the IMU (inertial measurement unit) for VEPP (vision enhanced precise positioning engine)
- Deprecated** enum type is not supported.
- LEVER_ARM_TYPE_VPE_IMU_TO_GNSS** Lever arm regarding GNSS Antenna w.r.t the origin at the IMU (inertial measurement unit) for VPE (vision positioning engine)

5.17.2.27 enum telux::loc::GnssMeasurementsDataValidityType

Specify valid fields in [GnssMeasurementsData](#).

Enumerator

- SV_ID_BIT** Validity of svId.
- SV_TYPE_BIT** Validity of svType.
- STATE_BIT** Validity of stateMask.
- RECEIVED_SV_TIME_BIT** Validity of receivedSvTimeNs and receivedSvTimeSubNs.
- RECEIVED_SV_TIME_UNCERTAINTY_BIT** Validity of receivedSvTimeUncertaintyNs.
- CARRIER_TO_NOISE_BIT** Validity of carrierToNoiseDbHz.
- PSEUDORANGE_RATE_BIT** Validity of pseudorangeRateMps.
- PSEUDORANGE_RATE_UNCERTAINTY_BIT** Validity of pseudorangeRateUncertaintyMps.
- ADR_STATE_BIT** Validity of adrStateMask.
- ADR_BIT** Validity of adrMeters.
- ADR_UNCERTAINTY_BIT** Validity of adrUncertaintyMeters.
- CARRIER_FREQUENCY_BIT** Validity of carrierFrequencyHz.
- CARRIER_CYCLES_BIT** Validity of carrierCycles.
- CARRIER_PHASE_BIT** Validity of carrierPhase.
- CARRIER_PHASE_UNCERTAINTY_BIT** Validity of carrierPhaseUncertainty.
- MULTIPATH_INDICATOR_BIT** Validity of multipathIndicator.
- SIGNAL_TO_NOISE_RATIO_BIT** Validity of signalToNoiseRatioDb.
- AUTOMATIC_GAIN_CONTROL_BIT** Validity of agcLevelDb.

5.17.2.28 enum telux::loc::GnssMeasurementsStateValidityType

Specify GNSS measurement state in [GnssMeasurementsData::stateMask](#).

Enumerator

- UNKNOWN_BIT** State is unknown.
- CODE_LOCK_BIT** State is "code lock".
- BIT_SYNC_BIT** State is "bit sync".
- SUBFRAME_SYNC_BIT** State is "subframe sync".
- TOW_DECODED_BIT** State is "tow decoded".
- MSEC_AMBIGUOUS_BIT** State is "msec ambiguous".
- SYMBOL_SYNC_BIT** State is "symbol sync".
- GLO_STRING_SYNC_BIT** State is "GLONASS string sync".

GLO_TOD_DECODED_BIT State is "GLONASS TOD decoded".
BDS_D2_BIT_SYNC_BIT State is "BDS D2 bit sync".
BDS_D2_SUBFRAME_SYNC_BIT State is "BDS D2 subframe sync".
GAL_E1BC_CODE_LOCK_BIT State is "Galileo E1BC code lock".
GAL_E1C_2ND_CODE_LOCK_BIT State is "Galileo E1C second code lock".
GAL_E1B_PAGE_SYNC_BIT State is "Galileo E1B page sync".
SBAS_SYNC_BIT State is "SBAS sync".

5.17.2.29 enum telux::loc::GnssMeasurementsAdrStateValidityType

Specify accumulated delta range state in [GnssMeasurementsData::adrStateMask](#).

Enumerator

UNKNOWN_STATE State is unknown.
VALID_BIT State is valid.
RESET_BIT State is "reset".
CYCLE_SLIP_BIT State is "cycle slip".

5.17.2.30 enum telux::loc::GnssMeasurementsMultipathIndicator

Specify the GNSS multipath indicator state in [GnssMeasurementsData::multipathIndicator](#).

Enumerator

UNKNOWN_INDICATOR Multipath indicator is unknown.
PRESENT Multipath indicator is present.
NOT_PRESENT Multipath indicator is not present.

5.17.2.31 enum telux::loc::GnssMeasurementsClockValidityType

Specify the valid fields in [GnssMeasurementsClock](#).

Enumerator

LEAP_SECOND_BIT Validity of leapSecond.
TIME_BIT Validity of timeNs.
TIME_UNCERTAINTY_BIT Validity of timeUncertaintyNs.
FULL_BIAS_BIT Validity of fullBiasNs.
BIAS_BIT Validity of biasNs.
BIAS_UNCERTAINTY_BIT Validity of biasUncertaintyNs.
DRIFT_BIT Validity of driftNsps.
DRIFT_UNCERTAINTY_BIT Validity of driftUncertaintyNsps.
HW_CLOCK_DISCONTINUITY_COUNT_BIT Validity of hwClockDiscontinuityCount.

5.17.2.32 enum telux::loc::LeapSecondInfoValidityType

Specify the valid fields in [LeapSecondInfo](#).

Enumerator

LEAP_SECOND_SYS_INFO_CURRENT_LEAP_SECONDS_BIT Validity of [LeapSecondInfo::current](#).
LEAP_SECOND_SYS_INFO_LEAP_SECOND_CHANGE_BIT Validity of [LeapSecondInfo::info](#).

5.17.2.33 enum telux::loc::LocationSystemInfoValidityType

Specify the set of valid fields in [LocationSystemInfo](#)

Enumerator

LOCATION_SYS_INFO_LEAP_SECOND contains current leap second or leap second change info

5.17.2.34 enum telux::loc::GnssEnergyConsumedInfoValidityType

Specify the valid fields in [GnssEnergyConsumedInfo](#).

Enumerator

ENERGY_CONSUMED_SINCE_FIRST_BOOT_BIT validity of [GnssEnergyConsumedInfo](#)

5.17.2.35 enum telux::loc::AidingDataType

Specifies the set of aiding data. This is referenced in the `deleteAidingData` for deleting any aiding data.

Enumerator

AIDING_DATA_EPHEMERIS Mask to delete ephemeris aiding data
AIDING_DATA_DR_SENSOR_CALIBRATION Mask to delete calibration data from dead reckoning position engine

5.17.2.36 enum telux::loc::TerrestrialTechnologyType

Specifies the set of terrestrial technologies.

Enumerator

GTP_WWAN Cell-based technology

5.17.2.37 enum telux::loc::NmeaSentenceType

Specifies the HLOS generated NMEA sentence types.

Enumerator

GGA GGA NMEA sentence
RMC RMC NMEA sentence
GSA GSA NMEA sentence
VTG VTG NMEA sentence
GNS GNS NMEA sentence
DTM DTM NMEA sentence
GPGSV GPGSV NMEA sentence for SVs from GPS constellation

GLGSV GLGSV NMEA sentence for SVs from GLONASS constellation
GAGSV GAGSV NMEA sentence for SVs from GALILEO constellation
GQGSV GQGSV NMEA sentence for SVs from QZSS constellation
GBGSV GBGSV NMEA sentence for SVs from BEIDOU constellation
GIGSV GIGSV NMEA sentence for SVs from NAVIC constellation
ALL All NMEA sentences

5.17.2.38 enum telux::loc::RobustLocationConfigType

Specify the valid mask for robust location configuration used by the GNSS standard position engine (SPE).

Enumerator

VALID_ENABLED Validity of enabled
VALID_ENABLED_FOR_E911 Validity of enabledForE911.
VALID_VERSION Validity of version.

5.17.2.39 enum telux::loc::DRConfigValidityType

Specify the valid mask for the configuration parameters of dead reckoning position engine

Enumerator

BODY_TO_SENSOR_MOUNT_PARAMS_VALID Validity of body to sensor mount parameters.
VEHICLE_SPEED_SCALE_FACTOR_VALID Validity of vehicle speed scale factor.
VEHICLE_SPEED_SCALE_FACTOR_UNC_VALID Validity of vehicle speed scale factor uncertainty.
GYRO_SCALE_FACTOR_VALID Validity of gyro scale factor.
GYRO_SCALE_FACTOR_UNC_VALID Validity of gyro scale factor uncertainty.

5.17.2.40 enum telux::loc::GnssReportType

Specifies the set of gnss reports.

Enumerator

LOCATION Location reports
SATELLITE_VEHICLE Satellite reports
NMEA Nmea reports
DATA Data reports
MEASUREMENT 1Hz measurement reports

5.17.2.41 enum telux::loc::EngineType [strong]

Specify the position engine types

Enumerator

UNKNOWN Unknown engine type.
SPE Standard GNSS position engine.
PPE Precise position engine.
DRE Dead reckoning position engine.

VPE Vision positioning engine.

5.17.2.42 enum telux::loc::LocationEngineRunState [strong]

Specify the position engine run state

Enumerator

UNKNOWN Unknown engine run state.

SUSPENDED Request the position engine to be put into suspended state.

RUNNING Request the position engine to be put into running state.

5.17.2.43 enum telux::loc::ReportStatus [strong]

Specify the status of the report

Enumerator

UNKNOWN Report status is unknown.

SUCCESS Report status is successful. The engine is able to calculate the desired fix. Most of the fields in [ILocationInfoEx](#) will be valid.

INTERMEDIATE Report is still in progress. The engine has not completed its calculations when this report was generated. Accuracy of various fields is non-optimal. Only some of the fields in [ILocationInfoEx](#) will be valid.

FAILURE Report status has failed. The engine is not able to calculate the fix. Most of the fields in [ILocationInfoEx](#) will be invalid.

5.17.3 Variable Documentation

5.17.3.1 const float telux::loc::UNKNOWN_CARRIER_FREQ = -1

5.17.3.2 const int telux::loc::UNKNOWN_SIGNAL_MASK = 0

5.17.3.3 const uint64_t telux::loc::UNKNOWN_TIMESTAMP = 0

5.17.3.4 const float telux::loc::DEFAULT_TUNC_THRESHOLD = 0.0

Default value for threshold of time uncertainty. Units: milli-seconds.

5.17.3.5 const int telux::loc::DEFAULT_TUNC_ENERGY_THRESHOLD = 0

Default value for energy consumed of time uncertainty. The default here means that the engine is allowed to use infinite power. Units: 100 micro watt second.

5.17.3.6 const uint64_t telux::loc::INVALID_ENERGY_CONSUMED = 0xffffffffffffff

0xffffffffffffff indicates an invalid reading for energy consumed info.

5.17.3.7 `const uint32_t telux::loc::DEFAULT_GNSS_REPORT = 0xffffffff`

0xffffffff indicates all the reports are enabled.

5.18 common

This section contains APIs related to Logger, Command Callbacks, Error Codes and [Version](#) information. Also contains Macros to print message at different log level.

5.18.1 Data Structure Documentation

5.18.1.1 class telux::common::ICommandCallback

Base command callback class is responsible for single shot asynchronous callback. This callback will be invoked only once when the operation succeeds or fails.

Public member functions

- virtual [~ICommandCallback](#) ()

5.18.1.1.1 Constructors and Destructors

5.18.1.1.1 virtual telux::common::ICommandCallback::~ICommandCallback () [virtual]

5.18.1.2 class telux::common::ICommandResponseCallback

General command response callback for most of the requests, client needs to implement this interface to get single shot response.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [commandResponse](#) (ErrorCode error)=0
- virtual [~ICommandResponseCallback](#) ()

5.18.1.2.1 Constructors and Destructors

5.18.1.2.1 virtual telux::common::ICommandResponseCallback::~ICommandResponseCallback () [virtual]

5.18.1.2.2 Member Function Documentation

5.18.1.2.2.1 virtual void telux::common::ICommandResponseCallback::commandResponse (ErrorCode *error*) [pure virtual]

This function is called with the response to the command operation.

Parameters

| | | |
|----|--------------|-----------------------------|
| in | <i>error</i> | - ErrorCode |
|----|--------------|-----------------------------|

5.18.1.3 class telux::common::DeviceConfig

Static Public Member Functions

- static bool [isMultiSimSupported](#) ()

5.18.1.3.1 Member Function Documentation

5.18.1.3.1.1 static bool telux::common::DeviceConfig::isMultiSimSupported () [static]

Check whether multi SIM support available.

Returns

bool to determine multi SIM support

5.18.1.4 class telux::common::Log

Static Public Member Functions

- template<typename... MessageArgs>
static void [logMessage](#) ([LogLevel](#) logLevel, const std::string &fileName, const std::string &lineNo, const int &component, MessageArgs...params)

5.18.1.4.1 Member Function Documentation

5.18.1.4.1.1 template<typename... MessageArgs> static void telux::common::Log::logMessage ([LogLevel](#) *logLevel*, const std::string & *fileName*, const std::string & *lineNo*, const int & *component*, MessageArgs... *params*) [static]

5.18.1.5 struct telux::common::SdkVersion

Structure of major, minor and patch version

Data fields

| Type | Field | Description |
|------|-------|--|
| int | major | Major Version : This number will be incremented whenever significant changes or features are introduced |
| int | minor | Minor Version : This number will be incremented when smaller features with some new APIs are introduced. |
| int | patch | Patch Version : If the release only contains bug fixes, but no API change then the patch version would be incremented. |

5.18.1.6 class telux::common::Version

Provides version of SDK.

Static Public Member Functions

- static std::string [getReleaseName](#) ()
- static [SdkVersion](#) [getSdkVersion](#) ()

5.18.1.6.1 Member Function Documentation

5.18.1.6.1.1 static std::string telux::common::Version::getReleaseName () [static]

Get the release name.

Returns

String contains release name

5.18.1.6.1.2 static SdkVersion telux::common::Version::getSdkVersion () [static]

Get the Telematics SDK version, for example: 01.00.00

Returns

[SdkVersion](#) structure of major, minor and patch version

5.18.2 Enumeration Type Documentation

5.18.2.1 enum telux::common::Status [strong]

Defines all the status codes that all Telematics SDK APIs can return

Enumerator

SUCCESS API processing is successful, returned parameters are valid

FAILED API processing failure.

NOCONNECTION Connection to Socket server has not been established

NOSUBSCRIPTION Subscription not available

INVALIDPARAM Input parameters are invalid

INVALIDSTATE Invalid State

NOTREADY Subsystem is not ready

NOTALLOWED Operation not allowed

NOTIMPLEMENTED Functionality not implemented

CONNECTIONLOST Connection to Socket server lost

EXPIRED Expired

ALREADY Already registered handler

NOSUCH No such object

NOTSUPPORTED Not supported on target platform

NOMEMORY Not sufficient memory to process the request

5.18.2.2 enum telux::common::ErrorCode [strong]

Generic Error code for each API responses

Enumerator

SUCCESS No error

RADIO_NOT_AVAILABLE If radio did not start or is resetting

GENERIC_FAILURE Generic Failure

PASSWORD_INCORRECT For PIN/PIN2 methods only

SIM_PIN2 Operation requires SIM PIN2 to be entered

SIM_PUK2 Operation requires SIM PIN2 to be entered

REQUEST_NOT_SUPPORTED Not Supported request

CANCELLED Cancelled

OP_NOT_ALLOWED_DURING_VOICE_CALL Data operation are not allowed during voice call on a Class C GPRS device

OP_NOT_ALLOWED_BEFORE_REG_TO_NW Data operation are not allowed before device registers in network

SMS_SEND_FAIL_RETRY Fail to send SMS and need retry

SIM_ABSENT Fail to set the location where CDMA subscription shall be retrieved because of SIM or RUIM are absent

SUBSCRIPTION_NOT_AVAILABLE Fail to find CDMA subscription from specified location

MODE_NOT_SUPPORTED Hardware does not support preferred network type

FDN_CHECK_FAILURE Command failed because recipient is not on FDN list

ILLEGAL_SIM_OR_ME Network selection failed due to illegal SIM or ME

MISSING_RESOURCE No logical channel available

NO_SUCH_ELEMENT Application not found on SIM

DIAL_MODIFIED_TO_USSD DIAL request modified to USSD

DIAL_MODIFIED_TO_SS DIAL request modified to SS

DIAL_MODIFIED_TO_DIAL DIAL request modified to DIAL with different data

USSD_MODIFIED_TO_DIAL USSD request modified to DIAL

USSD_MODIFIED_TO_SS USSD request modified to SS

USSD_MODIFIED_TO_USSD USSD request modified to different USSD request

SS_MODIFIED_TO_DIAL SS request modified to DIAL

SS_MODIFIED_TO_USSD SS request modified to USSD

SUBSCRIPTION_NOT_SUPPORTED Subscription not supported

SS_MODIFIED_TO_SS SS request modified to different SS request

LCE_NOT_SUPPORTED LCE service not supported

NO_MEMORY Not sufficient memory to process the request

INTERNAL_ERR Hit unexpected vendor internal error scenario

SYSTEM_ERR Hit platform or system error

MODEM_ERR Hit unexpected modem error

INVALID_STATE Unexpected request for the current state

NO_RESOURCES Not sufficient resource to process the request

SIM_ERR Received error from SIM card

INVALID_ARGUMENTS Received invalid arguments in request

INVALID_SIM_STATE Cannot process the request in current SIM state

INVALID_MODEM_STATE Cannot process the request in current Modem state

INVALID_CALL_ID Received invalid call id in request

NO_SMS_TO_ACK ACK received when there is no SMS to ack

NETWORK_ERR Received error from network

REQUEST_RATE_LIMITED Operation denied due to overly-frequent requests

SIM_BUSY SIM is busy

SIM_FULL The target EF is full

NETWORK_REJECT Request is rejected by network

OPERATION_NOT_ALLOWED Not allowed the request now

EMPTY_RECORD The request record is empty

INVALID_SMS_FORMAT Invalid SMS format

ENCODING_ERR Message not encoded properly

INVALID_SMSC_ADDRESS SMSC address specified is invalid

NO_SUCH_ENTRY No such entry present to perform the request

NETWORK_NOT_READY Network is not ready to perform the request

NOT_PROVISIONED Device does not have this value provisioned

NO_SUBSCRIPTION Device does not have subscription

NO_NETWORK_FOUND Network cannot be found

DEVICE_IN_USE Operation cannot be performed because the device is currently in use

ABORTED Operation aborted

INCOMPATIBLE_STATE Operation cannot be performed because the device is in incompatible state

NO_EFFECT Given request had to no effect

DEVICE_NOT_READY Device not ready

MISSING_ARGUMENTS Missing one or more arguments

PIN_PERM_BLOCKED PIN is permanently blocked. The SIM is unusable.

PIN_BLOCKED PIN is blocked. Unblock operation must be issued.

MALFORMED_MSG Message was not formulated correctly by the control point or the message was corrupted during transmission

INTERNAL Internal error

CLIENT_IDS_EXHAUSTED Client IDs exhausted

UNABORTABLE_TRANSACTION The specified transaction could not be aborted

INVALID_CLIENT_ID Could not find client's request

NO_THRESHOLDS No thresholds specified in enable signal strength

INVALID_HANDLE Invalid client handle was received

INVALID_PROFILE Invalid profile index specified

INVALID_PINID PIN in the request is invalid.

INCORRECT_PIN PIN in the request is incorrect.

CALL_FAILED Call origination failed in the lower layers

OUT_OF_CALL Request issued when packet data session disconnected

MISSING_ARG TLV was missing in the request.

ARG_TOO_LONG Path in the request was too long.

INVALID_TX_ID The transaction ID supplied in the request does not match any pending transaction
i.e. either the transaction was not received or it is already executed by the device

OP_NETWORK_UNSUPPORTED Selected operation is not supported by the network

OP_DEVICE_UNSUPPORTED Operation is not supported by device or SIM card

NO_FREE_PROFILE Maximum number of profiles are stored in the device and there is no more storage available to create a new profile

INVALID_PDP_TYPE PDP type specified is not supported

INVALID_TECH_PREF Invalid technology preference

INVALID_PROFILE_TYPE Invalid profile type is specified

INVALID_SERVICE_TYPE Invalid service type

INVALID_REGISTER_ACTION Invalid register action value specified in request

INVALID_PS_ATTACH_ACTION Invalid PS attach action value specified in request

AUTHENTICATION_FAILED Authentication error.

SIM_NOT_INITIALIZED PIN is not yet initialized because the SIM initialization has not finished. Try the PIN operation later.

MAX_QOS_REQUESTS_IN_USE Maximum QoS requests in use

INCORRECT_FLOW_FILTER Incorrect flow filter

NETWORK_QOS_UNAWARE Network QoS unaware

INVALID_ID Invalid call ID was sent in the request

REQUESTED_NUM_UNSUPPORTED Requested message ID is not supported by the currently running software

INTERFACE_NOT_FOUND Cannot retrieve the FMC interface

FLOW_SUSPENDED Flow suspended

INVALID_DATA_FORMAT Invalid data format

GENERAL General error

UNKNOWN Unknown error

INVALID_ARG Parameters passed as input were invalid

INVALID_INDEX MIP profile index is not within the valid range

NO_ENTRY No message exists at the specified memory storage designation

DEVICE_STORAGE_FULL Memory storage specified in the request is full

CAUSE_CODE There was an error in the request

MESSAGE_NOT_SENT Message could not be sent

MESSAGE_DELIVERY_FAILURE Message could not be delivered

INVALID_MESSAGE_ID Message ID specified for the message is invalid

ENCODING Message is not encoded properly

AUTHENTICATION_LOCK Maximum number of authentication failures has been reached

INVALID_TRANSITION Selected operating mode transition from the current operating mode is invalid

NOT_A_MCAST_IFACE Not a MCAST interface

MAX_MCAST_REQUESTS_IN_USE MCAST request in use

INVALID_MCAST_HANDLE An invalid MCAST handle

INVALID_IP_FAMILY_PREF IP family preference is invalid

SESSION_INACTIVE Session inactive

SESSION_INVALID Session not valid

SESSION_OWNERSHIP Session ownership error

INSUFFICIENT_RESOURCES Response is longer than the maximum supported size

DISABLED Disabled

INVALID_OPERATION Device is not expecting the request.

INVALID_QMI_CMD Invalid QMI command

TPDU_TYPE Message in memory contains a TPDU type that cannot be read

SMSC_ADDR SMSC address specified is invalid

INFO_UNAVAILABLE Information is not available

SEGMENT_TOO_LONG PRL segment size is too large

SEGMENT_ORDER PRL segment order is incorrect

BUNDLING_NOT_SUPPORTED Bundling not supported

OP_PARTIAL_FAILURE Some personalization codes were set but an error prevented

POLICY_MISMATCH Network policy does not match a valid NAT

SIM_FILE_NOT_FOUND File is not present on the card.

EXTENDED_INTERNAL Error from the the DS profile module, the extended error

ACCESS_DENIED Access to the requested file is denied. This can occur when there is an attempt to access a PIN-protected file.

HARDWARE_RESTRICTED Selected operating mode is invalid with the current wireless disable setting

ACK_NOT_SENT ACK could not be sent

INJECT_TIMEOUT Inject timeout

FDN_RESTRICT FDN restriction

SUPS_FAILURE_CAUSE Indicates supplementary services failure information;

NO_RADIO Radio is not available

NOT_SUPPORTED Operation is not supported

CARD_CALL_CONTROL_FAILED SIM/R-UIM call control failed

NETWORK_ABORTED Operation was released abruptly by the network

MSG_BLOCKED Message blocked

INVALID_SESSION_TYPE Invalid session type

INVALID_PB_TYPE Invalid Phone Book type

NO_SIM Action is being performed on a SIM that is not initialized.

PB_NOT_READY Phone Book not ready

PIN_RESTRICTION PIN restriction

PIN2_RESTRICTION PIN2 restriction

PUK_RESTRICTION PUK restriction

PUK2_RESTRICTION PUK2 restriction

PB_ACCESS_RESTRICTED Phone Book access restricted

PB_DELETE_IN_PROG Phone Book delete in progress

PB_TEXT_TOO_LONG Phone Book text too long

PB_NUMBER_TOO_LONG Phone Book number too long

PB_HIDDEN_KEY_RESTRICTION Phone Book hidden key restriction

PB_NOT_AVAILABLE Phone Book not available

DEVICE_MEMORY_ERROR Device memory error

NO_PERMISSION No permission

TOO_SOON Too soon

TIME_NOT_ACQUIRED Time not acquired

OP_IN_PROGRESS Operation is in progress

DS_PROFILE_REG_RESULT_FAIL General failure

DS_PROFILE_REG_RESULT_ERR_INVALID_HNDL Request contains an invalid profile handle

DS_PROFILE_REG_RESULT_ERR_INVALID_OP Invalid operation was requested

DS_PROFILE_REG_RESULT_ERR_INVALID_PROFILE_TYPE Request contains an invalid technology type

DS_PROFILE_REG_RESULT_ERR_INVALID_PROFILE_NUM Request contains an invalid profile number

DS_PROFILE_REG_RESULT_ERR_INVALID_IDENT Request contains an invalid profile identifier

DS_PROFILE_REG_RESULT_ERR_INVALID Request contains an invalid argument other than profile number and profile identifier received

DS_PROFILE_REG_RESULT_ERR_LIB_NOT_INITED Profile registry has not been initialized yet

DS_PROFILE_REG_RESULT_ERR_LEN_INVALID Request contains a parameter with invalid length

DS_PROFILE_REG_RESULT_LIST_END End of the profile list was reached while searching for the requested profile

DS_PROFILE_REG_RESULT_ERR_INVALID_SUBS_ID Request contains an invalid subscription identifier

DS_PROFILE_REG_INVALID_PROFILE_FAMILY Request contains an invalid profile family

DS_PROFILE_REG_PROFILE_VERSION_MISMATCH [Version](#) mismatch

REG_RESULT_ERR_OUT_OF_MEMORY Out of memory

DS_PROFILE_REG_RESULT_ERR_FILE_ACCESS File access error

DS_PROFILE_REG_RESULT_ERR_EOF End of field

REG_RESULT_ERR_VALID_FLAG_NOT_SET A valid flag is not set

REG_RESULT_ERR_OUT_OF_PROFILES Out of profiles
REG_RESULT_NO_EMERGENCY_PDN_SUPPORT No emergency PDN support
V2X_ERR_EXCEED_MAX Exceed max allowed number
V2X_ERR_V2X_DISABLED V2x mode was not enabled
V2X_ERR_UNKNOWN_SERVICE_ID The service id unknown
V2X_ERR_SRV_ID_L2_ADDRS_NOT_COMPATIBLE The service Id mismatch with L2 addr
V2X_ERR_PORT_UNAVAIL The port was occupied by others
DS_PROFILE_3GPP_INVALID_PROFILE_FAMILY Request contains an invalid 3GPP profile family
DS_PROFILE_3GPP_ACCESS_ERR Error was encountered while accessing the 3GPP profiles
DS_PROFILE_3GPP_CONTEXT_NOT_DEFINED Specified 3GPP profile does not have a valid context
DS_PROFILE_3GPP_VALID_FLAG_NOT_SET Specified 3GPP profile is marked invalid
DS_PROFILE_3GPP_READ_ONLY_FLAG_SET Specified 3GPP profile is marked read-only
DS_PROFILE_3GPP_ERR_OUT_OF_PROFILES Creation of a new 3GPP profile failed because the limit of 16 profiles has already been reached
DS_PROFILE_3GPP2_ERR_INVALID_IDENT_FOR_PROFILE Invalid profile identifier was received as part of the 3GPP2 profile modification request
DS_PROFILE_3GPP2_ERR_OUT_OF_PROFILE Creation of a new 3GPP2 profile failed because the limit has already been reached
INTERNAL_ERROR Internal error
SERVICE_ERROR Service error
TIMEOUT_ERROR Timeout error
EXTENDED_ERROR Extended error
PORT_NOT_OPEN_ERROR Port not open
MEMCOPY_ERROR Memory copy error
INVALID_TRANSACTION Invalid transaction
ALLOCATION_FAILURE Allocation failure
TRANSPORT_ERROR Transport error
PARAM_ERROR Parameter error
INVALID_CLIENT Invalid client
FRAMEWORK_NOT_READY Framework not ready
INVALID_SIGNAL Invalid signal
TRANSPORT_BUSY_ERROR Transport busy error
SUBSYSTEM_UNAVAILABLE Underlying service currently unavailable
OPERATION_TIMEOUT Timeout error
ROLLBACK_FAILED Rollback to initial state failed

5.18.2.3 enum telux::common::ServiceStatus [strong]

Service status.

Enumerator

SERVICE_UNAVAILABLE
SERVICE_AVAILABLE
SERVICE_FAILED

5.18.2.4 enum telux::common::ProcType [strong]

This applies in system architectures where the modem is attached to an External Application Processor(EAP). The operations associated with the ProcType can be performed by SDK either on EAP or the modem's Internal Application Processor(IAP). This type specifies where the operation is carried out.

Enumerator

LOCAL_PROC Perform the operation on the processor where the API is invoked.

REMOTE_PROC Perform the operation on the application processor other than where the API is invoked.

5.18.2.5 enum telux::common::LogLevel [strong]

Indicates supported logging levels.

Enumerator

LEVEL_NONE

LEVEL_PERF Prints messages with nanoseconds precision timestamp

LEVEL_ERROR Prints perf and error messages only

LEVEL_WARNING Prints perf, error and warning messages

LEVEL_INFO Prints perf, errors, warning and information messages

LEVEL_DEBUG Full logging including debug messages

5.19 C APIs

- [C Common APIs](#)
- [C Kinematics APIs](#)
- [C Radio APIs](#)
- [C Vehicle APIs](#)
- [C Config APIs](#)
- [C Packet APIs](#)

This section contains C APIs related to Cellular-V2X operation.

5.20 C Common APIs

This section contains C Common APIs related to Cellular-V2X operation.

The following common typedefs and macros are used by the C-V2X C APIs.

5.20.1 Data Structure Documentation

5.20.1.1 struct v2x_api_ver_t

Contains retrieved information about the SDK API library that is called. Each SDK component (Kinematics, Radio, Vehicle Data) implements a method to return this structure.

Data fields

| Type | Field | Description |
|----------|-----------------------------|--|
| uint32_t | version_num | Version number of the interface. |
| char | build_date_↔ str[128] | Date of the build (part of the data string). |
| char | build_time_↔ str[128] | Time of the build (part of the data string). |
| char | build_details↔ _str[128] | Build details (part of the data string). |

5.20.2 Enumeration Type Documentation

5.20.2.1 enum v2x_status_enum_type

Valid types for subsystem status, and return status codes for API function calls and callbacks.

Enumerator

V2X_STATUS_SUCCESS Operation is successful.

V2X_STATUS_FAIL Operation is unsuccessful. This is a generic error failure status that can be due to radio hardware resource limitations, geofencing, and so on.

V2X_STATUS_ENO_MEMORY Failure due to a memory allocation issue.

V2X_STATUS_EBADPARAM One of the supplied parameters is bad.

V2X_STATUS_EALREADY Attempted step was already issued, and this call is not required.

V2X_STATUS_KINEMATICS_PLACEHOLDER Begin the return codes associated with the Kinematics interface.

V2X_STATUS_RADIO_PLACEHOLDER Begin the return codes associated with the Radio interface.

V2X_STATUS_ECHANNEL_UNAVAILABLE Requested radio frequency cannot be used at this time.

V2X_STATUS_RADIO_NOT_READY Radio initialization failed due to v2x status.

V2X_STATUS_VEHICLE_PLACEHOLDER Begin the return codes associated with the Vehicle Data interface.

5.21 C Kinematics APIs

This section contains C Kinematics APIs related to Cellular-V2X operation. For any new CV2x development, it is recommended to use the C++ `telux::loc::ILocationManager` APIs.

Abstraction of the system GNSS + DR solution for returning precision fixes with low latency via callbacks. This solution is used each time a fix is available, and it supports multiple callbacks to a short list of clients.

Common types are used for the motion and location reporting system of the platform. These types include the structures that are used to both configure the Kinematics subsystem and to report periodic fixes. The fixes are combinations of inertial/motion data and GNSS solutions determined (possibly directly) from satellite processing or dead-reckoning in degraded SV reception.

5.21.1 Define Documentation

5.21.1.1 #define V2X_KINEMATICS_HANDLE_BAD (-1)

Invalid handle returned by `v2x_kinematics_init()` upon an error.

5.21.2 Data Structure Documentation

5.21.2.1 struct v2x_GNSSstatus_t

Contains status information for the GNSS satellite.

This structure is used for each reported fix to indicate the quality of the available constellation (or whether the constellation is not available).

Data fields

| Type | Field | Description |
|------|-----------------------------------|---|
| bool | unavailable | Specifies whether a constellation is not equipped or is unavailable. Supported values: <ul style="list-style-type: none"> • 0 – GNSS is available • 1 – GNSS is unavailable |
| bool | aPDOPof↔ Under5 | Specifies whether dilution of precision is greater than 5. Supported values: <ul style="list-style-type: none"> • 0 – Not greater than 5 • 1 – Greater than 5 |
| bool | inViewOf↔ Under5 | Specifies whether fewer than five satellites are in view. Supported values: <ul style="list-style-type: none"> • 0 – Five or more satellites are in view • 1 – Fewer than five satellites are in view |
| bool | local↔ Corrections↔ Present | Specifies whether DGPS type corrections are used. Supported values: <ul style="list-style-type: none"> • 0 – Not used • 1 – Used |

| Type | Field | Description |
|------|-------------------------------------|---|
| bool | network↔ Corrections↔ Present | Specifies whether RTK type corrections are used. Supported values: <ul style="list-style-type: none"> • 0 – Not used • 1 – Used |

5.21.2.2 struct v2x_gnss_fix_rates_supported_list_t

Defines supported GNSS fix generation rates (such as 1 Hz, 5 Hz, 10 Hz).

Data fields

| Type | Field | Description |
|-----------|---|--|
| uint32_t | qty_rates_↔ supported | Specify whether the listing or discovery of the supported rates is supported. Supported values: <ul style="list-style-type: none"> • 0 – Not supported • 1 – Supported |
| pb_size_t | rates_↔ supported_hz_↔ _array_count | Number of supported rates. |
| uint32_t | rates_↔ supported_hz_↔ _array[32] | Array of data rates supported by the API. |

5.21.2.3 struct v2x_init_t

Defines client initialization.

Data fields

| Type | Field | Description |
|----------|-------------------------|------------------------------------|
| uint32_t | log_level_mask | Log levels as defined in syslog.h. |
| char | server_ip_↔ addr[32] | IP address of the server. |

5.21.2.4 struct v2x_kinematics_capabilities_t feature_flags_t

Defines Kinematics features supported by the hardware.

Data fields

| Type | Field | Description |
|------|---|--|
| bool | has_3_axis_↔ gyro | Specifies whether the hardware supports 3-axis gyro. Supported values: <ul style="list-style-type: none"> • 0 – Not supported • 1 – Supported |
| bool | has_3_axis_↔ accelerometer | Specifies whether the hardware supports the 3-axis accelerometer. Supported values: <ul style="list-style-type: none"> • 0 – Not supported • 1 – Supported |
| bool | has_imu_↔ supplemented_↔ _dead_↔ reckoning | Specifies whether a dead reckoning (DR) solution is available and enabled or only GNSS is the result. Supported values: <ul style="list-style-type: none"> • 0 – GNSS is available • 1 – DR is available |
| bool | has_yaw_rate_↔ _sensor | Specifies whether the IMU includes a yaw rate sensor. Supported values: <ul style="list-style-type: none"> • 0 – Does not include sensor • 1 – Includes sensor |
| bool | used_vehicle_↔ _speed | Specifies whether the DR algorithm uses the vehicle speed sensor. Supported values: <ul style="list-style-type: none"> • 0 – Does not use sensor • 1 – Uses sensor |
| bool | used_single_↔ wheel_ticks | Specifies whether the DR algorithm uses the single wheel ticks. Supported values: <ul style="list-style-type: none"> • 0 – Does not use ticks • 1 – Uses ticks |
| bool | used_front_↔ differential_↔ wheel_ticks | Specifies whether the DR algorithm uses two front differential wheel ticks. Supported values: <ul style="list-style-type: none"> • 0 – Does not use ticks • 1 – Uses ticks |
| bool | used_rear_↔ differential_↔ wheel_ticks | Specifies whether the DR algorithm uses two rear differential wheel ticks. Supported values: <ul style="list-style-type: none"> • 0 – Does not use ticks • 1 – Uses ticks |

| Type | Field | Description |
|------|---------------------------------------|--|
| bool | used_vehicle_↔ _dynamic_↔ model | Specifies whether the DR algorithm uses vehicle dynamic model factoring in differential ticks, steering, and so on. Supported values: <ul style="list-style-type: none"> • 0 – Does not use factoring • 1 – Uses factoring |

5.21.2.5 struct v2x_rates_t

Defines the rate type.

Data fields

| Type | Field | Description |
|----------|-------------------------|---|
| uint32_t | rate_report_hz | Requested or reported current number of fixes per second. |
| uint32_t | offset_↔ nanoseconds | Currently unsupported. |

5.21.2.6 struct v2x_kinematics_capabilities_t

Returned via v2x_kinematics_get_capabilities() for the client to discover the lower level function that this system supports.

Data fields

| Type | Field | Description |
|---|---------------------------------|--|
| v2x_↔ kinematics_↔ _capabilities_↔ _t_feature_↔ flags_t | feature_flags | Features supported by the API. |
| uint32_t | max_fix_rate_↔ _supported_hz | Highest rate platform that supports GNSS fix generation (in Hz). |
| v2x_gnss_↔ fix_rates_↔ supported_↔ list_t | rates_list | Supported fix rates. |

5.21.2.7 struct v2x_location_fix_t

Contains a standardized set of parameters that are used for ITS applications.

The contents of this structure do not include every possible GNSS element (for example, raw range data is not included). These fields are via low latency for safety applications, both to use locally and to load into a J2945/1 or ETSI G5 EN302.637-2 CAM. For example, the fields are used for CAM-type and BSM-type safety beacons.

This structure is populated for each location or dead-reckoning fix, and it is supplied on the fix available callback.

Predefined J2735s can be used to communicate raw SV observations and RTK correction data. Currently, however, they are not supplied from this structure.

Data fields

| Type | Field | Description |
|-----------------------------------|------------------------------|--|
| double | utc_fix_time | UTC time in seconds. |
| v2x_fix_mode_t | fix_mode | Location engine used to produce this record. Supported values: No fix, 2D, 3D, RTCM |
| double | latitude | Latitude in degrees. |
| double | longitude | Longitude in degrees. |
| double | altitude | Altitude in meters above the geoid (mean sea level). |
| uint32_t | qty_SV_in_view | Number of usable space vehicles (SV) that should be in view. |
| uint32_t | qty_SV_used | Actual number of SVs used in this fix calculation. |
| v2x_GNSS_status_t | gnss_status | Status of the GNSS data. |
| bool | has_SemiMajorAxisAccuracy | Specifies whether the value of the SemiMajorAxisAccuracy field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | SemiMajorAxisAccuracy | Accuracy of the major axis, in meters. |
| bool | has_SemiMinorAxisAccuracy | Specifies whether the value of the SemiMinorAxisAccuracy field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | SemiMinorAxisAccuracy | Accuracy of the minor axis, in meters. |
| bool | has_SemiMajorAxisOrientation | Specifies whether the value of the SemiMajorAxisOrientation field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |

| Type | Field | Description |
|--------|---|---|
| double | SemiMajor↔ AxisOrientation | Orientation of the major axis, in meters. |
| bool | has_heading | Specifies whether the value of the heading field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | heading | Track degrees relative to true north. |
| bool | has_velocity | Specifies whether the value of the velocity field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | velocity | Speed over ground in meters/second. |
| bool | has_climb | Specifies whether the value of the climb field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | climb | Vertical speed in meters/second. |
| bool | has_lateral_↔ acceleration | Specifies whether the value of the lateral_acceleration field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | lateral_↔ acceleration | Acceleration in a latitudinal direction, in meters/second ^{^2} . |
| bool | has_↔ longitudinal_↔ acceleration | Specifies whether the value of the longitudinal acceleration field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | longitudinal_↔ acceleration | Acceleration in a longitudinal direction, in meters/second ^{^2} . |
| bool | has_vehicle_↔ vertical_↔ acceleration | Specifies whether the value of the vehicle_vertical_acceleration field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | vehicle_↔ vertical_↔ acceleration | Vertical acceleration of the vehicle in G force. |
| bool | has_yaw_rate↔ _degrees_per↔ _second | Specifies whether the value of the yaw_rate_degrees_per_second field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |

| Type | Field | Description |
|--------|---|--|
| double | yaw_rate_↔ degrees_per_↔ second | Yaw rate in degrees/second, per SAE J2735. |
| bool | has_yaw_rate_↔ _95pct_↔ confidence | Specifies whether the value of the yaw_rate_95pct_confidence field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | yaw_rate_↔ 95pct_↔ confidence | 95% confidence (2 sigma) on the yaw rate in degrees/second. |
| bool | has_lane_↔ position_↔ number | Specifies whether the value of the lane_position_number field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | lane_position_↔ _number | Current lane number, where 0 is either the outer-most edge of the hard shoulder or off-road. |
| bool | has_lane_↔ position_↔ 95pct_↔ confidence | Specifies whether the value of the lane_position_95pct_confidence field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| double | lane_position_↔ _95pct_↔ confidence | 95% confidence range on the lane position. |
| bool | has_time_↔ confidence | Specifies whether the value of the time_confidence field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| float | time_↔ confidence | 95% (2 sigma) confidence in number of seconds. |
| bool | has_heading_↔ confidence | Specifies whether the value of the heading_confidence field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| float | heading_↔ confidence | 95% heading confidence in degrees. |
| bool | has_velocity_↔ confidence | Specifies whether the value of the velocity_confidence field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| float | velocity_↔ confidence | 95% velocity confidence in meters/second. |

| Type | Field | Description |
|----------|-------------------------------|--|
| bool | has_elevation↔ _confidence | Specifies whether the value of the elevation_confidence field is valid. Supported values: <ul style="list-style-type: none"> • 0 – Not valid • 1 – Valid |
| float | elevation_↔ confidence | 95% uncertainty range (2 sigma) confidence in meters. |
| uint32_t | leap_seconds | Indicates that both UTC and GPS are required because IEEE 1609.2 security requires operations to be performed in raw GPS time. |

5.21.3 Enumeration Type Documentation

5.21.3.1 enum v2x_fix_mode_t

Valid GNSS fix modes.

Enumerator

V2X_GNSS_MODE_NOT_SEEN SV is unavailable or not in view.

V2X_GNSS_MODE_NO_FIX No SV fix.

V2X_GNSS_MODE_2D 2D fix with latitude and longitude information.

V2X_GNSS_MODE_3D 3D fix with latitude, longitude, and altitude information.

5.21.4 Function Documentation

5.21.4.1 v2x_api_ver_t v2x_kinematics_api_version (void)

Gets the compiled API version interface (as an integer number).

Returns

[v2x_api_ver_t](#) – Filled with the version number, build date, and detailed build information.

5.21.4.2 `v2x_kinematics_handle_t v2x_kinematics_init (v2x_init_t * param, v2x_kinematics_init_callback_t cb, void * context)`

Initializes the Kinematics library.

Associated data types

[v2x_init_t](#)
[v2x_kinematics_init_callback_t](#)

Parameters

| | | |
|----|----------------|---|
| in | <i>param</i> | Pointer to the structure that contains parameters for the IP address of the server, logging level, and so on. |
| in | <i>cb</i> | Callback function called when initialization is complete. |
| in | <i>context</i> | Pointer to the application context for use with the callbacks, which can help the caller code. |

Returns

Handle number to use with subsequent calls.

[V2X_KINEMATICS_HANDLE_BAD](#) – Upon an error.

5.21.4.3 `v2x_status_enum_type v2x_kinematics_start_rate_notification (v2x_kinematics_handle_t handle, v2x_kinematics_rate_notification_listener_t cb, void * context)`

Gets the current rate and offset from the Kinematics library.

Associated data types

[v2x_kinematics_handle_t](#)

[v2x_kinematics_rate_notification_listener_t](#)

Parameters

| | | |
|----|----------------|--|
| in | <i>handle</i> | Handle number to use with subsequent calls. If there is an error in initialization, the value is -1. |
| in | <i>cb</i> | Callback function used to report rate notification changes. |
| in | <i>context</i> | Pointer to the application context for use with the callbacks, which can help the caller code. |

Returns

Indication of success or failure from [v2x_status_enum_type](#).

5.21.4.4 `v2x_status_enum_type v2x_kinematics_set_rate (v2x_kinematics_handle_t handle, v2x_rates_t * rate, v2x_kinematics_set_rate_callback_t cb, void * context)`

Sets the current rate and offset from the Kinematics library.

Associated data types

[v2x_kinematics_handle_t](#)

[v2x_rates_t](#)

[v2x_kinematics_set_rate_callback_t](#)

Parameters

| | | |
|----|----------------|--|
| in | <i>handle</i> | Handle number to use with subsequent calls. If there is an error in initialization, the value is -1. |
| in | <i>rate</i> | Pointer to the rate structure filled with the fix timing parameters. |
| in | <i>cb</i> | Callback function called when rates and offsets are successfully set. This parameter can be NULL. |
| in | <i>context</i> | Pointer to the application context for use with the callbacks, which can help the caller code. |

Returns

Indication of success or failure from [v2x_status_enum_type](#).

**5.21.4.5 v2x_status_enum_type v2x_kinematics_register_listener (v2x_kinematics_↔
_handle_t *handle*, v2x_kinematics_newfix_listener_t *listener*, void * *context*
)**

Registers for a Kinematics result listener callback at the requested rate.

Associated data types

[v2x_kinematics_handle_t](#)

[v2x_kinematics_newfix_listener_t](#)

Parameters

| | | |
|----|-----------------|--|
| in | <i>handle</i> | Handle number to use with subsequent calls. If there is an error in initialization, the value is -1. |
| in | <i>listener</i> | Callback function to use for this listener. |
| in | <i>context</i> | Pointer to the application context for use with the callbacks, which can help the caller code. |

Detailed description

This function requests GNSS fix/motion callbacks at a specified rate (Hz) with a specified offset.

Only certain rates are supported (such as 1 Hz, 2 Hz, 5 Hz, 10 Hz), which are obtained from [v2x_kinematics_get_capabilities\(\)](#).

Currently, a request cannot be made for a rate slower than 1 Hz.

Returns

Indication of success or failure from [v2x_status_enum_type](#).

5.21.4.6 `v2x_status_enum_type v2x_kinematics_deregister_listener (v2x_kinematics_handle_t handle, v2x_kinematics_deregister_callback_t cb, void * context)`

Deregisters a previously registered GNSS fix that the listener established earlier via `v2x_kinematics_register_listener()`.

Associated data types

`v2x_kinematics_handle_t`
`v2x_kinematics_deregister_callback_t`

Parameters

| | | |
|----|----------------|--|
| in | <i>handle</i> | Handle number of the registered fix. |
| in | <i>cb</i> | Callback function to use for this listener. This parameter can be NULL. |
| in | <i>context</i> | Pointer to the application context for use with the callbacks, which can help the caller code. |

Returns

Indication of success or failure from `v2x_status_enum_type`.

5.21.4.7 `v2x_status_enum_type v2x_kinematics_final (v2x_kinematics_handle_t handle, v2x_kinematics_final_callback_t cb, void * context)`

Terminates the Kinematics library.

Associated data types

[v2x_kinematics_handle_t](#)

[v2x_kinematics_final_callback_t](#)

Parameters

| | | |
|----|----------------|--|
| in | <i>handle</i> | Handle number of the library. |
| in | <i>cb</i> | Callback function called when termination is complete. This parameter can be NULL. |
| in | <i>context</i> | Pointer to the application context for use with the callbacks, which can help the caller code. |

Returns

Indication of success or failure from [v2x_status_enum_type](#).

5.21.4.8 void v2x_kinematics_enable_fixes (v2x_kinematics_handle_t *handle*)

Enables the Kinematics fixes from GNSS.

Associated data types

[v2x_kinematics_handle_t](#)

Parameters

| | | |
|----|---------------|------------------------------------|
| in | <i>handle</i> | Unique identifier for the library. |
|----|---------------|------------------------------------|

Returns

None.

5.21.4.9 void v2x_kinematics_disable_fixes (v2x_kinematics_handle_t *handle*)

Disables the Kinematics fixes from GNSS.

Associated data types

[v2x_kinematics_handle_t](#)

Parameters

| | | |
|----|---------------|------------------------------------|
| in | <i>handle</i> | Unique identifier for the library. |
|----|---------------|------------------------------------|

Returns

None.

5.22 C Radio APIs

This section contains C Radio APIs related to Cellular-V2X operation. Applications need to have "radio" Linux group permissions to be able to operate successfully with underlying services. For any new CV2x development, it is recommended to use the C++ [telux::cv2x::*](#) APIs.

Abstraction of the radio driver parameters for a V2X broadcast socket interface, including 3GPP CV2X QoS bandwidth contracts.

5.22.1 Define Documentation

5.22.1.1 **#define V2X_RADIO_HANDLE_BAD (-1)**

Invalid handle returned by [v2x_radio_init\(\)](#) and [v2x_radio_init_v2\(\)](#) upon an error.

5.22.1.2 **#define V2X_MAX_RADIO_SESSIONS (10)**

Limit on the number of simultaneous RmNet Radio interfaces this library can have open at once.

Typically, there are only a few actual radios. On the same radio however, one interface can be for IP traffic, and another interface can be for non-IP traffic.

5.22.1.3 **#define V2X_RX_WILDCARD_PORTNUM (9000)**

Wildcard value for a port number. When the wildcard is used, all V2X received traffic is routed.

5.22.1.4 **#define MAX_POOL_IDS_LIST_LEN (20)**

Maximum length of the pool ID list that is returned in [v2x_iface_capabilities_t](#).

5.22.1.5 **#define MAX_MALICIOUS_IDS_LIST_LEN (50)**

Maximum length of the malicious ID list that can be passed in [v2x_radio_update_trusted_ue_list\(\)](#).

5.22.1.6 **#define MAX_TRUSTED_IDS_LIST_LEN (50)**

Maximum length of the trusted ID list that can be passed in [v2x_radio_update_trusted_ue_list\(\)](#).

5.22.1.7 **#define MAX_SUBSCRIBE_SIDS_LIST_LEN (10)**

Maximum length for the subscribed service ID list that can be passed in [v2x_radio_rx_sock_create_and_bind_v2\(\)](#).

5.22.1.8 **#define MAX_FILTER_IDS_LIST_LEN (50)**

Maximum length for the L2 ID list that can be passed in [v2x_set_l2_filters\(\)](#) and [v2x_cancel_l2_filters](#).

5.22.1.9 **#define V2X_MAX_ANTENNAS_SUPPORTED (2)**

Maximum number of antennas that is supported. Used in [v2x_tx_status_report_t](#)

5.22.1.10 #define V2X_MAX_TX_POOL_NUM (2)

Maximum number of V2X Tx pools that is supported. Used in [v2x_radio_status_ex_t](#)

5.22.1.11 #define V2X_MAX_RX_POOL_NUM (4)

Maximum number of V2X Rx pools that is supported. Used in [v2x_radio_status_ex_t](#)

5.22.2 Data Structure Documentation**5.22.2.1 struct v2x_status_info_t**

Encapsulates CV2X Tx/Rx status and cause of failure.

Data fields

| Type | Field | Description |
|---|--------|------------------|
| v2x_radio_↔ status_type_t | status | Tx/Rx status |
| v2x_radio_↔ cause_type_t | cause | Cause of failure |

5.22.2.2 struct v2x_radio_status_t

Encapsulates status of CV2X radio.

Data fields

| Type | Field | Description |
|---|-----------|-------------|
| v2x_status_↔ info_t | tx_status | TX status |
| v2x_status_↔ info_t | rx_status | RX status |

5.22.2.3 struct v2x_pool_status_t

Encapsulates status for single TX/RX pool.

Data fields

| Type | Field | Description |
|---|---------|-------------------|
| uint8_t | pool_id | pool ID |
| v2x_status_↔ info_t | status | Tx/Rx pool status |

5.22.2.4 struct v2x_radio_status_ex_t

V2X overall radio status and per pool status.

Data fields

| Type | Field | Description |
|------------------------------------|--------------------------------------|---|
| v2x_radio_status_t | status | CV2X overall TX/RX status |
| uint8_t | tx_pool_size | Number of Tx pools in array of pool_status. |
| v2x_pool_status_t | tx_pool_status[V2X_MAX_TX_P_OOL_NUM] | CV2X Tx pool status. |
| uint8_t | rx_pool_size | Number of Rx pools in array of pool_status. |
| v2x_pool_status_t | rx_pool_status[V2X_MAX_RX_P_OOL_NUM] | CV2X Rx pool status. |

5.22.2.5 struct trusted_ue_info_t

Contains time confidence, position confidence, and propagation delay for a trusted UE.

Data fields

| Type | Field | Description |
|----------|---------------------------|--|
| uint32_t | source_l2_id | L2 ID of the trusted source |
| float | time_uncertainty | Time uncertainty in milliseconds. |
| uint16_t | time_confidence_level | Deprecated. Use time_uncertainty instead. Confidence level of the time period. Supported values: 0 through 127, where 0 is invalid or unavailable and 127 is the most confident |
| uint16_t | position_confidence_level | Confidence level of the position. Supported values: 0 through 127, where 0 is invalid or unavailable and 127 is the most confident |
| uint32_t | propagation_delay | Propagation delay in microseconds. |

5.22.2.6 struct tx_pool_id_info_t

Contains minimum and maximum frequencies for a Tx pool ID. This struct is used in [v2x_iface_capabilities_t](#).

Data fields

| Type | Field | Description |
|----------|----------|---------------------------|
| uint8_t | pool_id | ID of the Tx pool. |
| uint16_t | min_freq | Minimum frequency in MHz. |
| uint16_t | max_freq | Maximum frequency in MHz. |

5.22.2.7 struct v2x_iface_capabilities_t

Contains information on the capabilities of a Radio interface.

Data fields

| Type | Field | Description |
|-------------------------------|---|---|
| int | link_ip_MTU↔ _bytes | Maximum data payload length (in bytes) of a packet supported by the IP Radio interface. |
| int | link_non_ip↔ MTU_bytes | Maximum data payload length (in bytes) of a packet supported by the non-IP Radio interface. |
| v2x↔ concurrency↔ sel_t | max↔ supported↔ concurrency | Indicates whether this interface supports concurrent WWAN with V2X (PC5). |
| uint16_t | non_ip_tx↔ payload↔ offset_bytes | <p>Byte offset in a non-IP Tx packet before the actual payload begins. In 3GPP CV2X, the first byte after the offset is the 1-byte V2X Family ID.</p> <p>This offset is to the left for a per-packet Tx header that includes Tx information that might be inserted in front of the packet payload (in subsequent releases).</p> <p>An example of Tx information is MAC/Phy parameters (power, rate, retransmissions policy, and so on).</p> <p>Currently, this value is expected to be 0. But it is reserved to support possible per-packet Tx/Rx headers that might be added in future releases of this API.</p> |
| uint16_t | non_ip_rx↔ payload↔ offset_bytes | <p>Byte offset in a non-IP Rx packet before the actual payload begins. Initially, this value is zero. But it allows for later insertion of per-packet Rx information (sometimes called metadata) to be added to the front of the data payload. An example of Rx information is MAC/Phy measurements (receive signal strength, timestamps, and so on).</p> <p>The V2X Family ID is considered as part of the payload in the 3GPP CV2X. Higher layers (applications that are clients to this API) must remove or advance past that 1 byte to get to the more familiar actual WSMP/Geonetworking payload.</p> |
| uint16_t | int_min↔ periodicity↔ multiplier_ms | <p>Lowest number of milliseconds requested for a bandwidth.</p> <p>This value is also the basis for all possible bandwidth reservation periods. For example, if this multiplier=100 ms, applications can only reserve bandwidths of 100 ms, 200 ms, up to 1000 ms.</p> |
| uint16_t | int↔ maximum↔ periodicity_ms | Least frequent bandwidth periodicity that is supported. Above this value, use event-driven periodic messages of a period larger than this value. |
| unsigned | supports↔ 10ms↔ periodicity: 1 | <p>Indicates whether n*10 ms periodicities are supported.</p> <p>Supported values:</p> <ul style="list-style-type: none"> • 0 – Not supported • 1 – Supported |

| Type | Field | Description |
|---|--|--|
| unsigned | supports_↔ 20ms_↔ periodicity: 1 | Indicates whether an n*20 ms bandwidth reservation is supported. Supported values: <ul style="list-style-type: none"> • 0 – Not supported • 1 – Supported |
| unsigned | supports_↔ 50ms_↔ periodicity: 1 | Indicates whether 50 ms periodicity is supported. Supported values: <ul style="list-style-type: none"> • 0 – Not supported • 1 – Supported |
| unsigned | supports_↔ 100ms_↔ periodicity: 1 | Indicates whether the basic minimum periodicity of 100 ms is supported. Supported values: <ul style="list-style-type: none"> • 0 – Not supported • 1 – Supported |
| unsigned | max_quantity↔ _of_auto_↔ retrans: 4 | Maximum number automatic retransmissions. Supported values: 0 through 15 |
| unsigned | size_of_↔ layer2_mac_↔ address: 4 | Size of the L2 MAC address. Different Radio Access Technologies have different-sized L2 MAC addresses: 802.11 has 6 bytes, whereas 3GPP PC5 has only 3 bytes. Because a randomized MAC address comes from an HSM with good pseudo random entropy, higher layers must know how many bytes of the MAC address to generate. |
| uint16_t | v2x_number_↔ of_priority_↔ levels | Number of different priority levels supported. For example, 8 is the current 3GPP standard (where a lower number means a higher priority). |
| uint16_t | highest_↔ priority_value | Least urgent priority number supported by this radio. Higher numbers are lower priority, so if the full range is supported, this value is V2X_PRIO_BACKGROUND . |
| uint16_t | lowest_↔ priority_value | Highest priority value (most urgent traffic). Lower numbers are higher priority, so if the highest level supported this value is V2X_PRIO_MOST_URGENT . |
| uint16_t | max_qty_SP↔ S_flows | Maximum number of supported SPS reservations. |
| uint16_t | max_qty_non↔ _SPS_flows | Maximum number of supported event flows (non-SPS ports). |
| int32_t | max_tx_pwr | Maximum supported transmission power in dBm. |
| int32_t | min_tx_pwr | Minimum supported transmission power in dBm. |
| uint32_t | tx_pool_ids_↔ supported_len | Length of the tx_pool_ids_supported array. |
| tx_pool_id_↔ info_t | tx_pool_ids_↔ supported[M↔ AX_POOL_I↔ DS_LIST_L↔ EN] | Array of Tx pool IDs and their associated minimum and maximum frequencies. |

5.22.2.8 struct v2x_tx_bandwidth_reservation_t

Used when requesting a QoS bandwidth contract, which is implemented in PC5 3GPP V2-X radio as a *Semi Persistent Flow* (SPS).

The underlying radio providing the interface might support periodicities of various granularity in 100 ms integer multiples (such as 200 ms, 300 ms, and 400 ms).

The reservation is also used internally as a handle.

Data fields

| Type | Field | Description |
|---------------------------------|-------------------------------------|---|
| int | v2xid | Variable length 4-byte PSID or ITS_AID, or another application ID. |
| v2x_priority_et | priority | Specifies one of the 3GPP levels of priority for the traffic that is pre-reserved on the SPS flow. Use v2x_radio_query_parameters() to get the exact number of supported priority levels. |
| int | period_↔ interval_ms | Bandwidth-reserved periodicity interval in milliseconds. There are limits on which intervals the underlying radio supports. Use the capabilities query method to discover the <code>int_min_periodicity_multiplier_ms</code> and <code>int_maximum_periodicity_ms</code> supported intervals. |
| int | tx_↔ reservation_↔ size_bytes | Number of Tx bandwidth bytes that are sent every periodicity interval. |

5.22.2.9 struct v2x_chan_meas_params_t

Contains the measurement parameters for configuring the MAC/Phy radio channel measurements (such as CBR utilization).

The radio chip contains requests on radio measurement parameters that API clients can use to specify the following:

- How their higher-level application requires the CBR/CBP to be measured
- Over which time window
- When to send a report

Data fields

| Type | Field | Description |
|------|--|--|
| int | channel_↔ measurement_↔ _interval_us | Duration in microseconds of the sliding window size. |
| int | rs_threshold_↔ decidbm | Parameter to the radio CBR measurement that is used for determining how busy the channel is. Signals weaker than the specified receive strength (RSRP, or RSSI) are not considered to be in use (busy). |

5.22.2.10 struct v2x_chan_measurements_t

Periodically returned by the radio with all measurements about the radio channel, such as the amount of noise and bandwidth saturation (channel_busy_percentage, or CBR).

Data fields

| Type | Field | Description |
|-------|-------------------------------|--|
| float | channel_busy_↔ _percentage | No measurement parameters are supplied. |
| float | noise_floor | Measurement of the background noise for a quiet channel. |
| float | time_↔ uncertainty | V2X time uncertainty in milliseconds. |

5.22.2.11 struct v2x_radio_calls_t

Contains callback functions used in a v2x_radio_init() and v2x_radio_init_v2 call.

The radio interface uses these callback functions for events such as completion of initialization, a Layer-02 MAC address change, or a status event (loss of sufficient GPS time precision to transmit).

These callbacks are related to a specific radio interface, and its MAC/Phy parameters, such as transmit power, bandwidth utilization, and changes in radio status.

Data Fields

- void(* v2x_radio_init_complete)(v2x_status_enum_type status, void *context)
- void(* v2x_radio_status_listener)(v2x_event_t event, void *context)
- void(* v2x_radio_chan_meas_listener)(v2x_chan_measurements_t *measurements, void *context)
- void(* v2x_radio_l2_addr_changed_listener)(int new_l2_address, void *context)
- void(* v2x_radio_macphy_change_complete_cb)(void *context)
- void(* v2x_radio_capabilities_listener)(v2x_iface_capabilities_t *caps, void *context)
- void(* v2x_service_status_listener)(v2x_service_status_t status, void *context)

5.22.2.11.1 Field Documentation

5.22.2.11.1.1 void(* v2x_radio_calls_t::v2x_radio_init_complete)(v2x_status_enum_type status, void *context)

Callback that indicates initialization is complete.

Associated data types

[v2x_status_enum_type](#)

Parameters

| | | |
|----|----------------|---|
| in | <i>status</i> | Updated current radio status that indicates whether transmit and receive are ready. |
| in | <i>context</i> | Pointer to the context that was supplied during initial registration. |

5.22.2.11.1.2 void(* v2x_radio_calls_t::v2x_radio_status_listener) (v2x_event_t event, void *context)

Callback made when the status in the radio changes. For example, in response to a fault when there is a loss of GPS timing accuracy.

Deprecated This callback is deprecated, please consider use v2x_ext_radio_status_listener instead.

Associated data types

[v2x_event_t](#)

Parameters

| | | |
|----|----------------|---|
| in | <i>event</i> | Delivery of the event that just occurred, such losing the ability to transmit. |
| in | <i>context</i> | Pointer to the context of the caller who originally registered for this callback. |

5.22.2.11.1.3 void(* v2x_radio_calls_t::v2x_radio_chan_meas_listener) (v2x_chan_measurements_t *measurements, void *context)

Callback made from lower layers when periodic radio measurements are prepared.

Associated data types

[v2x_chan_measurements_t](#)

Parameters

| | | |
|----|---------------------|---|
| in | <i>measurements</i> | Pointer to the periodic measurements. |
| in | <i>context</i> | Pointer to the context of the caller who originally registered for this callback. |

5.22.2.11.1.4 void(* v2x_radio_calls_t::v2x_radio_l2_addr_changed_listener) (int new_l2_address, void *context)

Callback made by the platform SDK when the MAC address (L2 SRC address) changes.

Parameters

| | | |
|----|-----------------------|---|
| in | <i>new_l2_address</i> | New L2 source address as an integer (because the L2 address is 3 bytes). |
| in | <i>context</i> | Pointer to the context of the caller who originally registered for this callback. |

5.22.2.11.1.5 void(* v2x_radio_calls_t::v2x_radio_macphy_change_complete_cb) (void *context)

Callback made to indicate that the requested radio MAC/Phy change (such as channel/frequency and power) has completed.

Parameters

| | | |
|----|----------------|---|
| in | <i>context</i> | Pointer to the context of the caller who originally registered for this callback. |
|----|----------------|---|

5.22.2.11.1.6 void(* v2x_radio_calls_t::v2x_radio_capabilities_listener) (v2x_iface_capabilities_t *caps, void *context)

Callback made when V2X capabilities change.

Associated data types

[v2x_iface_capabilities_t](#)

Parameters

| | | |
|----|----------------|---|
| in | <i>caps</i> | Pointer to the capabilities of this interface. |
| in | <i>context</i> | Pointer to the context of the caller who originally registered for this callback. |

5.22.2.11.1.7 void(* v2x_radio_calls_t::v2x_service_status_listener) (v2x_service_status_t status, void *context)

Callback made when the service status changes.

Associated data types

[v2x_service_status_t](#)

Parameters

| | | |
|----|----------------|---|
| in | <i>status</i> | Service status. |
| in | <i>context</i> | Pointer to the context of the caller who originally registered for this callback. |

5.22.2.12 struct v2x_sps_mac_details_t

Contains MAC information that is reported from the actual MAC SPS in the radio. The offsets can periodically change on any given transmission report.

Data fields

| Type | Field | Description |
|----------|---|---|
| uint32_t | periodicity_↔ in_use_ns | Actual transmission interval period (in nanoseconds) scheduled relative to 1PP 0:00.00 time. |
| uint16_t | currently_↔ reserved_↔ periodic_bytes | Actual number of bytes currently reserved at the MAC layer. This number can be slightly larger than original request. |
| uint32_t | tx_↔ reservation_↔ offset_ns | Actual offset, from a 1PPS pulse and Tx flow periodicity, that the MAC selected and is using for the transmit reservation. If data goes to the radio with enough time, it can be transmitted on the medium in the next immediately scheduled slot. |
| uint64_t | utc_time_ns | Absolute UTC start time of next selected grant, in nanoseconds. |

5.22.2.13 struct v2x_per_sps_reservation_calls_t

Callback functions used in `v2x_radio_tx_sps_sock_create_and_bind()` calls.

Data Fields

- `void(* v2x_radio_l2_reservation_change_complete_cb)(void *context, v2x_sps_mac_details_t *details)`
- `void(* v2x_radio_sps_offset_changed)(void *context, v2x_sps_mac_details_t *details)`

5.22.2.13.1 Field Documentation

5.22.2.13.1.1 `void(* v2x_per_sps_reservation_calls_t::v2x_radio_l2_reservation_change_complete_cb)(void *context, v2x_sps_mac_details_t *details)`

Callback made upon completion of a reservation change that a `v2x_radio_tx_reservation_change()` call initiated for a MAC/Phy contention.

The current SPS offset and reservation parameter are passed in the details structure returned by the pointer details.

Associated data types

[v2x_sps_mac_details_t](#)

Parameters

| | | |
|----|----------------|-------------------------------------|
| in | <i>context</i> | Pointer to the application context. |
| in | <i>details</i> | Pointer to the MAC information. |

5.22.2.13.1.2 void(* v2x_per_sps_reservation_calls_t::v2x_radio_sps_offset_changed) (void *context, v2x_sps_mac_details_t *details)

Callback periodically made when the MAC SPS timeslot changes. The new reservation offset is in the details structure returned by pointer details.

Associated data types

[v2x_sps_mac_details_t](#)

Parameters

| | | |
|----|---------------------|--------------------------------------|
| in | <i>measurements</i> | Pointer to the channel measurements. |
| in | <i>context</i> | Pointer to the context. |

Detailed description

This callback can occur when a MAC contention triggers a new reservation time slot to be selected. It is relevant only to connections opened with [v2x_radio_tx_sps_sock_create_and_bind\(\)](#).

5.22.2.14 struct v2x_tx_flow_info_t

Advanced parameters that can be specified for Tx SPS and event-driven flows.

Data fields

| Type | Field | Description |
|--|------------------------|--|
| v2x_auto_retransmit_policy_t | retransmit_policy | V2X retransmit policy. |
| uint8_t | default_tx_power_valid | Indicates whether the default Tx power is specified. Supported values: <ul style="list-style-type: none"> • 0 – Default power is not specified • 1 – Default power is specified and is valid |
| int32_t | default_tx_power | Default power used for transmission. |
| uint8_t | mcs_index_valid | Indicates whether the MCS index is specified. Supported values: <ul style="list-style-type: none"> • 0 – Index is not specified • 1 – Index is specified and is valid |
| uint8_t | mcs_index | MCS index number |
| uint8_t | tx_pool_id_valid | Indicates whether the Tx pool ID is valid. Supported values: <ul style="list-style-type: none"> • 0 – ID is not specified • 1 – ID is specified and is valid |
| uint8_t | tx_pool_id | ID of the Tx pool. |
| uint8_t | is_unicast_valid | Indicates whether is_unicast is specified. Supported values: <ul style="list-style-type: none"> • 0 – Is unicast is not specified • 1 – Is unicast is specified and is valid |
| uint8_t | is_unicast | Non zero if requested flow is unicast. Note: Unicast flows ignore subscribed Service Ids |

5.22.2.15 struct v2x_sock_info_t

Parameters to identify a Tx or Rx socket.

Data fields

| Type | Field | Description |
|---------------------|--------------|---|
| int | sock | Pointer to the file descriptor for the socket. |
| struct sockaddr_in6 | sockaddr_in6 | IPv6 socket address. The sockaddr_in6 buffer is initialized with the IPv6 source address and source port that are used for the bind() function. |

5.22.2.16 struct v2x_sid_list_t

Parameters to identify a service ID list.

Data fields

| Type | Field | Description |
|----------|--|--|
| int | length | number of services IDs included in the array of sid. |
| uint32_t | sid[MAX_S↔ UBSCRIBE_↔ SIDS_LIST_↔ LEN] | array of service IDs. |

5.22.2.17 struct v2x_tx_sps_flow_info_t

Advanced parameters that can be specified for Tx SPS flows.

Data fields

| Type | Field | Description |
|---|-------------|--|
| v2x_tx_↔ bandwidth_↔ _reservation_t | reservation | Transmit reservation information. |
| v2x_tx_flow_↔ info_t | flow_info | Transmit resource information about the SPS Tx flow. |

5.22.2.18 struct socket_info_t

Parameters that can be specified for the creation of CV2X socket.

Data fields

| Type | Field | Description |
|----------|------------|--|
| uint32_t | service_id | V2X service ID bound to the CV2X socket. |
| uint16_t | local_port | Local port number of the CV2X socket used for binding. |

5.22.2.19 struct src_l2_filter_info_t

Contains remote UE source L2 ID that expecting to filter.

Data fields

| Type | Field | Description |
|----------|-------------|--|
| uint32_t | src_l2_id | < remote UE L2 addr to filter. Duration, in millisecc (resolution 100 msec). |
| uint32_t | duration_ms | /* Proximity service per packet priority (PPPP), packets with priority above this value will be dropped. Range 0-7, 0 mean all of the pkts will be dropped |
| uint8_t | pppp | |

5.22.2.20 struct v2x_rf_tx_info_t

Information of one or two Tx chains retrieved from RF per transport block.

Data fields

| Type | Field | Description |
|-----------------------------|--------|---|
| rf_status_t | status | The type of Tx chain status. |
| int32_t | power | Tx power of transmitted TB in dBm*10 format, invalid value is -700. |

5.22.2.21 struct v2x_tx_status_report_t

Information on Tx status of a V2X transport block that is reported from low layer. A V2X Tx packet might trigger multiple reports because of the segmentation and re-Tx in low layer. If a transport block is dropped in low layer, no report will be triggered for that transport block.

Used in [v2x_tx_status_report_listener](#)

Data fields

| Type | Field | Description |
|------------------------------------|--|--|
| v2x_rf_tx_info_t | rf_info[V2X_MAX_ANTE_NNAS_SUPPORTED] | RF information of one or two Tx chains. |
| uint8_t | num_rb | Number of resource blocks used for the transport block. |
| uint8_t | start_rb | Start resource block index used for the transport block. |
| uint8_t | mcs | Modulation and coding scheme used for the transport block that is defined in 3GPP TS 36.213. |
| uint8_t | seg_num | Total number of segments of a V2X packet. |
| v2x_segment_type_t | seg_type | Segment type of the transport block. |
| v2x_tx_type_t | tx_type | Indication of new Tx or re-Tx of the transport block. |
| uint16_t | ota_timing | OTA timing in format of system frame number*10 + subframe number. |
| uint16_t | port | Port number that can be used to link the report to a specific Tx flow which has the same source port number. |

5.22.3 Enumeration Type Documentation

5.22.3.1 enum v2x_concurrency_sel_t

Describes whether the radio chip modem should attempt or support concurrent 3GPP CV2X operation with a WWAN 4G/5G data call.

Some chips are only capable of operating on CV2X. In this case:

- The callers can only request V2X_WWAN_NONCONCURRENT.
- The interface parameters that are returned list [v2x_concurrency_sel_t](#) as the value for

V2X_WAN_NONCONCURRENT.

Enumerator

V2X_WWAN_NONCONCURRENT No simultaneous WWAN + CV2X on this interface.

V2X_WWAN_CONCURRENT Interface allows requests for concurrent support of WWAN + CV2X connections.

5.22.3.2 enum v2x_event_t

Event indications sent asynchronously from the radio via callbacks that indicate the state of the radio. The state can change in response to the loss of timing precision or a geofencing change.

Deprecated This enum type is deprecated, please consider use v2x_radio_status_ex_t instead.

Enumerator

V2X_INACTIVE V2X communication is disabled.

V2X_ACTIVE V2X communication is enabled. Transmit and receive are possible.

V2X_TX_SUSPENDED Small loss of timing precision occurred. Transmit is no longer supported.

V2X_RX_SUSPENDED Radio can no longer receive any messages.

V2X_TXRX_SUSPENDED Radio can no longer transmit or receive for some reason.

5.22.3.3 enum v2x_priority_et

Range of supported priority levels, where a lower number means a higher priority. For example, 8 is the current 3GPP standard.

Enumerator

V2X_PRIO_MOST_URGENT Highest priority.
V2X_PRIO_1
V2X_PRIO_2
V2X_PRIO_3
V2X_PRIO_4
V2X_PRIO_5
V2X_PRIO_6
V2X_PRIO_BACKGROUND Lowest priority.

5.22.3.4 enum v2x_service_status_t

Valid service availability states.

Enumerator

SERVICE_UNAVAILABLE
SERVICE_AVAILABLE
SERVICE_FAILED

5.22.3.5 enum v2x_radio_status_type_t

Defines possible values for CV2X radio RX/TX status.

Enumerator

V2X_RADIO_STATUS_INACTIVE RX/TX is inactive
V2X_RADIO_STATUS_ACTIVE RX/TX is active
V2X_RADIO_STATUS_SUSPENDED RX/TX is suspended
V2X_RADIO_STATUS_UNKNOWN RX/TX status unknown

5.22.3.6 enum v2x_radio_cause_type_t

Defines possible values for cause of CV2X radio failure.

Enumerator

V2X_RADIO_CAUSE_TIMING V2X timing is not valid
V2X_RADIO_CAUSE_CONFIG No valid V2X configuration
V2X_RADIO_CAUSE_UE_MODE V2X is not supported in current UE mode
V2X_RADIO_CAUSE_GEOPOLYGON V2X is not supported in current UE location
V2X_RADIO_CAUSE_THERMAL Device's temperature is high and is in thermal mitigation mode
V2X_RADIO_CAUSE_THERMAL_ECALL Device is in an emergency call and the device's temperature has crossed a threshold resulting in thermal mitigation
V2X_RADIO_CAUSE_GEOPOLYGON_SWITCH V2X stack is suspended due to geopolygon switch
V2X_RADIO_CAUSE_SENSING V2X stack is suspended due to sensing

V2X_RADIO_CAUSE_LPM V2X is not supported under Low Power Mode

V2X_RADIO_CAUSE_UNKNOWN Cause is unknown

5.22.3.7 enum v2x_auto_retransmit_policy_t

V2X Tx retransmission policies supported by the modem.

Enumerator

V2X_AUTO_RETRANSMIT_DISABLED Retransmit mode is disabled.

V2X_AUTO_RETRANSMIT_ENABLED Retransmit mode is enabled.

V2X_AUTO_RETRANSMIT_DONT_CARE Modem falls back to its default behavior.

5.22.3.8 enum traffic_ip_type_t

V2X Ip Types

Enumerator

TRAFFIC_IP Use Ip type traffic.

TRAFFIC_NON_IP Use Non-Ip type traffic.

5.22.3.9 enum rf_status_t

Fault detection of Tx chain that including PA and front end.

Enumerator

- INACTIVE** The Tx chain is not working.
- OPERATIONAL** The Tx chain is operational.
- FAULT** Fault detected on the Tx chain.

5.22.3.10 enum v2x_segment_type_t

Defines possible values for the segment type of a transport block.

Enumerator

- FIRST** V2X packet is segmented, it's the first transport block.
- LAST** V2X packet is segmented, it's the last transport block.
- MIDDLE** V2X packet is segmented, it's a transport block between first and last.
- ONLY_ONE** V2X packet is not segmented, it's the only one transport block.

5.22.3.11 enum v2x_tx_type_t

Defines new Tx or re-Tx type relevant to a transport block.

Enumerator

- V2X_NEW_TX** New Tx of the V2X transport block.
- V2X_RE_TX** Re-Tx of the V2X transport block.

5.22.4 Function Documentation

5.22.4.1 uint16_t v2x_convert_priority_to_traffic_class (v2x_priority_et priority)

Converts a traffic priority to one of the 255 IPv6 traffic class bytes that are used in the data plane to indicate per-packet priority on non-SPS (event driven) data ports.

Associated data types

[v2x_priority_et](#)

Parameters

| | | |
|----|-----------------|--|
| in | <i>priority</i> | Packet priority that is to be converted to an IPv6 traffic class. This priority is between the lowest and highest priority values returned in v2x_iface_capabilities_t . |
|----|-----------------|--|

Detailed description

This function is symmetric and is a reverse operation.

The traffic priority is one of the values between `min_priority_value` and `max_priority_value` returned in the [v2x_iface_capabilities_t](#) query.

Returns

IPv6 traffic class for achieving the calling input parameter priority level.

5.22.4.2 `v2x_priority_et v2x_convert_traffic_class_to_priority (uint16_t traffic_class)`

Maps an IPv6 traffic class to a V2X priority value.

Parameters

| | | |
|----|----------------------|---|
| in | <i>traffic_class</i> | IPv6 traffic classification that came in a packet from the radio. |
|----|----------------------|---|

Detailed description

This function is the inverse of the [v2x_convert_priority_to_traffic_class\(\)](#) function. It is symmetric and is a reverse operation.

Returns

Priority level (between highest and lowest priority values) equivalent to the input IPv6 traffic class parameter.

5.22.4.3 `v2x_api_ver_t v2x_radio_api_version ()`

Method used to query the platform SDK for its version number, build information, and build date.

Returns

[v2x_api_ver_t](#) – Contains the build date and API version number.

5.22.4.4 `v2x_status_enum_type v2x_radio_query_parameters (const char * iface_name, v2x_iface_capabilities_t * caps)`

Gets the capabilities of a specific Radio interface attached to the system.

Associated data types

[v2x_iface_capabilities_t](#)

Parameters

| | | |
|-----|-------------------|---|
| in | <i>iface_name</i> | Pointer to the Radio interface name. The Radio interface is one of the following: <ul style="list-style-type: none"> • An RmNet interface (HLOS) • The interface supplied for IP communication • The interface for non-IP communication (such as WSMP and Geonetworking). |
| out | <i>caps</i> | Pointer to the v2x_iface_capabilities_t structure, which contains the capabilities of this specific interface. |

Returns

[V2X_STATUS_SUCCESS](#) – The radio is ready for data-plane sockets to be created and bound.

Error code – If there is a problem (see [v2x_status_enum_type](#)).

5.22.4.5 `v2x_status_enum_type v2x_radio_deinit (v2x_radio_handle_t handle)`

De-initializes a specific Radio interface.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|----|---------------|---|
| in | <i>handle</i> | Handle to the Radio that was initialized. |
|----|---------------|---|

Returns

Indication of success or failure (see [v2x_status_enum_type](#)).

Dependencies

The interface must be pre-initialized with `v2x_radio_init()` or `v2x_radio_init_v2()`. The handle from that function must be used as the parameter in this function.

5.22.4.6 `int v2x_radio_rx_sock_create_and_bind (v2x_radio_handle_t handle, int * sock, struct sockaddr_in6 * rx_sockaddr)`

Opens a new V2X radio receive socket, and initializes the given sockaddr buffer. The socket is also bound as an AF_INET6 UDP type socket.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|-----|--------------------|--|
| in | <i>handle</i> | Identifies the initialized Radio interface. |
| out | <i>sock</i> | Pointer to the socket that, on success, returns the socket descriptor. The caller must release this socket with v2x_radio_sock_close() . |
| out | <i>rx_sockaddr</i> | Pointer to the IPv6 UDP socket. The sockaddr_in6 buffer is initialized with the IPv6 source address and source port that are used for the bind. |

Detailed description

You can execute any sockopts that are appropriate for this type of socket (AF_INET6).

The port number for the receive path is not exposed, but it is in the sockaddr_ll structure (if the caller is interested).

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

Dependencies

The interface must be pre-initialized with `v2x_radio_init()` or `v2x_radio_init_v2()`. The handle from that function must be used as the parameter in this function.

5.22.4.7 `int v2x_radio_rx_sock_create_and_bind_v2 (v2x_radio_handle_t handle, int id_ist_len, uint32_t * id_list, int * sock, struct sockaddr_in6 * rx_sockaddr)`

Opens a new V2X radio receive socket with specific service IDs for subscription, and initializes the given sockaddr buffer. The socket is also bound as an AF_INET6 UDP type socket.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|-----|--------------------|--|
| in | <i>handle</i> | Identifies the initialized Radio interface. |
| in | <i>id_ist_len</i> | Identifies the length of service ID list. |
| in | <i>id_list</i> | Pointer to the service ID list for subscription, subscribe wildcard if input nullptr. |
| out | <i>sock</i> | Pointer to the socket that, on success, returns the socket descriptor. The caller must release this socket with v2x_radio_sock_close() . |
| out | <i>rx_sockaddr</i> | Pointer to the IPv6 UDP socket. The sockaddr_in6 buffer is initialized with the IPv6 source address and source port that are used for the bind. |

Detailed description

You can execute any sockopts that are appropriate for this type of socket (AF_INET6).

This API can be used to subscribe wildcard, catchall port, or specific service IDs. The Rx port should be set with `v2x_set_rx_port()` before any subscription via this API, otherwise a default port number will be used.

Wildcard is used to receive all traffic. Only one port can be registered as wildcard port. Once wildcard is registered successfully, all received packets will be directed to wildcard port, and any subscription for specific service IDs or catchall port at other ports will be invalid. The parameter `id_list` of this API should be set to a null list for wildcard subscription.

Catchall port is used to receive packets with non-registered service IDs (via specific service IDs subscription). Only one port can be registered as catchall port. If catchall port is registered successfully, received packets with non-registered service ID will be directed to catchall port. All specific service IDs subscription (if any) should be performed before catchall port subscription. The parameter `id_list` of this API should include all non-registered service IDs for catchall port subscription.

Any port different from catchall port can be used to receive packets with specific service IDs. Only one port can be registered for a single service ID, a list of service IDs can be registered at a single port. To subscribe specific service IDs at a given Rx port, a Tx flow must be pre-setup with the Tx service ID set to any service ID included in the list of specific service IDs and the Tx source port set to the same port number as Rx port. The parameter `id_list` of this API should include all interested service IDs for the given Rx port.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

Dependencies

The interface must be pre-initialized with `v2x_radio_init()`. The handle from that function must be used as the parameter in this function. The Rx port must be pre-set with `v2x_set_rx_port()`, otherwise a default port number will be used. For any specific service ID subscription, a Tx flow must be pre-setup using one of the following methods:

- [v2x_radio_tx_sps_sock_create_and_bind\(\)](#)
- [v2x_radio_tx_sps_sock_create_and_bind_v2\(\)](#)
- [v2x_radio_tx_sps_only_create\(\)](#)
- [v2x_radio_tx_sps_only_create_v2\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind_v2\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind_v3\(\)](#)

5.22.4.8 `int v2x_radio_rx_sock_create_and_bind_v3 (v2x_radio_handle_t handle, uint16_t port_num, int id_ist_len, uint32_t * id_list, int * sock, struct sockaddr_in6 * rx_sockaddr)`

Opens a new V2X radio receive socket with specific service IDs for subscription and specific port number for the receive path, and initializes the given sockaddr buffer. The socket is also bound as an AF_INET6 UDP type socket.

This `v2x_radio_rx_sock_create_and_bind_v3()` method differs from `v2x_radio_rx_sock_create_and_bind_v2()` in that you can use the `port_num` parameter to specify the port number for the receive path.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|-----|--------------------|--|
| in | <i>handle</i> | Identifies the initialized Radio interface. |
| in | <i>port_num</i> | Identifies the port number for the receive path. |
| in | <i>id_ist_len</i> | Identifies the length of service ID list. |
| in | <i>id_list</i> | Pointer to the service ID list for subscription, subscribe wildcard if input nullptr. |
| out | <i>sock</i> | Pointer to the socket that, on success, returns the socket descriptor. The caller must release this socket with v2x_radio_sock_close() . |
| out | <i>rx_sockaddr</i> | Pointer to the IPv6 UDP socket. The <code>sockaddr_in6</code> buffer is initialized with the IPv6 source address and source port that are used for the bind. |

Detailed description

You can execute any sockets that are appropriate for this type of socket (AF_INET6).

This API can be used to subscribe wildcard, catchall port, or specific service IDs.

Wildcard is used to receive all traffic. Only one port can be registered as wildcard port. Once wildcard is registered successfully, all received packets will be directed to wildcard port, and any subscription for specific service IDs or catchall port at other ports will be invalid. The parameter `id_list` of this API should be set to a null list for wildcard subscription.

Catchall port is used to receive packets with non-registered service IDs (via specific service IDs subscription). Only one port can be registered as catchall port. If catchall port is registered successfully, received packets with non-registered service ID will be directed to catchall port. All specific service IDs subscription (if any) should be performed before catchall port subscription. The parameter `id_list` of this API should include all non-registered service IDs for catchall port subscription.

Any port different from catchall port can be used to receive packets with specific service IDs. Only one port can be registered for a single service ID, a list of service IDs can be registered at a single port. To subscribe specific service IDs at a given Rx port, a Tx flow must be pre-setup with the Tx service ID set to any service ID included in the list of specific service IDs and the Tx source port set to the same

port number as Rx port. The parameter `id_list` of this API should include all interested service IDs for the given Rx port.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

Dependencies

The interface must be pre-initialized with `v2x_radio_init()`. The handle from that function must be used as the parameter in this function. For any specific service ID subscription, a Tx flow must be pre-setup using one of the following methods:

- [v2x_radio_tx_sps_sock_create_and_bind\(\)](#)
- [v2x_radio_tx_sps_sock_create_and_bind_v2\(\)](#)
- [v2x_radio_tx_sps_only_create\(\)](#)
- [v2x_radio_tx_sps_only_create_v2\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind_v2\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind_v3\(\)](#)

5.22.4.9 int v2x_radio_enable_rx_meta_data (v2x_radio_handle_t handle, bool enable, int id_list_len, uint32_t * id_list)

Enable or disable the meta data report for the packets corresponding to the service IDs.

If enabled, the meta data report would be generated in addition to the actual OTA payload packet, and it comes from the same data interface as the OTA packet itself, it consist of RF RSSI (received signal strength indicator) status, 32-bit SCI Format 1 (3GPP TS 36.213, section 14.1), packet delay estimation, L2 destination ID, and the resource blocks used for the packet's transmission: subframe, subchannel index.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|----|--------------------|--|
| in | <i>handle</i> | Identifies the initialized Radio interface. |
| in | <i>enable</i> | enable or disable the meta data |
| in | <i>id_list_len</i> | number of the service IDs provided in the <i>id_list</i> |
| in | <i>id_list</i> | Pointer to the Rx service ID list |

Detailed description

This function extracts the received packet's meta data from the payload, currently only NON-IP packets can have the meta data reported, it is not supported yet for IP packets.

If the meta data report is enabled for certain services, call [v2x_parse_rx_meta_data](#) to extract the meta data by providing a pointer to a object of type [rx_packet_meta_data_t](#), and the real payload.

Returns

0 – On success.

5.22.4.10 int v2x_radio_sock_create_and_bind (v2x_radio_handle_t handle, v2x_tx_sps_flow_info_t * tx_flow_info, v2x_per_sps_reservation_calls_t * calls, int tx_sps_portnum, int tx_event_portnum, int rx_portnum, v2x_sid_list_t * rx_id_list, v2x_sock_info_t * tx_sps_sock, v2x_sock_info_t * tx_event_sock, v2x_sock_info_t * rx_sock)

Creates Tx SPS socket, Tx Event socket and Rx socket with specified parameters. The socket is also bound as an AF_INET6 UDP type socket.

This [v2x_radio_sock_create_and_bind\(\)](#) method is the combination of function [v2x_radio_tx_sps_sock_create_and_bind_v2\(\)](#)/[v2x_radio_tx_event_sock_create_and_bind_v2](#) in the transmit direction and function [v2x_radio_rx_sock_create_and_bind_v3\(\)](#) in the receiving direction.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|-----|-------------------------|---|
| in | <i>handle</i> | Identifies the initialized Radio interface. |
| in | <i>tx_flow_info</i> | Pointer to the Tx SPS or event flow information. To create event flow, set reservation.v2xid and flow_info in this structure. |
| in | <i>calls</i> | Pointer to reservation callbacks or listeners. This parameter is called when underlying radio MAC parameters change related to the SPS bandwidth contract. For example, the callback after a reservation change, or if the timing offset of the SPS adjusts itself in response to traffic. This parameter passes NULL if no callbacks are required. |
| in | <i>tx_sps_portnum</i> | Requested Tx source port number for SPS transmissions, or -1 for no Tx sps flow. |
| in | <i>tx_event_portnum</i> | Requested Tx source port number for event transmissions, or -1 for no Tx event flow. |
| in | <i>rx_portnum</i> | Requested Rx destination port number, or -1 for no Rx subscription. |
| in | <i>rx_id_list</i> | Pointer to the Rx service ID list for subscription, subscribe wildcard if input nullptr. |
| out | <i>tx_sps_sock</i> | Pointer to the Tx sps socket that, on success, returns the socket descriptor and the IPv6 socket address. The caller must release this socket with v2x_radio_sock_close() . |
| out | <i>tx_event_sock</i> | Pointer to the Tx event socket that, on success, returns the socket descriptor and the IPv6 socket address. The caller must release this socket with v2x_radio_sock_close() . |
| out | <i>rx_sock</i> | Pointer to the Rx socket that, on success, returns the socket descriptor and the IPv6 socket address. The caller must release this socket with v2x_radio_sock_close() . |

Detailed description

You can execute any sockopts that are appropriate for this type of socket (AF_INET6).

This API can be used for the registration of both Tx and Rx. It sets up sockets on the requested port numbers. A negative port number corresponds to no actions for Tx or Rx.

Wildcard is used to receive all traffic. Only one port can be registered as wildcard port. Once wildcard is registered successfully, all received packets will be directed to wildcard port, and any subscription for specific service IDs or catchall port at other ports will be invalid. The parameter *rx_id_list* of this API should be set to a null list for wildcard subscription.

Catchall port is used to receive packets with non-registered service IDs (via specific service IDs subscription). Only one port can be registered as catchall port. If catchall port is registered successfully, received packets with non-registered service ID will be directed to catchall port. All specific service IDs subscription (if any) should be performed before catchall port subscription. The parameter *rx_id_list* of this API should include all non-registered service IDs for catchall port subscription.

Any port different from catchall port can be used to receive packets with specific service IDs. Only one port can be registered for a single service ID, a list of service IDs can be registered at a single port. To subscribe specific service IDs at a given Rx port, a Tx flow should also be set up using this API. The parameter *rx_id_list* should include all interested service IDs for the given Rx port, the parameter

tx_flow_info.reservation.v2xid should be set to one of the service ID included in rx_id_list, the parameter tx_sps_portnum or tx_event_portnum should be set to the same port number as rx_portnum.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check errno.h.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

Dependencies

The interface must be pre-initialized with v2x_radio_init(). The handle from that function must be used as the parameter in this function.

5.22.4.11 `int v2x_radio_tx_sps_sock_create_and_bind (v2x_radio_handle_t handle, v2x_tx_bandwidth_reservation_t * res, v2x_per_sps_reservation_calls_t * calls, int sps_portnum, int event_portnum, int * sps_sock, struct sockaddr_in6 * sps_sockaddr, int * event_sock, struct sockaddr_in6 * event_sockaddr)`

Creates and binds a socket with a bandwidth-reserved (SPS) Tx flow with the requested ID, priority, periodicity, and size on a specified source port number. The socket is created as an IPv6 UDP socket.

Associated data types

[v2x_radio_handle_t](#)
[v2x_tx_bandwidth_reservation_t](#)
[v2x_per_sps_reservation_calls_t](#)

Parameters

| | | |
|-----|-----------------------|---|
| in | <i>handle</i> | Identifies the initialized Radio interface on which this data connection is made. |
| in | <i>res</i> | Pointer to the parameter structure (how often the structure is sent, how many bytes are reserved, and so on). |
| in | <i>calls</i> | Pointer to reservation callbacks or listeners. This parameter is called when underlying radio MAC parameters change related to the SPS bandwidth contract. For example, the callback after a reservation change, or if the timing offset of the SPS adjusts itself in response to traffic. This parameter passes NULL if no callbacks are required. |
| in | <i>sps_portnum</i> | Requested source port number for the bandwidth reserved SPS transmissions. |
| in | <i>event_portnum</i> | Requested source port number for the bandwidth reserved event transmissions, or -1 for no event port. |
| out | <i>sps_sock</i> | Pointer to the socket that is bound to the requested port for Tx with reserved bandwidth. |
| out | <i>sps_sockaddr</i> | Pointer to the IPv6 UDP socket. The sockaddr_in6 buffer is initialized with the IPv6 source address and source port that are used for the bind() function. The caller can then use the buffer for subsequent sendto() function calls. |
| out | <i>event_sock</i> | Pointer to the socket that is bound to the event-driven transmission port. |
| out | <i>event_sockaddr</i> | Pointer to the IPV6 UDP socket. The sockaddr_in6 buffer is initialized with the IPv6 source address and source port that are used for the bind() function. The caller can then use the buffer for subsequent sendto() function calls. |

Detailed description

The radio attempts to reserve the flow with the specified size and rate passed in the request parameters.

This function is used only for Tx. It sets up two UDP sockets on the requested two HLOS port numbers.

For only a single SPS flow, indicate the event port number by using a negative number or NULL for the event_sockaddr. For a single event-driven port, use [v2x_radio_tx_event_sock_create_and_bind\(\)](#) instead.

Because the modem endpoint requires a specific global address, all data sent on these sockets must have a configurable IPv6 destination address for the non-IP traffic.

The Priority parameter of the SPS reservation is used only for the reserved Tx bandwidth (SPS) flow. The non-SPS/event-driven data sent to the event_portnum parameter is prioritized on the air, based on the IPv6 Traffic Class of the packet.

The caller is expected to identify two unused local port numbers to use for binding: one for the event-driven flow and one for the SPS flow.

This call is a blocking call. When it returns, the sockets are ready to use, assuming there is no error.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check errno.h.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

Dependencies

The interface must be pre-initialized with [v2x_radio_init\(\)](#) or [v2x_radio_init_v2\(\)](#). The handle from that function must be used as the parameter in this function.

5.22.4.12 `int v2x_radio_tx_sps_only_create (v2x_radio_handle_t handle, v2x_tx_↔ bandwidth_reservation_t * res, v2x_per_sps_reservation_calls_t * calls, int sps_portnum, int * sps_sock, struct sockaddr_in6 * sps_sockaddr)`

Creates a socket with a bandwidth-reserved (SPS) Tx flow.

Only SPS transmissions are to be implemented for the socket, which is created as an IPv6 UDP socket.

Associated data types

[v2x_radio_handle_t](#)
[v2x_tx_bandwidth_reservation_t](#)
[v2x_per_sps_reservation_calls_t](#)

Parameters

| | | |
|-----|---------------------|---|
| in | <i>handle</i> | Identifies the initialized Radio interface on which this data connection is made. |
| in | <i>res</i> | Pointer to the parameter structure (how often the structure is sent, how many bytes are reserved, and so on). |
| in | <i>calls</i> | Pointer to reservation callbacks or listeners. This parameter is called when underlying radio MAC parameters change related to the SPS bandwidth contract. For example, the callback after a reservation change, or if the timing offset of the SPS adjusts itself in response to traffic. This parameter passes NULL if no callbacks are required. |
| in | <i>sps_portnum</i> | Requested source port number for the bandwidth reserved SPS transmissions. |
| out | <i>sps_sock</i> | Pointer to the socket that is bound to the requested port for Tx with reserved bandwidth. |
| out | <i>sps_sockaddr</i> | Pointer to the IPv6 UDP socket. The <code>sockaddr_in6</code> buffer is initialized with the IPv6 source address and source port that are used for the <code>bind()</code> function. The caller can then use the buffer for subsequent <code>sendto()</code> function calls. |

Detailed description

The radio attempts to reserve the flow with the specified size and rate passed in the request parameters.

This function is used only for Tx. It sets up a UDP socket on the requested HLOS port number.

Because the modem endpoint requires a specific global address, all data sent on the socket must have a configurable IPv6 destination address for the non-IP traffic.

The Priority parameter of the SPS reservation is used only for the reserved Tx bandwidth (SPS) flow.

The caller is expected to identify an unused local port number for the SPS flow.

This call is a blocking call. When it returns, the socket is ready to use, assuming there is no error.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EINVAL – On failure to find the interface or get bad parameters.

Dependencies

The interface must be pre-initialized with `v2x_radio_init()` or `v2x_radio_init_v2()`. The handle from that function must be used as the parameter in this function.

5.22.4.13 `v2x_status_enum_type v2x_radio_tx_reservation_change (int * sps_sock, v2x_tx_bandwidth_reservation_t * updated_reservation)`

Adjusts the reservation for transmit bandwidth.

Associated data types

[v2x_tx_bandwidth_reservation_t](#)

Parameters

| | | |
|-----|----------------------------|--|
| out | <i>sps_sock</i> | Pointer to the socket bound to the requested port. |
| in | <i>updated_reservation</i> | Pointer to a bandwidth reservation with new reservation information. |

Detailed description

This function will not update reservation priority. Can be used as follows:

- When the bandwidth requirement changes in periodicity (for example, due to an application layer DCC algorithm)
- Because the packet size is increasing (for example, due to a growing path history size in a BSM).

When the reservation change is complete, a callback to the structure is passed in a `v2x_radio_init()` or `v2x_radio_init_v2()` call.

Returns

`V2X_STATUS_SUCCESS`.

Error code – If there is a problem (see [v2x_status_enum_type](#)).

Dependencies

An SPS flow must have been successfully initialized with the `v2x_radio_tx_sps_sock_create_and_bind()`.

5.22.4.14 `int v2x_radio_tx_event_sock_create_and_bind (const char * interface, int v2x_id, int event_portnum, struct sockaddr_in6 * event_sock_addr, int * sock)`

Opens and binds an event-driven socket (one with no bandwidth reservation). The socket is bound as an AF_INET6 UDP type socket.

Parameters

| | | |
|-----|------------------------|---|
| in | <i>interface</i> | Pointer to the operating system name to use. This interface is an RmNet interface (HLOS). |
| in | <i>v2x_id</i> | Used for transmissions that are ultimately mapped to an L2 destination address. |
| in | <i>event_portnum</i> | Local port number to which the socket is bound. Used for transmissions of this ID. |
| out | <i>event_sock_addr</i> | Pointer to the sockaddr_ll structure buffer to be initialized. |
| out | <i>sock</i> | Pointer to the file descriptor. Loaded when the function is successful. |

Detailed description

This function is used only for Tx when no periodicity is available for the application type. If you know your transmit data periodicity, use [v2x_radio_tx_sps_sock_create_and_bind\(\)](#) instead.

These event-driven sockets pay attention to QoS parameters in the IP socket.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

5.22.4.15 `v2x_status_enum_type v2x_radio_start_measurements (v2x_radio_↔ _handle_t handle, v2x_chan_meas_params_t * measure_this_way)`

Requests a channel utilization (CBP/CBR) measurement result on a channel.

Associated data types

[v2x_radio_handle_t](#)

[v2x_chan_meas_params_t](#)

Parameters

| | | |
|----|-------------------------|--|
| in | <i>handle</i> | Handle to the port. |
| in | <i>measure_this_way</i> | Indicates how and what to measure, and how often to send results. Some higher-level standards (like J2945/1 and ETSI TS102687 DCC) have specific time windows and items to measure. |

Detailed description

This function uses the callbacks passed in during initialization to deliver the measurements. Measurement callbacks continue until the Radio interface is closed.

Returns

[V2X_STATUS_SUCCESS](#) – The radio is now ready for data-plane sockets to be created and bound.

[V2X_STATUS_FAIL](#) – CBR measurement is not supported yet.

Dependencies

The interface must be pre-initialized with `v2x_radio_init()` or `v2x_radio_init_v2()`. The handle from that function must be used as the parameter in this function.

5.22.4.16 `v2x_status_enum_type v2x_radio_stop_measurements (v2x_radio_handle_t handle)`

Discontinues any periodic MAC/Phy channel measurements and the reporting of them via listener calls.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|----|---------------|---|
| in | <i>handle</i> | Handle to the radio measurements to be stopped. |
|----|---------------|---|

Returns

[V2X_STATUS_SUCCESS](#).

Dependencies

The measurements must have been started with [v2x_radio_start_measurements\(\)](#).

5.22.4.17 int v2x_radio_sock_close (int * sock_fd)

Closes a specified socket file descriptor and deregisters any modem resources associated with it (such as reserved SPS bandwidth contracts).

Parameters

| | | |
|----|----------------|-------------------------|
| in | <i>sock_fd</i> | Socket file descriptor. |
|----|----------------|-------------------------|

Detailed description

This function works on receive, SPS, or event-driven sockets.

The socket file descriptor must be closed when the client exits. We recommend using a trap to catch controlled shutdowns.

Returns

Integer value of the close(sock) operation.

Dependencies

The socket must have been opened with one of the following methods:

- [v2x_radio_rx_sock_create_and_bind\(\)](#)
- [v2x_radio_tx_sps_sock_create_and_bind\(\)](#)
- [v2x_radio_tx_sps_sock_create_and_bind_v2\(\)](#)
- [v2x_radio_tx_sps_only_create\(\)](#)
- [v2x_radio_tx_sps_only_create_v2\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind_v2\(\)](#)
- [v2x_radio_tx_event_sock_create_and_bind_v3\(\)](#)

5.22.4.18 void v2x_radio_set_log_level (int *new_level*, int *use_syslog*)

Configures the V2X log level and destination for SDK and lower layers.

Parameters

| | | |
|----|-------------------|---|
| in | <i>new_level</i> | Log level to set to one of the standard syslog levels (LOG_ERR, LOG_INFO, and so on). |
| in | <i>use_syslog</i> | Destination: send to stdout (0) or syslog (otherwise). |

Returns

None.

5.22.4.19 v2x_event_t cv2x_status_poll (uint64_t * *status_age_useconds*)

Polls for the recent V2X status.

Parameters

| | | |
|-----|----------------------------|---|
| out | <i>status_age_useconds</i> | Pointer to the age in microseconds of the last event (radio status) that is being reported. |
|-----|----------------------------|---|

Detailed description

This function does not generate any modem control traffic. For efficiency, it simply returns the most recently cached value that was reported from the modem (often reported at a high rate or frequent rate from the modem).

Returns

Indication of success or failure (see [v2x_status_enum_type](#)).

5.22.4.20 int v2x_radio_trigger_l2_update (v2x_radio_handle_t *handle*)

Triggers the modem to change its source L2 address by randomly generating a new address.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|----|---------------|--|
| in | <i>handle</i> | Initialized Radio interface on which this data connection is made. |
|----|---------------|--|

Detailed description

When the change is complete, clients are notified of the new L2 address via the [v2x_radio_calls_t::v2x_radio_l2_addr_changed_listener\(\)](#) callback function.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check errno.h.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

5.22.4.21 `int v2x_radio_update_trusted_ue_list (unsigned int malicious_list_len, unsigned int malicious_list[MAX_MALICIOUS_IDS_LIST_LEN], unsigned int trusted_list_len, trusted_ue_info_t trusted_list[MAX_TRUSTED_IDS_LIST_LEN])`

Updates the list of malicious and trusted IDs tracked by the modem.

Associated data types

[trusted_ue_info_t](#)

Parameters

| | | |
|----|---------------------------|--|
| in | <i>malicious_list_len</i> | Number of malicious IDs in <i>malicious_list</i> . |
| in | <i>malicious_list</i> | List of malicious IDs. |
| in | <i>trusted_list_len</i> | Number of trusted IDs in <i>trusted_list</i> . |
| in | <i>trusted_list</i> | List of trusted IDs. |

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

5.22.4.22 `int v2x_radio_tx_sps_sock_create_and_bind_v2 (v2x_radio_handle_t handle, v2x_tx_sps_flow_info_t * sps_flow_info, v2x_per_sps_reservation_calls_t * calls, int sps_portnum, int event_portnum, int * sps_sock, struct sockaddr_in6 * sps_sockaddr, int * event_sock, struct sockaddr_in6 * event_sockaddr)`

Creates and binds a socket with a bandwidth-reserved (SPS) Tx flow with the requested ID, priority, periodicity, and size on a specified source port number. The socket is created as an IPv6 UDP socket.

This `v2x_radio_tx_sps_sock_create_and_bind_v2()` method differs from `v2x_radio_tx_sps_sock_create_and_bind()` in that you can use the `sps_flow_info` parameter to specify transmission resource information about the Tx flow.

Associated data types

[v2x_radio_handle_t](#)
[v2x_tx_sps_flow_info_t](#)
[v2x_per_sps_reservation_calls_t](#)

Parameters

| | | |
|-----|-----------------------|---|
| in | <i>handle</i> | Identifies the initialized Radio interface on which this data connection is made. |
| in | <i>sps_flow_info</i> | Pointer to the flow information in the v2x_tx_sps_flow_info_t structure. |
| in | <i>calls</i> | Pointer to reservation callbacks or listeners. This parameter is called when underlying radio MAC parameters change related to the SPS bandwidth contract. For example, the callback after a reservation change, or if the timing offset of the SPS adjusts itself in response to traffic. This parameter passes NULL if no callbacks are required. |
| in | <i>sps_portnum</i> | Requested source port number for the bandwidth reserved SPS transmissions. |
| in | <i>event_portnum</i> | Requested source port number for the bandwidth reserved event transmissions, or -1 for no event port. |
| out | <i>sps_sock</i> | Pointer to the socket that is bound to the requested port for Tx with reserved bandwidth. |
| out | <i>sps_sockaddr</i> | Pointer to the IPv6 UDP socket. The <code>sockaddr_in6</code> buffer is initialized with the IPv6 source address and source port that are used for the <code>bind()</code> function. The caller can then use the buffer for subsequent <code>sendto()</code> function calls. |
| out | <i>event_sock</i> | Pointer to the socket that is bound to the event-driven transmission port. |
| out | <i>event_sockaddr</i> | Pointer to the IPV6 UDP socket. The <code>sockaddr_in6</code> buffer is initialized with the IPv6 source address and source port that are used for the <code>bind()</code> function. The caller can then use the buffer for subsequent <code>sendto()</code> function calls. |

Detailed description

The radio attempts to reserve the flow with the specified size and rate passed in the request parameters.

This function is used only for Tx. It sets up two UDP sockets on the requested two HLOS port numbers.

For only a single SPS flow, indicate the event port number by using a negative number or NULL for the event_sockaddr. For a single event-driven port, use [v2x_radio_tx_event_sock_create_and_bind\(\)](#) or [v2x_radio_tx_event_sock_create_and_bind_v2\(\)](#) or [v2x_radio_tx_event_sock_create_and_bind_v3\(\)](#) instead.

Because the modem endpoint requires a specific global address, all data sent on these sockets must have a configurable IPv6 destination address for the non-IP traffic.

The Priority parameter of the SPS reservation is used only for the reserved Tx bandwidth (SPS) flow. The non-SPS/event-driven data sent to the event_portnum parameter is prioritized on the air, based on the IPv6 Traffic Class of the packet.

The caller is expected to identify two unused local port numbers to use for binding: one for the event-driven flow and one for the SPS flow.

This call is a blocking call. When it returns, the sockets are ready to use, assuming there is no error.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check errno.h.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

Dependencies

The interface must be pre-initialized with [v2x_radio_init\(\)](#) or [v2x_radio_init_v2\(\)](#). The handle from that function must be used as the parameter in this function.

5.22.4.23 `int v2x_radio_tx_sps_only_create_v2 (v2x_radio_handle_t handle, v2x_tx_sps_flow_info_t * sps_flow_info, v2x_per_sps_reservation_calls_t * calls, int sps_portnum, int * sps_sock, struct sockaddr_in6 * sps_sockaddr)`

Creates a socket with a bandwidth-reserved (SPS) Tx flow.

Only SPS transmissions are to be implemented for the socket, which is created as an IPv6 UDP socket.

This `v2x_radio_tx_sps_only_create_v2()` method differs from `v2x_radio_tx_sps_only_create()` in that you can use the `sps_flow_info` parameter to specify transmission resource information about the Tx flow.

Associated data types

[v2x_radio_handle_t](#)
[v2x_tx_sps_flow_info_t](#)
[v2x_per_sps_reservation_calls_t](#)

Parameters

| | | |
|-----|----------------------|---|
| in | <i>handle</i> | Identifies the initialized Radio interface on which this data connection is made. |
| in | <i>sps_flow_info</i> | Pointer to the flow information in the v2x_tx_sps_flow_info_t structure. |
| in | <i>calls</i> | Pointer to reservation callbacks or listeners. This parameter is called when underlying radio MAC parameters change related to the SPS bandwidth contract. For example, the callback after a reservation change, or if the timing offset of the SPS adjusts itself in response to traffic. This parameter passes NULL if no callbacks are required. |
| in | <i>sps_portnum</i> | Requested source port number for the bandwidth reserved SPS transmissions. |
| out | <i>sps_sock</i> | Pointer to the socket that is bound to the requested port for Tx with reserved bandwidth. |
| out | <i>sps_sockaddr</i> | Pointer to the IPv6 UDP socket. The <code>sockaddr_in6</code> buffer is initialized with the IPv6 source address and source port that are used for the <code>bind()</code> function. The caller can then use the buffer for subsequent <code>sendto()</code> function calls. |

Detailed description

The radio attempts to reserve the flow with the specified size and rate passed in the request parameters.

This function is used only for Tx. It sets up a UDP socket on the requested HLOS port number. Because the modem endpoint requires a specific global address, all data sent on the socket must have a configurable IPv6 destination address for the non-IP traffic.

The caller is expected to identify an unused local port number to use for binding the SPS flow.

This call is a blocking call. When it returns, the socket is ready to use, assuming there is no error.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EINVAL – On failure to find the interface or get bad parameters.

Dependencies

The interface must be pre-initialized with `v2x_radio_init()` or `v2x_radio_init_v2()`. The handle from that function must be used as the parameter in this function.

5.22.4.24 `v2x_status_enum_type v2x_radio_tx_reservation_change_v2 (int * sps_sock, v2x_tx_sps_flow_info_t * updated_flow_info)`

Adjusts the reservation for transmit bandwidth.

This `v2x_radio_tx_reservation_change_v2()` method differs from `v2x_radio_tx_reservation_change()` in that you can use the `updated_flow_info` parameter to specify transmission resource information about the Tx flow.

Associated data types

[v2x_tx_sps_flow_info_t](#)

Parameters

| | | |
|-----|--------------------------------|--|
| out | <code>sps_sock</code> | Pointer to the socket bound to the requested port. |
| in | <code>updated_flow_info</code> | Pointer to the new reservation information. |

Detailed description

This function will not update reservation priority. Can be used as follows:

- When the bandwidth requirement changes in periodicity (for example, due to an application layer DCC algorithm)
- Because the packet size is increasing (for example, due to a growing path history size in a BSM).

When the reservation change is complete, a callback to the structure is passed in a `v2x_radio_init()` or `v2x_radio_init_v2()` call.

Returns

`V2X_STATUS_SUCCESS`.

Error code – On failure (see [v2x_status_enum_type](#)).

Dependencies

An SPS flow must have been successfully initialized with `v2x_radio_tx_sps_sock_create_and_bind()` or `v2x_radio_tx_sps_sock_create_and_bind_v2()`.

5.22.4.25 `v2x_status_enum_type v2x_radio_tx_event_flow_info_change (int * sock, v2x_tx_flow_info_t * updated_flow_info)`

Adjusts the flow parameters for an existing Tx event socket.

Associated data types

[v2x_tx_flow_info_t](#)

Parameters

| | | |
|-----|--------------------------|--|
| out | <i>sock</i> | Pointer to the socket bound to the requested port. |
| in | <i>updated_flow_info</i> | Pointer to the new flow parameters. |

Detailed description

When the reservation change is complete, a callback to the structure is passed in a `v2x_radio_init()` or `v2x_radio_init_v2()` call.

This call is a blocking call. When it returns, the socket is ready to be use, assuming there is no error.

Returns

`V2X_STATUS_SUCCESS`.

Error code – On failure (see `v2x_status_enum_type`).

Dependencies

An event flow must have been successfully initialized with `v2x_radio_tx_event_sock_create_and_bind()` or `v2x_radio_tx_event_sock_create_and_bind_v2()` or `v2x_radio_tx_event_sock_create_and_bind_v3()`.

5.22.4.26 `v2x_status_enum_type start_v2x_mode ()`

Starts V2X mode.

The V2X radio status must be `INACTIVE`. If the status is `ACTIVE` or `SUSPENDED` (see `v2x_event_t`), call `stop_v2x_mode()` first.

This call is a blocking call. When it returns, V2X mode has been started, assuming there is no error.

Returns

`V2X_STATUS_SUCCESS`.

Otherwise:

- `V2X_STATUS_EALREADY` – Failure because V2X mode is already started.
- `V2X_STATUS_FAIL` – Other failure.

Dependencies

V2X radio status must be `V2X_INACTIVE` (`v2x_event_t`).

5.22.4.27 `v2x_status_enum_type stop_v2x_mode ()`

Stops V2X mode.

The V2X radio status must be `ACTIVE` or `SUSPENDED` (see `v2x_event_t`). If the status is `INACTIVE`, call `start_v2x_mode()` first.

This call is a blocking call. When it returns, V2X mode has been stopped, assuming there is no error.

Returns

`V2X_STATUS_SUCCESS`.

Otherwise:

- `V2X_STATUS_EALREADY` – Failure because V2X mode is already stopped.
- `V2X_STATUS_FAIL` – Other failure.

Dependencies

V2X radio status must be `V2X_ACTIVE`, `V2X_TX_SUSPENDED`, `V2X_RX_SUSPENDED`, or `V2X_TXRX_SUSPENDED`.

5.22.4.28 v2x_radio_handle_t v2x_radio_init_v2 (traffic_ip_type_t ip_type, v2x_concurrency_sel_t mode, v2x_radio_calls_t * callbacks_p, void * ctx_p)

Deprecated This API has been deprecated. Please use v2x_radio_init_v3() instead.

Initializes the Radio interface and sets the callback that will be used when events in the radio change (including when radio initialization is complete).

Associated data types

[traffic_ip_type_t](#)
[v2x_concurrency_sel_t](#)
[v2x_radio_calls_t](#)

Parameters

| | | |
|----|------------------|---|
| in | <i>ip_type</i> | The Ip or non-IP interface. |
| in | <i>mode</i> | WAN concurrency mode, although the radio might not support concurrency. Errors can be generated. |
| in | <i>callbacks</i> | Pointer to the v2x_radio_calls_t structure that is prepopulated with function pointers used during radio events (such as loss of time synchronization or accuracy) for subscribers. This parameter also points to a callback for this initialization function. |
| in | <i>context</i> | Voluntary pointer to the first parameter on the callback. |

Detailed description

This function call is a nonblocking, and it is a control plane action.

Use [v2x_radio_deinit\(\)](#) when radio operations are complete.

Currently, the channel and transmit power are not specified. They are specified with a subsequent call to [v2x_radio_calls_t::v2x_radio_init_complete\(\)](#) when initialization is complete.

Returns

Handle to the specified initialized radio. The handle is used for reconfiguring, opening or changing, and closing reservations.

V2X_RADIO_HANDLE_BAD – If there is an error. No initialization callback is made.

5.22.4.29 `int v2x_radio_init_v3 (v2x_concurrency_sel_t mode, v2x_radio_calls_t * callbacks_p, void * ctx_p, v2x_radio_handle_t * ip_handle_p, v2x_radio_handle_t * non_ip_handle_p)`

Initializes Cv2x radio and sets the callback that will be used when events in the radio change (including when radio initialization is complete). The callers can get the handles of Cv2x IP and non-IP interface on success. The handle of interface is used for reconfiguring, opening or changing, and closing reservations.

Associated data types

[v2x_concurrency_sel_t](#)

[v2x_radio_calls_t](#)

Parameters

| | | |
|-----|------------------------|---|
| in | <i>mode</i> | WAN concurrency mode, although the radio might not support concurrency. Errors can be generated. |
| in | <i>callbacks</i> | Pointer to the v2x_radio_calls_t structure that is prepopulated with function pointers used during radio events (such as loss of time synchronization or accuracy) for subscribers. This parameter also points to a callback for this initialization function. |
| in | <i>context</i> | Voluntary pointer to the first parameter on the callback. |
| out | <i>ip_handle_p</i> | Pointer to the handle of IP interface. Pass nullptr if IP interface is not used. |
| out | <i>non_ip_handle_p</i> | Pointer to the handle of non-IP interface. Pass nullptr if non-IP interface is not used. |

Detailed description

This function call is a nonblocking, and it is a control plane action.

Use [v2x_radio_deinit\(\)](#) with either IP or non-IP handle when radio operations are complete.

Currently, the channel and transmit power are not specified. They are specified with a subsequent call to [v2x_radio_calls_t::v2x_radio_init_complete\(\)](#) when initialization is complete.

Returns

0 – On success.

Otherwise:

- EINVAL – Invalid input parameters.
- EPERM – Radio initialization failed.

5.22.4.30 `int v2x_radio_tx_event_sock_create_and_bind_v3 (traffic_ip_type_t ip_type, int v2x_id, int event_portnum, v2x_tx_flow_info_t * event_flow_info, struct sockaddr_in6 * event_sockaddr, int * sock)`

Opens and binds an event-driven socket (one with no bandwidth reservation). The socket is bound as an AF_INET6 UDP type socket.

This `v2x_radio_tx_event_sock_create_and_bind_v3()` method differs from `v2x_radio_tx_event_sock_create_and_bind_v2()` in that you can use the `traffic_ip_type_t` parameter to specify traffic ip type instead of requiring the interface name.

Associated data types

[v2x_tx_flow_info_t](#) [traffic_ip_type_t](#)

Parameters

| | | |
|-----|------------------------|--|
| in | <i>ip_type</i> | traffice_ip_type. |
| in | <i>v2x_id</i> | Used for transmissions that are ultimately mapped to an L2 destination address. |
| in | <i>event_portnum</i> | Local port number to which the socket is bound. Used for transmissions of this ID. |
| in | <i>event_flow_info</i> | Pointer to the event flow parameters. |
| out | <i>event_sock_addr</i> | Pointer to the <code>sockaddr_ll</code> structure buffer to be initialized. |
| out | <i>sock</i> | Pointer to the file descriptor. Loaded when the function is successful. |

Detailed description

This function is used only for Tx when no periodicity is available for the application type. If you know your transmit data periodicity, use `v2x_radio_tx_sps_sock_create_and_bind()` or `v2x_radio_tx_sps_sock_create_and_bind_v2()` instead.

These event-driven sockets pay attention to QoS parameters in the IP socket.

Returns

0 – On success.

Otherwise:

- EPERM – Socket creation failed; for more details, check `errno.h`.
- EAFNOSUPPORT – On failure to find the interface.
- EACCES – On failure to get the MAC address of the device.

5.22.4.31 v2x_status_enum_type get_iface_name (traffic_ip_type_t *ip_type*, char * *iface_name*, size_t *buffer_len*)

Returns interface name set during radio initialization.

Associated data types

traffic_ip_type_t

Parameters

| | | |
|-----|-------------------|---|
| in | <i>ip_type</i> | traffic_ip_type_t |
| out | <i>iface_name</i> | pointer to buffer for interface name |
| in | <i>buffer_len</i> | length of the buffer passed for interface name. Must be at least the max buffer size for an interface name (IFNAMSIZE). |

Detailed description

This function should only be called after successfully initializing a radio.

Returns

[V2X_STATUS_SUCCESS](#).

[V2X_STATUS_FAIL](#) – If there is an error. Interface name will be an empty string.

5.22.4.32 `int v2x_radio_tcp_sock_create_and_bind (v2x_radio_handle_t handle, const v2x_tx_flow_info_t * event_info, const socket_info_t * sock_info, int * sock_fd, struct sockaddr_in6 * sockaddr)`

Creates a TCP socket for event Tx and Rx. The socket is bound as an AF_INET6 TCP type socket.

This `v2x_radio_tcp_sock_create_and_bind()` API creates a new TCP socket and binds the socket to the IPv6 address of local IP interface with specified source port. Additionally, this API also registers a Tx event flow and subscribes Rx with specified service ID to enable TCP control and data packets in both transmitting and receiving directions.

If the created socket is expected to work as TCP client mode, the caller must establish a connection to the address specified using function `connect()`, and then use the socket for `send()` and `recv()` on successful connection. The caller must release the created socket and associated resources with `v2x_radio_sock_close()`.

If the created socket is expected to work as TCP server mode, the caller must mark the created socket as a listening socket with function `listen()`, that is, as a socket that will be used to accept incoming connection requests using `accept()`. The caller can then use the connected socket returned by `accept()` for `send()` and `recv()`. The caller must close all connected sockets returned by `accept()` with function `close()` first, and then release the listening socket and associated resources with `v2x_radio_sock_close()`.

This call is a blocking call. When it returns, the created TCP socket is ready to use, assuming there is no error.

Associated data types

[v2x_radio_handle_t](#)

Parameters

| | | |
|-----|-------------------|--|
| in | <i>handle</i> | Identifies the initialized Radio interface. The caller must specify IP interface for radio initialization. |
| in | <i>event_info</i> | Pointer to the Tx event flow information. |
| in | <i>sock_info</i> | Pointer to the TCP socket information. |
| out | <i>sock_fd</i> | Pointer to the socket that, on success, returns the TCP socket descriptor. The caller must release this socket with v2x_radio_sock_close() . |
| out | <i>sockaddr</i> | Pointer to the address of TCP socket. The <code>sockaddr_in6</code> buffer is initialized with the IPv6 source address and source port that are used for the bind. |

Detailed description

You can execute any socketops that are appropriate for this type of socket (AF_INET6).

Returns

0 – On success.

Otherwise:

- EINVAL – On failure to find the interface or get bad parameters.
- EPERM – Socket operation failed; for more details, check errno.h.

Dependencies

The interface used for IP communication must be pre-initialized with `v2x_radio_init()`. The handle from that function must be used as the parameter in this function.

5.22.4.33 v2x_status_enum_type v2x_set_peak_tx_power (int8_t txPower)

Set RF peak cv2x transmit power. This affects the power for all existing flows and for any flow created in the future.

Precondition – v2x mode enabled.

Parameters

| | | |
|----|----------------|--|
| in | <i>txPower</i> | Desired global Cv2x peak tx power in dbm |
|----|----------------|--|

Returns

V2X_STATUS_SUCCESS on success. Error status otherwise.

5.22.4.34 v2x_status_enum_type v2x_set_l2_filters (uint32_t list_len, src_l2_filter_info * list_array)

Set src L2 ID list for filtering. This affects/disables receiving packets from the src L2 IDs in the list.

Parameters

| | | |
|----|-------------------|--|
| in | <i>list_len</i> | number of rc L2 IDs, max value 50 |
| in | <i>list_array</i> | array that stores the src L2 IDs, durations and pppp values for filter |

Returns

V2X_STATUS_SUCCESS on success. Error status otherwise.

5.22.4.35 v2x_status_enum_type v2x_remove_l2_filters (uint32_t list_len, uint32_t * l2_id_list)

Remove specific src L2 ID list for filtering. This affects/enables receiving packets from the src L2 IDs in the list.

Parameters

| | | |
|----|-------------------|-----------------------------------|
| in | <i>list_len</i> | number of rc L2 IDs, max value 50 |
| in | <i>l2_id_list</i> | array that stores the src L2 IDs |

Returns

V2X_STATUS_SUCCESS on success. Error status otherwise.

5.22.4.36 v2x_status_enum_type v2x_register_tx_status_report_listener (uint16_t port, v2x_tx_status_report_listener callback)

Registers a listener for CV2X Tx status report.

Associated data types

v2x_tx_status_report_listener

Parameters

| | | |
|----|-----------------|---|
| in | <i>port</i> | Set this value to the port number of registered Tx Flow if user wants to receive Tx status report associated with its own Tx flow. If user wants to receive Tx status report associated with all Tx flows in system, set this value to 0. |
| in | <i>callback</i> | Callback function of v2x_tx_status_report_listener structure that is called on Tx status reports. |

Detailed description

This function should be called before the enable of Tx status report by calling `v2x_set_tx_status_report` if the caller has interest in the notification of CV2X Tx status reports.

Returns

[V2X_STATUS_SUCCESS](#).

[V2X_STATUS_FAIL](#) – If there is an error.

Dependencies

CV2X radio must be pre-initialized with [v2x_radio_init_v2\(\)](#) or [v2x_radio_init_v3\(\)](#).

5.22.4.37 `v2x_status_enum_type v2x_deregister_tx_status_report_listener (uint16_t port)`

Deregisters a listener for CV2X Tx status report.

Associated data types

v2x_tx_status_report_listener

Parameters

| | | |
|----|-------------|--|
| in | <i>port</i> | Port number of previously registered v2x_tx_status_report_listener that is to be deregistered. If the listener is registered with port number 0, set this value to 0 to deregister the listener. |
|----|-------------|--|

Detailed description

User will not receive Tx status reports after the deregistration.

Returns

[V2X_STATUS_SUCCESS](#).

[V2X_STATUS_FAIL](#) – If there is an error.

Dependencies

CV2X radio must be pre-initialized with [v2x_radio_init_v2\(\)](#) or [v2x_radio_init_v3\(\)](#).

5.22.4.38 `v2x_status_enum_type v2x_set_global_IPaddr (uint8_t prefix_len, uint8_t * ipv6_addr)`

Set CV2X global IP address for the IP interface.

Parameters

| | | |
|----|-------------------|---|
| in | <i>prefix_len</i> | CV2X global IP address prefix length in bits, range [64, 128] |
| in | <i>ipv6_addr</i> | CV2X global IP address. |

Returns

V2X_STATUS_SUCCESS on success. Error status otherwise.

5.22.4.39 `v2x_status_enum_type v2x_set_ip_routing_info (uint8_t * dest_mac_addr)`

Set CV2X IP interface global IP unicast routing information.

Parameters

| | | |
|----|----------------------|--|
| in | <i>dest_mac_addr</i> | CV2X destination L2 address for unicast routing purpose. expecting a 6 bytes array address, in which the L2 addr stored in the last 3 entries in big endian order. |
|----|----------------------|--|

Returns

V2X_STATUS_SUCCESS on success. Error status otherwise.

5.22.4.40 `v2x_status_enum_type v2x_get_ext_radio_status (v2x_radio_status_ex_t * status)`

Get current V2X overall radio status and per pool status.

Parameters

| | | |
|-----|---------------|--|
| out | <i>status</i> | Pointer to structure v2x_radio_status_ex_t , which contains V2X overall radio status and per pool status on success. |
|-----|---------------|--|

Returns

V2X_STATUS_SUCCESS on success. Error status otherwise.

5.22.4.41 `v2x_status_enum_type v2x_register_ext_radio_status_listener (v2x_ext_radio_status_listener callback)`

Registers a listener for CV2X overall Tx/Rx status and per pool status.

Associated data types

`v2x_ext_radio_status_listener`

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Callback function of <code>v2x_ext_radio_status_listener</code> structure that is called on CV2X Tx/Rx status change. |
|----|-----------------|---|

Returns

`V2X_STATUS_SUCCESS`.

`V2X_STATUS_FAIL` – If there is an error.

Dependencies

CV2X radio must be pre-initialized with `v2x_radio_init_v2()` or `v2x_radio_init_v3()`.

5.23 C Vehicle APIs

This section contains C Vehicle APIs related to Cellular-V2X operation. These APIs are provided as reference APIs to work with QTI reference hardware. Customers would need to modify the implementation of these APIs based on the specific H/W and CAN controller being used.

Abstraction of the vehicle system parameters required for CAM/BSM ITS beacons.

5.23.1 Define Documentation

5.23.1.1 **#define V2X_VDATA_HANDLE_BAD (-1)**

Invalid handle returned when there is an error.

5.23.1.2 **#define V2X_J2735_TRACTION_CONTROL_MAX (4)**

Guard check value on [v2x_transmission_state_enum_type](#) for [V2X_TRANSMISSION_MAX](#). This value is used in a 3-bit bitfield in J2735.

5.23.1.3 **#define V2X_TRACTION_CTRL_MAX (4)**

Guard check value on [v2x_TractionControlStatus_enum_type](#) for [V2X_TRACTION_CTRL_MAX](#). This value is used in a 2-bit bitfield in J2735.

5.23.1.4 **#define J2735_ABS_MAX (4)**

Guard check value on [v2x_AntiLockBrakeStatus_enum_type](#).

This value cannot be part of the enumeration because the value eventually ends up in 2-bit bitfield over the air.

5.23.1.5 **#define V2X_STABILITY_CONTROL_MAX (4)**

Guard check value on [v2x_StabilityControlStatus_enum_type](#).

This value is eventually used over the air in a 2-bit bitfield. The enumeration value must never be larger than 4.

5.23.1.6 **#define V2X_AUX_BRAKE_MAX (4)**

Guard check value on [v2x_AuxBrakeStatus_enum_type](#). This value must never be set this high.

5.23.2 Data Structure Documentation

5.23.2.1 union v2x_control_status_ut

Contains information related to ABS, TCS, stability control state, and other vehicle output controls that might occur and be ongoing. This structure mirrors the J2735 bit frames.

Data fields

| Type | Field | Description |
|--|-------|---|
| struct v2x_control_status_ut | bits | Bit values for control status information. Bit values for control status information. |
| unsigned short | word | Byte data access to the packed v2x_control_status union structure. |

5.23.2.2 struct v2x_control_status_ut.bits

Bit values for control status information.

Data fields

| Type | Field | Description |
|--|-----------------------------|---|
| unsigned | unused_padding: 1 | Reserved for 16-bit alignment. This field is critical because of 16-bit word access to the packed v2x_control_status_ut union structure. |
| v2x_AuxBrakeStatus_enum_type | aux_brake_status: 2 | Indicates whether the auxiliary braking system is on. Supported values: <ul style="list-style-type: none"> • 0 – Off • 1 – On |
| v2x_BrakeBoostApplied_enum_type | brake_boost_applied: 2 | Indicates whether the brakes are actively being boosted. Supported values: <ul style="list-style-type: none"> • 0 – Not boosted • 1 – Boosted |
| v2x_StabilityControlStatus_enum_type | stability_control_status: 2 | Indicates whether stability control is on and engaged. Supported values: <ul style="list-style-type: none"> • 0 – Off • 1 – On |
| v2x_AntiLockBrakeStatus_enum_type | antilock_brake_status: 2 | Indicates the status of the ABS. |
| v2x_TractionControlStatus_enum_type | traction_control_status: 2 | Indicates whether status of the TCS. |

| Type | Field | Description |
|----------|----------------|---|
| unsigned | rightRear: 1 | Indicates whether the right rear brakes are actively being applied. Supported values: <ul style="list-style-type: none"> • 0 – Not applied • 1 – Applied |
| unsigned | rightFront: 1 | Indicates whether the right front brakes are actively being applied. Supported values: <ul style="list-style-type: none"> • 0 – Not applied • 1 – Applied |
| unsigned | leftRear: 1 | Indicates whether the left rear brakes are actively being applied Supported values: <ul style="list-style-type: none"> • 0 – Not applied • 1 – Applied |
| unsigned | leftFront: 1 | Indicates whether the front left brakes are actively being applied. Supported values: <ul style="list-style-type: none"> • 0 – Not applied • 1 – Applied |
| unsigned | unavailable: 1 | No information is available. |

5.23.2.3 union vehicleEventFlags_ut

Contains critical events and communication of ongoing events. Also is used for combinations of critical and not critical (wipers) events

This typedef can match the J2735 2016 version or another version you are working with.

Data fields

| Type | Field | Description |
|---|-------|---|
| struct vehicle↔ EventFlags_ut | bits | Bit values for vehicle event flags. A flag indicates the state of the event.Bit values for vehicle event flags. |
| unsigned short | data | Sixteen-bit word access to the packed vehicleEventFlags union structure. |

5.23.2.4 struct vehicleEventFlags_ut.bits

Bit values for vehicle event flags. A flag indicates the state of the event.

Data fields

| Type | Field | Description |
|----------|--|--|
| unsigned | unused: 3 | Reserved for 16-bit alignment in the union access. |
| unsigned | eventAirBag↔ Deployment: 1 | Indicates whether the airbag is deployed. Supported values: <ul style="list-style-type: none"> • 0 – Not deployed • 1 – Deployed |
| unsigned | event↔ Disabled↔ Vehicle: 1 | Indicates whether the vehicle is disabled. Supported values: <ul style="list-style-type: none"> • 0 – Not disabled • 1 – Disabled |
| unsigned | eventFlatTire: 1 | Indicates whether the tire is flat. Supported values: <ul style="list-style-type: none"> • 0 – Not flat • 1 – Flat |
| unsigned | eventWipers↔ Changed: 1 | Indicates the status of the windshield wipers. For more information, See the wiper state variables in current_dynamic_vehicle_state_t . |
| unsigned | eventLights↔ Changed: 1 | Indicates the status of one or more lights (such as blinkers and fog). |
| unsigned | eventHard↔ Braking: 1 | Indicates whether hard braking is activated. Supported values: <ul style="list-style-type: none"> • 0 – Not activated • 1 – Activated |
| unsigned | event↔ Reserved1: 1 | Event bit reserved for future use. Do not use. |
| unsigned | event↔ Hazardous↔ Materials: 1 | Indicates whether a hazmat load is present. Supported values: <ul style="list-style-type: none"> • 0 – Not present • 1 – Present |
| unsigned | eventStability↔ Controlactivated↔ : 1 | Indicates whether stability control is on. Supported values: <ul style="list-style-type: none"> • 0 – Off • 1 – On |
| unsigned | eventTraction↔ ControlLoss: 1 | Indicates whether traction control is activated (1) or not (0). Supported values: <ul style="list-style-type: none"> • 0 – Not applied • 1 – Applied |

| Type | Field | Description |
|----------|-----------------------------------|--|
| unsigned | eventAB↔ Sactivated: 1 | Indicates whether ABS is activated. Supported values: <ul style="list-style-type: none"> • 0 – Not activated • 1 – Activated |
| unsigned | eventStop↔ LineViolation: 1 | Indicates whether the vehicle has detected that a violation of the Stop Line is imminent. Supported values: <ul style="list-style-type: none"> • 0 – Not imminent • 1 – Imminent |
| unsigned | eventHazard↔ Lights: 1 | Indicates whether the hazard lights are on. Supported values: <ul style="list-style-type: none"> • 0 – Off • 1 – On |

5.23.2.5 union ExteriorLights_ut

Contains information about the state of the exterior lights.

Data fields

| Type | Field | Description |
|---|-------|---|
| struct Exterior↔ Lights_ut | bits | Bit values for exterior light flags. Bit values for exterior light flags. |
| unsigned short | data | 16-bit short word access to the packed ExteriorLights union structure. |

5.23.2.6 struct ExteriorLights_ut.bits

Bit values for exterior light flags.

Data fields

| Type | Field | Description |
|----------|----------------------------|--|
| unsigned | parking↔ LightsOn: 1 | Indicates whether the parking lights are on. Supported values: <ul style="list-style-type: none"> • 0 – Off • 1 – On |
| unsigned | fogLightOn: 1 | Indicates whether the fog lights are on. Supported values: <ul style="list-style-type: none"> • 0 – Off • 1 – On |

| Type | Field | Description |
|----------|---|---|
| unsigned | daytime↔ Running↔ LightsOn: 1 | Indicates whether the running lights are on. Supported values: • 0 – Off • 1 – On |
| unsigned | automatic↔ LightControl↔ On: 1 | Indicates whether the automatic light control is on. Supported values: • 0 – Off • 1 – On |
| unsigned | hazardSignal↔ On: 1 | Indicates whether the hazard lights are on. Supported values: • 0 – Off • 1 – On |
| unsigned | rightTurn↔ SignalOn: 1 | Indicates whether the right turn light is on. Supported values: • 0 – Off • 1 – On |
| unsigned | leftTurn↔ SignalOn: 1 | Indicates whether the left turn light is on. Supported values: • 0 – Off • 1 – On |
| unsigned | highBeam↔ HeadlightsOn: 1 | Indicates whether the high beam headlights are on. Supported values: • 0 – Off • 1 – On |
| unsigned | lowBeam↔ HeadlightsOn: 1 | Indicates whether the low beam headlights are on. Supported values: • 0 – Off • 1 – On |
| unsigned | unused: 7 | Unused padding bits. |

5.23.2.7 struct high_resolution_motion_t

Contains high-resolution motion parameters.

Data fields

| Type | Field | Description |
|--------|--------------------------------|---|
| double | vehicle_speed | Vehicle speed in meters/second. |
| double | longitudinal_↔ acceleration | Acceleration in a longitudinal direction, in meters/second ² . |
| double | yaw_rate | Yaw rate in degrees/second, per SAE J2735. |

5.23.2.8 struct current_dynamic_vehicle_state_t

Contains information about the dynamic state of the vehicle.

Data fields

| Type | Field | Description |
|--|---------------------------|--|
| v2x_↔ transmission_↔ state_enum_↔ type | prndl | Specifies the current state of the transmission gear: forward, reverse, and so on. |
| vehicleEvent↔ Flags_ut | events | Flags all critical events and combinations of critical events. |
| double | throttle_↔ position | Per the J2735 definition, indicates the throttle position from 0% to 100%. However, this value is in double precision between 0 and 1. |
| double | throttle_↔ confidence | Per the J2735 definition, double precision degrees of confidence. |
| double | steering_↔ wheel_angle | Per the J2735 definition, double precision degrees of the wheel angle. Supported values: -192.0 through 189.0 degrees, with positive being turned to the right |
| v2x_control_↔ status_ut | brake_status | Indicates whether brakes or emergency brakes (ABS) are activated. Supported values: <ul style="list-style-type: none"> • 0 – Not activated • 1 – Activated |
| Exterior↔ Lights_ut | exterior_lights | Conglomeration of bits that indicate the status of the exterior lights, such as blinkers. |
| unsigned char | front_wiper_↔ status | Status of the front windshield wipers. |
| unsigned char | rear_wiper_↔ status | Status of the rear windshield wipers. |

5.23.2.9 struct static_vehicle_parameters_t

Contains static vehicle parameters.

Data fields

| Type | Field | Description |
|--------|------------------------|---|
| double | vehicle_↔ height_cm | Vehicle height in centimeters. This parameter is 0 if the value is not yet available from the vehicle network. |
| double | vehicle_↔ width_cm | Vehicle width in centimeters. This parameter is 0 if the value is not yet available from the vehicle network. |
| double | vehicle_↔ length_cm | Vehicle length in centimeters. This parameter is 0 if the value is not yet available from the vehicle network. |

| Type | Field | Description |
|----------------|-----------------------------|--|
| double | front_bumper↔ _height_cm | Height of the front bumper, in centimeters. This parameter is 0 if the value is not yet available from the vehicle network. |
| double | rear_bumper↔ height_cm | Height of the rear bumper, in centimeters. This parameter is 0 if the value is not yet available from the vehicle network. |
| double | vehicle_mass↔ _kg | Mass of the vehicle, in kilograms. This parameter is 0 if the value is not yet available from the vehicle network. |
| double | trailer↔ weight_kg | Weight of a trailer connected to the vehicle, in kilograms. This parameter is 0 if the value is not yet available from the vehicle network. |
| char * | make | Pointer to the NULL-terminated string with the vehicle manufacturer that this software build supports (such as Ford and GM). |
| char * | model | Pointer to the NULL-terminated string with the vehicle model name that this software build supports (such as Prius, Mustang, Rogue). |
| unsigned short | begin_model↔ _year | Beginning of the model years that this software build supports. |
| unsigned short | end_model↔ _year | End of model year that this software build supports. This year might be the same as begin_model_year. |

5.23.3 Enumeration Type Documentation

5.23.3.1 enum v2x_transmission_state_enum_type

Valid types for main transmission drive states.

Enumerator

V2X_TRANSMISSION_NEUTRAL
V2X_TRANSMISSION_PARK
V2X_TRANSMISSION_FORWARD_GEAR One of the gears: D, 1, 2, 3,
V2X_TRANSMISSION_REVERSE_GEAR
V2X_TRANSMISSION_RESERVED1
V2X_TRANSMISSION_RESERVED2
V2X_TRANSMISSION_RESERVED3
V2X_TRANSMISSION_UNAVAILABLE Status is unknown.
V2X_TRANSMISSION_MAX Sentry variable that must not be exceeded.

5.23.3.2 enum v2x_BrakeBoostApplied_enum_type

Valid types for brake boosting states.

Enumerator

V2X_BRAKEBOOST_UNAVAIL Status is unknown.
V2X_BRAKEBOOST_OFF
V2X_BRAKEBOOST_ON
V2X_BRAKEBOOST_MAX Sentry variable that must not be exceeded.

5.23.3.3 enum v2x_TractionControlStatus_enum_type

Valid types for traction control states.

This enumeration currently matches the J2735 2016 version for the Traction Control System (TCS).

Enumerator

V2X_TRACTION_CTRL_UNAVAIL Status is unknown.
V2X_TRACTION_CTRL_OFF
V2X_TRACTION_CTRL_ON On but currently not engaged.
V2X_TRACTION_CTRL_ENGAGED Actively being engaged.

5.23.3.4 enum v2x_AntiLockBrakeStatus_enum_type

Valid types for antilock-braking states.

This enumeration matches the J2735 2016 version for the Antilock Braking System (ABS) to help BSM packing and unpacking.

Enumerator

V2X_ABS_Unavailable ABS is not equipped, or the status is unknown.

V2X_ABS_Off

V2X_ABS_On On but currently not active.

V2X_ABS_Engaged Actively being engaged on one or more wheels.

5.23.3.5 enum v2x_StabilityControlStatus_enum_type

Valid types for the stability control status. This enumeration should be equivalent to the J2735 BSM version you are working with.

Enumerator

V2X_STABILITY_CONTROL_UNAVAILBLE Stability Control status is unknown.

V2X_STABILITY_CONTROL_OFF Stability Control is not applied.

V2X_STABILITY_CONTROL_ON Stability Control is on, but currently it is not engaged.

V2X_STABILITY_CONTROL_ENGAGED Stability Control is actively being engaged.

5.23.3.6 enum v2x_AuxBrakeStatus_enum_type

Valid types for the auxiliary brake status.

This enumeration should match the J2735 2016 version or any other version you are working with.

Enumerator

V2X_AUX_BRAKE_UNAVAILBLE Vehicle has no auxiliary brake equipment or the status is unknown.

V2X_AUX_BRAKE_OFF

V2X_AUX_BRAKE_ON

V2X_AUX_BRAKE_RESERVED

5.23.4 Function Documentation

5.23.4.1 `v2x_api_ver_t v2x_vehicle_api_version (void)`

Gets the compiled API version interface (as an integer number).

Returns

`v2x_api_ver_t` – Filled with the version number, build date, and detailed build information.

5.23.4.2 `v2x_status_enum_type v2x_vehicle_get_static_params (static_vehicle_↔ parameters_t * parameters)`

Returns (via a reference pointer) the `static_vehicle_parameters_t` structure that enumerates static (unchanging) data items used by ITS stacks.

Associated data types

`static_vehicle_parameters_t`

Parameters

| | | |
|-----|-------------------|---|
| out | <i>parameters</i> | Pointer to the static vehicle parameters, including vehicle dimensions, make, model, and so on. |
|-----|-------------------|---|

Detailed description

This call is a nonblocking call. If the values are not yet available from the vehicle, the data element is 0 (NULL).

Because this function is sometimes populated with data from an in-vehicle network, it might be incomplete and only partially populated early in a system start-up. However, all values can be statically compiled in or loaded from an initialization file. In this case, the data is fully provided on the first call.

Returns

`V2X_STATUS_SUCCESS` – This function is successfully populated with the results.

Error code – If there is a problem (see `v2x_status_enum_type`).

5.23.4.3 `v2x_motion_data_handle_t v2x_high_res_motion_register_listener (v2x_high_res_motion_listener_t cb)`

Registers for high-resolution motion callbacks from the vehicle data network (CAN bus) when the data changes.

Associated data types

[v2x_high_res_motion_listener_t](#)

Parameters

| | | |
|-----------------|-----------------|---|
| <code>in</code> | <code>cb</code> | Callback function to use for this listener. |
|-----------------|-----------------|---|

Returns

Handle number to use with subsequent deregister calls.

-1 – If there is an error in registering a callback.

5.23.4.4 `v2x_status_enum_type v2x_high_res_motion_deregister_listener (v2x_motion_data_handle_t handle)`

Deregisters a previously registered high-resolution motion data callback that was requested via [v2x_high_res_motion_register_listener\(\)](#).

Associated data types

[v2x_motion_data_handle_t](#)

Parameters

| | | |
|-----------------|---------------------|--|
| <code>in</code> | <code>handle</code> | Handle of the listener callback previously set up. |
|-----------------|---------------------|--|

Returns

[V2X_STATUS_SUCCESS](#).

Dependencies

The callback must have been previously registered with [v2x_high_res_motion_register_listener\(\)](#).

5.23.4.5 `v2x_vehicle_handle_t v2x_vehicle_register_listener (v2x_vehicle_event_listener_t cb, void * context)`

Registers for a callback for state updates from the vehicle data network (CAN bus). This function requests vehicle data callbacks when data changes or events occur.

Associated data types

[v2x_vehicle_event_listener_t](#)

Parameters

| | | |
|----|----------------|--|
| in | <i>cb</i> | Callback function to use for this listener. |
| in | <i>context</i> | Pointer to the application context for use with the callbacks, which can help the caller code. |

Returns

Handle number to use with subsequent deregister calls.

-1 – If there is an error in registering a callback.

5.23.4.6 `v2x_status_enum_type v2x_vehicle_deregister_for_callback (v2x_vehicle_handle_t handle)`

Deregisters a previously registered dynamic event callback that was requested via [v2x_vehicle_register_listener\(\)](#).

Associated data types

[v2x_vehicle_handle_t](#)

Parameters

| | | |
|----|---------------|--|
| in | <i>handle</i> | Handle of the listener callback previously set up. |
|----|---------------|--|

Returns

[V2X_STATUS_SUCCESS](#) – If the callback is successfully deregistered.

Dependencies

The callback must have been previously registered.

5.24 C Config APIs

This section contains C Config APIs related to Cellular-V2X operation. These APIs are provided as an abstraction of the CV2X configuration relevant interfaces.

Abstraction of the CV2X configuration relevant interfaces.

5.24.1 Data Structure Documentation

5.24.1.1 struct v2x_config_event_info_t

Information about any update to a V2X config file.

Data fields

| Type | Field | Description |
|-------------------------------------|--------|----------------------------------|
| v2x_config_source_t | source | The type of the V2X config file. |
| v2x_config_event_t | event | Config file event. |

5.24.2 Enumeration Type Documentation

5.24.2.1 enum v2x_config_soure_t

V2X configuration source types listed in ascending order of priority. The system always uses the V2X configuration with the highest priority if multiple V2X configuration sources exist.

Enumerator

V2X_CONFIG_SOURCE_UNKNOWN V2X config file source is unknown
V2X_CONFIG_SOURCE_PRECONFIG V2X config file source is preconfig
V2X_CONFIG_SOURCE_SIM_CARD V2X config file source is SIM card
V2X_CONFIG_SOURCE_OMA_DM V2X config file source is OMA-DM

5.24.2.2 enum v2x_config_event_t

Events relevant to CV2X config file.

Enumerator

V2X_CONFIG_EVENT_CHANGED V2X config file is changed
V2X_CONFIG_EVENT_EXPIRED V2X config file is expired

5.24.3 Function Documentation

5.24.3.1 v2x_status_enum_type v2x_register_for_config_change_ind (cv2x_config↔ _event_listener callback)

Register listener for any updates to CV2X configuration.

Associated data types

cv2x_config_event_listener

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback function of cv2x_config_event_listener structure that is used during CV2X config events (such as CV2X configuration expriy or changed). |
|----|-----------------|--|

Detailed description

This function should be called before calling [v2x_update_configuration](#) or [v2x_request_configuration](#) if the caller has interest in the notification of V2X configuration events.

V2X_CONFIG_EVENT_CHANGED [v2x_config_event_t](#) is sent to registered CV2X configuration listeners if the content of the active V2X configuration file is changed by calling [v2x_update_configuration](#) or the active V2X configuration file source [v2x_config_soure_t](#) is changed from one type to another.

V2X_CONFIG_EVENT_EXPIRED [v2x_config_event_t](#) is sent to registered CV2X configuration listeners when the active V2X configuration file is expired.

Returns

[V2X_STATUS_SUCCESS](#).

[V2X_STATUS_FAIL](#) – If there is an error.

5.24.3.2 `v2x_status_enum_type v2x_update_configuration (const char * config_file_path)`

Updates the OMA-DM V2X radio configuration file.

Parameters

| | | |
|----|-------------------------|--|
| in | <i>config_file_path</i> | Pointer to the path of the configuration file. |
|----|-------------------------|--|

Detailed description

The V2X radio status must be INACTIVE. If the V2X status is ACTIVE or SUSPENDED (see [v2x_event_t](#)), call [stop_v2x_mode\(\)](#) first.

The functionality of V2X configuration expiration is supported by adding an expiration leaf to the V2X configuration file passed in. When the active configuration expires, the system fallbacks to a lower priority V2X configuration [v2x_config_source_t](#) if existed. If the V2X status is active, it changes to suspended when the active V2X configuration expires and then changes to active after the system fallbacks to a lower priority V2X configuration or changes to inactive if no V2X configuration is available.

This call is a blocking call. When it returns the configuration has been updated, assuming no error.

Returns

[V2X_STATUS_SUCCESS](#).

Otherwise:

- [V2X_STATUS_EALREADY](#) – Failure because V2X status is not [V2X_INACTIVE](#).
- [V2X_STATUS_FAIL](#) – Other failure.

Dependencies

V2X radio status must be [V2X_INACTIVE](#) ([v2x_event_t](#)).

5.24.3.3 `v2x_status_enum_type v2x_retrieve_configuration (const char * config_file_path)`

Retrieve the V2X radio configuration file.

Parameters

| | | |
|----|-------------------------------|--|
| in | <code>config_file_path</code> | Pointer to the path of the configuration file. |
|----|-------------------------------|--|

This call is a blocking call. When it returns the configuration has been read out, assuming no error.

Returns

[V2X_STATUS_SUCCESS](#).

Otherwise:

- [V2X_STATUS_FAIL](#) – Other failure.

5.25 C Packet APIs

This section contains C Packet APIs related to Cellular-V2X packet analysis operation.

Provide utilities and structures for CV2X packet analysis.

5.25.1 Define Documentation

5.25.1.1 #define META_DATA_MASK_SFN 0x01

meta data validity mask of each received packet, used by [rx_packet_meta_data_t](#)

5.25.1.2 #define META_DATA_MASK_SUB_CHANNEL_INDEX 0x02

5.25.1.3 #define META_DATA_MASK_SUB_CHANNEL_NUM 0x04

5.25.1.4 #define META_DATA_MASK_PRX_RSSI 0x08

5.25.1.5 #define META_DATA_MASK_DRX_RSSI 0x10

5.25.1.6 #define META_DATA_MASK_L2_DEST 0x20

5.25.1.7 #define META_DATA_MASK_SCI_FORMAT1 0x40

5.25.1.8 #define META_DATA_MASK_DELAY_ESTI 0x80

5.25.2 Data Structure Documentation

5.25.2.1 struct rx_packet_meta_data_t

Contains the detailed meta data report of a packet received.

Data fields

| Type | Field | Description |
|----------|------------------------|---|
| uint32_t | validity | Validity of the meta data |
| uint16_t | sfn | System Frame Number * 10 + subframe number |
| uint8_t | sub_channel_↔ index | The subchannel used for transmission |
| uint8_t | sub_channel_↔ num | Number of subchannels in the Rx pool |
| int8_t | prx_rssi | RSSI of primary receive signal, in dBm |
| int8_t | drx_rssi | RSSI of diversity receive signal, in dBm |
| uint32_t | l2_↔ destination_id | L2 destination ID |
| uint32_t | sci_format1_↔ info | SCI format1, 3GPP TS 36.213 section 14.1 |
| int32_t | delay_↔ estimation | Packet delay estimation, in Ts (1/(15000 * 2048) seconds) |

5.25.3 Function Documentation

5.25.3.1 `v2x_status_enum_type v2x_parse_rx_meta_data (const uint8_t * payload, uint32_t length, rx_packet_meta_data_t * meta_data, size_t * num, size_t * meta_data_len)`

Parse the received packet's meta data from the payload

Associated data types

`#rx_packets_meta_data_t`

Parameters

| | | |
|---------|----------------------|--|
| in | <i>payload</i> | Pointer to the received message which may contains the meta data reports |
| in | <i>length</i> | Length of the received message in byte |
| out | <i>meta_data</i> | Pointer to the meta data structure array |
| in, out | <i>num</i> | array size of meta_data as input, be assigned to the number of meta data reports parsed out. The caller can use this value to index the array meta_data. |
| out | <i>meta_data_len</i> | length of the meta data in byte parsed out from the payload |

Detailed description

This function extracts the received packet's meta data from the payload, there maybe several meta data reports in the received payload.

Returns

[V2X_STATUS_SUCCESS](#).

Otherwise:

- [V2X_STATUS_FAIL](#) – Other failure.

5.26 CPP APIs

This section contains C++ APIs related to Cellular-V2X operation. Applications need to have "radio" Linux group permissions to be able to operate successfully with underlying services.

•

5.26.1 Data Structure Documentation

5.26.1.1 class telux::cv2x::ICv2xConfigListener

Listeners for [ICv2xConfig](#) must implement this interface.

Public member functions

- virtual void [onConfigChanged](#) (const [ConfigEventInfo](#) &info)
- virtual [~ICv2xConfigListener](#) ()

5.26.1.1.1 Constructors and Destructors

5.26.1.1.1.1 virtual telux::cv2x::ICv2xConfigListener::~~ICv2xConfigListener () [virtual]

Destructor for [ICv2xConfigListener](#)

5.26.1.1.2 Member Function Documentation

5.26.1.1.2.1 virtual void telux::cv2x::ICv2xConfigListener::onConfigChanged (const [ConfigEventInfo](#) & *info*) [virtual]

Called when CV2X configuration has changed in the below scenarios:

1. The specified configuration source has expired.
2. The active configuration source has changed to the specified configuration source type due to the expiration of the configuration source being used.
3. The specified configuration source has been updated.

Parameters

| | | |
|----|-------------|--|
| in | <i>info</i> | - Information of CV2X configuration event. |
|----|-------------|--|

5.26.1.2 class telux::cv2x::ICv2xConfig

Cv2xConfig provide operations to update or request [cv2x](#) configuration.

Public member functions

- virtual `~ICv2xConfig ()`
- virtual `bool isReady ()=0`
- virtual `std::future< bool > onReady ()=0`
- virtual `telux::common::ServiceStatus getServiceStatus ()=0`
- virtual `telux::common::Status updateConfiguration (const std::string &configFilePath, telux::common::ResponseCallback cb)=0`
- virtual `telux::common::Status retrieveConfiguration (const std::string &configFilePath, telux::common::ResponseCallback cb)=0`
- virtual `telux::common::Status registerListener (std::weak_ptr< ICv2xConfigListener > listener)=0`
- virtual `telux::common::Status deregisterListener (std::weak_ptr< ICv2xConfigListener > listener)=0`

5.26.1.2.1 Constructors and Destructors

5.26.1.2.1.1 `virtual telux::cv2x::ICv2xConfig::~~ICv2xConfig () [virtual]`

5.26.1.2.2 Member Function Documentation

5.26.1.2.2.1 `virtual bool telux::cv2x::ICv2xConfig::isReady () [pure virtual]`

Checks if the Cv2x Config Manager is ready.

Returns

True if Cv2x Config is ready for service, otherwise returns false.

Deprecated use `getServiceStatus` instead

5.26.1.2.2.2 `virtual std::future<bool> telux::cv2x::ICv2xConfig::onReady () [pure virtual]`

Wait for Cv2x Config to be ready.

Returns

A future that caller can wait on to be notified when Cv2x Radio Manager is ready.

Deprecated the readiness can be notified via the callback passed to `Cv2xFactory::getCv2xConfig`.

5.26.1.2.2.3 virtual telux::common::ServiceStatus telux::cv2x::ICv2xConfig::getServiceStatus () [pure virtual]

This status indicates whether the Cv2xConfig is in a usable state.

Returns

SERVICE_AVAILABLE - If cv2x config is ready for service. SERVICE_UNAVAILABLE - If cv2x config is temporarily unavailable. SERVICE_FAILED - If cv2x config encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.26.1.2.2.4 virtual telux::common::Status telux::cv2x::ICv2xConfig::updateConfiguration (const std::string & configFilePath, telux::common::ResponseCallback cb) [pure virtual]

Updates CV2X configuration. Requires CV2X TX/RX radio status be Inactive. If CV2X radio status is Active or Suspended, call [ICv2xRadioManager::stopCv2x](#) before trying to update configuration. The functionality of V2X configuration expiration is supported by adding an expiration leaf to the V2X configuration file passed in. When the active configuration expires, the system fallbacks to a lower priority V2X configuration [ConfigSourceType](#) if existed. If the V2X status is active, it changes to suspended when the active V2X configuration expires and then changes to active after the system fallbacks to a lower priority V2X configuration or changes to inactive if no V2X configuration is available.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>configFilePath</i> | - Path to config file. This is the fully qualified file path including the name of the file. |
| in | <i>cb</i> | - Callback that is invoked when the send is complete. This may be null. |

5.26.1.2.2.5 virtual telux::common::Status telux::cv2x::ICv2xConfig::retrieveConfiguration (const std::string & configFilePath, telux::common::ResponseCallback cb) [pure virtual]

Retrieve active CV2X configuration. The calling application should have write access to the path specified by . And if the v2x configuration retrieval request succeed, the file specified by will be created and filled with the configuration contents. Otherwise, no file will be created.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>configFilePath</i> | - Path to config file. This is the fully qualified file path including the name of the file. |
| in | <i>cb</i> | - Callback that is invoked when the configuration retrieval is complete. This may be null. |

5.26.1.2.2.6 `virtual telux::common::Status telux::cv2x::ICv2xConfig::registerListener (std::weak_ptr< ICv2xConfigListener > listener) [pure virtual]`

Registers a listener for this [ICv2xConfig](#).

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Listener that implements ICv2xConfigListener interface. |
|----|-----------------|---|

5.26.1.2.2.7 `virtual telux::common::Status telux::cv2x::ICv2xConfig::deregisterListener (std::weak_ptr< ICv2xConfigListener > listener) [pure virtual]`

Deregisters a listener for this [ICv2xConfig](#).

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Previously registered ICv2xConfigListener that is to be deregistered. |
|----|-----------------|---|

5.26.1.3 class telux::cv2x::Cv2xFactory

[Cv2xFactory](#) is the factory that creates the Cv2x Radio.

Public member functions

- `std::shared_ptr< ICv2xRadioManager > getCv2xRadioManager (telux::common::InitResponseCb cb=nullptr)`
- `std::shared_ptr< ICv2xConfig > getCv2xConfig (telux::common::InitResponseCb cb=nullptr)`
- `std::shared_ptr< ICv2xThrottleManager > getCv2xThrottleManager (telux::common::InitResponseCb cb=nullptr)`

Static Public Member Functions

- `static Cv2xFactory & getInstance ()`

5.26.1.3.1 Member Function Documentation

5.26.1.3.1.1 `static Cv2xFactory& telux::cv2x::Cv2xFactory::getInstance () [static]`

Get [Cv2xFactory](#) instance

Returns

Reference to [Cv2xFactory](#) singleton.

5.26.1.3.1.2 `std::shared_ptr<ICv2xRadioManager> telux::cv2x::Cv2xFactory::getCv2xRadioManager (telux::common::InitResponseCb cb = nullptr)`

Get Cv2xRadioManager instance.

Parameters

| | | |
|----|-----------|---|
| in | <i>cb</i> | - Optional callback to get Cv2xRadioManager initialization status |
|----|-----------|---|

Returns

shared pointer to Cv2x Radio Manager upon success. nullptr otherwise.

5.26.1.3.1.3 `std::shared_ptr<ICv2xConfig> telux::cv2x::Cv2xFactory::getCv2xConfig (telux::common::InitResponseCb cb = nullptr)`

Get Cv2xConfig instance.

Parameters

| | | |
|----|-----------|---|
| in | <i>cb</i> | - Optional callback to get Cv2xConfig initialization status |
|----|-----------|---|

Returns

shared pointer to Cv2x Config upon success. nullptr otherwise.

5.26.1.3.1.4 `std::shared_ptr<ICv2xThrottleManager> telux::cv2x::Cv2xFactory::getCv2xThrottleManager (telux::common::InitResponseCb cb = nullptr)`

Get Cv2xThrottleManager instance.

Returns

shared pointer to Cv2x ThrottleManager upon success. nullptr otherwise.

5.26.1.4 `class telux::cv2x::ICv2xRadio`

This is class encapsulates a Cv2xRadio interface.

Returned from `getCv2xRadio` in [Cv2xFactory](#)

Public member functions

- virtual [Cv2xRadioCapabilities](#) `getCapabilities () const =0`
- virtual bool `isReady () const =0`
- virtual bool `isInitialized () const =0`
- virtual `std::future< telux::common::Status > onReady ()=0`

- virtual `telux::common::Status registerListener` (`std::weak_ptr< ICv2xRadioListener >` listener)=0
- virtual `telux::common::Status deregisterListener` (`std::weak_ptr< ICv2xRadioListener >` listener)=0
- virtual `telux::common::Status createRxSubscription` (`TrafficIpType` ipType, `uint16_t` port, `CreateRxSubscriptionCallback` cb, `std::shared_ptr< std::vector< uint32_t >>` idList=nullptr)=0
- virtual `telux::common::Status enableRxMetaDataReport` (`TrafficIpType` ipType, `bool` enable, `std::shared_ptr< std::vector< std::uint32_t >>` idList, `telux::common::ResponseCallback` cb)=0
- virtual `telux::common::Status createTxSpsFlow` (`TrafficIpType` ipType, `uint32_t` serviceId, `const SpsFlowInfo &`spsInfo, `uint16_t` spsSrcPort, `bool` eventSrcPortValid, `uint16_t` eventSrcPort, `CreateTxSpsFlowCallback` cb)=0
- virtual `telux::common::Status createTxEventFlow` (`TrafficIpType` ipType, `uint32_t` serviceId, `uint16_t` eventSrcPort, `CreateTxEventFlowCallback` cb)=0
- virtual `telux::common::Status createTxEventFlow` (`TrafficIpType` ipType, `uint32_t` serviceId, `const EventFlowInfo &`flowInfo, `uint16_t` eventSrcPort, `CreateTxEventFlowCallback` cb)=0
- virtual `telux::common::Status closeRxSubscription` (`std::shared_ptr< ICv2xRxSubscription >` rxSub, `CloseRxSubscriptionCallback` cb)=0
- virtual `telux::common::Status closeTxFlow` (`std::shared_ptr< ICv2xTxFlow >` txFlow, `CloseTxFlowCallback` cb)=0
- virtual `telux::common::Status changeSpsFlowInfo` (`std::shared_ptr< ICv2xTxFlow >` txFlow, `const SpsFlowInfo &`spsInfo, `ChangeSpsFlowInfoCallback` cb)=0
- virtual `telux::common::Status requestSpsFlowInfo` (`std::shared_ptr< ICv2xTxFlow >` txFlow, `RequestSpsFlowInfoCallback` cb)=0
- virtual `telux::common::Status changeEventFlowInfo` (`std::shared_ptr< ICv2xTxFlow >` txFlow, `const EventFlowInfo &`flowInfo, `ChangeEventFlowInfoCallback` cb)=0
- virtual `telux::common::Status requestCapabilities` (`RequestCapabilitiesCallback` cb)=0
- virtual `telux::common::Status requestDataSessionSettings` (`RequestDataSessionSettingsCallback` cb)=0
- virtual `telux::common::Status updateSrcL2Info` (`UpdateSrcL2InfoCallback` cb)=0
- virtual `telux::common::Status updateTrustedUEList` (`const TrustedUEInfoList &`infoList, `UpdateTrustedUEListCallback` cb)=0
- virtual `~ICv2xRadio` ()
- virtual `std::string` `getInterfaceNameFromIpType` (`TrafficIpType` ipType)=0
- virtual `telux::common::Status createCv2xTcpSocket` (`const EventFlowInfo &`eventInfo, `const SocketInfo &`sockInfo, `CreateTcpSocketCallback` cb)=0
- virtual `telux::common::Status closeCv2xTcpSocket` (`std::shared_ptr< ICv2xTxRxSocket >` sock, `CloseTcpSocketCallback` cb)=0
- virtual `telux::common::Status registerTxStatusReportListener` (`uint16_t` port, `std::shared_ptr< ICv2xTxStatusReportListener >` listener, `telux::common::ResponseCallback` cb)=0
- virtual `telux::common::Status deregisterTxStatusReportListener` (`uint16_t` port, `telux::common::ResponseCallback` cb)=0

- virtual `telux::common::Status setGlobalIPInfo` (const `IPv6AddrType` &ipv6Addr, `common::ResponseCallback` cb)=0
- virtual `telux::common::Status setGlobalIPUnicastRoutingInfo` (const `GlobalIPUnicastRoutingInfo` &destL2Addr, `common::ResponseCallback` cb)=0

5.26.1.4.1 Constructors and Destructors

5.26.1.4.1.1 virtual `telux::cv2x::ICv2xRadio::~~ICv2xRadio` () [`virtual`]

Destructor for `ICv2xRadio`

5.26.1.4.2 Member Function Documentation

5.26.1.4.2.1 virtual `Cv2xRadioCapabilities telux::cv2x::ICv2xRadio::getCapabilities` () const [`pure virtual`]

Get the capabilities of this `Cv2xRadio`.

Returns

`Cv2xRadioCapabilities` - Contains capabilities of this `Cv2xRadio`.

Deprecated Use `requestCapabilities()` API

5.26.1.4.2.2 virtual `bool telux::cv2x::ICv2xRadio::isReady` () const [`pure virtual`]

Returns true if the radio interface was successfully initialized.

Returns

True if ready. False otherwise.

5.26.1.4.2.3 virtual `bool telux::cv2x::ICv2xRadio::isInitialized` () const [`pure virtual`]

Returns true if the radio interface has completed initialization.

Returns

True if initialized. False otherwise.

5.26.1.4.2.4 `virtual std::future<telux::common::Status> telux::cv2x::ICv2xRadio::onReady () [pure virtual]`

Returns a future that indicated if the radio interface is ready or if radio failed to initialize.

Returns

SUCCESS if Cv2xRadio initialization was successful. Otherwise it returns an Error Code.

5.26.1.4.2.5 `virtual telux::common::Status telux::cv2x::ICv2xRadio::registerListener (std::weak_ptr<ICv2xRadioListener > listener) [pure virtual]`

Registers a listener for this Cv2xRadio.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Listener that implements Cv2xRadioListener interface. |
|----|-----------------|---|

5.26.1.4.2.6 `virtual telux::common::Status telux::cv2x::ICv2xRadio::deregisterListener (std::weak_ptr<ICv2xRadioListener > listener) [pure virtual]`

Deregisters a listener from this Cv2xRadio.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Previously registered Cv2xRadioListener that is to be deregistered. |
|----|-----------------|---|

5.26.1.4.2.7 `virtual telux::common::Status telux::cv2x::ICv2xRadio::createRxSubscription (Traffic↔ IpType ipType, uint16_t port, CreateRxSubscriptionCallback cb, std::shared_ptr<std::vector< uint32_t >> idList = nullptr) [pure virtual]`

Creates and initializes a new Rx subscription which will be returned in the user-supplied callback.

Parameters

| | | |
|----|---------------|--|
| in | <i>ipType</i> | - IP traffic type (IP or NON-IP) |
| in | <i>port</i> | - Rx port number |
| in | <i>cb</i> | - Callback function that is invoked when socket creation is complete. |
| in | <i>idList</i> | - Service ID list to subscribe, optional parameter using nullptr by default. Subscribe wildcard if this parameter is set to nullptr. |

Returns

SUCCESS on success. Error status otherwise.

Dependencies The interface must be pre-initialized with `init()`.

5.26.1.4.2.8 `virtual telux::common::Status telux::cv2x::ICv2xRadio::enableRxMetaDataReport (TrafficIpType ipType, bool enable, std::shared_ptr< std::vector< std::uint32_t >> idList, telux::common::ResponseCallback cb) [pure virtual]`

Enable or disable (depends on the parameter "bool enable") the received packets' meta data report for the service IDs provided.

The meta data consist of RF RSSI (received signal strength indicator) status, 32-bit SCI Format 1 (3GPP TS 36.213, section 14.1), packet delay estimation, L2 destination ID, and the resource blocks used for the packet's transmission: subframe, subchannel index.

Parameters

| | | |
|----|---------------|---|
| in | <i>ipType</i> | - IP traffic type (IP or NON-IP) |
| in | <i>enable</i> | - enable the rx meta data if set to true, otherwise disable |
| in | <i>idList</i> | - Service ID list of which the received packets' report are desired |
| in | <i>cb</i> | - Callback that is invoked when meta data is enabled or disabled. |

Returns

SUCCESS if no error occurred

Meta data report for IP packets is not supported yet, it will return NOSUPPORTED.

5.26.1.4.2.9 `virtual telux::common::Status telux::cv2x::ICv2xRadio::createTxSpsFlow (TrafficIpType ipType, uint32_t serviceId, const SpsFlowInfo & spsInfo, uint16_t spsSrcPort, bool eventSrcPortValid, uint16_t eventSrcPort, CreateTxSpsFlowCallback cb) [pure virtual]`

Creates a Tx SPS flow with the specified IP type, serviceId, and other parameters specified in reservation. Additionally, an option event flow will be created with the same IP type and serviceId. A Tx socket will be created and initialized for the SPS flow. A Tx socket will be created and initialized for the event flow if the optional event flow is specified.

Parameters

| | | |
|----|------------------|--|
| in | <i>ipType</i> | - IP traffic type (IP or NON-IP) |
| in | <i>serviceId</i> | - ID used for transmissions that will be mapped to an L2 destination address. Variable length 4-byte PSID or ITS_AID, or another service ID. |
| in | <i>spsInfo</i> | - SPS reservation parameters. |

| | | |
|----|--------------------------|---|
| in | <i>spsPort</i> | - Requested source port number for the bandwidth reserved SPS transmissions. |
| in | <i>eventSrcPortValid</i> | - True if an optional event flow is desired. If this field is left false, the event flow will not be created. |
| in | <i>eventSrcPort</i> | - Requested source port number for the optional event flow. |
| in | <i>cb</i> | - Callback function that is invoked when socket creation is complete. This must not be null. |

This caller is expected to identify two unused local port numbers

to use for binding: one for the event-driven flow and one for the SPS flow.

Returns

SUCCESS upon success. Error status otherwise.

5.26.1.4.2.10 virtual telux::common::Status telux::cv2x::ICv2xRadio::createTxEventFlow (TrafficIpType ipType, uint32_t serviceId, uint16_t eventSrcPort, CreateTxEventFlowCallback cb) [pure virtual]

Creates an event flow. An associated Tx socket will be created and initialized.

Parameters

| | | |
|----|---------------------|--|
| in | <i>ipType</i> | - IP traffic type (IP or NON-IP) |
| in | <i>serviceId</i> | - ID used for transmissions that will be mapped to an L2 destination address. Variable length 4-byte PSID or ITS_AID, or another service ID. |
| in | <i>eventSrcPort</i> | - Local port number to which the socket is bound. Used for transmissions of this ID. |
| in | <i>cb</i> | - Callback function that is invoked when socket creation is complete. This must not be null. |

Detailed description This function is used only for TX when no periodicity is

available for the application type. If your transmit data periodicity is known, use [createTxSpsFlow\(\)](#) instead.

These even-driven sockets pay attention to the QoS parameters in

the IP socket.

Returns

SUCCESS upon success. Error status otherwise.

5.26.1.4.2.11 `virtual telux::common::Status telux::cv2x::ICv2xRadio::createTxEventFlow (TrafficIpType ipType, uint32_t serviceId, const EventFlowInfo & flowInfo, uint16_t eventSrcPort, CreateTxEventFlowCallback cb) [pure virtual]`

Creates an event flow. An associated Tx socket will be created and initialized.

Parameters

| | | |
|----|---------------------|--|
| in | <i>ipType</i> | - IP traffic type (IP or NON-IP) |
| in | <i>serviceId</i> | - ID used for transmissions that will be mapped to an L2 destination address. Variable length 4-byte PSID or ITS_AID, or another service ID. |
| in | <i>flowInfo</i> | - Flow configuration parameters |
| in | <i>eventSrcPort</i> | - Local port number to which the socket is bound. Used for transmissions of this ID. |
| in | <i>cb</i> | - Callback function that is invoked when socket creation is complete. This must not be null. |

Detailed description This function is used only for TX when no periodicity is

available for the application type. If your transmit data periodicity is known, use [createTxSpsFlow\(\)](#) instead.

These even-driven sockets pay attention to the QoS parameters in

the IP socket.

Returns

SUCCESS upon success. Error status otherwise.

5.26.1.4.2.12 `virtual telux::common::Status telux::cv2x::ICv2xRadio::closeRxSubscription (std::shared_ptr< ICv2xRxSubscription > rxSub, CloseRxSubscriptionCallback cb) [pure virtual]`

Closes the RxSubscription and frees resources (such as the Rx socket) associated with it.

Parameters

| | | |
|----|--------------|---|
| in | <i>rxSub</i> | - RxSubscription to close |
| in | <i>cb</i> | - Callback that is invoked when socket close is complete. This may be null. |

Returns

SUCCESS if no error occurred.

5.26.1.4.2.13 virtual telux::common::Status telux::cv2x::ICv2xRadio::closeTxFlow (std::shared_ptr< ICv2xTxFlow > *txFlow*, CloseTxFlowCallback *cb*) [pure virtual]

Closes the TxFlow and frees resources associated with it (such as reserved SPS bandwidth contracts and sockets). This function works on both SPS and event flows.

Parameters

| | | |
|----|---------------|--|
| in | <i>txFlow</i> | - Tx (SPS or event) flow to close. |
| in | <i>cb</i> | - Callback that is invoked when Tx flow close is complete. This may be null. |

Returns

SUCCESS if no error occurred.

5.26.1.4.2.14 virtual telux::common::Status telux::cv2x::ICv2xRadio::changeSpsFlowInfo (std::shared_ptr< ICv2xTxFlow > *txFlow*, const SpsFlowInfo & *spsInfo*, ChangeSpsFlowInfoCallback *cb*) [pure virtual]

Request to change TX SPS Flow reservation parameters.

Parameters

| | | |
|----|----------------|---|
| in | <i>txFlow</i> | - Tx SPS flow |
| in | <i>spsInfo</i> | - Desired SPS reservation parameters |
| in | <i>cb</i> | - Callback that is invoked upon reservation change. This may be null. |

Detailed description

This function does not update reservation priority

Returns

SUCCESS if no error occurred.

5.26.1.4.2.15 virtual telux::common::Status telux::cv2x::ICv2xRadio::requestSpsFlowInfo (std::shared_ptr< ICv2xTxFlow > *txFlow*, RequestSpsFlowInfoCallback *cb*) [pure virtual]

Request SPS flow info.

Parameters

| | | |
|----|-------------|---|
| in | <i>sock</i> | - Tx SPS flow |
| in | <i>cb</i> | - Callback that will be invoked and returns the SPS info. Must not be null. |

Returns

SUCCESS if no error occurred.

5.26.1.4.2.16 virtual telux::common::Status telux::cv2x::ICv2xRadio::changeEventFlowInfo (std::shared_ptr< ICv2xTxFlow > *txFlow*, const EventFlowInfo & *flowInfo*, ChangeEventFlowInfoCallback *cb*) [pure virtual]

Request to change TX Event Flow reservation parameters.

Parameters

| | | |
|----|-----------------|---|
| in | <i>txFlow</i> | - Tx Event flow |
| in | <i>flowInfo</i> | - Desired Event flow parameters |
| in | <i>cb</i> | - Callback that is invoked upon parameter change. This may be null. |

Returns

SUCCESS if no error occurred.

5.26.1.4.2.17 virtual telux::common::Status telux::cv2x::ICv2xRadio::requestCapabilities (RequestCapabilitiesCallback *cb*) [pure virtual]

Request modem Cv2x capability information.

Parameters

| | | |
|----|-----------|--|
| in | <i>cb</i> | - Callback that will be invoked and returns the capability info. Must not be null. |
|----|-----------|--|

Returns

SUCCESS if no error occurred.

5.26.1.4.2.18 virtual telux::common::Status telux::cv2x::ICv2xRadio::requestDataSessionSettings (RequestDataSessionSettingsCallback *cb*) [pure virtual]

Request data session settings currently in use.

Parameters

| | | |
|----|-----------|--|
| in | <i>cb</i> | - Callback that will be invoked and returns the data session settings. Must not be null. |
|----|-----------|--|

Returns

SUCCESS if no error occurred.

5.26.1.4.2.19 `virtual telux::common::Status telux::cv2x::ICv2xRadio::updateSrcL2Info (UpdateSrcL2Info callback cb) [pure virtual]`

Requests modem to change L2 info.

Parameters

| | | |
|----|-----------|---|
| in | <i>cb</i> | - Callback that will be invoked and returns status. Must not be null. |
|----|-----------|---|

Returns

SUCCESS if no error occurred.

5.26.1.4.2.20 `virtual telux::common::Status telux::cv2x::ICv2xRadio::updateTrustedUEList (const TrustedUEInfoList & infoList, UpdateTrustedUEListCallback cb) [pure virtual]`

Send request to modem to update the list of malicious UE source IDs and trusted UE source IDs with corresponding confidence information.

Parameters

| | | |
|----|-----------------|---|
| in | <i>infoList</i> | - Trusted and malicious UE information list |
| in | <i>cb</i> | - Callback that will be invoked and returns status. Must not be null. |

Returns

SUCCESS if no error occurred.

5.26.1.4.2.21 `virtual std::string telux::cv2x::ICv2xRadio::getInterfaceNameFromIpType (TrafficIpType ipType) [pure virtual]`

Get interface name based on ipType.

Parameters

| | |
|---------------|----------------------------------|
| <i>ipType</i> | - IP traffic type (IP or NON-IP) |
|---------------|----------------------------------|

Returns

Interface name as a string

5.26.1.4.2.22 `virtual telux::common::Status telux::cv2x::ICv2xRadio::createCv2xTcpSocket (const EventFlowInfo & eventInfo, const SocketInfo & sockInfo, CreateTcpSocketCallback cb) [pure virtual]`

Creates a CV2X TCP socket with specified event flow information and TCP socket information. The TCP socket will be created and bound to the IPv6 address of local IP interface with specified source port.

Additionally, this API also registers a Tx event flow and subscribes Rx with specified service ID. If the created socket is expected to work as TCP client mode, the caller must connect the created socket to a destination using `connect()` and then use the socket for `send()` and `recv()` on successful connection. If the created socket is expected to work as TCP server mode, the caller must mark this socket as a listening socket using `listen()` and accept connections received from this listening socket using `accept()`, and then use the accepted sockets returned from `accept()` for `send()` or `recv()`.

Parameters

| | | |
|----|------------------|--|
| in | <i>eventInfo</i> | - Information for the Event flow. |
| in | <i>sockInfo</i> | - Information for the TCP socket. |
| in | <i>cb</i> | - Callback function that is invoked when socket creation is complete. This must not be null. |

The caller is expected to identify an unused local port number as the source

port number in structure [SocketInfo](#) to use for binding.

The caller must release the created socket and associated resources with

[closeCv2xTcpSocket](#). Additionally, if the created socket is marked as a listening socket, the caller must close all the accepted sockets returned by `accept()` using `close()` first, and then release the listening socket and associated resources by calling [closeCv2xTcpSocket](#).

Returns

SUCCESS upon success. Error status otherwise.

5.26.1.4.2.23 `virtual telux::common::Status telux::cv2x::ICv2xRadio::closeCv2xTcpSocket (std::shared_ptr< ICv2xTxRxSocket > sock, CloseTcpSocketCallback cb) [pure virtual]`

Closes the CV2X TCP socket and frees resources associated with it (such as registered event Tx flow and subscribed Rx service ID and created TCP socket).

Parameters

| | | |
|----|-------------|--|
| in | <i>sock</i> | - CV2X TCP socket to close. |
| in | <i>cb</i> | - Callback that is invoked when CV2X TCP socket close is complete. This may be null. |

Returns

SUCCESS if no error occurred.

5.26.1.4.2.24 `virtual telux::common::Status telux::cv2x::ICv2xRadio::registerTxStatusReport↔
Listener (uint16_t port, std::shared_ptr< ICv2xTxStatusReportListener > listener,
telux::common::ResponseCallback cb) [pure virtual]`

Registers a listener for Tx status report.

Parameters

| | | |
|----|-----------------|---|
| in | <i>port</i> | - Set this value to the port number of registered Tx Flow if user wants to receive Tx status report associated with its own Tx flow. If user wants to receive Tx status report associated with all Tx flows in system, set this value to 0. |
| in | <i>listener</i> | - Listener that implements ICv2xTxStatusReportListener interface. |
| in | <i>cb</i> | - Callback that is invoked when the registration of CV2X Tx status report is complete. |

5.26.1.4.2.25 `virtual telux::common::Status telux::cv2x::ICv2xRadio::deregisterTxStatusReportListener
(uint16_t port, telux::common::ResponseCallback cb) [pure virtual]`

Deregisters a listener for Tx status report.

Parameters

| | | |
|----|-------------|---|
| in | <i>port</i> | - Port number of previously registered ICv2xTxStatusReport↔Listener that is to be deregistered. If the listener is registered with port number 0, set this value to 0 to deregister the listener. |
| in | <i>cb</i> | - Callback that is invoked when the deregistration of CV2X Tx status report is complete. |

5.26.1.4.2.26 `virtual telux::common::Status telux::cv2x::ICv2xRadio::setGlobalIPInfo (const
IPv6AddrType & ipv6Addr, common::ResponseCallback cb) [pure virtual]`

Set CV2X global IP address for the IP interface.

Use case and Precondition: OBU: Registers a TX/RX *NON IP* flow for receiving the signed WSA/WRA for IP session initiation; Once receives the IP prefix in the WDS/WRA from RSU, call this method.

RSU: Specifies its own global prefix via this method, and creates/composes WSA/WRA advertising the IP configs.

Parameters

| | | |
|----|-----------------|---|
| in | <i>ipv6Addr</i> | - CV2X global IP address. |
| in | <i>cb</i> | - Callback that is invoked when set the global IP address complete. This may be null. |

Returns

SUCCESS if no error occurred.

5.26.1.4.2.27 virtual telux::common::Status telux::cv2x::ICv2xRadio::setGlobalIPUnicastRoutingInfo (const GlobalIPUnicastRoutingInfo & destL2Addr, common::ResponseCallback cb) [pure virtual]

Set CV2X IP interface global IP unicast routing information.

Use case and Precondition: OBU: Registers a TX/RX *NON IP* flow for receiving the signed WSA/WRA for IP session initiation; Once receives the IP prefix in the WSA/WRA from RSU, call the [setGlobalIPInfo](#) method to update the ip interface with global IP; Now call this method to set the routing information with dest L2 addr negotiated in WSA/WRA.

RSU: Specifies its own global prefix via [setGlobalIPInfo](#), and creates/composes WSA/WRA advertising the IP configs; Now set routing information of its own via this method.

Parameters

| | | |
|----|-------------------|---|
| in | <i>destL2Addr</i> | - CV2X destination L2 address for unicast routing purpose. |
| in | <i>cb</i> | - Callback that is invoked when set global IP unicast routing information complete. This may be null. |

Returns

SUCCESS if no error occurred.

5.26.1.5 class telux::cv2x::ICv2xRadioListener

Listeners for Cv2xRadio must implement this interface.

Public member functions

- virtual void [onStatusChanged](#) (Cv2xStatus status)
- virtual void [onStatusChanged](#) (Cv2xStatusEx status)
- virtual void [onL2AddrChanged](#) (uint32_t newL2Address)
- virtual void [onSpsOffsetChanged](#) (int spsId, [MacDetails](#) details)
- virtual void [onSpsSchedulingChanged](#) (const [SpsSchedulingInfo](#) &schedulingInfo)
- virtual void [onCapabilitiesChanged](#) (const [Cv2xRadioCapabilities](#) &capabilities)
- virtual [~ICv2xRadioListener](#) ()

5.26.1.5.1 Constructors and Destructors

5.26.1.5.1.1 virtual telux::cv2x::ICv2xRadioListener::~~ICv2xRadioListener () [virtual]

Destructor for [ICv2xRadioListener](#)

5.26.1.5.2 Member Function Documentation

5.26.1.5.2.1 virtual void telux::cv2x::ICv2xRadioListener::onStatusChanged (Cv2xStatus *status*) [virtual]

Called when the status of the CV2X radio has changed.

Parameters

| | | |
|----|---------------|----------------------|
| in | <i>status</i> | - CV2X radio status. |
|----|---------------|----------------------|

Deprecated use onStatusChanged in Cv2xListener

5.26.1.5.2.2 virtual void telux::cv2x::ICv2xRadioListener::onStatusChanged (Cv2xStatusEx *status*) [virtual]

Called when the status of the CV2X radio has changed.

Parameters

| | | |
|----|---------------|----------------------|
| in | <i>status</i> | - CV2X radio status. |
|----|---------------|----------------------|

Deprecated use onStatusChanged in Cv2xListener

5.26.1.5.2.3 virtual void telux::cv2x::ICv2xRadioListener::onL2AddrChanged (uint32_t *newL2Address*) [virtual]

Called when the L2 Address has changed.

Parameters

| | | |
|----|---------------------|-----------------------|
| in | <i>newL2Address</i> | - The new L2 address. |
|----|---------------------|-----------------------|

5.26.1.5.2.4 virtual void telux::cv2x::ICv2xRadioListener::onSpsOffsetChanged (int *spsId*, MacDetails *details*) [virtual]

Called when SPS offset has changed.

Parameters

| | | |
|----|----------------|----------------------------|
| in | <i>spsId</i> | - SPS Id of the SPS flow |
| in | <i>details</i> | - new SPS MAC PHY details. |

Deprecated use onSpsSchedulingChanged

5.26.1.5.2.5 virtual void telux::cv2x::ICv2xRadioListener::onSpsSchedulingChanged (const SpsSchedulingInfo & *schedulingInfo*) [virtual]

Called when SPS scheduling has changed.

Parameters

| | | |
|----|-----------------------|--------------------------------|
| in | <i>schedulingInfo</i> | - SPS scheduling information . |
|----|-----------------------|--------------------------------|

5.26.1.5.2.6 virtual void telux::cv2x::ICv2xRadioListener::onCapabilitiesChanged (const Cv2xRadioCapabilities & *capabilities*) [virtual]

Called when Cv2x radio capabilities have changed.

Parameters

| | | |
|----|---------------------|------------------------------------|
| in | <i>capabilities</i> | - Capabilities of the CV2X radio . |
|----|---------------------|------------------------------------|

5.26.1.6 class telux::cv2x::ICv2xRadioManager

Cv2xRadioManager manages instances of Cv2xRadio.

Public member functions

- virtual bool [isReady](#) ()=0
- virtual std::future< bool > [onReady](#) ()=0
- virtual [telux::common::ServiceStatus getServiceStatus](#) ()=0
- virtual std::shared_ptr< ICv2xRadio > [getCv2xRadio](#) (TrafficCategory category)=0
- virtual [telux::common::Status startCv2x](#) (StartCv2xCallback cb)=0
- virtual [telux::common::Status stopCv2x](#) (StopCv2xCallback cb)=0
- virtual [telux::common::Status requestCv2xStatus](#) (RequestCv2xStatusCallback cb)=0
- virtual [telux::common::Status requestCv2xStatus](#) (RequestCv2xStatusCallbackEx cb)=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< ICv2xListener > listener)=0
- virtual [telux::common::Status deregisterListener](#) (std::weak_ptr< ICv2xListener > listener)=0
- virtual [telux::common::Status updateConfiguration](#) (const std::string &configFilePath, UpdateConfigurationCallback cb)=0
- virtual [telux::common::Status setPeakTxPower](#) (int8_t txPower, common::ResponseCallback cb)=0
- virtual [telux::common::Status setL2Filters](#) (const std::vector< L2FilterInfo > &filterList, common::ResponseCallback cb)=0
- virtual [telux::common::Status removeL2Filters](#) (const std::vector< uint32_t > &l2IdList, common::ResponseCallback cb)=0

- virtual [~ICv2xRadioManager](#) ()

5.26.1.6.1 Constructors and Destructors

5.26.1.6.1.1 virtual `telux::cv2x::ICv2xRadioManager::~~ICv2xRadioManager () [virtual]`

5.26.1.6.2 Member Function Documentation

5.26.1.6.2.1 virtual `bool telux::cv2x::ICv2xRadioManager::isReady () [pure virtual]`

Checks if the Cv2x Radio Manager is ready.

Returns

True if Cv2x Radio Manager is ready for service, otherwise returns false.

Deprecated use `getServiceStatus` instead

5.26.1.6.2.2 virtual `std::future<bool> telux::cv2x::ICv2xRadioManager::onReady () [pure virtual]`

Wait for Cv2x Radio Manager to be ready.

Returns

A future that caller can wait on to be notified when Cv2x Radio Manager is ready.

Deprecated the readiness can be notified via the callback passed to [Cv2xFactory::getCv2xRadioManager](#).

5.26.1.6.2.3 virtual `telux::common::ServiceStatus telux::cv2x::ICv2xRadioManager::getServiceStatus () [pure virtual]`

This status indicates whether the Cv2xRadioManager is in a usable state.

Returns

`SERVICE_AVAILABLE` - If `cv2x` radio manager is ready for service. `SERVICE_UNAVAILABLE` - If `cv2x` radio manager is temporarily unavailable. `SERVICE_FAILED` - If `cv2x` radio manager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.26.1.6.2.4 virtual std::shared_ptr<ICv2xRadio> telux::cv2x::ICv2xRadioManager::getCv2xRadio (TrafficCategory *category*) [pure virtual]

Get Cv2xRadio instance

Parameters

| | | |
|-----------|-----------------|---|
| <i>in</i> | <i>category</i> | - Specifies the category of the client application. This field is currently unused. |
|-----------|-----------------|---|

Returns

Reference to Cv2xRadio interface that corresponds to the Cv2x Traffic Category specified.

5.26.1.6.2.5 virtual telux::common::Status telux::cv2x::ICv2xRadioManager::startCv2x (StartCv2x↔ Callback *cb*) [pure virtual]

Put modem into CV2X mode.

Parameters

| | | |
|-----------|-----------|--|
| <i>in</i> | <i>cb</i> | - Callback that is invoked when Cv2x mode is started |
|-----------|-----------|--|

Returns

SUCCESS on success. Error status otherwise.

5.26.1.6.2.6 virtual telux::common::Status telux::cv2x::ICv2xRadioManager::stopCv2x (StopCv2x↔ Callback *cb*) [pure virtual]

Take modem out of CV2X mode

Parameters

| | | |
|-----------|-----------|--|
| <i>in</i> | <i>cb</i> | - Callback that is invoked when Cv2x mode is stopped |
|-----------|-----------|--|

Returns

SUCCESS on success. Error status otherwise.

5.26.1.6.2.7 virtual telux::common::Status telux::cv2x::ICv2xRadioManager::requestCv2xStatus (RequestCv2xStatusCallback *cb*) [pure virtual]

request CV2X status from modem

Parameters

| | | |
|-----------|-----------|--|
| <i>in</i> | <i>cb</i> | - Callback that is invoked when Cv2x status is retrieved |
|-----------|-----------|--|

Returns

SUCCESS on success. Error status otherwise.

Deprecated use requestCv2xStatus(RequestCv2xCallbackEx)

5.26.1.6.2.8 virtual telux::common::Status telux::cv2x::ICv2xRadioManager::requestCv2xStatus (RequestCv2xStatusCallbackEx *cb*) [pure virtual]

request CV2X status from modem

Parameters

| | | |
|----|-----------|--|
| in | <i>cb</i> | - Callback that is invoked when Cv2x status is retrieved |
|----|-----------|--|

Returns

SUCCESS on success. Error status otherwise.

5.26.1.6.2.9 virtual telux::common::Status telux::cv2x::ICv2xRadioManager::registerListener (std::weak_ptr< ICv2xListener > *listener*) [pure virtual]

Registers a listener for this manager.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | - Listener that implements Cv2xListener interface. |
|----|-----------------|--|

5.26.1.6.2.10 virtual telux::common::Status telux::cv2x::ICv2xRadioManager::deregisterListener (std::weak_ptr< ICv2xListener > *listener*) [pure virtual]

Deregisters a Cv2xListener for this manager.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | - Previously registered CvListener that is to be deregistered. |
|----|-----------------|--|

5.26.1.6.2.11 virtual telux::common::Status telux::cv2x::ICv2xRadioManager::updateConfiguration (const std::string & *configFilePath*, UpdateConfigurationCallback *cb*) [pure virtual]

Updates CV2X configuration. Requires CV2X TX/RX radio status be Inactive. If CV2X radio status is Active or Suspended, call [stopCv2x](#) before updateConfiguration.

Parameters

| | | |
|----|-----------------------|---|
| in | <i>configFilePath</i> | - Path to config file. |
| in | <i>cb</i> | - Callback that is invoked when the send is complete. This may be null. |

Deprecated Use `ICv2xConfig` instead

5.26.1.6.2.12 `virtual telux::common::Status telux::cv2x::ICv2xRadioManager::setPeakTxPower (int8_t txPower, common::ResponseCallback cb) [pure virtual]`

Set RF peak `cv2x` transmit power. This affects the power for all existing flows and for any flow created in the future

Parameters

| | | |
|----|----------------|---|
| in | <i>txPower</i> | - Desired global Cv2x peak tx power in dbm |
| in | <i>cb</i> | - Callback that is invoked when Cv2x peak tx power is set |

Returns

SUCCESS on success. Error status otherwise.

5.26.1.6.2.13 `virtual telux::common::Status telux::cv2x::ICv2xRadioManager::setL2Filters (const std::vector< L2FilterInfo > & filterList, common::ResponseCallback cb) [pure virtual]`

Request to install remote UE src L2 filters. This affects receiving of the UEs' packets in specified period with specified PPPP

Parameters

| | | |
|----|-------------------|---|
| in | <i>filterList</i> | - remote UE src L2 Id, filter duration and PPPP list, max size 50 |
| in | <i>cb</i> | - Callback that is invoked when the request is sent |

Returns

SUCCESS on success. Error status otherwise.

5.26.1.6.2.14 `virtual telux::common::Status telux::cv2x::ICv2xRadioManager::removeL2Filters (const std::vector< uint32_t > & l2IdList, common::ResponseCallback cb) [pure virtual]`

Remove the previously installed filters matching src L2 address list. Hence forth this would allow reception of packets from specified UE's

Parameters

| | | |
|----|-----------------|---|
| in | <i>l2IdList</i> | - remote UE src L2 Id list, max size 50 |
| in | <i>cb</i> | - Callback that is invoked when the request is sent |

Returns

SUCCESS on success. Error status otherwise.

5.26.1.7 struct telux::cv2x::SocketInfo

Encapsulates parameters of a CV2X socket.

Used in createCv2xTcpSocket.

Data fields

| Type | Field | Description |
|----------|-----------|---|
| uint32_t | serviceId | V2X service ID bound to the socket. |
| uint16_t | localPort | Local port number of the socket used for binding. |

5.26.1.8 struct telux::cv2x::Cv2xStatus

Encapsulates status of CV2X radio.

Used in Cv2xRadioManager:requestV2xStatus and Cv2xRadioListener.

Data fields

| Type | Field | Description |
|--------------------------------------|---------------|---------------------|
| Cv2xStatus ↔ Type | rxStatus | RX status |
| Cv2xStatus ↔ Type | txStatus | TX status |
| Cv2xCause ↔ Type | rxCause | RX cause of failure |
| Cv2xCause ↔ Type | txCause | TX cause of failure |
| uint8_t | cbrValue | Channel Busy Ratio |
| bool | cbrValueValid | CBR value is valid |

5.26.1.9 struct telux::cv2x::Cv2xPoolStatus

Encapsulates status for single pool.

Used in [Cv2xStatusEx](#).

Data fields

| Type | Field | Description |
|----------------------------|--------|-------------|
| uint8_t | poolId | pool ID |
| Cv2xStatus | status | status |

5.26.1.10 struct telux::cv2x::Cv2xStatusEx

Encapsulates status of CV2X radio and per pool status.

Used in Cv2xRadioManager:requestV2xStatus and Cv2xRadioListener.

Data fields

| Type | Field | Description |
|---|--------------------------------|--|
| Cv2xStatus | status | Overall Cv2x status |
| vector< Cv2xPool↔ Status > | poolStatus | Multi pool status vector |
| bool | time↔ Uncertainty↔ Valid | Time uncertainty value is valid |
| float | time↔ Uncertainty | Time uncertainty value in milliseconds |

5.26.1.11 struct telux::cv2x::TxPoolIdInfo

Contains minimum and maximum frequency for a given TX pool ID. Multiple TX Pools allow the same radio and overall frequency range to be shared for multiple types of traffic like V2V and V2X. Each pool ID and frequency range corresponds to a certain type of traffic.

Used in [Cv2xRadioCapabilities](#)

Data fields

| Type | Field | Description |
|----------|---------|---------------------------|
| uint8_t | poolId | TX pool ID. |
| uint16_t | minFreq | Minimum frequency in MHz. |
| uint16_t | maxFreq | Maximum frequency in MHz. |

5.26.1.12 struct telux::cv2x::EventFlowInfo

Contains event flow configuration parameters.

Used in createTxEventFlow

Data fields

| Type | Field | Description |
|---------|------------------------------|--|
| bool | autoRetrans↔ EnabledValid | Set to true if autoRetransEnabled field is specified. If false, the system will use the default setting. |
| bool | autoRetrans↔ Enabled | Used to enable automatic-retransmissions. |
| bool | peakTxPower↔ Valid | Set to true if peakTxPower is used. If false, the system will use the default setting. |
| int32_t | peakTxPower | Max Tx power setting in dBm. |
| bool | mcsIndexValid | Set to true if mcsIndex is used. If false, the system will use its default setting. |
| uint8_t | mcsIndex | Modulation and Coding Scheme Index to use. |
| bool | txPoolIdValid | Set to true if txPoolId is used. If false, the system will use its default setting. |
| uint8_t | txPoolId | Transmission Pool ID. |

| Type | Field | Description |
|------|-----------|--|
| bool | isUnicast | Set to true if isUnicast flow. If false, Non-Unicast flow will be created. Note: Unicast flows ignore subscribed Service Ids |

5.26.1.13 struct telux::cv2x::SpsFlowInfo

Used to request the QoS bandwidth contract, implemented in PC5 3GPP V2X radio as a *Semi Persistent Flow* (SPS).

The underlying radio providing the interface might support periodicities of various granularity in 100ms integer multiples (e.g. 200ms, 300ms).

Used in txSpsCreateAndBindSock and changeSpsFlowInfo

Data fields

| Type | Field | Description |
|-------------|------------------------------|--|
| Priority | priority | Specifies one of the 3GPP levels of Priority for the traffic that is pre-reserved on the SPS flow. Default is PRIORITY_2. Use getCapabilities() to discover the supported priority levels. : periodicity, Use new periodicityMs instead |
| Periodicity | periodicity | |
| uint64_t | periodicityMs | This is the new interface to specify periodicity in milliseconds for SpsFlowInfo . Enum Periodicity is deprecated and will be removed in future release. Bandwidth-reserved periodicity interval in interval in milliseconds. There are limits on which intervals the underlying radio supports. Use getCapabilities() to discover minPeriodicityMultiplierMs and maximumPeriodicityMs. |
| uint32_t | nbytesReserved | Number of bytes of TX bandwidth that are sent every periodicity interval. |
| bool | autoRetrans↔ EnabledValid | Set to true if autoRetransEnabled field is specified. If false, the system will use the default setting. |
| bool | autoRetrans↔ Enabled | Used to enable automatic-retransmissions. |
| bool | peakTxPower↔ Valid | Set to true if peakTxPower is used. If false, the system will use the default setting. |
| int32_t | peakTxPower | Max Tx power setting in dBm. |
| bool | mcsIndexValid | Set to true if mcsIndex is used. If false, the system will use its default setting. |
| uint8_t | mcsIndex | Modulation and Coding Scheme Index to use. |
| bool | txPoolIdValid | Set to true if txPoolId is used. If false, the system will use its default setting. |
| uint8_t | txPoolId | Transmission Pool ID. |

5.26.1.14 struct telux::cv2x::Cv2xRadioCapabilities

Contains capabilities of the Cv2xRadio.

Used in requestCapabilities and onCapabilitiesChanged

Data fields

| Type | Field | Description |
|--------------------------------|-------------------------------------|--|
| uint32_t | linkIpMtuBytes | Maximum data payload length (in bytes) of a packet supported by the IP Radio interface. |
| uint32_t | linkNonIp↔ MtuBytes | Maximum data payload length (in bytes) of a packet supported by the non-IP Radio interface. |
| Radio↔ Concurrency↔ Mode | max↔ Supported↔ Concurrency | Indicates whether this interface supports concurrent WWAN with V2X (PC5). |
| uint16_t | nonIpTx↔ Payload↔ OffsetBytes | Byte offset in a non-IP Tx packet before the actual payload begins. |
| uint16_t | nonIpRx↔ Payload↔ OffsetBytes | Byte offset in a non-IP Rx packet before the actual payload begins. : periodicitiesSupported, Use new periodicities instead |
| bitset< 8 > | periodicities↔ Supported | |
| vector< uint64_t > | periodicities | Specifies the periodicities supported |
| uint8_t | maxNum↔ Auto↔ Retransmissions | Least frequent bandwidth periodicity that is supported. Above this value, use event-driven periodic messages of a period larger than this value. |
| uint8_t | layer2Mac↔ AddressSize | Size of the L2 MAC address. Different Radio Access Technologies have different-sized L2 MAC addresses: 802.11 has 6 bytes, whereas 3GPP PC5 has only 3 bytes. Because a randomized MAC address comes from an HSM with good pseudo random entropy, higher layers must know how many bytes of the MAC address to generate. |
| bitset< 8 > | priorities↔ Supported | Bit set of different priority levels supported by this Cv2xRadio. Refer to Priority |
| uint16_t | maxNumSps↔ Flows | Maximum number of supported SPS reservations. |
| uint16_t | maxNumNon↔ SpsFlows | Maximum number of supported event flows (non-SPS ports). |
| int32_t | maxTxPower | Maximum supported transmission power. |
| int32_t | minTxPower | Minimum supported transmission power. |
| vector< Tx↔ PoolIdInfo > | txPoolIds↔ Supported | Vector of supported transmission pool IDs. |
| uint8_t | isUnicast↔ Supported | Non zero value if UDP event unicast is supported. |

5.26.1.15 struct telux::cv2x::MacDetails

Contains MAC information that is reported from the actual MAC SPS in the radio. The offsets can periodically change on any given transmission report.

Data fields

| Type | Field | Description |
|----------|---------------------------------|--|
| uint32_t | periodicityInUseNs↔ | Actual transmission interval period (in nanoseconds) scheduled relative to 1PP 0:00.00 time |
| uint16_t | currentlyReservedPeriodicBytes↔ | Actual number of bytes currently reserved at the MAC layer. This number can be slightly larger than original request. |
| uint32_t | txReservationOffsetNs↔ | Actual offset, from a 1PPS pulse and TX flow periodicity, that the MAC selected and is using for the transmit reservation. If the data goes to the radio with enough time, it can be transmitted on the medium in the next immediately scheduled slot. |

5.26.1.16 struct telux::cv2x::SpsSchedulingInfo

Contains SPS packet scheduling information that is reported from the radio.

Used in onSpsSchedulingChanged

Data fields

| Type | Field | Description |
|----------|-------------|--|
| uint8_t | spsId | SPS ID |
| uint64_t | utcTime | Absolute UTC start time of next selected grant in nanoseconds. |
| uint32_t | periodicity | Periodicity of the grant in milliseconds. |

5.26.1.17 struct telux::cv2x::TrustedUEInfo

Contains time confidence, position confidence, and propagation delay for a trusted UE.

Used in [TrustedUEInfo](#)

Data fields

| Type | Field | Description |
|----------|----------------------|---|
| uint32_t | sourceL2Id | Trusted Source L2 ID |
| float | timeUncertainty | Time uncertainty value in milliseconds. |
| uint16_t | timeConfidenceLevel↔ | Deprecated Use timeUncertainty Time confidence level. Range from 0 to 127 with 0 being invalid/unavailable and 127 being the most confident. |

| Type | Field | Description |
|----------|-----------------------------------|---|
| uint16_t | position↔ Confidence↔ Level | Position confidence level. Range from 0 to 127 with 0 being invalid/unavailable and 127 being the most confident. |
| uint32_t | propagation↔ Delay | Propagation delay in microseconds. |

5.26.1.18 struct telux::cv2x::TrustedUEInfoList

Contains list of malicious UE source L2 IDs. Contains list of trusted UE source L2 IDs and associated confidence values.

Used in updateTrustedUEList

Data fields

| Type | Field | Description |
|--|------------------------|--|
| bool | maliciousIds↔ Valid | Malicious remote UE sources are valid. |
| vector< uint32_t > | maliciousIds | Malicious remote UE source L2 IDs. |
| bool | trustedUEs↔ Valid | Trusted remote UE sources are valid. |
| vector< TrustedUE↔ Info > | trustedUEs | Trusted remote UE sources. |

5.26.1.19 struct telux::cv2x::IPv6Address

Contains IPv6 address.

Used in [DataSessionSettings](#)

Data fields

| Type | Field | Description |
|---------|----------|-------------|
| uint8_t | addr[16] | |

5.26.1.20 struct telux::cv2x::DataSessionSettings

Contains packet data session settings.

Used in requestDataSessionSettings

Data fields

| Type | Field | Description |
|----------|---------------|---------------------------------------|
| bool | mtuValid | Set to true if mtu is valid. |
| uint32_t | mtu | MTU size. |
| bool | ipv6AddrValid | Set to true if ipv6 address is valid. |

| Type | Field | Description |
|-----------------------------|----------|---------------|
| IPv6Address | ipv6Addr | IPv6 address. |

5.26.1.21 struct telux::cv2x::ConfigEventInfo

Information about any update to a CV2X config file.

Used in [onConfigFileChanged](#)

Data fields

| Type | Field | Description |
|--|--------|----------------------------------|
| ConfigSource↔ Type | source | The type of the V2X config file. |
| ConfigEvent | event | V2X config event. |

5.26.1.22 struct telux::cv2x::L2FilterInfo

Contains remote UE source L2 ID that modem will drop on Rx.

Used in [setL2Filters](#)

Data fields

| Type | Field | Description |
|----------|------------|--|
| uint32_t | srcL2Id | < remote UE L2 MAC addr to filter. Duration, in millisecond (resolution 100 msec). 0 means delete the filter |
| uint32_t | durationMs | /* Proximity service per packet priority (PPPP), packets with priority above this value will be dropped. Range 0-7, 0 mean all priority pkts from that UE would be dropped |
| uint8_t | pppp | |

5.26.1.23 struct telux::cv2x::RFTxInfo

Information of Tx chains retrieved from RF per transport block.

Used in [TxStatusReport](#)

Data fields

| Type | Field | Description |
|----------------------------|--------|---|
| RFTxStatus | status | The type of Tx chain status. |
| int32_t | power | Tx power of transmitted TB in dBm*10 format, invalid value is -700. |

5.26.1.24 struct telux::cv2x::TxStatusReport

Information on Tx status of a V2X transport block that is reported from low layer. A V2X packet might trigger multiple reports because of the segmentaion and re-Tx in low layer. If a transport block is dropped in low layer, no report will be triggered for that transport block.

Used in onTxStatusReport

Data fields

| Type | Field | Description |
|-----------------------------|---|--|
| RFTxInfo | rfInfo[MAX_↔ ANTENNAS_↔ _SUPPORT_↔ ED] | RF information of one or two Tx chains. |
| uint8_t | numRb | Number of resource blocks used for the transport block. |
| uint8_t | startRb | Start resource block index used for the transport block. |
| uint8_t | mcs | Modulation and coding scheme used for the transport block that is defined in 3GPP TS 36.213. |
| uint8_t | segNum | Total number of segments of a V2X packet. |
| SegmentType | segType | Segment type of the transport block. |
| TxType | txType | Indication of new Tx or re-Tx of the transport block. |
| uint16_t | otaTiming | OTA timing in format of system frame number*10 + subframe number. |
| uint16_t | port | Port number that can be used to link the report to a specific Tx flow which has the same source port number. |

5.26.1.25 struct telux::cv2x::IPv6AddrType

Encapsulates ipv6 prefix length in bits and ipv6 prefix.

Used in setGlobalIPInfo.

Data fields

| Type | Field | Description |
|---------|---|---|
| uint8_t | prefixLen | < ipv6 address prefix length in bits, range [64, 128] |
| uint8_t | ipv6Addr[C_↔ V2X_IPV6_↔ ADDR_ARR_↔ AY_LEN] | |

5.26.1.26 struct telux::cv2x::GlobalIPUnicastRoutingInfo

Encapsulates destination L2 address.

Used in setGlobalIPUnicastRoutingInfo.

Data fields

| Type | Field | Description |
|---------|---|---|
| uint8_t | destMac↔ Addr[CV2X_↔ MAC_ADD↔ R_LEN] | < Array that stores CV2X L2 MAC address at the last 3 bytes in big endian order |

5.26.1.27 struct telux::cv2x::RxPacketMetaDataReport

Contains the detailed meta data report of a packet received.

The meta data report comes from the same data interface as the packet itself, it consist of RF RSSI (received signal strength indicator) status, 32-bit SCI Format 1 (3GPP TS 36.213, section 14.1), packet delay estimation, L2 destination ID, and the resource blocks used for the packet's transmission: subframe, subchannel index.

The meta data is always received after the successful receipt of the corresponding packet. In order to associate the meta data report with the specific packet, the sfn and subChannelIndex should be present in the packet's payload and the meta data report, so the meta data report can be matched up to the packet.

There is no guarantee that all items listed above will be presented, [metaDataMask](#) need to be used for the validity. Use [telux::cv2x::Cv2xRxMetaDataHelper::getRxMetaDataInfo](#) to extract the meta data.

Data fields

| Type | Field | Description |
|--|----------------------|-------------|
| RxMetaData↔ Validity | metaDataMask | |
| uint16_t | sfn | |
| uint8_t | subChannel↔ Index | |
| uint8_t | subChannel↔ Num | |
| int8_t | prxRssi | |
| int8_t | drxRssi | |
| uint32_t | l2DestinationId | |
| uint32_t | sciFormat1Info | |
| int32_t | delay↔ Estimation | |

5.26.1.28 class telux::cv2x::Cv2xRxMetaDataHelper**Static Public Member Functions**

- static [telux::common::Status](#) [getRxMetaDataInfo](#) (const uint8_t *payload, uint32_t payloadLength, size_t &metaDataLen, std::shared_ptr< std::vector< [RxPacketMetaDataReport](#) >> metaDatas)

5.26.1.28.1 Member Function Documentation

5.26.1.28.1.1 `static telux::common::Status telux::cv2x::Cv2xRxMetaDataHelper::getRxMetaDataInfo (const uint8_t * payload, uint32_t payloadLength, size_t & metaDataLen, std::shared_ptr< std::vector< RxPacketMetaDataReport >> metaDatas) [static]`

5.26.1.29 class telux::cv2x::ICv2xRxSubscription

This class encapsulates a Cv2xRadio Rx Subscription. It contains the Rx socket associated with the subscription from which client applications can read data. This class is referenced in Cv2xRadio::createRxSubscription and Cv2xRadio::closeRxSubscription.

Public member functions

- virtual uint32_t `getSubscriptionId` () const =0
- virtual `TrafficIpType` `getIpType` () const =0
- virtual int `getSock` () const =0
- virtual struct sockaddr_in6 `getSockAddr` () const =0
- virtual uint16_t `getPortNum` () const =0
- virtual std::shared_ptr< std::vector< uint32_t >> `getServiceIDList` () const =0
- virtual void `setServiceIDList` (const std::shared_ptr< std::vector< uint32_t >> idList)=0
- virtual `~ICv2xRxSubscription` ()

5.26.1.29.1 Constructors and Destructors

5.26.1.29.1.1 `virtual telux::cv2x::ICv2xRxSubscription::~ICv2xRxSubscription () [virtual]`

5.26.1.29.2 Member Function Documentation

5.26.1.29.2.1 `virtual uint32_t telux::cv2x::ICv2xRxSubscription::getSubscriptionId () const [pure virtual]`

Accessor for Rx subscription ID

Returns

subscription ID

5.26.1.29.2.2 `virtual TrafficIpType telux::cv2x::ICv2xRxSubscription::getIpType () const [pure virtual]`

Accessor for IP traffic type

Returns

The Rx subscriptions's IP traffic type (IP or NON-IP)

5.26.1.29.2.3 `virtual int telux::cv2x::ICv2xRxSubscription::getSock () const [pure virtual]`

Accessor for the socket file descriptor

Returns

The Rx subscriptions's socket fd.

5.26.1.29.2.4 `virtual struct sockaddr_in6 telux::cv2x::ICv2xRxSubscription::getSockAddr () const [pure virtual]`

Accessor for the socket address description

Returns

The Rx subscriptions's socket address

5.26.1.29.2.5 `virtual uint16_t telux::cv2x::ICv2xRxSubscription::getPortNum () const [pure virtual]`

Accessor for the subscriptions's port number

Returns

The Rx subscriptions's port num

5.26.1.29.2.6 `virtual std::shared_ptr<std::vector<uint32_t> > telux::cv2x::ICv2xRxSubscription::getServiceIDList () const [pure virtual]`

Get subscriptions's service ID list

Returns

The Rx subscriptions's service ID list

5.26.1.29.2.7 `virtual void telux::cv2x::ICv2xRxSubscription::setServiceIDList (const std::shared_ptr<std::vector< uint32_t >> idList) [pure virtual]`

Set subscriptions's service ID list

Parameters

| | | |
|----|---------------|---------------------------------------|
| in | <i>idList</i> | - the subscriptions's service ID list |
|----|---------------|---------------------------------------|

5.26.1.30 `class telux::cv2x::ICv2xThrottleManagerListener`

Listener class for getting filter rate update notification.

Public member functions

- virtual void [onFilterRateAdjustment](#) (int rate)
- virtual void [onServiceStatusChange](#) (telux::common::ServiceStatus status)
- virtual [~ICv2xThrottleManagerListener](#) ()

5.26.1.30.1 Constructors and Destructors

5.26.1.30.1.1 virtual telux::cv2x::ICv2xThrottleManagerListener::~~ICv2xThrottleManagerListener ()
[virtual]

Destructor of [ICv2xThrottleManagerListener](#)

5.26.1.30.2 Member Function Documentation

5.26.1.30.2.1 virtual void telux::cv2x::ICv2xThrottleManagerListener::onFilterRateAdjustment (int *rate*) [virtual]

This API is invoked to advise the client to adjust the incoming message filtering rate by *rate* messages/second. If the *rate* is positive, it indicates the client to filter *rate* more messages/second. If the *rate* is negative, it indicates the client to filter *rate* less messages/second.

Parameters

| | | |
|----|-------------|--|
| in | <i>rate</i> | the reported filter rate adjustment value. |
|----|-------------|--|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.26.1.30.2.2 virtual void telux::cv2x::ICv2xThrottleManagerListener::onServiceStatusChange (telux::common::ServiceStatus *status*) [virtual]

This API is invoked when the service status changes for example when a subsystem restart (SSR) occurs

Parameters

| | | |
|----|---------------|-----------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|-----------------|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.26.1.31 class telux::cv2x::ICv2xThrottleManager

ThrottleManager provides throttle manager client interface.

ThrottleManager provides APIs that allows applications to specify the incoming verification load on the system. This is used to make decisions on how to optimally use the resources available in the system. The API also provides feedback to clients on the suggested filtering that needs to be done when the incoming message verification rate exceeds the instantaneous system capacity.

Public member functions

- virtual [telux::common::ServiceStatus getServiceStatus \(\)](#)=0
- virtual [telux::common::Status registerListener \(std::weak_ptr< ICv2xThrottleManagerListener > listener\)](#)=0
- virtual [telux::common::Status deregisterListener \(std::weak_ptr< ICv2xThrottleManagerListener > listener\)](#)=0
- virtual [telux::common::Status setVerificationLoad \(int load, setVerificationLoadCallback cb\)](#)=0
- virtual [~ICv2xThrottleManager \(\)](#)

5.26.1.31.1 Constructors and Destructors

5.26.1.31.1.1 virtual [telux::cv2x::ICv2xThrottleManager::~~ICv2xThrottleManager \(\)](#) [virtual]

5.26.1.31.2 Member Function Documentation

5.26.1.31.2.1 virtual [telux::common::ServiceStatus telux::cv2x::ICv2xThrottleManager::getService↔Status \(\)](#) [pure virtual]

This status indicates whether the object is in a usable state.

Returns

SERVICE_AVAILABLE - If location manager is ready for service. SERVICE_UNAVAILABLE - If location manager is temporarily unavailable. SERVICE_FAILED - If location manager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.26.1.31.2.2 virtual [telux::common::Status telux::cv2x::ICv2xThrottleManager::registerListener \(std::weak_ptr< ICv2xThrottleManagerListener > listener \)](#) [pure virtual]

Registers a listener to receive the updated filer rate adjustment data.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Listener that implement ICv2xThrottleManagerListener interface. |
|----|-----------------|---|

5.26.1.31.2.3 virtual telux::common::Status telux::cv2x::ICv2xThrottleManager::deregisterListener (std::weak_ptr< ICv2xThrottleManagerListener > *listener*) [pure virtual]

Deregister a [ICv2xThrottleManagerListener](#).

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Previously registered Cv2xThrottleManagerListener that is deregistered. |
|----|-----------------|---|

5.26.1.31.2.4 virtual telux::common::Status telux::cv2x::ICv2xThrottleManager::setVerificationLoad (int *load*, setVerificationLoadCallback *cb*) [pure virtual]

Set current measured/average verification load.

Parameters

| | | |
|----|-------------|--|
| in | <i>load</i> | - current measured verification load(verification/second). |
|----|-------------|--|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.26.1.32 class telux::cv2x::ICv2xTxFlow

This class encapsulates a Cv2xRadio Tx flows. It contains the Tx socket associated with the flow through which client applications can send data. This class is referenced in Cv2xRadio::createTxSpsFlow, Cv2xRadio::createTxEventFlow, and Cv2xRadio::closeTxFlow

Public member functions

- virtual uint32_t [getFlowId](#) () const =0
- virtual [TrafficIpType](#) [getIpType](#) () const =0
- virtual uint32_t [getServiceId](#) () const =0
- virtual int [getSock](#) () const =0
- virtual struct sockaddr_in6 [getSockAddr](#) () const =0
- virtual uint16_t [getPortNum](#) () const =0
- virtual [~ICv2xTxFlow](#) ()

5.26.1.32.1 Constructors and Destructors

5.26.1.32.1.1 `virtual telux::cv2x::ICv2xTxFlow::~~ICv2xTxFlow () [virtual]`

5.26.1.32.2 Member Function Documentation

5.26.1.32.2.1 `virtual uint32_t telux::cv2x::ICv2xTxFlow::getFlowId () const [pure virtual]`

Accessor for flow ID. The flow ID should be unique within a process but will not be unique between processes.

Returns

flow ID

5.26.1.32.2.2 `virtual TrafficIpType telux::cv2x::ICv2xTxFlow::getIpType () const [pure virtual]`

Accessor for IP traffic type

Returns

The flow's IP traffic type (IP or NON-IP)

5.26.1.32.2.3 `virtual uint32_t telux::cv2x::ICv2xTxFlow::getServiceId () const [pure virtual]`

Accessor for service ID

Returns

The flow's Service ID.

5.26.1.32.2.4 `virtual int telux::cv2x::ICv2xTxFlow::getSock () const [pure virtual]`

Accessor for the socket file descriptor

Returns

The flow's socket fd.

5.26.1.32.2.5 `virtual struct sockaddr_in6 telux::cv2x::ICv2xTxFlow::getSockAddr () const [pure virtual]`

Accessor for the socket address description

Returns

The flow's socket address

5.26.1.32.2.6 virtual uint16_t telux::cv2x::ICv2xTxFlow::getPortNum () const [pure virtual]

Accessor for the flow's source port number

Returns

The flow's source port num

5.26.1.33 class telux::cv2x::ICv2xTxRxSocket

This class encapsulates a Cv2xRadio socket for both Tx and Rx. It contains the socket through which client applications can send and receive data. This class is referenced in Cv2xRadio::createCv2xTcpSocket and Cv2xRadio::closeCv2xTcpSocket.

Public member functions

- virtual uint32_t [getId](#) () const =0
- virtual uint32_t [getServiceId](#) () const =0
- virtual int [getSocket](#) () const =0
- virtual struct sockaddr_in6 [getSocketAddr](#) () const =0
- virtual uint16_t [getPortNum](#) () const =0
- virtual [~ICv2xTxRxSocket](#) ()

5.26.1.33.1 Constructors and Destructors

5.26.1.33.1.1 virtual telux::cv2x::ICv2xTxRxSocket::~~ICv2xTxRxSocket () [virtual]

5.26.1.33.2 Member Function Documentation

5.26.1.33.2.1 virtual uint32_t telux::cv2x::ICv2xTxRxSocket::getId () const [pure virtual]

Accessor for Cv2xRadio socket ID. The socket ID should be unique within a process but will not be unique between processes.

Returns

Cv2xRadio socket ID

5.26.1.33.2.2 virtual uint32_t telux::cv2x::ICv2xTxRxSocket::getServiceId () const [pure virtual]

Accessor for service ID

Returns

The Service ID bound to the socket.

5.26.1.33.2.3 virtual int telux::cv2x::ICv2xTxRxSocket::getSocket () const [pure virtual]

Accessor for the socket file descriptor

Returns

The socket fd.

5.26.1.33.2.4 virtual struct sockaddr_in6 telux::cv2x::ICv2xTxRxSocket::getSocketAddr () const [pure virtual]

Accessor for the socket address description

Returns

The socket address

5.26.1.33.2.5 virtual uint16_t telux::cv2x::ICv2xTxRxSocket::getPortNum () const [pure virtual]

Accessor for the local port number bound to the socket

Returns

The local port number

5.26.1.34 class telux::cv2x::ICv2xTxStatusReportListener

Listeners for CV2X Tx status report must implement this interface.

Public member functions

- virtual void [onTxStatusReport](#) (const [TxStatusReport](#) &info)
- virtual [~ICv2xTxStatusReportListener](#) ()

5.26.1.34.1 Constructors and Destructors**5.26.1.34.1.1 virtual telux::cv2x::ICv2xTxStatusReportListener::~~ICv2xTxStatusReportListener () [virtual]**

Destructor for [ICv2xTxStatusReportListener](#)

5.26.1.34.2 Member Function Documentation

5.26.1.34.2.1 virtual void telux::cv2x::ICv2xTxStatusReportListener::onTxStatusReport (const TxStatusReport & *info*) [virtual]

Called when a CV2X transport block is transmitted in low layer if CV2X Tx status report has been enabled by calling setTxStatusReport.

Parameters

| | | |
|-----------|-------------|-------------------------------------|
| <i>in</i> | <i>info</i> | - Tx status of the transport block. |
|-----------|-------------|-------------------------------------|

5.26.1.35 class telux::cv2x::Cv2xUtil

Cv2x utility class

Static Public Member Functions

- static uint8_t [priorityToTrafficClass](#) (Priority priority)
- static [Priority TrafficClassToPriority](#) (uint8_t trafficClass)

5.26.1.35.1 Member Function Documentation

5.26.1.35.1.1 static uint8_t telux::cv2x::Cv2xUtil::priorityToTrafficClass (Priority *priority*) [static]

This function is called to convert [cv2x](#) flow priority to traffic class. The Traffic Class indicates class or priority of IPv6 packet. If congestion occurs then packets with least priority will be discarded(See RFC2460 section-7). The result of this method is to fill the IPv6 header traffic class field, it is usually called just before sending IPv6 packet.

Parameters

| | | |
|-----------|-----------------|--------------------------------------|
| <i>in</i> | <i>priority</i> | - cv2x flow priority |
|-----------|-----------------|--------------------------------------|

Returns

uint8_t to indicate the result of traffic class

5.26.1.35.1.2 static Priority telux::cv2x::Cv2xUtil::TrafficClassToPriority (uint8_t *trafficClass*) [static]

This function is called to convert IPv6 packet traffic class to [cv2x](#) flow priority. The Traffic Class indicates class or priority of IPv6 packet. If congestion occurs then packets with least priority will be discarded(See RFC2460 section-7). It is to get the corresponding [cv2x](#) flow priority of the received packets, which usually being called when a new IPv6 packet received.

Parameters

| | | |
|-----------|---------------------|---|
| <i>in</i> | <i>trafficClass</i> | - class or priority of IPv6 packet(See RFC2460 section-7) |
|-----------|---------------------|---|

Returns

[cv2x](#) flow priority

5.26.2 Enumeration Type Documentation

5.26.2.1 enum telux::cv2x::TrafficCategory [strong]

Defines CV2X Traffic Types.

Used in `Cv2xRadioManager::getCv2xRadio`

Enumerator

SAFETY_TYPE Safety message traffic category

NON_SAFETY_TYPE Non-safety message traffic category

5.26.2.2 enum telux::cv2x::Cv2xStatusType [strong]

Defines possible values for CV2X radio RX/TX status.

Used in [Cv2xStatus](#)

Enumerator

INACTIVE RX/TX is inactive

ACTIVE RX/TX is active

SUSPENDED RX/TX is suspended

UNKNOWN RX/TX status unknown

5.26.2.3 enum telux::cv2x::Cv2xCauseType [strong]

Defines possible values for cause of CV2X radio failure.

Used in [Cv2xStatus](#)

Enumerator

TIMING V2X timing is not valid

CONFIG No valid V2X configuration

UE_MODE V2X is not supported in current UE mode

GEOPOLYGON V2X is not supported in current UE location

THERMAL Device's temperature is high and is in thermal mitigation mode

THERMAL_ECALL Device is in an emergency call and the device's temperature has crossed a threshold resulting in thermal mitigation

GEOPOLYGON_SWITCH V2X stack is suspended due to geopolygon switch

SENSING V2X stack is suspended due to sensing

LPM V2X is not supported under Low Power Mode

UNKNOWN Cause is unknown

5.26.2.4 enum telux::cv2x::TrafficIpType [strong]

Defines CV2X traffic type in terms of IP or NON-IP.

Used in createRxSock, createTxSpsSock, and createTxEventSock

Enumerator

TRAFFIC_IP IP message traffic
TRAFFIC_NON_IP NON-IP message traffic

5.26.2.5 enum telux::cv2x::RadioConcurrencyMode [strong]

Defines CV2X modes of concurrency with cellular WWAN.

Used in [Cv2xRadioCapabilities](#)

Enumerator

WWAN_NONCONCURRENT No simultaneous WWAN + CV2X on this interface
WWAN_CONCURRENT Interface supports requests for concurrent WWAN + CV2X connections.

5.26.2.6 enum telux::cv2x::Cv2xEvent [strong]

Defines CV2X status change events. The state can change in response to the loss of timing precision or a geofencing change.

Used in onStatusChanged in [ICv2xRadioListener](#)

Enumerator

CV2X_INACTIVE
CV2X_ACTIVE
TX_SUSPENDED
TXRX_SUSPENDED

5.26.2.7 enum telux::cv2x::Priority [strong]

Range of supported priority levels, where a lower number means a higher priority. For example, 8 is the current 3GPP standard.

Used in [Cv2xRadioCapabilities](#) and [SpsFlowInfo](#)

Enumerator

MOST_URGENT
PRIORITY_1
PRIORITY_2
PRIORITY_3
PRIORITY_4
PRIORITY_5
PRIORITY_6
PRIORITY_BACKGROUND

PRIORITY_UNKNOWNN**5.26.2.8 enum telux::cv2x::Periodicity [strong]**

Range of supported periodicities in milliseconds.

Used in [Cv2xRadioCapabilities](#) and [SpsFlowInfo](#)

: enum class not going to be supported in future releases. Clients should stop using this. Once a class has been marked as Deprecated, the class could be removed in future releases.

Enumerator

PERIODICITY_10MS
PERIODICITY_20MS
PERIODICITY_50MS
PERIODICITY_100MS
PERIODICITY_UNKNOWNN

5.26.2.9 enum telux::cv2x::ConfigSourceType [strong]

V2X configuration source types listed in ascending order of priority. The system always uses the V2X configuration with the highest priority if multiple V2X configuration sources exist.

Used in [ConfigEventInfo](#)

Enumerator

UNKNOWN V2X config file source is unknown
PRECONFIG V2X config file source is preconfig
SIM_CARD V2X config file source is SIM card
OMA_DM V2X config file source is OMA-DM

5.26.2.10 enum telux::cv2x::ConfigEvent [strong]

Defines possible values for the events relevant to CV2X config file.

Used in [ConfigEventInfo](#)

Enumerator

CHANGED V2X config file is changed
EXPIRED V2X config file is expired

5.26.2.11 enum telux::cv2x::RFTxStatus [strong]

Fault detection of Tx chain that including PA and front end.

Used in [RFTxInfo](#)

Enumerator

INACTIVE The Tx chain is not working.
OPERATIONAL The Tx chain is operational.

FAULT Fault detected on the Tx chain.

5.26.2.12 enum telux::cv2x::SegmentType [strong]

Defines possible values for the segment type of a transport block.

Used in [TxStatusReport](#)

Enumerator

FIRST V2X packet is segmented, it's the first transport block.

LAST V2X packet is segmented, it's the last transport block.

MIDDLE V2X packet is segmented, it's a transport block between first and last.

ONLY_ONE V2X packet is not segmented, it's the only one transport block.

5.26.2.13 enum telux::cv2x::TxType [strong]

Defines new Tx or re-Tx type relevant to a transport block.

Used in [TxStatusReport](#)

Enumerator

NEW_TX New Tx of the V2X transport block.

RE_TX Re-Tx of the V2X transport block.

5.26.2.14 enum telux::cv2x::RxMetaDataValidityType

Specify set of RX Meta data that contribute to received packet's meta data report. Used in [RxPacketMetaDataReport](#)

Enumerator

RX_SUBFRAME_NUMBER Bit mask to specify whether sfn is valid in [RxPacketMetaDataReport](#) Bit mask to specify whether subChannelIndex is valid in [RxPacketMetaDataReport](#)

RX_SUBCHANNEL_INDEX Bit mask to specify whether subChannelNum is valid in [RxPacketMetaDataReport](#)

RX_SUBCHANNEL_NUMBER Bit mask to specify whether rssi0 is valid in [RxPacketMetaDataReport](#)

RX_PRX_RSSI Bit mask to specify whether rssi1 is valid in [RxPacketMetaDataReport](#)

RX_DRX_RSSI Bit mask to specify whether l2DestinationId is valid in [RxPacketMetaDataReport](#)

RX_L2_DEST_ID Bit mask to specify whether sciFormat1Info is valid in [RxPacketMetaDataReport](#)

RX_SCI_FORMAT1 Bit mask to specify whether delayEstimation is valid in [RxPacketMetaDataReport](#)

RX_DELAY_ESTIMATION

5.26.3 Variable Documentation

5.26.3.1 constexpr uint8_t telux::cv2x::MAX_ANTENNAS_SUPPORTED = 2u

Defines Maximum number of antennas that is supported.

Used in [TxStatusReport](#)

5.27 audio

- [Audio Stream](#)

This section contains APIs related to audio.

5.28 Audio Stream

This section contains APIs related to Audio Stream operation.

5.28.1 Data Structure Documentation

5.28.1.1 struct telux::audio::FormatParams

Frame format common parameters

5.28.1.2 struct telux::audio::AmrwbpParams

Frame format codec specific parameters

Data Fields

- [uint32_t bitWidth](#)
- [AmrwbpFrameFormat frameFormat](#)

5.28.1.2.1 Field Documentation

5.28.1.2.1.1 uint32_t telux::audio::AmrwbpParams::bitWidth

Bitwidth of Stream, Typical Values <16/24>.

5.28.1.2.1.2 AmrwbpFrameFormat telux::audio::AmrwbpParams::frameFormat

5.28.1.3 struct telux::audio::StreamConfig

Common Stream configuration parameters

Data fields

| Type | Field | Description |
|--|---------------------------------------|--|
| StreamType | type | |
| int | modemSubId | Deprecated Represents modem Subscription ID, Default set to 1. Applicable only for Voice Call |
| SlotId | slotId | Represents slotId, applicable for voice call only |
| uint32_t | sampleRate | Sample Rate of Stream, Typical Values <8k/16k/32k/48k> |
| ChannelType↔ Mask | channelType↔ Mask | |
| AudioFormat | format | |
| vector< DeviceType > | deviceTypes | |

| Type | Field | Description |
|-------------------------------------|--------------|--|
| vector< Direction > | voicePaths | Represent voice path direction for in call audio. TX for Uplink and RX for Downlink.> |
| FormatParams * | formatParams | |
| EcnrMode | ecnrMode | Represents ECNR mode for stream. It is applicable only to StreamType::VOICE_CALL |

5.28.1.4 struct telux::audio::FormatInfo

Represents information about the audio format.

Data fields

| Type | Field | Description |
|---|------------|---|
| uint32_t | sampleRate | Sample Rate of audio, Typical Values <8k/16k/32k/48k> |
| ChannelType ↔ Mask | mask | parameter for configuration of channel type |
| AudioFormat | format | Represents audio format |
| FormatParams * | params | Represents codec specific parameters, like Frame Format |

5.28.1.5 struct telux::audio::ChannelVolume

Stream Channel Volume parameters

Data fields

| Type | Field | Description |
|-----------------------------|-------------|--|
| ChannelType | channelType | |
| float | vol | Volume range in float <0 to 1.0>. 0 represents min volume, 1 represents max volume |

5.28.1.6 struct telux::audio::StreamVolume

Stream Channel Volume parameters consolidating entire Stream

Data fields

| Type | Field | Description |
|---|--------|-------------|
| vector< ChannelVolume > | volume | |
| Stream ↔ Direction | dir | |

5.28.1.7 struct telux::audio::StreamMute

Stream Mute parameters

Data fields

| Type | Field | Description |
|---------------------------------------|--------|----------------------------------|
| bool | enable | enable or disable mute on stream |
| Stream↔ Direction | dir | |

5.28.1.8 struct telux::audio::StreamBuffer

Stream Data Buffer

Data fields

| Type | Field | Description |
|------------------------|-----------|---|
| vector< uint8↔ _t > | buffer | Buffer with Size encapsulated |
| size_t | offset | Actual Buffer Content starting position |
| int64_t | timestamp | For future use |

5.28.1.9 struct telux::audio::DtmfTone

DTMF tone parameters

Data fields

| Type | Field | Description |
|---------------------------------------|-----------|--|
| DtmfLowFreq | lowFreq | Lower frequency associated with DTMF tone |
| DtmfHighFreq | highFreq | Higher frequency associated with DTMF tone |
| Stream↔ Direction | direction | Direction associated with DTMF tone |

5.28.1.10 class telux::audio::AudioFactory

[AudioFactory](#) allows creation of audio manager.

Public member functions

- std::shared_ptr< [IAudioManager](#) > [getAudioManager](#) (telux::common::InitResponseCb callback=nullptr)

Static Public Member Functions

- static [AudioFactory](#) & [getInstance](#) ()

5.28.1.10.1 Member Function Documentation

5.28.1.10.1.1 static AudioFactory& telux::audio::AudioFactory::getInstance () [static]

Get Audio Factory instance.

5.28.1.10.1.2 std::shared_ptr<IAudioManager> telux::audio::AudioFactory::getAudioManager (telux::common::InitResponseCb *callback* = *nullptr*)

Get instance of audio manager.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback to get the response of AudioManager initialization. |
|----|-----------------|---|

Returns

[IAudioManager](#) pointer.

5.28.1.11 class telux::audio::IVoiceListener

Listener class for getting notifications related to DTMF tone detection. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe.

Public member functions

- virtual void [onDtmfToneDetection](#) ([DtmfTone](#) dtmfTone)
- virtual [~IVoiceListener](#) ()

5.28.1.11.1 Constructors and Destructors

5.28.1.11.1.1 virtual telux::audio::IVoiceListener::~~IVoiceListener () [virtual]

Destructor of [IVoiceListener](#)

5.28.1.11.2 Member Function Documentation

5.28.1.11.2.1 virtual void telux::audio::IVoiceListener::onDtmfToneDetection ([DtmfTone](#) *dtmfTone*) [virtual]

This function is called when a DTMF tone is detected in the voice stream

Parameters

| | | |
|----|-----------------|----------------------|
| in | <i>dtmfTone</i> | DTMF tone properties |
|----|-----------------|----------------------|

5.28.1.12 class telux::audio::IPlayListener

Public member functions

- virtual void [onReadyForWrite](#) ()
- virtual void [onPlayStopped](#) ()
- virtual [~IPlayListener](#) ()

5.28.1.12.1 Constructors and Destructors

5.28.1.12.1.1 virtual telux::audio::IPlayListener::~IPlayListener () [virtual]

Destructor of [IPlayListener](#)

5.28.1.12.2 Member Function Documentation

5.28.1.12.2.1 virtual void telux::audio::IPlayListener::onReadyForWrite () [virtual]

This function is called when pipeline is ready to accept new buffer. It is applicable only for compressed audio format type where a client can write and queue buffers for playback.

5.28.1.12.2.2 virtual void telux::audio::IPlayListener::onPlayStopped () [virtual]

This function is called when stopAudio() is called with [StopType::STOP_AFTER_PLAY](#). It indicates that all the buffers that were present in the pipeline have been played.

5.28.1.13 class telux::audio::ITranscodeListener

Public member functions

- virtual void [onReadyForWrite](#) ()
- virtual [~ITranscodeListener](#) ()

5.28.1.13.1 Constructors and Destructors

5.28.1.13.1.1 virtual telux::audio::ITranscodeListener::~ITranscodeListener () [virtual]

Destructor of [ITranscodeListener](#)

5.28.1.13.2 Member Function Documentation

5.28.1.13.2.1 virtual void telux::audio::ITranscodeListener::onReadyForWrite () [virtual]

This function is called when pipeline is ready to accept new buffer. It is applicable only for compressed audio format type where a client can write and queue buffers for transcoding.

5.28.1.14 class telux::audio::IAudioListener

Public member functions

- virtual [~IAudioListener](#) ()

5.28.1.14.1 Constructors and Destructors

5.28.1.14.1.1 virtual telux::audio::IAudioListener::~~IAudioListener () [virtual]

Destructor of [IAudioListener](#)

5.28.1.15 class telux::audio::IAudioBuffer

Stream Buffer manages the buffer to be used for read and write operations on Audio Streams. For write operations, applications should request a stream buffer, populate it with the data and then pass it to the write operation and set the dataSize that is to be written to the stream. Similarly for read operations, the application should request a stream buffer and use that in the read operation. At the end of the read, the stream buffer will contain the data read. Once an operation (read/write) has completed, the stream buffer could be reused for a subsequent read/write operation, provided [reset\(\)](#) API called on stream buffer between subsequent calls.

Public member functions

- virtual size_t [getMinSize](#) ()=0
- virtual size_t [getMaxSize](#) ()=0
- virtual uint8_t * [getRawBuffer](#) ()=0
- virtual uint32_t [getDataSize](#) ()=0
- virtual void [setDataSize](#) (uint32_t size)=0
- virtual [telux::common::Status reset](#) ()=0
- virtual [~IAudioBuffer](#) ()

5.28.1.15.1 Constructors and Destructors

5.28.1.15.1.1 virtual telux::audio::IAudioBuffer::~~IAudioBuffer () [virtual]

5.28.1.15.2 Member Function Documentation

5.28.1.15.2.1 virtual size_t telux::audio::IAudioBuffer::getMinSize () [pure virtual]

Returns the minimum size (in bytes) of data that caller needs to read/write before calling a read/write operation on the stream.

Returns

minimum size

5.28.1.15.2.2 virtual size_t telux::audio::IAudioBuffer::getMaxSize () [pure virtual]

Returns the maximum size (in bytes) that the buffer can hold.

Returns

maximum size

5.28.1.15.2.3 virtual uint8_t* telux::audio::IAudioBuffer::getRawBuffer () [pure virtual]

Gets the raw buffer that [IStreamBuffer](#) manages. Application should write in between(include) of [getMinSize\(\)](#) to [getMaxSize\(\)](#) number of bytes in this buffer. Application is not responsible to free the raw buffer. It will be free'd when the [IStreamBuffer](#) is destroyed.

Returns

raw buffer

5.28.1.15.2.4 virtual uint32_t telux::audio::IAudioBuffer::getDataSize () [pure virtual]

Gets the size (in bytes) of valid data present in the buffer.

Returns

size of valid data in the buffer

5.28.1.15.2.5 virtual void telux::audio::IAudioBuffer::setDataSize (uint32_t size) [pure virtual]

Sets the size (in bytes) of valid data present in the buffer.

Parameters

| | |
|-------------|----------------------------------|
| <i>size</i> | size of valid data in the buffer |
|-------------|----------------------------------|

5.28.1.15.2.6 virtual telux::common::Status telux::audio::IAudioBuffer::reset () [pure virtual]

Reset all state and data of the buffer. This is to be called when reusing the same buffer for multiple operations.

Returns

status Status of the operation

5.28.1.16 class telux::audio::IStreamBuffer

Public member functions

- virtual [~IStreamBuffer](#) ()

5.28.1.16.1 Constructors and Destructors

5.28.1.16.1.1 virtual [telux::audio::IStreamBuffer::~IStreamBuffer](#) () [**virtual**]

5.28.1.17 class telux::audio::IAudioManager

Audio Manager is a primary interface for audio operations. It provide APIs to manage Streams (like voice, play, record etc) and sound cards.

Public member functions

- virtual bool [isSubsystemReady](#) ()=0
- virtual [telux::common::ServiceStatus getServiceStatus](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status getDevices](#) ([GetDevicesResponseCb](#) callback=nullptr)=0
- virtual [telux::common::Status getStreamTypes](#) ([GetStreamTypesResponseCb](#) callback=nullptr)=0
- virtual [telux::common::Status createStream](#) ([StreamConfig](#) streamConfig, [CreateStreamResponseCb](#) callback=nullptr)=0
- virtual [telux::common::Status createTranscoder](#) ([FormatInfo](#) input, [FormatInfo](#) output, [CreateTranscoderResponseCb](#) callback)=0
- virtual [telux::common::Status deleteStream](#) (std::shared_ptr< [IAudioStream](#) > stream, [DeleteStreamResponseCb](#) callback=nullptr)=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [IAudioListener](#) > listener)=0
- virtual [telux::common::Status deRegisterListener](#) (std::weak_ptr< [IAudioListener](#) > listener)=0
- virtual [telux::common::Status getCalibrationInitStatus](#) ([GetCalInitStatusResponseCb](#) callback)=0
- virtual [~IAudioManager](#) ()

5.28.1.17.1 Constructors and Destructors

5.28.1.17.1.1 virtual [telux::audio::IAudioManager::~IAudioManager](#) () [**virtual**]

5.28.1.17.2 Member Function Documentation

5.28.1.17.2.1 virtual bool [telux::audio::IAudioManager::isSubsystemReady](#) () [**pure virtual**]

Checks the status of audio subsystems and returns the result.

Returns

If true that means AudioManager is ready for performing audio operations.

Deprecated Use getServiceStatus API

5.28.1.17.2.2 `virtual telux::common::ServiceStatus telux::audio::IAudioManager::getServiceStatus ()`
`[pure virtual]`

This status indicates whether the object is in a usable state or not.

Returns

SERVICE_AVAILABLE - if audio manager is ready to use. SERVICE_UNAVAILABLE - if audio manager is temporarily unavailable to use. SERVICE_FAILED - if audio manager encountered an irrecoverable failure and can not be used.

5.28.1.17.2.3 `virtual std::future<bool> telux::audio::IAudioManager::onSubsystemReady ()` `[pure virtual]`

Wait for Audio subsystem to be ready.

Returns

A future that caller can wait on to be notified when audio subsystem is ready.

Deprecated Use InitResponseCb callback in factory API getAudioManager.

5.28.1.17.2.4 `virtual telux::common::Status telux::audio::IAudioManager::getDevices (GetDevices←`
`ResponseCb callback = nullptr)` `[pure virtual]`

Get the list of supported audio devices, which are currently supported in the audio subsystem

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback pointer to get the response of getDevices. |
|----|-----------------|---|

Returns

Status of request i.e. success or suitable status code.

5.28.1.17.2.5 `virtual telux::common::Status telux::audio::IAudioManager::getStreamTypes (`
`GetStreamTypesResponseCb callback = nullptr)` `[pure virtual]`

Get the list of supported audio streams types, which are currently supported in the audio subsystem

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback pointer to get the response of getStreamTypes. |
|----|-----------------|---|

Returns

Status of request i.e. success or suitable status code.

5.28.1.17.2.6 virtual telux::common::Status telux::audio::IAudioManager::createStream (StreamConfig streamConfig, CreateStreamResponseCb callback = nullptr) [pure virtual]

Creates the stream for audio operation

Parameters

| | | |
|----|---------------------|---|
| in | <i>streamConfig</i> | stream configuration. |
| in | <i>callback</i> | callback pointer to get the response of createStream. |

Returns

Status of request i.e. success or suitable status code.

5.28.1.17.2.7 virtual telux::common::Status telux::audio::IAudioManager::createTranscoder (FormatInfo input, FormatInfo output, CreateTranscoderResponseCb callback) [pure virtual]

Creates an instance of transcoder that can be used for transcoding operations. The supported transcoding is real time transcoding, which takes the playback time of file for completing the operation. Each instance returned can be used for single transcoding operation. The instance can not be used for multiple transcoding operation.

Parameters

| | | |
|----|-----------------|---|
| in | <i>input</i> | configuration of input buffers that needs to be transcoded. |
| in | <i>output</i> | configuration of transcoded output buffers. |
| in | <i>callback</i> | callback pointer to get the response of createTranscoder. |

Returns

Status of request i.e. success or suitable status code.

5.28.1.17.2.8 virtual telux::common::Status telux::audio::IAudioManager::deleteStream (std::shared_ptr< IAudioStream > stream, DeleteStreamResponseCb callback = nullptr) [pure virtual]

Deletes the specified stream which was created before

Parameters

| | | |
|----|-----------------|---|
| in | <i>stream</i> | reference to stream to be deleted. |
| in | <i>callback</i> | callback pointer to get the response of deleteStream. |

Returns

Status of request i.e. success or suitable status code.

5.28.1.17.2.9 `virtual telux::common::Status telux::audio::IAudioManager::registerListener (std::weak_ptr< IAudioListener > listener) [pure virtual]`

Register a listener to get notified when service status changes.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of IServiceListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener i.e success or suitable status code.

5.28.1.17.2.10 `virtual telux::common::Status telux::audio::IAudioManager::deRegisterListener (std::weak_ptr< IAudioListener > listener) [pure virtual]`

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Previously registered IServiceListener that needs to be removed |
|----|-----------------|---|

Returns

Status of deRegisterListener, success or suitable status code

5.28.1.17.2.11 `virtual telux::common::Status telux::audio::IAudioManager::getCalibrationInitStatus (GetCallInitStatusResponseCb callback) [pure virtual]`

Get calibration status. Returns whether audio subsystem was able to successfully initialize calibration in system. Calibration init status is available after the initialization of the audio subsystem or after re-initialization of audio subsystem in case of sub system restart is triggered.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback pointer to get the response of getCalibrationInitStatus. |
|----|-----------------|---|

Returns

Status of getCalibrationInitStatus, success or suitable status code.

Note

Eval: This is a new API and is being evaluated.It is subject to change and could break backwards compatibility.

5.28.1.18 class telux::audio::IAudioDevice

Audio device and it's characteristics like Direction (Sink or Source), type.

Public member functions

- virtual [DeviceType](#) `getType` ()=0
- virtual [DeviceDirection](#) `getDirection` ()=0
- virtual `~IAudioDevice` ()

5.28.1.18.1 Constructors and Destructors

5.28.1.18.1.1 virtual `telux::audio::IAudioDevice::~IAudioDevice` () [`virtual`]

5.28.1.18.2 Member Function Documentation

5.28.1.18.2.1 virtual `DeviceType` `telux::audio::IAudioDevice::getType` () [`pure virtual`]

Get the type of Device (i.e SPEAKER, MIC etc)

Returns

`DeviceType`

5.28.1.18.2.2 virtual `DeviceDirection` `telux::audio::IAudioDevice::getDirection` () [`pure virtual`]

Provide direction of device whether is Sink for audio data (RX i.e. speaker, etc) or Source for audio data (TX i.e. mic, etc)

Returns

`DeviceDirection`

5.28.1.19 class telux::audio::IAudioStream

[IAudioStream](#) represents single audio stream with base properties.

Public member functions

- virtual `StreamType` `getType` ()=0
- virtual `telux::common::Status` `setDevice` (`std::vector`< `DeviceType` > `devices`, `telux::common::ResponseCallback` `callback`=`nullptr`)=0
- virtual `telux::common::Status` `getDevice` (`GetStreamDeviceResponseCb` `callback`=`nullptr`)=0
- virtual `telux::common::Status` `setVolume` (`StreamVolume` `volume`, `telux::common::ResponseCallback` `callback`=`nullptr`)=0
- virtual `telux::common::Status` `getVolume` (`StreamDirection` `dir`, `GetStreamVolumeResponseCb`

callback=nullptr)=0

- virtual `telux::common::Status setMute (StreamMute mute, telux::common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status getMute (StreamDirection dir, GetStreamMuteResponseCb callback=nullptr)=0`
- virtual `~IAudioStream ()`

5.28.1.19.1 Constructors and Destructors

5.28.1.19.1.1 virtual `telux::audio::IAudioStream::~IAudioStream () [virtual]`

5.28.1.19.2 Member Function Documentation

5.28.1.19.2.1 virtual `StreamType telux::audio::IAudioStream::getType () [pure virtual]`

Get the stream type like VOICE, PLAY, CAPTURE

Returns

StreamType

5.28.1.19.2.2 virtual `telux::common::Status telux::audio::IAudioStream::setDevice (std::vector< DeviceType > devices, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Set Device of audio stream

Parameters

| | | |
|----|-----------------|--|
| in | <i>devices</i> | Devices list. |
| in | <i>callback</i> | callback to get the response of setDevice. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.19.2.3 virtual `telux::common::Status telux::audio::IAudioStream::getDevice (GetStream↔ DeviceResponseCb callback = nullptr) [pure virtual]`

Get Device of audio stream

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback to get the response of getDevice |
|----|-----------------|---|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.19.2.4 virtual telux::common::Status telux::audio::IAudioStream::setVolume (StreamVolume *volume*, telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Set Volume of audio stream. Application needs to provide direction of the stream. Currently TX direction of [VOICE_CALL](#) is not supported.

Parameters

| | | |
|----|-----------------|--|
| in | <i>volume</i> | volume setting per channel for direction. |
| in | <i>callback</i> | callback to get the response of setVolume. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.19.2.5 virtual telux::common::Status telux::audio::IAudioStream::getVolume (StreamDirection *dir*, GetStreamVolumeResponseCb *callback* = *nullptr*) [pure virtual]

Get Volume of audio stream. Application needs to provide direction of the stream. Currently TX direction of [VOICE_CALL](#) is not supported.

Parameters

| | | |
|----|-----------------|--|
| in | <i>dir</i> | Stream Direction to query volume details. |
| in | <i>callback</i> | callback to get the response of getVolume. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.19.2.6 virtual telux::common::Status telux::audio::IAudioStream::setMute (StreamMute *mute*, telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Set Mute of audio stream

Parameters

| | | |
|----|-----------------|---|
| in | <i>mute</i> | mute setting for direction. |
| in | <i>callback</i> | callback to know the status of the request. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.19.2.7 virtual telux::common::Status telux::audio::IAudioStream::getMute (StreamDirection *dir*, GetStreamMuteResponseCb *callback* = *nullptr*) [pure virtual]

Get Mute of audio stream

Parameters

| | | |
|----|-----------------|--|
| in | <i>dir</i> | Stream Direction to query mute details. |
| in | <i>callback</i> | callback to get the response of getMute. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.20 class telux::audio::IAudioVoiceStream

[IAudioVoiceStream](#) represents single voice stream.

Public member functions

- virtual [telux::common::Status startAudio](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status stopAudio](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status playDtmfTone](#) ([DtmfTone](#) dtmfTone, uint16_t duration, uint16_t gain, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status stopDtmfTone](#) ([StreamDirection](#) direction, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [IVoiceListener](#) > listener, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status deRegisterListener](#) (std::weak_ptr< [IVoiceListener](#) > listener)=0
- virtual [~IAudioVoiceStream](#) ()

5.28.1.20.1 Constructors and Destructors

5.28.1.20.1.1 virtual [telux::audio::IAudioVoiceStream::~~IAudioVoiceStream](#) () [virtual]

5.28.1.20.2 Member Function Documentation

5.28.1.20.2.1 virtual [telux::common::Status telux::audio::IAudioVoiceStream::startAudio](#) ([telux::common::ResponseCallback](#) *callback = nullptr*) [pure virtual]

Starts audio stream

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback to get the response of startAudio. |
|----|-----------------|---|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.20.2.2 virtual telux::common::Status telux::audio::IAudioVoiceStream::stopAudio (telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Stops audio stream

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | callback to get the response of stopAudio. |
|----|-----------------|--|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.20.2.3 virtual telux::common::Status telux::audio::IAudioVoiceStream::playDtmfTone (DtmfTone *dtmfTone*, uint16_t *duration*, uint16_t *gain*, telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Plays in-band DTMF tone on the active voice stream. This API supports DTMF tone playback on local device on the RX path, for playing DTMF on the TX path so that it is heard on far end use [telux::tel::ICall::startDtmfTone](#) API.

Parameters

| | | |
|----|-----------------|--|
| in | <i>dtmfTone</i> | DTMF tone properties [in] duration Duration (in milliseconds) for which the tone needs to be played. The constant infiniteDtmfDuration(=0xFFFF) represents infinite duration. [in] gain DTMF tone gain [in] callback callback to get the response of playDtmfTone. |
|----|-----------------|--|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.20.2.4 virtual telux::common::Status telux::audio::IAudioVoiceStream::stopDtmfTone (StreamDirection *direction*, telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Stops the DTMF tone which is being played (i.e duration not expired) on the active voice stream

Parameters

| | | |
|----|------------------|---|
| in | <i>direction</i> | Direction associated with the DTMF tone @ [in] callback callback to get the response of stopDtmfTone. |
|----|------------------|---|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.20.2.5 `virtual telux::common::Status telux::audio::IAudioVoiceStream::registerListener (std::weak_ptr< IVoiceListener > listener, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Register a listener to get notified when a DTMF tone is detected in the active voice stream

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of IVoiceListener object that processes the notification [in] callback callback to get the response of registerListener |
|----|-----------------|--|

Returns

Status of registerListener i.e success or suitable status code.

5.28.1.20.2.6 `virtual telux::common::Status telux::audio::IAudioVoiceStream::deRegisterListener (std::weak_ptr< IVoiceListener > listener) [pure virtual]`

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Previously registered IVoiceListener that needs to be removed |
|----|-----------------|---|

Returns

Status of deRegisterListener, success or suitable status code

5.28.1.21 class telux::audio::IAudioPlayStream

[IAudioPlayStream](#) represents single audio playback stream.

Public member functions

- `virtual std::shared_ptr< IStreamBuffer > getStreamBuffer ()=0`
- `virtual telux::common::Status write (std::shared_ptr< IStreamBuffer > buffer, WriteResponseCb callback=nullptr)=0`
- `virtual telux::common::Status stopAudio (StopType stopType, telux::common::ResponseCallback callback=nullptr)=0`
- `virtual telux::common::Status registerListener (std::weak_ptr< IPlayListener > listener)=0`
- `virtual telux::common::Status deRegisterListener (std::weak_ptr< IPlayListener > listener)=0`
- `virtual ~IAudioPlayStream ()`

5.28.1.21.1 Constructors and Destructors

5.28.1.21.1.1 `virtual telux::audio::!AudioPlayStream::~!AudioPlayStream () [virtual]`

5.28.1.21.2 Member Function Documentation

5.28.1.21.2.1 `virtual std::shared_ptr<IStreamBuffer> telux::audio::!AudioPlayStream::getStreamBuffer () [pure virtual]`

Get an Audio [StreamBuffer](#) to be used for playback operations

Returns

an Audio Buffer or a nullptr in case of error

5.28.1.21.2.2 `virtual telux::common::Status telux::audio::!AudioPlayStream::write (std::shared_ptr<IStreamBuffer > buffer, WriteResponseCb callback = nullptr) [pure virtual]`

Write Samples to audio stream. First write starts playback operation.

Write in case of compressed audio format maintains a pipeline, if the callback returns with same number of bytes written as requested and no error occurred, user can send next buffer. If the number of bytes returned are not equal to the requested write size, then need to resend the buffer again from the leftover offset after waiting for the () event. Once the last buffer is sent and the playback operation is complete, delete the playback stream to avoid receiving silent packets on RX path.

Parameters

| | | |
|----|-----------------|--|
| in | <i>buffer</i> | stream buffer for write. |
| in | <i>callback</i> | callback to get the response of write. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.21.2.3 `virtual telux::common::Status telux::audio::!AudioPlayStream::stopAudio (StopType stopType, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

This API is to be used to stop playback. It is applicable only for compressed audio format playback.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | callback to get the response of stopAudio. |
| in | <i>stopType</i> | it specifies type of stop for stopping audio playback. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.21.2.4 virtual telux::common::Status telux::audio::IAudioPlayStream::registerListener (std::weak_ptr< IPlayListener > *listener*) [pure virtual]

Register a listener to get notified for events of Play Stream

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer of IPlayListener object that processes the notification [in] callback callback to get the response of registerListener |
|----|-----------------|---|

Returns

Status of registerListener i.e success or suitable status code.

5.28.1.21.2.5 virtual telux::common::Status telux::audio::IAudioPlayStream::deRegisterListener (std::weak_ptr< IPlayListener > *listener*) [pure virtual]

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Previously registered IPlayListener that needs to be removed |
|----|-----------------|--|

Returns

Status of deRegisterListener, success or suitable status code

5.28.1.22 class telux::audio::IAudioCaptureStream

[IAudioCaptureStream](#) represents single audio capture stream.

Public member functions

- virtual std::shared_ptr< [IStreamBuffer](#) > [getStreamBuffer](#) ()=0
- virtual [telux::common::Status read](#) (std::shared_ptr< [IStreamBuffer](#) > buffer, uint32_t bytesToRead, [ReadResponseCb](#) callback=nullptr)=0
- virtual [~IAudioCaptureStream](#) ()

5.28.1.22.1 Constructors and Destructors

5.28.1.22.1.1 virtual telux::audio::IAudioCaptureStream::~~IAudioCaptureStream () [virtual]

5.28.1.22.2 Member Function Documentation

5.28.1.22.2.1 virtual std::shared_ptr<IStreamBuffer> telux::audio::IAudioCaptureStream::getStreamBuffer () [pure virtual]

Get an Audio Stream Buffer to be used for capture operations

Returns

an Audio Buffer or nullptr in case of failure

5.28.1.22.2 `virtual telux::common::Status telux::audio::IAudioCaptureStream::read (std::shared_ptr< IStreamBuffer > buffer, uint32_t bytesToRead, ReadResponseCb callback = nullptr) [pure virtual]`

Read Samples from audio stream. First read starts capture operation.

Parameters

| | | |
|----|--------------------|---|
| in | <i>buffer</i> | stream buffer for read. |
| in | <i>bytesToRead</i> | specifying how many bytes to be read from stream. |
| in | <i>callback</i> | callback to get the response of read. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.23 class telux::audio::IAudioLoopbackStream

[IAudioLoopbackStream](#) represents audio loopback stream.

Public member functions

- virtual [telux::common::Status startLoopback](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status stopLoopback](#) ([telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [~IAudioLoopbackStream](#) ()

5.28.1.23.1 Constructors and Destructors

5.28.1.23.1.1 `virtual telux::audio::IAudioLoopbackStream::~~IAudioLoopbackStream () [virtual]`

5.28.1.23.2 Member Function Documentation

5.28.1.23.2.1 `virtual telux::common::Status telux::audio::IAudioLoopbackStream::startLoopback (telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Start loopback between source and sink devices

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback to get the response of start loopback. |
|----|-----------------|---|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.23.2.2 virtual telux::common::Status telux::audio::IAudioLoopbackStream::stopLoopback (telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Stop loopback between source and sink devices

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | callback to get the response of stop loopback. |
|----|-----------------|--|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.24 class telux::audio::IAudioToneGeneratorStream

[IAudioToneGeneratorStream](#) represents tone generator stream.

Public member functions

- virtual [telux::common::Status playTone](#) (std::vector< uint16_t > *freq*, uint16_t *duration*, uint16_t *gain*, [telux::common::ResponseCallback](#) *callback*=*nullptr*)=0
- virtual [telux::common::Status stopTone](#) ([telux::common::ResponseCallback](#) *callback*=*nullptr*)=0
- virtual [~IAudioToneGeneratorStream](#) ()

5.28.1.24.1 Constructors and Destructors

5.28.1.24.1.1 virtual telux::audio::IAudioToneGeneratorStream::~~IAudioToneGeneratorStream () [virtual]

5.28.1.24.2 Member Function Documentation

5.28.1.24.2.1 virtual telux::common::Status telux::audio::IAudioToneGeneratorStream::playTone (std::vector< uint16_t > *freq*, uint16_t *duration*, uint16_t *gain*, [telux::common::ResponseCallback](#) *callback* = *nullptr*) [pure virtual]

Play a tone on sink devices. As the duration expires, the generated tone terminates automatically.

Parameters

| | | |
|----|-----------------|---|
| in | <i>freq</i> | Accepts the composition of frequencies (in Hz) to be played such as single tone or dual tone. Any additional frequencies provided will be ignored. |
| in | <i>duration</i> | Duration (in milliseconds) for which the tone needs to be played. The constant <code>infiniteToneDuration(=0xFFFF)</code> represents infinite duration. |
| in | <i>gain</i> | Tone Gain. |
| in | <i>callback</i> | callback to get the response of play tone. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.24.2.2 `virtual telux::common::Status telux::audio::IAudioToneGeneratorStream::stopTone (telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Stops the tone which is being played (i.e duration not expired) on the active Tone generator stream.

Parameters

| | | |
|-----------|-----------------|--|
| <i>in</i> | <i>callback</i> | callback to get the response of stop tone. |
|-----------|-----------------|--|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.25 `class telux::audio::ITranscoder`

[ITranscoder](#) is used to convert one audio format to another audio format using the transcoding operation.

Public member functions

- `virtual std::shared_ptr< IAudioBuffer > getWriteBuffer ()=0`
- `virtual std::shared_ptr< IAudioBuffer > getReadBuffer ()=0`
- `virtual telux::common::Status write (std::shared_ptr< IAudioBuffer > buffer, uint32_t isLastBuffer, TranscoderWriteResponseCb callback=nullptr)=0`
- `virtual telux::common::Status tearDown (telux::common::ResponseCallback callback=nullptr)=0`
- `virtual telux::common::Status read (std::shared_ptr< IAudioBuffer > buffer, uint32_t bytesToRead, TranscoderReadResponseCb callback=nullptr)=0`
- `virtual telux::common::Status registerListener (std::weak_ptr< ITranscodeListener > listener)=0`
- `virtual telux::common::Status deRegisterListener (std::weak_ptr< ITranscodeListener > listener)=0`
- `virtual ~ITranscoder ()`

5.28.1.25.1 Constructors and Destructors

5.28.1.25.1.1 `virtual telux::audio::ITranscoder::~ITranscoder () [virtual]`

5.28.1.25.2 Member Function Documentation

5.28.1.25.2.1 `virtual std::shared_ptr<IAudioBuffer> telux::audio::ITranscoder::getWriteBuffer ()`
`[pure virtual]`

Get a buffer to be used for writing samples for transcoding operation.

Returns

a buffer or nullptr in case of failure.

5.28.1.25.2.2 `virtual std::shared_ptr<IAudioBuffer> telux::audio::ITranscoder::getReadBuffer ()`
`[pure virtual]`

Get a buffer to be used for reading samples from transcoding operation.

Returns

a buffer or nullptr in case of failure.

5.28.1.25.2.3 `virtual telux::common::Status telux::audio::ITranscoder::write (std::shared_ptr<IAudioBuffer > buffer, uint32_t isLastBuffer, TranscoderWriteResponseCb callback = nullptr)` `[pure virtual]`

Write Samples/Frames to transcode stream. First write starts transcoding operation.

Write in case of compressed audio format maintains a pipeline, if the callback returns with same number of bytes written as requested and no error occurred, user can send next buffer. If the number of bytes returned are not equal to the requested write size, then user needs to resend the buffer again from the leftover offset after waiting for the () event.

Parameters

| | | |
|----|---------------------|--|
| in | <i>buffer</i> | buffer that needs to be transcoded. |
| in | <i>isLastBuffer</i> | represents whether this buffer is last buffer or not. Once last buffer is set no more write operations are required. |
| in | <i>callback</i> | callback to get the response of write. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.25.2.4 `virtual telux::common::Status telux::audio::ITranscoder::tearDown (telux::common::ResponseCallback callback = nullptr)` `[pure virtual]`

It is mandatory to call this API after the end of a transcode operation or to abort a transcode operation. After this API call the [ITranscoder](#) object is no longer usable.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | callback to get the response of tearDown. |
|----|-----------------|---|

Returns

Status of the request i.e. success or suitable status code.

5.28.1.25.2.5 `virtual telux::common::Status telux::audio::ITranscoder::read (std::shared_ptr< IAudioBuffer > buffer, uint32_t bytesToRead, TranscoderReadResponseCb callback = nullptr) [pure virtual]`

Reads samples/Frames from transcoder during transcoding operation.

Parameters

| | | |
|----|--------------------|---|
| in | <i>buffer</i> | stream buffer for read. |
| in | <i>bytesToRead</i> | specifying how many bytes to be read from stream. |
| in | <i>callback</i> | callback to get the response of read. |

Returns

Status of the request i.e. success or suitable status code.

5.28.1.25.2.6 `virtual telux::common::Status telux::audio::ITranscoder::registerListener (std::weak_ptr< ITranscodeListener > listener) [pure virtual]`

Register a listener to get notified for events of Transcoder.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Pointer of ITranscodeListener object that processes the notification. |
|----|-----------------|---|

Returns

Status of registerListener i.e success or suitable status code.

5.28.1.25.2.7 `virtual telux::common::Status telux::audio::ITranscoder::deRegisterListener (std::weak_ptr< ITranscodeListener > listener) [pure virtual]`

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Previously registered ITranscodeListener that needs to be removed. |
|----|-----------------|--|

Returns

Status of deRegisterListener, success or suitable status code.

5.28.2 Enumeration Type Documentation

5.28.2.1 enum telux::audio::DeviceType

Represent type of device like SPEAKER, MIC, etc.

Enumerator

DEVICE_TYPE_NONE
DEVICE_TYPE_SPEAKER
DEVICE_TYPE_MIC

5.28.2.2 enum telux::audio::DeviceDirection [strong]

Represent Device Direction RX (Sink), Tx (Source)

Enumerator

NONE
RX
TX

5.28.2.3 enum telux::audio::Direction [strong]

Represent Voice Direction RX (Sink), Tx (Source)

Enumerator

RX
TX

5.28.2.4 enum telux::audio::StreamType [strong]

Represent Stream Type

Enumerator

NONE
VOICE_CALL Voice Call, Provides Audio Session for an active Voice
PLAY Playback, Provides Audio Playback Session
CAPTURE Capture, Provides Audio Capture/Record Session
LOOPBACK Loopback, Provides loopback between source and sink devices
TONE_GENERATOR Tone Generator, Generates tone on sink device

5.28.2.5 enum telux::audio::StreamDirection [strong]

Represent Stream Direction

Enumerator

NONE
RX Represents Session Directed towards Sink Device

TX Represents Session Directed from Source Device

5.28.2.6 enum telux::audio::ChannelType

Represent Stream's types of Channel

Enumerator

LEFT Represents left channel

RIGHT Represents right channel

5.28.2.7 enum telux::audio::AudioFormat [strong]

Specifies Stream data format

Enumerator

UNKNOWN Unknown format

PCM_16BIT_SIGNED 16 bit signed PCM format

AMRNB AMRNB format

AMRWB AMRWB format

AMRWB_PLUS AMRWB+ format

5.28.2.8 enum telux::audio::DtmfLowFreq [strong]

Represents the possible lower frequencies(in Hz) in a standard DTMF tone

Enumerator

FREQ_697

FREQ_770

FREQ_852

FREQ_941

5.28.2.9 enum telux::audio::DtmfHighFreq [strong]

Represents the possible higher frequencies(in Hz) in a standard DTMF tone

Enumerator

FREQ_1209

FREQ_1336

FREQ_1477

FREQ_1633

5.28.2.10 enum telux::audio::AmrwbpFrameFormat [strong]

Representative of type of frame structure. Typical transport interface or file storage.

Enumerator

UNKNOWN Unknown format
TRANSPORT_INTERFACE_FORMAT
FILE_STORAGE_FORMAT

5.28.2.11 enum telux::audio::StopType [strong]

Represents type of stop for compressed audio format playback. Audio playback can be stopped in two ways force stop and after playing all buffers in the pipeline.

Enumerator

FORCE_STOP Stop Playing Immediately and clear buffer pipeline
STOP_AFTER_PLAY Stop Play once after all buffers in pipeline are played

5.28.2.12 enum telux::audio::EcnrMode [strong]

Enable/Disable ECNR(Echo Cancellation and Noise Reduction) on the audio stream. When enabling this the audio stream should be associated with devices that are capable of doing ECNR. It is only applicable to [StreamType::VOICE_CALL](#).

Enumerator

DISABLE To disable the ECNR mode
ENABLE To enable the ECNR mode. Applicable only to [StreamType::VOICE_CALL](#)

5.28.2.13 enum telux::audio::CalibrationInitStatus [strong]

Represents state of Audio calibration initialization in system. API gives status that tells whether the calibration initialized by audio sub system.

Enumerator

UNKNOWN calibration initialization status is unknown
INIT_SUCCESS calibration initialized successfully
INIT_FAILED calibration initialization failed

5.29 therm

- [Thermal Management](#)
- [Thermal Shutdown Management](#)

This section contains APIs related to thermal.

5.30 Thermal Management

This section contains APIs related to Thermal Management such as read list of thermal zones, cooling devices and binding info.

5.30.1 Data Structure Documentation

5.30.1.1 class telux::therm::ThermalFactory

[ThermalFactory](#) allows creation of thermal manager.

Public member functions

- `std::shared_ptr< IThermalManager > getThermalManager ()`
- `std::shared_ptr< IThermalShutdownManager > getThermalShutdownManager ()`

Static Public Member Functions

- static `ThermalFactory & getInstance ()`

5.30.1.1.1 Member Function Documentation

5.30.1.1.1.1 static ThermalFactory& telux::therm::ThermalFactory::getInstance () [static]

Get Thermal Factory instance.

5.30.1.1.1.2 std::shared_ptr<IThermalManager> telux::therm::ThermalFactory::getThermalManager ()

Get thermal manager instance to get list of thermal zones (sensors) and cooling devices supported by the device

Returns

Pointer of [IThermalManager](#) object.

5.30.1.1.1.3 std::shared_ptr<IThermalShutdownManager> telux::therm::ThermalFactory::getThermalShutdownManager ()

Get thermal shutdown manager instance to control automatic thermal shutdown and get relevant notifications

Returns

Pointer of [IThermalShutdownManager](#) object.

5.30.1.2 struct telux::therm::BoundCoolingDevice

Defines the trip points to which cooling device is bound.

Data fields

| Type | Field | Description |
|--|----------------------|--|
| int | cooling↔ DeviceId | Cooling device Id associated with trip points |
| vector< shared_ptr< ITripPoint > > | bindingInfo | List of trippoints bound to the cooling device |

5.30.1.3 class telux::therm::IThermalManager

[IThermalManager](#) provides interface to get thermal zone and cooling device information.

Public member functions

- virtual std::vector< std::shared_ptr< [IThermalZone](#) > > [getThermalZones](#) ()=0
- virtual std::vector< std::shared_ptr< [ICoolingDevice](#) > > [getCoolingDevices](#) ()=0
- virtual std::shared_ptr< [IThermalZone](#) > [getThermalZone](#) (int thermalZoneId)=0
- virtual std::shared_ptr< [ICoolingDevice](#) > [getCoolingDevice](#) (int coolingDeviceId)=0
- virtual [~IThermalManager](#) ()

5.30.1.3.1 Constructors and Destructors

5.30.1.3.1.1 virtual telux::therm::IThermalManager::~IThermalManager () [virtual]

Destructor of [IThermalManager](#)

5.30.1.3.2 Member Function Documentation

5.30.1.3.2.1 virtual std::vector<std::shared_ptr<[IThermalZone](#)> > telux::therm::IThermalManager↔
::getThermalZones () [pure virtual]

Retrieves the list of thermal zone info like type, temperature and trip points.

Returns

List of thermal zones.

5.30.1.3.2.2 `virtual std::vector<std::shared_ptr<ICoolingDevice> > telux::therm::IThermalManager::getCoolingDevices () [pure virtual]`

Retrieves the list of thermal cooling device info like type, maximum throttle state and currently requested throttle state.

Returns

List of cooling devices.

5.30.1.3.2.3 `virtual std::shared_ptr<IThermalZone> telux::therm::IThermalManager::getThermalZone (int thermalZoneId) [pure virtual]`

Retrieves the thermal zone details like temperature, type and trip point info for the given thermal zone identifier.

Parameters

| | | |
|----|----------------------|-------------------------|
| in | <i>thermalZoneId</i> | Thermal zone identifier |
|----|----------------------|-------------------------|

Returns

Pointer to thermal zone.

5.30.1.3.2.4 `virtual std::shared_ptr<ICoolingDevice> telux::therm::IThermalManager::getCoolingDevice (int coolingDeviceId) [pure virtual]`

Retrieves the cooling device details like type of the device, maximum cooling level and current cooling level for the given cooling device identifier.

Parameters

| | | |
|----|------------------------|---------------------------|
| in | <i>coolingDeviceId</i> | Cooling device identifier |
|----|------------------------|---------------------------|

Returns

Pointer to cooling device.

5.30.1.4 class telux::therm::ITripPoint

[ITripPoint](#) provides interface to get trip point type, trip point temperature and hysteresis value for that trip point.

Public member functions

- virtual [TripType](#) `getType ()=0`
- virtual int `getThresholdTemp ()=0`
- virtual int `getHysteresis ()=0`

- virtual [~ITripPoint](#) ()

5.30.1.4.1 Constructors and Destructors

5.30.1.4.1.1 virtual [telux::therm::ITripPoint::~ITripPoint](#) () [virtual]

Destructor of [ITripPoint](#)

5.30.1.4.2 Member Function Documentation

5.30.1.4.2.1 virtual [TripType](#) [telux::therm::ITripPoint::getType](#) () [pure virtual]

Retrieves trip point type.

Returns

Type of trip point if available else return UNKNOWN.

- [TripType](#)

5.30.1.4.2.2 virtual int [telux::therm::ITripPoint::getThresholdTemp](#) () [pure virtual]

Retrieves the temperature above which certain trip point will be fired.

- Units: MilliDegree Celsius

Returns

Threshold temperature

5.30.1.4.2.3 virtual int [telux::therm::ITripPoint::getHysteresis](#) () [pure virtual]

Retrieves hysteresis value that is the difference between current temperature of the device and the temperature above which certain trip point will be fired. Units: MilliDegree Celsius

Returns

Hysteresis value

5.30.1.5 class [telux::therm::IThermalZone](#)

[IThermalZone](#) provides interface to get type of the sensor, the current temperature reading, trip points and the cooling devices binded etc.

Public member functions

- virtual int [getId](#) ()=0
- virtual std::string [getDescription](#) ()=0

- virtual int [getCurrentTemp](#) ()=0
- virtual int [getPassiveTemp](#) ()=0
- virtual std::vector< std::shared_ptr< [ITripPoint](#) > > [getTripPoints](#) ()=0
- virtual std::vector< [BoundCoolingDevice](#) > [getBoundCoolingDevices](#) ()=0
- virtual [~IThermalZone](#) ()

5.30.1.5.1 Constructors and Destructors

5.30.1.5.1.1 virtual telux::therm::IThermalZone::~IThermalZone () [virtual]

Destructor of [IThermalZone](#)

5.30.1.5.2 Member Function Documentation

5.30.1.5.2.1 virtual int telux::therm::IThermalZone::getId () [pure virtual]

Retrieves the identifier for thermal zone.

Returns

Identifier for thermal zone

5.30.1.5.2.2 virtual std::string telux::therm::IThermalZone::getDescription () [pure virtual]

Retrieves the type of sensor.

Returns

Sensor type

5.30.1.5.2.3 virtual int telux::therm::IThermalZone::getCurrentTemp () [pure virtual]

Retrieves the current temperature of the device. Units: MilliDegree Celsius

Returns

Current temperature

5.30.1.5.2.4 virtual int telux::therm::IThermalZone::getPassiveTemp () [pure virtual]

Retrieves the temperature of passive trip point for the zone. Default value is 0. Valid values: 0 (disabled) or greater than 1000 (enabled), Units: MilliDegree Celsius

Returns

Temperature of passive trip point

5.30.1.5.2.5 `virtual std::vector<std::shared_ptr<ITripPoint> > telux::therm::IThermalZone::getTripPoints () [pure virtual]`

Retrieves trip point information like trip type, trip temperature and hysteresis.

Returns

Trip point info list

5.30.1.5.2.6 `virtual std::vector<BoundCoolingDevice> telux::therm::IThermalZone::getBoundCoolingDevices () [pure virtual]`

Retrieves the list of cooling device and the associated trip points bound to cooling device in given thermal zone.

Returns

List of bound cooling device for the given thermal zone.

5.30.1.6 class telux::therm::ICoolingDevice

[ICoolingDevice](#) provides interface to get type of the cooling device, the maximum throttle state and the currently requested throttle state of the cooling device.

Public member functions

- virtual int [getId](#) ()=0
- virtual std::string [getDescription](#) ()=0
- virtual int [getMaxCoolingLevel](#) ()=0
- virtual int [getCurrentCoolingLevel](#) ()=0
- virtual [~ICoolingDevice](#) ()

5.30.1.6.1 Constructors and Destructors

5.30.1.6.1.1 `virtual telux::therm::ICoolingDevice::~~ICoolingDevice () [virtual]`

Destructor of [ICoolingDevice](#)

5.30.1.6.2 Member Function Documentation

5.30.1.6.2.1 virtual int telux::therm::ICoolingDevice::getId () [pure virtual]

Retrieves the identifier of the thermal cooling device.

Returns

Cooling device identifier

5.30.1.6.2.2 virtual std::string telux::therm::ICoolingDevice::getDescription () [pure virtual]

Retrieves the type of the cooling device.

Returns

Cooling device type

5.30.1.6.2.3 virtual int telux::therm::ICoolingDevice::getMaxCoolingLevel () [pure virtual]

Retrieves the maximum cooling level of the cooling device.

Returns

Maximum cooling level of the thermal cooling device

5.30.1.6.2.4 virtual int telux::therm::ICoolingDevice::getCurrentCoolingLevel () [pure virtual]

Retrieves the current cooling level of the cooling device. This value can be between 0 and max cooling level. Max cooling level is different for different cooling devices like fan, processor etc.

Returns

Current cooling level of the thermal cooling device

5.30.2 Enumeration Type Documentation**5.30.2.1 enum telux::therm::AutoShutdownMode [strong]**

Defines the status of automatic thermal shutdown

Enumerator

UNKNOWN Automatic thermal shutdown status is unknown

ENABLE Automatic thermal shutdown is enabled

DISABLE Automatic thermal shutdown is disabled

5.30.2.2 enum telux::therm::TripType [strong]

Defines the type of trip points, it can be one of the values for ACPI (Advanced Configuration and Power Interface) thermal zone

Enumerator

- UNKNOWN** Trip type is unknown
- CRITICAL** Trip point at which system shuts down
- HOT** Trip point to notify emergency
- PASSIVE** Trip point at which kernel lowers the CPU's frequency and throttle the processor down
- ACTIVE** Trip point at which processor fan turns on
- CONFIGURABLE_HIGH** Triggering threshold at which mitigation starts. This type is added to support legacy targets
- CONFIGURABLE_LOW** Clearing threshold at which mitigation stops. This type is added to support legacy targets

5.30.3 Variable Documentation

5.30.3.1 `const uint32_t telux::therm::DEFAULT_TIMEOUT = 30`

Default time out (in seconds) for thermal auto-shutdown service to re-enable thermal auto-shutdown.

5.31 Thermal Shutdown Management

This section contains APIs related to Thermal Shutdown Management such as set/get thermal auto-shutdown mode, receive notifications on every auto-shutdown update.

5.31.1 Data Structure Documentation

5.31.1.1 class telux::therm::IThermalShutdownListener

Listener class for getting notifications when automatic thermal shutdown mode is enabled/ disabled or will be enabled imminently. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe.

Public member functions

- virtual void [onShutdownEnabled](#) ()
- virtual void [onShutdownDisabled](#) ()
- virtual void [onImminentShutdownEnablement](#) (uint32_t imminentDuration)
- virtual [~IThermalShutdownListener](#) ()

5.31.1.1.1 Constructors and Destructors

5.31.1.1.1.1 virtual telux::therm::IThermalShutdownListener::~~IThermalShutdownListener ()
[virtual]

Destructor of [IThermalShutdownListener](#)

5.31.1.1.2 Member Function Documentation

5.31.1.1.2.1 virtual void telux::therm::IThermalShutdownListener::onShutdownEnabled ()
[virtual]

This function is called when the automatic shutdown mode changes to ENABLE

5.31.1.1.2.2 virtual void telux::therm::IThermalShutdownListener::onShutdownDisabled ()
[virtual]

This function is called when the automatic shutdown mode changes to DISABLE

5.31.1.1.2.3 virtual void telux::therm::IThermalShutdownListener::onImminentShutdownEnablement (uint32_t *imminentDuration*) [virtual]

This function is called when the automatic shutdown mode is about to change to ENABLE. Clients that want to keep the shutdown mode disabled, needs to set it accordingly with in the imminentDuration time. If disabled successfully within imminentDuration time, the system timer for auto-enablement will be reset.

Parameters

| | | |
|----|-------------------------|--|
| in | <i>imminentDuration</i> | Time elapsed(in seconds) for the shutdown mode to be enabled |
|----|-------------------------|--|

5.31.1.2 class telux::therm::IThermalShutdownManager

[IThermalShutdownManager](#) class provides interface to enable/disable automatic thermal shutdown. Additionally it facilitates to register for notifications when the automatic shutdown mode changes.

Public member functions

- virtual bool [isReady](#) ()=0
- virtual std::future< bool > [onReady](#) ()=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [IThermalShutdownListener](#) > listener)=0
- virtual [telux::common::Status deregisterListener](#) (std::weak_ptr< [IThermalShutdownListener](#) > listener)=0
- virtual [telux::common::Status setAutoShutdownMode](#) ([AutoShutdownMode](#) mode, [telux::common::ResponseCallback](#) callback=nullptr, uint32_t timeout=[DEFAULT_TIMEOUT](#))=0
- virtual [telux::common::Status getAutoShutdownMode](#) ([GetAutoShutdownModeResponseCb](#) callback)=0
- virtual [~IThermalShutdownManager](#) ()

5.31.1.2.1 Constructors and Destructors

5.31.1.2.1.1 virtual [telux::therm::IThermalShutdownManager::~~IThermalShutdownManager](#) ()
[[virtual](#)]

Destructor of [IThermalShutdownManager](#)

5.31.1.2.2 Member Function Documentation

5.31.1.2.2.1 virtual bool [telux::therm::IThermalShutdownManager::isReady](#) () [[pure virtual](#)]

Checks the status of thermal shutdown management service and if the other APIs are ready for use and returns the result.

Returns

True if the services are ready otherwise false.

5.31.1.2.2.2 `virtual std::future<bool> telux::therm::IThermalShutdownManager::onReady () [pure virtual]`

Wait for thermal shutdown management service to be ready.

Returns

A future that caller can wait on to be notified when thermal shutdown management service is ready.

5.31.1.2.2.3 `virtual telux::common::Status telux::therm::IThermalShutdownManager::registerListener (std::weak_ptr< IThermalShutdownListener > listener) [pure virtual]`

Register a listener for updates on automatic shutdown mode changes

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of IThermalShutdownListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener i.e success or suitable status code.

5.31.1.2.2.4 `virtual telux::common::Status telux::therm::IThermalShutdownManager::deregisterListener (std::weak_ptr< IThermalShutdownListener > listener) [pure virtual]`

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Previously registered IThermalShutdownListener that needs to be removed |
|----|-----------------|---|

Returns

Status of deregisterListener, success or suitable status code

5.31.1.2.2.5 `virtual telux::common::Status telux::therm::IThermalShutdownManager::setAuto↔ ShutdownMode (AutoShutdownMode mode, telux::common::ResponseCallback callback = nullptr, uint32_t timeout = DEFAULT_TIMEOUT) [pure virtual]`

Set automatic thermal shutdown mode. When set to DISABLE mode successfully, it remains in DISABLE mode briefly and automatically changes to ENABLE mode after notifying the clients.

Parameters

| | | |
|----|-----------------|--|
| in | <i>mode</i> | desired AutoShutdownMode to be set |
| in | <i>callback</i> | Optional callback to get the response of the command |

| | | |
|----|----------------|--|
| in | <i>timeout</i> | Optional timeout(in seconds) for which auto-shutdown remains disabled. |
|----|----------------|--|

Returns

Status of setAutoShutdownMode i.e. success or suitable status code.

5.31.1.2.2.6 `virtual telux::common::Status telux::therm::IThermalShutdownManager::getAutoShutdownMode (GetAutoShutdownModeResponseCb callback) [pure virtual]`

Get automatic thermal shutdown mode.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | GetAutoShutdownModeResponseCb to get response of the request |
|----|-----------------|--|

Returns

Status of getAutoShutdownMode i.e. success or suitable status code.

5.32 power

- [TCU Activity Manager](#)

This section contains APIs related to power.

5.33 TCU Activity Manager

This section contains APIs related to TCU activity state management.

5.33.1 Data Structure Documentation

5.33.1.1 class telux::power::PowerFactory

[PowerFactory](#) allows creation of TCU-activity manager instance.

Public member functions

- `std::shared_ptr< ITcuActivityManager > getTcuActivityManager (ClientType clientType=ClientType::SLAVE, common::ProcType procType=common::ProcType::LOCAL_PROC, telux::common::InitResponseCb callback=nullptr)`

Static Public Member Functions

- static `PowerFactory & getInstance ()`

5.33.1.1.1 Member Function Documentation

5.33.1.1.1.1 static PowerFactory& telux::power::PowerFactory::getInstance () [static]

API to get the factory instance for TCU-activity management

5.33.1.1.1.2 `std::shared_ptr<ITcuActivityManager> telux::power::PowerFactory::getTcuActivityManager (ClientType clientType = ClientType::SLAVE, common::ProcType procType = common::ProcType::LOCAL_PROC, telux::common::InitResponseCb callback = nullptr)`

API to get the TCU-activity Manager instance

Parameters

| | | |
|----|-----------------|--|
| in | <i>type</i> | Type of the client that is going to access ITcuActivityManager APIs ClientType |
| in | <i>procType</i> | Required processor type on which the operations will be performed telux::common::ProcType |
| in | <i>callback</i> | Optional callback pointer to get the response of the manager initialization. |

Returns

Pointer of [ITcuActivityManager](#) object.

5.33.1.2 class telux::power::ITcuActivityListener

Listener class for getting notifications related to TCU-activity state and also the updates related to TCU-activity service status. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe.

Public member functions

- virtual void `onTcuActivityStateUpdate` (`TcuActivityState` state)
- virtual void `onSlaveAckStatusUpdate` (`telux::common::Status` status)
- virtual `~ITcuActivityListener` ()

5.33.1.2.1 Constructors and Destructors

5.33.1.2.1.1 virtual `telux::power::ITcuActivityListener::~~ITcuActivityListener` () [`virtual`]

Destructor of `ITcuActivityListener`

5.33.1.2.2 Member Function Documentation

5.33.1.2.2.1 virtual void `telux::power::ITcuActivityListener::onTcuActivityStateUpdate` (`TcuActivity↔
State state`) [`virtual`]

This function is called when the TCU-activity state is going to change.

Parameters

| | | |
|----|--------------|--|
| in | <i>state</i> | TCU-activity state that system is about to enter |
|----|--------------|--|

5.33.1.2.2.2 virtual void `telux::power::ITcuActivityListener::onSlaveAckStatusUpdate` (`telux↔
::common::Status status`) [`virtual`]

This function is called with the overall acknowledgement status from all the SLAVE clients, for state change triggered previously by MASTER client.

This API will be invoked only for the MASTER client. If at least one SLAVE client does not acknowledge within the configured timeout, then `Status::EXPIRED` would be reported.

Parameters

| | | |
|----|---------------|--|
| in | <i>status</i> | status of the SLAVE clients acknowledgements |
|----|---------------|--|

5.33.1.3 class telux::power::ITcuActivityManager

[ITcuActivityManager](#) provides interface to register and de-register listeners to get TCU-activity state updates. And also API to initiate TCU-activity state transition. The system can be configured to be operated in ACTIVE or PASSIVE mode with respect to TcuActivity management. In ACTIVE mode, the TCU-activity management service leads the system into desired activity state after receiving the acknowledgements from all the clients or after the configured timeout. In PASSIVE mode, the management service just notifies the clients about the state transition and conveys their acknowledgement status back to the Master application that triggered the state transition.

Public member functions

- virtual bool [isReady](#) ()=0
- virtual std::future< bool > [onReady](#) ()=0
- virtual [telux::common::ServiceStatus](#) [getServiceStatus](#) ()=0
- virtual [telux::common::Status](#) [registerListener](#) (std::weak_ptr< [ITcuActivityListener](#) > listener)=0
- virtual [telux::common::Status](#) [deregisterListener](#) (std::weak_ptr< [ITcuActivityListener](#) > listener)=0
- virtual [telux::common::Status](#) [registerServiceStateListener](#) (std::weak_ptr< [telux::common::IServiceStatusListener](#) > listener)=0
- virtual [telux::common::Status](#) [deregisterServiceStateListener](#) (std::weak_ptr< [telux::common::IServiceStatusListener](#) > listener)=0
- virtual [telux::common::Status](#) [setActivityState](#) ([TcuActivityState](#) state, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [TcuActivityState](#) [getActivityState](#) ()=0
- virtual [telux::common::Status](#) [sendActivityStateAck](#) ([TcuActivityStateAck](#) ack)=0
- virtual [~ITcuActivityManager](#) ()

5.33.1.3.1 Constructors and Destructors

5.33.1.3.1.1 virtual [telux::power::ITcuActivityManager::~ITcuActivityManager](#) () [[virtual](#)]

Destructor of [ITcuActivityManager](#)

5.33.1.3.2 Member Function Documentation

5.33.1.3.2.1 virtual bool [telux::power::ITcuActivityManager::isReady](#) () [[pure virtual](#)]

Checks the status of TCU-activity services and if the other APIs are ready for use, and returns the result.

Returns

True if the services are ready otherwise false.

Deprecated Use `ITcuActivityManager::getServiceStatus()` API.
[telux::power::ITcuActivityManager::getServiceStatus](#)

5.33.1.3.2.2 `virtual std::future<bool> telux::power::ITcuActivityManager::onReady () [pure virtual]`

Wait for TCU-activity services to be ready.

Returns

A future that caller can wait on to be notified when TCU-activity services are ready.

Deprecated Use `InitResponseCb` in [PowerFactory::getTcuActivityManager](#) instead, to get notified about subsystem readiness [telux::power::PowerFactory::getTcuActivityManager](#)

5.33.1.3.2.3 `virtual telux::common::ServiceStatus telux::power::ITcuActivityManager::getServiceStatus () [pure virtual]`

This status indicates whether the [ITcuActivityManager](#) object is in a usable state.

Returns

[telux::common::ServiceStatus](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.33.1.3.2.4 `virtual telux::common::Status telux::power::ITcuActivityManager::registerListener (std::weak_ptr< ITcuActivityListener > listener) [pure virtual]`

Register a listener for updates on TCU-activity state changes.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of ITcuActivityListener object that processes the notification |
|----|-----------------|--|

Returns

Status of `registerListener` i.e success or suitable status code.

5.33.1.3.2.5 `virtual telux::common::Status telux::power::ITcuActivityManager::deregisterListener (std::weak_ptr< ITcuActivityListener > listener) [pure virtual]`

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Previously registered ITcuActivityListener that needs to be removed |
|----|-----------------|---|

Returns

Status of deregisterListener, success or suitable status code

5.33.1.3.2.6 `virtual telux::common::Status telux::power::ITcuActivityManager::registerServiceStateListener (std::weak_ptr< telux::common::IServiceStatusListener > listener) [pure virtual]`

Register a listener for updates on TCU-activity management service status.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer of IServiceStatusListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerServiceStateListener i.e success or suitable status code.

5.33.1.3.2.7 `virtual telux::common::Status telux::power::ITcuActivityManager::deregisterServiceStateListener (std::weak_ptr< telux::common::IServiceStatusListener > listener) [pure virtual]`

Remove a previously registered listener for service status updates.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Previously registered IServiceStatusListener that needs to be removed |
|----|-----------------|---|

Returns

Status of deregisterServiceStateListener, success or suitable status code

5.33.1.3.2.8 `virtual telux::common::Status telux::power::ITcuActivityManager::setActivityState (TcuActivityState state, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Initiate a TCU-activity state transition.

This API needs to be used cautiously, as it could change the power-state of the system and may affect other processes.

This API is meant for clients that have instantiated the [ITcuActivityManager](#) instance using `ClientType::MASTER`

Parameters

| | | |
|----|-----------------|---|
| in | <i>state</i> | TCU-activity state that the System is intended to enter |
| in | <i>callback</i> | Optional callback to get the response for the TCU-activity state transition command |

Returns

Status of setActivityState i.e. success or suitable status code.

5.33.1.3.2.9 virtual TcuActivityState telux::power::ITcuActivityManager::getActivityState () [pure virtual]

Get the current TCU-activity state.

Returns

TcuActivityState

5.33.1.3.2.10 virtual telux::common::Status telux::power::ITcuActivityManager::sendActivityStateAck (TcuActivityStateAck ack) [pure virtual]

API to send the acknowledgement, after processing a TCU-activity state notification. This indicates that the client is prepared for state transition. Only one acknowledgement is expected from a single client process (may have multiple listeners).

Parameters

| | | |
|----|------------|--|
| in | <i>ack</i> | Acknowledgement for a TCU-activity state notification. |
|----|------------|--|

Returns

Status of sendActivityStateAck i.e. success or suitable status code.

5.33.2 Enumeration Type Documentation

5.33.2.1 enum telux::power::TcuActivityState [strong]

Defines the supported TCU-activity states that the listeners will be notified about.

Enumerator

UNKNOWN To indicate that system state information is not available
SUSPEND System is going to SUSPEND state

RESUME System is going to RESUME state
SHUTDOWN System is going to SHUTDOWN

5.33.2.2 enum telux::power::TcuActivityStateAck [strong]

Defines the acknowledgements to TCU-activity states. The client process sends this after processing the TcuActivityState notification, indicating that it is prepared for state transition

Acknowledgement for [TcuActivityState::RESUME](#) is not required, as the state transition has already happened.

Enumerator

SUSPEND_ACK processed [TcuActivityState::SUSPEND](#) notification
SHUTDOWN_ACK processed [TcuActivityState::SHUTDOWN](#) notification

5.33.2.3 enum telux::power::ClientType [strong]

Defines the type of the client that would be using the [ITcuActivityManager](#) APIs. Client that just needs the TcuActivityState notifications needs to choose [ClientType::SLAVE](#). And the client that determines the TcuActivityState would choose [ClientType::MASTER](#). Only a Master client can set the TcuActivityState. In a system, there should be a single Master client.

The ClientType needs to be chosen while instantiating the [ITcuActivityManager](#), using the API [PowerFactory::getTcuActivityManager](#)

Enumerator

SLAVE Client is a slave and interested in state change notification
MASTER Client makes the decision on when the TcuActivityState should change

5.34 config

- [Modem Config](#)

This section contains APIs related to Modem config.

5.35 Modem Config

This section contains APIs related to Modem Config operations.

5.35.1 Data Structure Documentation

5.35.1.1 class telux::config::ConfigFactory

[ConfigFactory](#) allows creation of config related classes.

Public member functions

- `std::shared_ptr< IModemConfigManager > getModemConfigManager ()`

Static Public Member Functions

- static `ConfigFactory & getInstance ()`

5.35.1.1.1 Member Function Documentation

5.35.1.1.1.1 static ConfigFactory& telux::config::ConfigFactory::getInstance () [static]

Get instance of Config Factory

5.35.1.1.1.2 std::shared_ptr<IModemConfigManager> telux::config::ConfigFactory::getModemConfigManager ()

Get instance of ModemConfig manager

Returns

pointer of [IModemConfigManager](#) object.

5.35.1.2 struct telux::config::ConfigInfo

Data fields

| Type | Field | Description |
|----------------------------|---------|---|
| ConfigId | id | id - stores the id of the configuration type - stores config type size - stores the size of the configuration desc - stores the configuration description version - stores version of the config file |
| ConfigType | type | |
| uint32_t | size | |
| string | desc | |
| uint32_t | version | |

5.35.1.3 class telux::config::IModemConfigListener

Listener class for getting notifications related to configuration change detection. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe.

Public member functions

- virtual void `onConfigUpdateStatus` (`ConfigUpdateStatus` status, int slotId)
- virtual `~IModemConfigListener` ()

5.35.1.3.1 Constructors and Destructors

5.35.1.3.1.1 virtual `telux::config::IModemConfigListener::~~IModemConfigListener` () [`virtual`]

Destructor of `IModemConfigListener`

5.35.1.3.2 Member Function Documentation

5.35.1.3.2.1 virtual void `telux::config::IModemConfigListener::onConfigUpdateStatus` (`ConfigUpdateStatus` status, int slotId) [`virtual`]

This function is called when a configuration update is detected. It is applicable only to SOFTWARE config.

Parameters

| | | |
|----|---------------|----------------------------------|
| in | <i>status</i> | update status of config. |
| in | <i>slotId</i> | slotId where update is detected. |

5.35.1.4 class telux::config::IModemConfigManager

`IModemConfigManager` provides interface to list config files present in modem's storage. load a new config file in modem, activate a config file, get active config file information, deactivate a config file, delete config file from the modem's storage, get and set mode of config auto selection, register and deregister listener for config update in modem. The config files are also referred to as MBNs.

Public member functions

- virtual bool `isSubsystemReady` ()=0
- virtual `std::future< bool >` `onSubsystemReady` ()=0
- virtual `telux::common::Status` `requestConfigList` (`ConfigListCallback` cb)=0
- virtual `telux::common::Status` `loadConfigFile` (`std::string` filePath, `ConfigType` configType, `telux::common::ResponseCallback` cb=nullptr)=0
- virtual `telux::common::Status` `activateConfig` (`ConfigType` configType, `ConfigId` configId, int slotId=DEFAULT_SLOT_ID, `telux::common::ResponseCallback` cb=nullptr)=0

- virtual `telux::common::Status getActiveConfig (ConfigType configType, GetActiveConfigCallback cb, int slotId=DEFAULT_SLOT_ID)=0`
- virtual `telux::common::Status deactivateConfig (ConfigType configType, int slotId=DEFAULT_SLOT_ID, telux::common::ResponseCallback cb=nullptr)=0`
- virtual `telux::common::Status deleteConfig (ConfigType configType, ConfigId configId="", telux::common::ResponseCallback cb=nullptr)=0`
- virtual `telux::common::Status getAutoSelectionMode (GetAutoSelectionModeCallback cb, int slotId=DEFAULT_SLOT_ID)=0`
- virtual `telux::common::Status setAutoSelectionMode (AutoSelectionMode mode, int slotId=DEFAULT_SLOT_ID, telux::common::ResponseCallback cb=nullptr)=0`
- virtual `telux::common::Status registerListener (std::weak_ptr< IModemConfigListener > listener)=0`
- virtual `telux::common::Status deregisterListener (std::weak_ptr< IModemConfigListener > listener)=0`
- virtual `~IModemConfigManager ()`

5.35.1.4.1 Constructors and Destructors

5.35.1.4.1.1 `virtual telux::config::IModemConfigManager::~~IModemConfigManager () [virtual]`

Destructor of `IModemConfigManager`

5.35.1.4.2 Member Function Documentation

5.35.1.4.2.1 `virtual bool telux::config::IModemConfigManager::isSubsystemReady () [pure virtual]`

Checks the status of modem config subsystem and returns the result.

Returns

If true that means `ModemConfigManager` is ready for performing config operations.

5.35.1.4.2.2 `virtual std::future<bool> telux::config::IModemConfigManager::onSubsystemReady () [pure virtual]`

Wait for modem config subsystem to be ready.

Returns

A future that caller can wait on to be notified when modem config subsystem is ready.

5.35.1.4.2.3 `virtual telux::common::Status telux::config::IModemConfigManager::requestConfigList (ConfigListCallback cb) [pure virtual]`

Fetching the list of config files present in modem's storage.

Parameters

| | | |
|----|-----------|--------------------------------------|
| in | <i>cb</i> | - callback to the Response function. |
|----|-----------|--------------------------------------|

returns SUCCESS if the request to get config list is sent successfully.

5.35.1.4.2.4 virtual telux::common::Status telux::config::IModemConfigManager::loadConfigFile (std::string *filePath*, ConfigType *configType*, telux::common::ResponseCallback *cb* = nullptr) [pure virtual]

Loads a new config file into the modem's storage. This is a persistent operation. Only the config files loaded into the modem's storage can be activated.

Parameters

| | | |
|----|-------------------|---|
| in | <i>filePath</i> | - it defines the path to the config file. |
| in | <i>configType</i> | - type of the config file. |
| in | <i>cb</i> | - callback to the response function. |

returns SUCCESS if the request to load config file is sent successfully.

5.35.1.4.2.5 virtual telux::common::Status telux::config::IModemConfigManager::activateConfig (ConfigType *configType*, ConfigId *configId*, int *slotId* = DEFAULT_SLOT_ID, telux::common::ResponseCallback *cb* = nullptr) [pure virtual]

Activates the config file on specified slot id. A file for activation must be loaded or should already be present in modem's storage.

Parameters

| | | |
|----|-------------------|--|
| in | <i>configType</i> | - type of the config file. |
| in | <i>configId</i> | - id of the config file. |
| in | <i>slotId</i> | - it defines the slot id to be selected. |
| in | <i>cb</i> | - callback to the response function. |

Returns

SUCCESS if the request to activate config file is sent successfully.

5.35.1.4.2.6 virtual telux::common::Status telux::config::IModemConfigManager::getActiveConfig (ConfigType *configType*, GetActiveConfigCallback *cb*, int *slotId* = DEFAULT_SLOT_ID) [pure virtual]

Get the currently active config file information for the specified slot id. In case default config files are activated, would return error.

Parameters

| | | |
|----|-------------------|--|
| in | <i>configType</i> | - type of the config file. |
| in | <i>cb</i> | - callback to the response function. |
| in | <i>slotId</i> | - it defines the slot id to be selected. |

Returns

SUCCESS if the request to get active config information is sent successfully.

5.35.1.4.2.7 `virtual telux::common::Status telux::config::IModemConfigManager::deactivateConfig (ConfigType configType, int slotId = DEFAULT_SLOT_ID, telux::common::Response↔ Callback cb = nullptr) [pure virtual]`

Deactivates the config file for the specified slot id.

Parameters

| | | |
|----|-------------------|--|
| in | <i>configType</i> | - type of the config file. |
| in | <i>slotId</i> | - slot id to be selected for deactivation of config. |
| in | <i>cb</i> | - callback to the response function. |

Returns

SUCCESS if the request to deactivate config file is sent successfully

5.35.1.4.2.8 `virtual telux::common::Status telux::config::IModemConfigManager::deleteConfig (ConfigType configType, ConfigId configId = "", telux::common::ResponseCallback cb = nullptr) [pure virtual]`

Deletes the config file from the modem's storage.

Parameters

| | | |
|----|-------------------|---|
| in | <i>configType</i> | - type of the config file. |
| in | <i>configId</i> | - id of the config file. This parameter is optional if not provided all the config files of the given config type are deleted from modem's storage. |
| in | <i>cb</i> | - callback to the Response function. |

Returns

SUCCESS if the request to delete config file is sent successfully

5.35.1.4.2.9 `virtual telux::common::Status telux::config::IModemConfigManager::getAutoSelection↔ Mode (GetAutoSelectionModeCallback cb, int slotId = DEFAULT_SLOT_ID) [pure virtual]`

Fetching the mode of config auto selection for specified slot id.

Parameters

| | | |
|----|---------------|--------------------------------------|
| in | <i>cb</i> | - callback to the response function. |
| in | <i>slotId</i> | - slot id of config. |

Returns

SUCCESS if the request to get selection mode is sent successfully

5.35.1.4.2.10 `virtual telux::common::Status telux::config::IModemConfigManager::setAutoSelectionMode (AutoSelectionMode mode, int slotId = DEFAULT_SLOT_ID, telux::common::ResponseCallback cb = nullptr) [pure virtual]`

Setting the mode of config auto selection for specified slot id.

Parameters

| | | |
|----|---------------|--------------------------------------|
| in | <i>mode</i> | - auto selection mode status. |
| in | <i>slotId</i> | - slot id of the config. |
| in | <i>cb</i> | - callback to the response function. |

Returns

SUCCESS if the request to set selection mode is sent successfully.

5.35.1.4.2.11 `virtual telux::common::Status telux::config::IModemConfigManager::registerListener (std::weak_ptr< IModemConfigListener > listener) [pure virtual]`

Registers the listener for indications.

Parameters

| | | |
|----|-----------------|------------------------------------|
| in | <i>listener</i> | - pointer to implemented listener. |
|----|-----------------|------------------------------------|

Returns

SUCCESS if the request to register listener is sent successfully.

5.35.1.4.2.12 `virtual telux::common::Status telux::config::IModemConfigManager::deregisterListener (std::weak_ptr< IModemConfigListener > listener) [pure virtual]`

Deregisters the listener from indications.

Parameters

| | | |
|----|-----------------|-----------------------------------|
| in | <i>listener</i> | - pointer to registered listener. |
|----|-----------------|-----------------------------------|

Returns

SUCCESS if the request to deregister listener is sent successfully.

5.35.2 Enumeration Type Documentation

5.35.2.1 enum telux::config::ConfigType [strong]

Enumerator

HARDWARE For hardware or platform related configuration files

SOFTWARE For software or carrier related configuration files

5.35.2.2 enum telux::config::AutoSelectionMode [strong]

Selection Mode defines status of auto selection mode for configs.

Enumerator

DISABLED Auto selection disabled

ENABLED Auto selection enabled

5.35.2.3 enum telux::config::ConfigUpdateStatus [strong]

ConfigUpdateStatus represent status of config update, a update of config happens when a software config is activated and all segments using the config are updated with new config.

Enumerator

START start of updation process

COMPLETE end of updation process

5.36 sensor

- [Sensor service](#)
- [Sensor control](#)
- [Sensor feature control](#)

This section contains APIs related to sensor configuration, control, data acquisition and sensor feature control.

5.37 Sensor service

This section contains APIs, data structures and components to access the sensor sub-system.

5.37.1 Data Structure Documentation

5.37.1.1 struct telux::sensor::SensorInfo

Information related to sensor.

Data fields

| Type | Field | Description |
|----------------------------|----------------------------------|---|
| int | id | Unique identifier for the sensor. |
| SensorType | type | The type of sensor, telux::sensor::SensorType |
| string | name | The name of the sensor This name is used to get a reference to a sensor with telux::sensor::ISensorManager::getSensor |
| string | vendor | The name of the vendor |
| vector< float > | samplingRates | List of supported sampling rates by the sensor hardware, number of samples per second (Hz) |
| float | maxSampling↔ Rate | The maximum sampling rate the sensor can be configured for. This can be set in /etc/sensors.conf for each sensor and should be less than the maximum sampling rate supported by the sensor hardware, number of samples per second (Hz) This attribute should be considered while using the API telux::sensor::ISensor::configure |
| uint32_t | maxBatch↔ Count↔ Supported | Maximum batch count supported by the sensor, i.e. the maximum number of sensor events that the underlying framework can buffer. This attribute should be considered while using the API telux::sensor::ISensor::configure |
| uint32_t | minBatch↔ Count↔ Supported | Minimum batch count supported by the sensor. This is set in /etc/sensors.conf for each sensor. This attribute should be considered while using the API telux::sensor::ISensor::configure |
| int | range | The range offered by the sensor. This configuration can be set in /etc/sensors.conf for each sensor. For accelerometers, this is the number of Gs (force per unit mass due to gravity)in either direction (+/-) on each axis For gyroscopes, this is the number of degrees per second (dps) in either direction (+/-) along each axis |

5.37.1.2 struct telux::sensor::SensorConfiguration

Configurable parameters of a sensor.

Data fields

| Type | Field | Description |
|-------|--------------|--|
| float | samplingRate | <p>The sampling rate for the sensor, number of samples per second (Hz)</p> <p>In case of telux::sensor::ISensor::configure, the requested sampling rate should be one of the sampling rates provided in the telux::sensor::SensorInfo::samplingRates and should be less than the telux::sensor::SensorInfo::maxSamplingRate.</p> <p>If the requested sampling rate is less than the minimum value in the telux::sensor::SensorInfo::samplingRates, it will be set to the least of the values in telux::sensor::SensorInfo::samplingRates</p> <p>If the requested sampling rate is not one of the supported sampling rates in telux::sensor::SensorInfo::samplingRates, the requested value is floored to the nearest value in telux::sensor::SensorInfo::samplingRates</p> <p>Consider telux::sensor::SensorInfo::samplingRates having values 12, 26, 52. If requested sampling rate in configure API is 7, the sampling rate considered by the sensor framework would be 12. If requested sampling rate in configure API is 51, the sampling rate considered by the sensor framework would be 26.</p> <p>In case of a configuration update received via telux::sensor::ISensorEventListener::onConfigurationUpdate, the current sampling rate configuration is passed to the listener</p> |

| Type | Field | Description |
|----------------------------------|--------------|---|
| uint32_t | batchCount | <p>The batch count of the sensor.</p> <p>Batch count is the count of number of samples the underlying framework would buffer before notifying the client of the data. The intention is to reduce the number of interactions between the hardware, framework and the user application to reduce power consumption, improve compute efficiency and reduce number of interactions between different components. It is important to consider latency while deciding the batch count for a sensor. Higher the batch count, more is the latency for the samples.</p> <p>In case of telux::sensor::ISensor::configure, the requested batch count should be lesser than the maximum supported batch count telux::sensor::SensorInfo::maxBatchCountSupported. Also, the batch count considered is impacted by the telux::sensor::SensorInfo::minBatchCountSupported.</p> <p>If the requested batch count is less than telux::sensor::SensorInfo::minBatchCountSupported, it will be set to telux::sensor::SensorInfo::minBatchCountSupported</p> <p>If the requested batch count is not a multiple of telux::sensor::SensorInfo::minBatchCountSupported, the requested value is floored to the nearest multiple of telux::sensor::SensorInfo::minBatchCountSupported</p> <p>Consider telux::sensor::SensorInfo::minBatchCountSupported having a value of 7. If requested batchCount in configure API is 2, the batchCount considered by the sensor framework would be 7. If requested batchCount in configure API is 23, the batchCount considered by the sensor framework would be 21.</p> <p>In case of a configuration update telux::sensor::ISensorEventListener::onConfigurationUpdate, this field indicates the current configuration for batch count.</p> |
| SensorConfigMask | validityMask | <p>Bitset indicating the validity of the received sensor configuration via telux::sensor::ISensor::getConfiguration and telux::sensor::ISensorEventListener::onConfigurationUpdate. The configuration items that were never set would have return false when tested for using <code>std::bitset::test</code></p> <p>Further, this bitset should be set by the user to indicate the valid fields while configuring the sensor using telux::sensor::ISensor::configure. For continuous stream of data from a sensor, the validity of SAMPLING_RATE and BATCH_COUNT from SensorConfigParams should be considered. If the sensor had been already configured with both sampling rate and batch count, it is possible to reconfigure the sensor partially with just one of these attributes and setting the required validity flag.</p> |
| SensorConfigMask | updateMask | <p>Bitset indicating the parameters that were updated since last notification via telux::sensor::ISensorEventListener::onConfigurationUpdate</p> |

5.37.1.3 struct telux::sensor::MotionSensorData

Structure of a single sample from a motion sensor.

Data fields

| Type | Field | Description |
|-------|-------|--|
| float | x | x-axis data, meter per second per second for accelerometer, radians per second for gyroscope |
| float | y | y-axis data, meter per second per second for accelerometer, radians per second for gyroscope |
| float | z | z-axis data, meter per second per second for accelerometer, radians per second for gyroscope |

5.37.1.4 struct telux::sensor::UncalibratedMotionSensorData

Structure of a single sample from uncalibrated motion sensor.

Data fields

| Type | Field | Description |
|------------------------------------|-------|--|
| MotionSensorData ↔ | data | Uncalibrated motion sensor data MotionSensorData |
| MotionSensorData ↔ | bias | Bias for the uncalibrated data MotionSensorData |

5.37.1.5 struct telux::sensor::SensorEvent

Structure of a single sensor event.

Data fields

| Type | Field | Description |
|-------------------------------------|------------------|--|
| uint64_t | timestamp | Timestamp when the event was generated on the hardware, nanosecond since boot-up |
| union SensorEvent ↔ | __unnamed_↔ _ | Sensor data |

5.37.1.6 struct telux::sensor::SensorFeature

Feature offered by sensor hardware and/or software framework.

Data fields

| Type | Field | Description |
|--------|-------|---------------------|
| string | name | Name of the feature |

5.37.1.7 struct telux::sensor::SensorFeatureEvent

Structure of an event that is generated from a sensor feature.

Data fields

| Type | Field | Description |
|----------|-----------|---|
| uint64_t | timestamp | Best estimate of timestamp indicating the time of occurrence of the event, nanosecond since boot-up |
| string | name | Name of the feature that generated the event |
| int | id | The ID of the generated event |

5.37.1.8 class telux::sensor::SensorFactory

[SensorFactory](#) is the central factory to create instances of sensor objects.

Public member functions

- virtual std::shared_ptr< [ISensorManager](#) > [getSensorManager](#) (telux::common::InitResponseCb clientCallback=nullptr)=0
- virtual std::shared_ptr< [ISensorFeatureManager](#) > [getSensorFeatureManager](#) (telux::common::InitResponseCb clientCallback=nullptr)=0

Static Public Member Functions

- static [SensorFactory](#) & [getInstance](#) ()

Protected Member Functions

- [SensorFactory](#) ()
- virtual [~SensorFactory](#) ()

5.37.1.8.1 Constructors and Destructors

5.37.1.8.1.1 telux::sensor::SensorFactory::SensorFactory () [protected]

5.37.1.8.1.2 virtual telux::sensor::SensorFactory::~~SensorFactory () [protected], [virtual]

5.37.1.8.2 Member Function Documentation

5.37.1.8.2.1 static [SensorFactory](#)& telux::sensor::SensorFactory::getInstance () [static]

Get Sensor Factory instance.

Returns

The singleton instance of [SensorFactory](#) object

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.37.1.8.2.2 `virtual std::shared_ptr<ISensorManager> telux::sensor::SensorFactory::getSensorManager (telux::common::InitResponseCb clientCallback = nullptr) [pure virtual]`

Get an instance of Sensor Manager. The ownership of the returned object is with the caller of this method. The reference to the instance is not held by the [SensorFactory](#). If the returned reference is released, any request for [ISensorManager](#) shall result in creation of a new instance

Parameters

| | | |
|----|-----------------------|---|
| in | <i>clientCallback</i> | Optional callback to get the initialization status of SensorManager telux::common::InitResponseCb |
|----|-----------------------|---|

Returns

An instance of [ISensorManager](#) If the initialization of the manager and underlying system fails, nullptr is returned

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.37.1.8.2.3 `virtual std::shared_ptr<ISensorFeatureManager> telux::sensor::SensorFactory::getSensorFeatureManager (telux::common::InitResponseCb clientCallback = nullptr) [pure virtual]`

Get an instance of Sensor Feature Manager. The ownership of the returned object is with the caller of this method. The reference to the instance is not held by the [SensorFactory](#). If the returned reference is released, any request for [ISensorFeatureManager](#) shall result in creation of a new instance

Parameters

| | | |
|----|-----------------------|--|
| in | <i>clientCallback</i> | Optional callback to get the initialization status of SensorFeatureManager telux::common::InitResponseCb |
|----|-----------------------|--|

Returns

An instance of [ISensorFeatureManager](#) If the initialization of the manager and underlying system fails, nullptr is returned

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.37.1.9 union telux::sensor::SensorEvent. __unnamed__

Sensor data

Data fields

| Type | Field | Description |
|--|--------------|--|
| Motion↔ SensorData | calibrated | Calibrated data - should be accessed when the SensorType that generated the sensor event accounts for calibration - SensorType::ACCELEROMETER or SensorType::GYROSCOPE |
| Uncalibrated↔ Motion↔ SensorData | uncalibrated | Uncalibrated data - should be accessed when the SensorType that generated the sensor event provides uncalibrated data along with bias information - SensorType::ACCELEROMETER_UNCALIBRATED or SensorType::GYROSCOPE_UNCALIBRATED |

5.37.2 Enumeration Type Documentation

5.37.2.1 enum telux::sensor::SensorType [strong]

Enumeration of different sensors available.

Enumerator

ACCELEROMETER ID for the accelerometer sensor

GYROSCOPE ID for the gyroscope sensor

GYROSCOPE_UNCALIBRATED ID for the uncalibrated gyroscope sensor

ACCELEROMETER_UNCALIBRATED ID for the uncalibrated accelerometer sensor

INVALID Denotes that the sensor type is either unknown or invalid

5.37.2.2 enum telux::sensor::SensorConfigParams

Enumeration listing the different configuration parameters in

Enumerator

SAMPLING_RATE Corresponds to [SensorConfiguration::samplingRate](#)

BATCH_COUNT Corresponds to [SensorConfiguration::batchCount](#)

SENSOR_CONFIG_NUM_PARAMS

5.38 Sensor control

This section contains APIs related to sensor configuration, sensor control and data acquisition from sensors.

5.38.1 Data Structure Documentation

5.38.1.1 class telux::sensor::ISensorEventListener

This file hosts the sensor interfaces to configure, activate or get data from the individual sensors available - Gyroscope, Accelerometer, etc.

[ISensorEventListener](#) interface is used to receive notifications related to sensor events and configuration updates

The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onEvent](#) (std::shared_ptr< std::vector< [SensorEvent](#) >> events)
- virtual void [onConfigurationUpdate](#) ([SensorConfiguration](#) configuration)
- virtual [~ISensorEventListener](#) ()

5.38.1.1.1 Constructors and Destructors

5.38.1.1.1.1 virtual telux::sensor::ISensorEventListener::~~ISensorEventListener () [virtual]

The destructor for the sensor event listener

5.38.1.1.2 Member Function Documentation

5.38.1.1.2.1 virtual void telux::sensor::ISensorEventListener::onEvent (std::shared_ptr< std::vector< [SensorEvent](#) >> *events*) [virtual]

This function is called to notify about available sensor events

Parameters

| | | |
|----|---------------|-------------------------|
| in | <i>events</i> | - List of sensor events |
|----|---------------|-------------------------|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.1.2.2 virtual void telux::sensor::ISensorEventListener::onConfigurationUpdate ([SensorConfiguration](#) *configuration*) [virtual]

This function is called to notify any change in sensor configuration.

Parameters

| | | |
|----|----------------------|--|
| in | <i>configuration</i> | - The new configuration for the sensor telux::sensor::SensorConfiguration . Fields that have changed can be identified using the telux::sensor::SensorConfiguration::updateMask and fields that are valid can be identified using telux::sensor::SensorConfiguration::validityMask |
|----|----------------------|--|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2 class telux::sensor::ISensor

[ISensor](#) interface is used to access the different services provided by the sensor to configure, activate and get sensor data.

Public member functions

- virtual [SensorInfo](#) [getSensorInfo](#) ()=0
- virtual [telux::common::Status](#) [configure](#) ([SensorConfiguration](#) configuration)=0
- virtual [SensorConfiguration](#) [getConfiguration](#) ()=0
- virtual [telux::common::Status](#) [activate](#) ()=0
- virtual [telux::common::Status](#) [deactivate](#) ()=0
- virtual [telux::common::Status](#) [enableLowPowerMode](#) ()=0
- virtual [telux::common::Status](#) [disableLowPowerMode](#) ()=0
- virtual [telux::common::Status](#) [registerListener](#) (std::weak_ptr< [ISensorEventListener](#) > listener)=0
- virtual [telux::common::Status](#) [deregisterListener](#) (std::weak_ptr< [ISensorEventListener](#) > listener)=0
- virtual [~ISensor](#) ()

5.38.1.2.1 Constructors and Destructors

5.38.1.2.1.1 virtual [telux::sensor::ISensor::~ISensor](#) () [[virtual](#)]

Destructor for [ISensor](#)

5.38.1.2.2 Member Function Documentation

5.38.1.2.2.1 virtual SensorInfo telux::sensor::ISensor::getSensorInfo () [pure virtual]

Get the information related to sensor

Returns

information related to sensor - [telux::sensor::SensorInfo](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.2 virtual telux::common::Status telux::sensor::ISensor::configure (SensorConfiguration configuration) [pure virtual]

Configure sensor with desired sampling rate and batch count. Any change in sampling rate or batch count of the sensor will be notified via [telux::sensor::ISensorEventListener::onConfigurationUpdate](#).

In case a sensor needs to be reconfigured after having been activated, the sensor should be deactivated, configured and activated again as a part of the reconfiguration process.

It is always recommended that configuration of a sensor is done before activating it. If a sensor is activated without configuration, the sensor is configured with a default configuration and activated. The default configuration would have the sampling rate set to minimum sampling rate supported [telux::sensor::SensorInfo::samplingRates](#) and the batch count set to maximum batch count supported [telux::sensor::SensorInfo::maxBatchCountSupported](#)

Parameters

| | | |
|----|----------------------|--|
| in | <i>configuration</i> | - The desired configuration for the sensor telux::sensor::SensorConfiguration . Ensure the required validity mask telux::sensor::SensorConfiguration::validityMask is set for the configuration. |
|----|----------------------|--|

Returns

status of configuration request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.3 virtual `SensorConfiguration` `telux::sensor::ISensor::getConfiguration ()` [pure virtual]

Get the current configuration of this sensor

Returns

the current configuration of the sensor. `telux::sensor::SensorConfiguration::validityMask` should be checked to know which of the fields in the returned configuration is valid.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.4 virtual `telux::common::Status` `telux::sensor::ISensor::activate ()` [pure virtual]

Activate the sensor. Once activated, any available sensor event will be notified via `telux::sensor::ISensorEventListener::onEvent`

It is always recommended that configuration of a sensor is done before activating it. If a sensor is activated without configuration, the sensor is configured with a default configuration and activated. The default configuration would have the sampling rate set to minimum sampling rate supported `telux::sensor::SensorInfo::samplingRates` and the batch count set to maximum batch count supported `telux::sensor::SensorInfo::maxBatchCountSupported`. Activating an already activated sensor would result in the API returning `telux::common::Status::SUCCESS`.

Returns

status of activation request - `telux::common::Status`

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.5 virtual `telux::common::Status` `telux::sensor::ISensor::deactivate ()` [pure virtual]

Deactivate the sensor. Once deactivated, no further sensor events will be notified via `telux::sensor::ISensorEventListener::onEvent`. Deactivating an already inactive sensor would result in the API returning `telux::common::Status::SUCCESS`.

Returns

status of deactivation request - `telux::common::Status`

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.6 `virtual telux::common::Status telux::sensor::ISensor::enableLowPowerMode () [pure virtual]`

Request the sensor to operate in low power mode. The sensor should be in deactivated state to exercise this API. The success of this request depends on the capabilities of the underlying hardware.

Returns

status of request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.7 `virtual telux::common::Status telux::sensor::ISensor::disableLowPowerMode () [pure virtual]`

Request the sensor to exit low power mode. The sensor should be in deactivated state to exercise this API. The success of this request depends on the capabilities of the underlying hardware.

Returns

status of request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.8 `virtual telux::common::Status telux::sensor::ISensor::registerListener (std::weak_ptr< ISensorEventListener > listener) [pure virtual]`

Register a listener for sensor related events

Returns

status of registration request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.2.2.9 `virtual telux::common::Status telux::sensor::ISensor::deregisterListener (std::weak_ptr< ISensorEventListener > listener) [pure virtual]`

Deregister a sensor event listener

Returns

status of deregistration request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.3 class telux::sensor::ISensorManager

Sensor Manager class provides APIs to interact with the sensor sub-system and get access to other sensor objects which can be used to configure, activate or get data from the individual sensors available - Gyro, Accelerometer, etc.

Public member functions

- virtual [telux::common::ServiceStatus](#) `getServiceStatus ()=0`
- virtual [telux::common::Status](#) `getAvailableSensorInfo (std::vector< SensorInfo > &info)=0`
- virtual [telux::common::Status](#) `getSensor (std::shared_ptr< ISensor > &sensor, std::string name)=0`
- virtual `~ISensorManager ()`

5.38.1.3.1 Constructors and Destructors

5.38.1.3.1.1 `virtual telux::sensor::ISensorManager::~ISensorManager () [virtual]`

Destructor for [ISensorManager](#)

5.38.1.3.2 Member Function Documentation

5.38.1.3.2.1 `virtual telux::common::ServiceStatus telux::sensor::ISensorManager::getServiceStatus () [pure virtual]`

Checks the status of sensor sub-system and returns the result.

Returns

the status of sensor sub-system status [telux::common::ServiceStatus](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.3.2.2 virtual telux::common::Status telux::sensor::ISensorManager::getAvailableSensorInfo (std::vector< SensorInfo > & info) [pure virtual]

Get information related to the sensors available in the system.

Parameters

| | | |
|-----|-------------|---|
| out | <i>info</i> | List of information on sensors available in the system telux::sensor::SensorInfo |
|-----|-------------|---|

Returns

status of the request [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.38.1.3.2.3 virtual telux::common::Status telux::sensor::ISensorManager::getSensor (std::shared_ptr< ISensor > & sensor, std::string name) [pure virtual]

Get an instance of [ISensor](#) to interact with the underlying sensor. The provided instance is not a singleton. Everytime this method is called a new sensor object is created. It is the caller's responsibility to maintain the object Every instance of the sensor returned acts as new client and can configure the underlying sensor with it's own configuration and it's own callbacks for [telux::sensor::ISensorEvent](#) and configuration update among other events [telux::sensor::ISenorEventListener](#).

Parameters

| | | |
|-----|---------------|--|
| out | <i>sensor</i> | - An instance of telux::sensor::ISensor to interact with the underlying sensor is provided as a result of the method If the initialization of the sensor and underlying system fails, sensor is set to nullptr |
| in | <i>name</i> | - The unique name of the sensor telux::sensor::SensorInfo::name that was provided in the list of sensor information by telux::sensor::getAvailableSensorInfo |

Returns

Status of request [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.39 Sensor feature control

This section contains APIs related to controlling the features the sensor sub-system offers.

5.39.1 Data Structure Documentation

5.39.1.1 class telux::sensor::ISensorFeatureEventListener

[ISensorFeatureEventListener](#) interface is used to receive notifications related to sensor feature events.

The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onEvent](#) ([SensorFeatureEvent](#) event)
- virtual [~ISensorFeatureEventListener](#) ()

5.39.1.1.1 Constructors and Destructors

5.39.1.1.1.1 virtual telux::sensor::ISensorFeatureEventListener::~ISensorFeatureEventListener ()
[virtual]

The destructor for the sensor feature event listener

5.39.1.1.2 Member Function Documentation

5.39.1.1.2.1 virtual void telux::sensor::ISensorFeatureEventListener::onEvent ([SensorFeatureEvent](#) *event*) [virtual]

This function is called to notify about sensor feature events

Parameters

| | | |
|----|-----------|---|
| in | <i>id</i> | - The sensor feature event that got triggered |
|----|-----------|---|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.39.1.2 class telux::sensor::ISensorFeatureManager

Sensor Feature Manager class provides APIs to interact with the sensor framework to list the available features, enable them or disable them. The availability of sensor features depends on the capabilities of the underlying hardware.

Public member functions

- virtual [telux::common::ServiceStatus](#) `getServiceStatus ()=0`
- virtual [telux::common::Status](#) `getAvailableFeatures (std::vector< SensorFeature > &features)=0`
- virtual [telux::common::Status](#) `enableFeature (std::string name)=0`
- virtual [telux::common::Status](#) `disableFeature (std::string name)=0`
- virtual [telux::common::Status](#) `registerListener (std::weak_ptr< ISensorFeatureEventListener > listener)=0`
- virtual [telux::common::Status](#) `deregisterListener (std::weak_ptr< ISensorFeatureEventListener > listener)=0`
- virtual `~ISensorFeatureManager ()`

5.39.1.2.1 Constructors and Destructors

5.39.1.2.1.1 virtual [telux::sensor::ISensorFeatureManager::~ISensorFeatureManager](#) () [**virtual**]

Destructor for [ISensorFeatureManager](#)

5.39.1.2.2 Member Function Documentation

5.39.1.2.2.1 virtual [telux::common::ServiceStatus](#) [telux::sensor::ISensorFeatureManager::getServiceStatus](#) () [**pure virtual**]

Checks the status of sensor sub-system and returns the result.

Returns

the status of sensor sub-system status [telux::common::ServiceStatus](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.39.1.2.2.2 virtual [telux::common::Status](#) [telux::sensor::ISensorFeatureManager::getAvailableFeatures](#) ([std::vector< \[SensorFeature\]\(#\) > &features](#)) [**pure virtual**]

Request the sensor framework to provide the available features. The feature could be offered by the sensor framework or the underlying hardware.

Parameters

| | | |
|-----|-----------------|---|
| out | <i>features</i> | List of sensor features the sensor framework offers |
|-----|-----------------|---|

Returns

status of the request [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.39.1.2.2.3 virtual [telux::common::Status](#) [telux::sensor::ISensorFeatureManager::enableFeature](#) ([std::string name](#)) [pure virtual]

Enable the requested feature

Parameters

| | | |
|----|-------------|---|
| in | <i>name</i> | The name of the feature to be enabled. Enabling an already enabled feature would result in the API returning telux::common::Status::SUCCESS . |
|----|-------------|---|

Returns

status of the request [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.39.1.2.2.4 virtual [telux::common::Status](#) [telux::sensor::ISensorFeatureManager::disableFeature](#) ([std::string name](#)) [pure virtual]

Disable the requested feature

Parameters

| | | |
|----|-------------|--|
| in | <i>name</i> | The name of the feature to be disabled. Disabling an already disabled feature would result in the API returning telux::common::Status::SUCCESS . |
|----|-------------|--|

Returns

status of the request [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.39.1.2.2.5 `virtual telux::common::Status telux::sensor::ISensorFeatureManager::registerListener (std::weak_ptr< ISensorFeatureEventListener > listener) [pure virtual]`

Register a listener for sensor feature related events

Returns

status of registration request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.39.1.2.2.6 `virtual telux::common::Status telux::sensor::ISensorFeatureManager::deregisterListener (std::weak_ptr< ISensorFeatureEventListener > listener) [pure virtual]`

Deregister a sensor feature event listener

Returns

status of deregistration request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.40 platform

- [Filesystem](#)

This section contains APIs related to configure platform functionalities and acquire information from the sub-components.

5.40.1 Data Structure Documentation

5.40.1.1 class telux::platform::PlatformFactory

[PlatformFactory](#) allows creation of Platform services related classes.

Public member functions

- virtual std::shared_ptr< [IFsManager](#) > [getFsManager](#) (telux::common::InitResponseCb callback=nullptr)=0

Static Public Member Functions

- static [PlatformFactory](#) & [getInstance](#) ()

Protected Member Functions

- [PlatformFactory](#) ()
- virtual [~PlatformFactory](#) ()

5.40.1.1.1 Constructors and Destructors

5.40.1.1.1.1 `telux::platform::PlatformFactory::PlatformFactory () [protected]`

5.40.1.1.1.2 `virtual telux::platform::PlatformFactory::~~PlatformFactory () [protected], [virtual]`

5.40.1.1.2 Member Function Documentation

5.40.1.1.2.1 `static PlatformFactory& telux::platform::PlatformFactory::getInstance () [static]`

Get instance of platform Factory

5.40.1.1.2.2 `virtual std::shared_ptr<IFsManager> telux::platform::PlatformFactory::getFsManager (telux::common::InitResponseCb callback = nullptr) [pure virtual]`

Get instance of filesystem manager ([IFsManager](#)). The filesystem manager supports notification of filesystem events like EFS restore indications.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback to get the initialization status of FsManager. telux::common::InitResponseCb |
|----|-----------------|---|

Returns

pointer of [IFsManager](#) object.

5.41 Filesystem

This section contains APIs, data structures and components to configure and acquire information from the filesystem manager.

5.41.1 Data Structure Documentation

5.41.1.1 struct telux::platform::EfsEventInfo

Data fields

| Type | Field | Description |
|--------------------------|-------|--|
| EfsEvent | event | The event being notified |
| ErrorCode | error | telux::common::ErrorCode associated with the event |

5.41.1.2 class telux::platform::IFsListener

Listener class for getting notifications related to EFS backup/restore operations. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe.

Public member functions

- virtual void [OnEfsRestoreEvent](#) ([EfsEventInfo](#) event)
- virtual void [OnEfsBackupEvent](#) ([EfsEventInfo](#) event)
- virtual void [OnFsOperationImminentEvent](#) (uint32_t timeLeftToStart)
- virtual [~IFsListener](#) ()

5.41.1.2.1 Constructors and Destructors

5.41.1.2.1.1 virtual [telux::platform::IFsListener::~~IFsListener](#) () [[virtual](#)]

Destructor of [IFsListener](#)

5.41.1.2.2 Member Function Documentation

5.41.1.2.2.1 virtual void [telux::platform::IFsListener::OnEfsRestoreEvent](#) ([EfsEventInfo](#) event) [[virtual](#)]

This function is called when a EFS restore operation is detected.

Parameters

| | | |
|----|--------------|---|
| in | <i>event</i> | Event related data. telux::platform::EfsEventInfo . |
|----|--------------|---|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.2.2.2 **virtual void telux::platform::IFsListener::OnEfsBackupEvent (EfsEventInfo event)** [virtual]

This function is called when a EFS backup operation is detected.

Parameters

| | | |
|----|--------------|---|
| in | <i>event</i> | Event related data. telux::platform::EfsEventInfo . |
|----|--------------|---|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.2.2.3 **virtual void telux::platform::IFsListener::OnFsOperationImminentEvent (uint32_t timeLeftToStart)** [virtual]

When the client is about to make an eCall it is expected to invoke prepareForEcall. This starts a timer within the FsManager which represents the max duration of the eCall. After which the filesystem operations will resume. This API will be invoked to let the client know that resumption of Fs operations is imminent. If the eCall has not yet ended, the client should call prepareForEcall again to reset the timer, which will continue to suspend the FS operations.

Parameters

| | | |
|----|------------------------|--|
| in | <i>timeLeftToStart</i> | The time in seconds after which filesystem operations shall re-enable. |
|----|------------------------|--|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3 **class telux::platform::IFsManager**

[IFsManager](#) provides interface to to control and get notified about file system operations. This includes Embedded file system (EFS) operations.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual [telux::common::Status](#) registerListener (std::weak_ptr< [IFsListener](#) > listener)=0
- virtual [telux::common::Status](#) deregisterListener (std::weak_ptr< [IFsListener](#) > listener)=0
- virtual [telux::common::Status](#) startEfsBackup ()=0

- virtual `telux::common::Status prepareForEcall ()=0`
- virtual `telux::common::Status eCallCompleted ()=0`
- virtual `telux::common::Status prepareForOta (OtaOperation otaOperation, telux::common::ResponseCallback responseCb)=0`
- virtual `telux::common::Status otaCompleted (OperationStatus operationStatus, telux::common::ResponseCallback responseCb)=0`
- virtual `telux::common::Status startAbSync (telux::common::ResponseCallback responseCb)=0`
- virtual `~IFsManager ()`

5.41.1.3.1 Constructors and Destructors

5.41.1.3.1.1 virtual `telux::platform::IFsManager::~~IFsManager () [virtual]`

Destructor of `IFsManager`

5.41.1.3.2 Member Function Documentation

5.41.1.3.2.1 virtual `telux::common::ServiceStatus telux::platform::IFsManager::getServiceStatus () [pure virtual]`

This status indicates whether the object is in a usable state.

Returns

`telux::common::ServiceStatus` indicating the current status of the file system service.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.2 virtual `telux::common::Status telux::platform::IFsManager::registerListener (std::weak_ptr< IFsListener > listener) [pure virtual]`

Registers the listener for FileSystem Manager indications.

Parameters

| | | |
|----|-----------------|------------------------------------|
| in | <i>listener</i> | - pointer to implemented listener. |
|----|-----------------|------------------------------------|

Returns

status of the registration request.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.3 **virtual telux::common::Status telux::platform::IFsManager::deregisterListener (std::weak_ptr< IFsListener > listener) [pure virtual]**

Deregisters the previously registered listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | - pointer to registered listener that needs to be removed. |
|----|-----------------|--|

Returns

status of the deregistration request.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.4 **virtual telux::common::Status telux::platform::IFsManager::startEfsBackup () [pure virtual]**

Request to trigger an EFS backup. If the request is successful, the status of EFS backup is notified via [telux::platform::IFsListener::OnEfsBackupEvent](#).

Returns

The status of the request - [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.5 **virtual telux::common::Status telux::platform::IFsManager::prepareForEcall () [pure virtual]**

The Filesystem Manager performs periodic operations which might be resource intensive. Such operations are not desired during other crucial events like an eCall. To avoid performing such operations during such events, the client is recommended to invoke this API before it initiates an eCall. This allows the filesystem manager to prepare the system to restrict any resource intensive operations like filesystem scrubbing during the eCall.

Note

- The client would need to periodically invoke this API to ensure that the timer gets reset so that operations do not get re-enabled.

Returns

- [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.6 **virtual telux::common::Status telux::platform::IFsManager::eCallCompleted () [pure virtual]**

Once ecall complete, the client should invoke this API to re-enable filesystem operations like filesystem scrubbing. If the API invocation results in [telux::common::Status::NOTREADY](#), indicating that the sub-system is not ready, the client should retry.

Returns

- [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.7 **virtual telux::common::Status telux::platform::IFsManager::prepareForOta (OtaOperation otaOperation, telux::common::ResponseCallback responseCb) [pure virtual]**

This API should be invoked to allow the filesystem manager to perform operations like prepare the filesystem for an OTA. In addition to this preparation, any on-going operations like scrubbing is stopped.

Parameters

| | | |
|-----|---------------------|--|
| in | <i>otaOperation</i> | - telux::platform::OtaOperation . |
| out | <i>responseCb</i> | - telux::common::ResponseCallback The callback method to be invoked upon completion of OTA preparation and the response is indicated asynchronously. |

Returns

- [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.8 `virtual telux::common::Status telux::platform::IFsManager::otaCompleted (Operation↔ Status operationStatus, telux::common::ResponseCallback responseCb) [pure virtual]`

This API should be invoked upon completion of OTA, this will allow the filesystem manager to perform post OTA verifications and re-enable operations that were disabled for performing the OTA, like scrubbing.

Parameters

| | | |
|-----|------------------------|---|
| in | <i>operationStatus</i> | - telux::platform::OperationStatus The status of the OTA operation that the client attempted. |
| out | <i>responseCb</i> | - telux::common::ResponseCallback The callback method to be invoked upon completion of OTA related filesystem verifications and the response is indicated asynchronously. |

Returns

- [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.1.3.2.9 `virtual telux::common::Status telux::platform::IFsManager::startAbSync (telux↔ ::common::ResponseCallback responseCb) [pure virtual]`

This API should be invoked when the client decides to mirror the active partition to the inactive partition.

Parameters

| | | |
|-----|-------------------|---|
| out | <i>responseCb</i> | - telux::common::ResponseCallback The callback method to be invoked when the mirroring operation is completed and the response is indicated asynchronously. |
|-----|-------------------|---|

Returns

- [telux::common::Status](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.41.2 Enumeration Type Documentation

5.41.2.1 enum telux::platform::EfsEvent [strong]

Enumerator

START Indicating the beginning of Backup/Restore operation

END Indicating the completion of Backup/Restore operation

5.41.2.2 enum telux::platform::OperationStatus [strong]

Enumerator

UNKNOWN

SUCCESS

FAILURE

5.41.2.3 enum telux::platform::OtaOperation [strong]

Enumerator

INVALID

START

RESUME

5.42 data

- [net](#)

This section contains APIs related to Cellular Data Services.

5.42.1 Define Documentation

5.42.1.1 #define PROFILE_ID_MAX 0x7FFFFFFF

Default data profile id.

5.42.1.2 #define MAX_QOS_FILTERS 16

Max filters in one flow

5.42.1.3 #define IP_PROT_UNKNOWN 0xFF

Default IP Protocol number in IPv4 or IPv6 headers.

5.42.2 Data Structure Documentation

5.42.2.1 struct telux::data::IpFamilyInfo

IP Family related Info

Data fields

| Type | Field | Description |
|--------------------------------|--------|-------------|
| DataCallStatus | status | |
| IpAddrInfo | addr | |

5.42.2.2 struct telux::data::QosFilterRule

Encapsulate the Qos Filter rule

Data fields

| Type | Field | Description |
|--|------------------|--|
| vector< shared_ptr< IpFilter > > | filter | IpFilter |
| uint16_t | filterId | Unique identifier for each filter. |
| uint16_t | filterPrecedence | Specifies the order in which filters are applied. A lower numerical value has a higher precedence. |

5.42.2.3 struct telux::data::TrafficFlowTemplate

QOS TFT Flow info

Data fields

| Type | Field | Description |
|-----------------------------------|--------------------------------------|---|
| QosFlowId | qosId | Mandatory defines current flow id |
| QosFlow↔ StateChange↔ Event | stateChange | Flow state change event |
| QosFlowMask | mask | bitmask to denote which of the optional fields in TrafficFlowTemplate are valid |
| QosIPFlowInfo | txGrantedFlow | Optional |
| QosIPFlowInfo | rxGrantedFlow | |
| uint32_t | txFiltersLength | |
| QosFilterRule | txFilters[MA↔ X_QOS_FIL↔ TERS] | |
| uint32_t | rxFiltersLength | |
| QosFilterRule | rxFilters[MA↔ X_QOS_FIL↔ TERS] | |

5.42.2.4 struct telux::data::TftChangeInfo

QOS TFT flow change info

Data fields

| Type | Field | Description |
|---|-------------|---|
| shared_ptr< TrafficFlow↔ Template > | tft | TFT flow info TrafficFlowTemplate |
| QosFlow↔ StateChange↔ Event | stateChange | Flow state change event |

5.42.2.5 struct telux::data::BitRateInfo

Data call bit rate info

Data fields

| Type | Field | Description |
|----------|-----------|--|
| uint64_t | txRate | Instantaneous channel transmit rate in bits/sec |
| uint64_t | rxRate | Instantaneous channel receive rate in bits/sec |
| uint64_t | maxTxRate | Maximum transmit rate that can be assigned to device in bits/sec |
| uint64_t | maxRxRate | Maximum receive rate that can be assigned to device in bits/sec |

5.42.2.6 class telux::data::IDataConnectionManager

[IDataConnectionManager](#) is a primary interface for cellular connectivity. This interface provides APIs for start and stop data call connections, get data call information and listener for monitoring data calls. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status](#) setDefaultProfile (OperationType oprType, uint8_t profileId, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status](#) getDefaultProfile (OperationType oprType, DefaultProfileIdResponseCb callback)=0
- virtual [telux::common::Status](#) startDataCall (int profileId, IpFamilyType ipFamilyType=IpFamilyType::IPV4V6, DataCallResponseCb callback=nullptr, OperationType operationType=OperationType::DATA_LOCAL, std::string apn="")=0
- virtual [telux::common::Status](#) stopDataCall (int profileId, IpFamilyType ipFamilyType=IpFamilyType::IPV4V6, DataCallResponseCb callback=nullptr, OperationType operationType=OperationType::DATA_LOCAL, std::string apn="")=0
- virtual [telux::common::Status](#) registerListener (std::weak_ptr< [IDataConnectionListener](#) > listener)=0
- virtual [telux::common::Status](#) deregisterListener (std::weak_ptr< [IDataConnectionListener](#) > listener)=0
- virtual int [getSlotId](#) ()=0
- virtual [telux::common::Status](#) requestDataCallList (OperationType type, DataCallListResponseCb callback)=0
- virtual [~IDataConnectionManager](#) ()

5.42.2.6.1 Constructors and Destructors

5.42.2.6.1.1 virtual [telux::data::IDataConnectionManager::~IDataConnectionManager](#) () [virtual]

Destructor for [IDataConnectionManager](#)

5.42.2.6.2 Member Function Documentation

5.42.2.6.2.1 `virtual telux::common::ServiceStatus telux::data::IDataConnectionManager::getServiceStatus () [pure virtual]`

Checks the status of data connection manager and returns the result.

Returns

SERVICE_AVAILABLE If data connection manager is ready for service.
 SERVICE_UNAVAILABLE If data connection manager is temporarily unavailable.
 SERVICE_FAILED If data connection manager encountered an irrecoverable failure.

5.42.2.6.2.2 `virtual bool telux::data::IDataConnectionManager::isSubsystemReady () [pure virtual]`

Checks if the data subsystem is ready.

Returns

True if Data Connection Manager is ready for service, otherwise returns false.

Deprecated Use getServiceStatus API.

5.42.2.6.2.3 `virtual std::future<bool> telux::data::IDataConnectionManager::onSubsystemReady () [pure virtual]`

Wait for data subsystem to be ready.

Returns

A future that caller can wait on to be notified when card manager is ready.

Deprecated Use InitResponseCb callback in factory API getDataConnectionManager.

5.42.2.6.2.4 `virtual telux::common::Status telux::data::IDataConnectionManager::setDefaultProfile (OperationType oprType, uint8_t profileId, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Set a profile as default which results in the following:

- Default routes in the system will route traffic over the network interface associated with this profile.
- Bridge 0 will be associated with traffic from this profile.

Parameters

| | | |
|----|----------------------|--|
| in | <i>operationType</i> | telux::data::OperationType |
| in | <i>profileId</i> | Profile identifier to be associated with default handler |
| in | <i>callback</i> | optional callback to get the response setDefaultProfile |

Returns

Immediate status of setDefaultProfile i.e. success or suitable status.

5.42.2.6.2.5 virtual telux::common::Status telux::data::IDataConnectionManager::getDefaultProfile (OperationType *oprType*, DefaultProfileIdResponseCb *callback*) [pure virtual]

Get current default profile to which associated network traffic is routed through bridge 0 and default system routes.

Parameters

| | | |
|----|----------------------|--|
| in | <i>operationType</i> | telux::data::OperationType |
| in | <i>callback</i> | callback to get the response getDefaultProfile |

Returns

Immediate status of getDefaultProfile i.e. success or suitable status.

5.42.2.6.2.6 virtual telux::common::Status telux::data::IDataConnectionManager::startDataCall (int *profileId*, IpFamilyType *ipFamilyType* = IpFamilyType::IPV4V6, DataCallResponseCb *callback* = nullptr, OperationType *operationType* = OperationType::DATA_LOCAL, std::string *apn* = "") [pure virtual]

Starts a data call corresponding to default or specified profile identifier.

This will bring up data call connection based on specified profile identifier. This is an asynchronous API, client receives notification indicating the data call establishment or failure in callback.

Note

if application starts data call on IPV4V6 then it's expected to stop the data call on same ip family type (i.e IPV4V6).

Parameters

| | | |
|-----|----------------------|---|
| in | <i>profileId</i> | Profile identifier corresponding to which data call bring up will be done. Use IDataProfileManager::requestProfileList to get list of available profiles. |
| in | <i>ipFamilyType</i> | Identifies IP family type |
| out | <i>callback</i> | Optional callback to get the response of start data call. |
| in | <i>operationType</i> | Optional telux::data::OperationType |
| in | <i>apn</i> | Deprecated and currently unused |

Returns

Immediate status of [startDataCall\(\)](#) request sent i.e. success or suitable status code.

5.42.2.6.2.7 `virtual telux::common::Status telux::data::IDataConnectionManager::stopDataCall (int profileId, IpFamilyType ipFamilyType = IpFamilyType::IPV4V6, DataCallResponseCb callback = nullptr, OperationType operationType = OperationType::DATA_LOCAL, std::string apn = "") [pure virtual]`

Stops a data call corresponding to default or specified profile identifier.

This will tear down specific data call connection based on profile identifier.

Note

If application starts data call on IPV4V6 then it's expected to stop the data call on same ip family type (i.e IPV4V6). Client can only stop data call it started.

Parameters

| | | |
|-----|----------------------|---|
| in | <i>profileId</i> | Profile identifier corresponding to which data call tear down will be done. Use data profile manager to get the list of available profiles. |
| in | <i>ipFamilyType</i> | Identifies IP family type |
| out | <i>callback</i> | Optional callback to get the response of stop data call |
| in | <i>operationType</i> | Optional telux::data::OperationType |
| in | <i>apn</i> | Deprecated and currently unused |

Returns

Immediate status of [stopDataCall\(\)](#) request sent i.e. success or suitable status code. The client receives asynchronous notifications indicating the data call tear-down.

5.42.2.6.2.8 `virtual telux::common::Status telux::data::IDataConnectionManager::registerListener (std::weak_ptr< IDataConnectionListener > listener) [pure virtual]`

Register a listener for specific events in the Connection Manager like establishment of new data call, data call info change and call failure.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | pointer of IDataConnectionListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener success or suitable status code

5.42.2.6.2.9 `virtual telux::common::Status telux::data::IDataConnectionManager::deregisterListener (std::weak_ptr< IDataConnectionListener > listener) [pure virtual]`

Removes a previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | pointer of IDataConnectionListener object that needs to be removed |
|----|-----------------|--|

Returns

Status of deregisterListener success or suitable status code

5.42.2.6.2.10 virtual int telux::data::IDataConnectionManager::getSlotId () [pure virtual]

Get associated slot id for the Data Connection Manager.

Returns

SlotId

5.42.2.6.2.11 virtual telux::common::Status telux::data::IDataConnectionManager::requestDataCallList (*OperationType type*, *DataCallListResponseCb callback*) [pure virtual]

Request list of data calls available in the system

Parameters

| | | |
|-----|----------------------|--|
| out | <i>OperationType</i> | telux::data::OperationType |
| out | <i>callback</i> | Callback with list of supported data calls |

5.42.2.7 class telux::data::IDataCall

Represents single established data call on the device.

Public member functions

- virtual const std::string & [getInterfaceName](#) ()=0
- virtual [DataBearerTechnology](#) [getCurrentBearerTech](#) ()=0
- virtual [DataCallEndReason](#) [getDataCallEndReason](#) ()=0
- virtual [DataCallStatus](#) [getDataCallStatus](#) ()=0
- virtual [IpFamilyInfo](#) [getIpv4Info](#) ()=0
- virtual [IpFamilyInfo](#) [getIpv6Info](#) ()=0
- virtual [TechPreference](#) [getTechPreference](#) ()=0
- virtual std::list< [IpAddrInfo](#) > [getIpAddressInfo](#) ()=0
- virtual [IpFamilyType](#) [getIpFamilyType](#) ()=0
- virtual int [getProfileId](#) ()=0
- virtual SlotId [getSlotId](#) ()=0

- virtual [OperationType](#) `getOperationType ()=0`
- virtual `telux::common::Status requestTrafficFlowTemplate (IpFamilyType ipFamilyType, TrafficFlowTemplateCb callback)=0`
- virtual `telux::common::Status requestDataCallStatistics (StatisticsResponseCb callback=nullptr)=0`
- virtual `telux::common::Status resetDataCallStatistics (telux::common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status requestDataCallBitRate (requestDataCallBitRateResponseCb callback)=0`
- virtual `~IDataCall ()`

5.42.2.7.1 Constructors and Destructors

5.42.2.7.1.1 virtual `telux::data::IDataCall::~~IDataCall () [virtual]`

Destructor for [IDataCall](#)

5.42.2.7.2 Member Function Documentation

5.42.2.7.2.1 virtual const `std::string& telux::data::IDataCall::getInterfaceName () [pure virtual]`

Get interface name for the data call associated.

Returns

Interface Name.

5.42.2.7.2.2 virtual `DataBearerTechnology telux::data::IDataCall::getCurrentBearerTech () [pure virtual]`

Get the bearer technology on which earlier data call was brought up like LTE, WCDMA and etc. This is synchronous API called by client to get bearer technology corresponding to data call.

Returns

[DataBearerTechnology](#)

5.42.2.7.2.3 virtual `DataCallEndReason telux::data::IDataCall::getDataCallEndReason () [pure virtual]`

Get failure reason for the data call.

Returns

`DataCallFailReason`.

5.42.2.7.2.4 virtual DataCallStatus telux::data::IDataCall::getDataCallStatus () [pure virtual]

Get data call status like connected, disconnected and IP address changes.

Returns

[DataCallStatus](#).

5.42.2.7.2.5 virtual IpFamilyInfo telux::data::IDataCall::getIpv4Info () [pure virtual]

Get IPv4 Family info like connected, disconnected and IP address changes.

Returns

[IpFamilyInfo](#).

5.42.2.7.2.6 virtual IpFamilyInfo telux::data::IDataCall::getIpv6Info () [pure virtual]

Get IPv6 Family info like connected, disconnected and IP address changes.

Returns

[IpFamilyInfo](#).

5.42.2.7.2.7 virtual TechPreference telux::data::IDataCall::getTechPreference () [pure virtual]

Get the technology on which the call was brought up.

Returns

[TechPreference](#).

5.42.2.7.2.8 virtual std::list<IpAddrInfo> telux::data::IDataCall::getIpAddressInfo () [pure virtual]

Get list of IP address information.

Returns

List of IP address details.

5.42.2.7.2.9 virtual IpFamilyType telux::data::IDataCall::getIpFamilyType () [pure virtual]

Get IP Family Type i.e. IPv4, IPv6 or Both

Returns

[IpFamilyType](#).

5.42.2.7.2.10 `virtual int telux::data::IDataCall::getProfileId () [pure virtual]`

Get Profile Id

Returns

Profile Identifier.

5.42.2.7.2.11 `virtual SlotId telux::data::IDataCall::getSlotId () [pure virtual]`

Get Slot Id

Returns

Subscription Slot Identifier.

5.42.2.7.2.12 `virtual OperationType telux::data::IDataCall::getOperationType () [pure virtual]`

Get data operation used for the DataCall.

Returns

[OperationType](#)

5.42.2.7.2.13 `virtual telux::common::Status telux::data::IDataCall::requestTrafficFlowTemplate (IpFamilyType ipFamilyType, TrafficFlowTemplateCb callback) [pure virtual]`

Get the current installed QOS Traffic flow template information.

Parameters

| | | |
|----|---------------------|--|
| in | <i>ipFamilyType</i> | - IP Family type IpFamilyType . TFT's are installed per IP Family. |
| in | <i>callback</i> | - callback function to get the result of API. |

Returns

Status of requestTrafficFlowTemplate i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.7.2.14 `virtual telux::common::Status telux::data::IDataCall::requestDataCallStatistics (StatisticsResponseCb callback = nullptr) [pure virtual]`

Request the data transfer statistics for data call corresponding to specified profile identifier.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | Optional callback to get the response of request Data Call Statistics |
|----|-----------------|---|

Returns

Status of getDataCallStatistics i.e. success or suitable status code.

5.42.2.7.2.15 virtual telux::common::Status telux::data::IDataCall::resetDataCallStatistics (telux::common::ResponseCallback *callback* = nullptr) [pure virtual]

Reset data transfer statistics for data call corresponding to specified profile identifier.

Parameters

| | | |
|----|-----------------|---|
| in | <i>callback</i> | optional callback to get the response of reset Data call statistics |
|----|-----------------|---|

Returns

Status of resetDataCallStatistics i.e. success or suitable status code.

5.42.2.7.2.16 virtual telux::common::Status telux::data::IDataCall::requestDataCallBitRate (requestDataCallBitRateResponseCb *callback*) [pure virtual]

Request data call bit rate in (bits/sec).

Parameters

| | | |
|-----|-----------------|---|
| out | <i>callback</i> | callback to be called with bit rate results requestDataCallBitRateResponseCb |
|-----|-----------------|---|

Returns

Status of requestDataCallBitRate success or suitable status code

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.8 class telux::data::IDataConnectionListener

Interface for Data connection listener object. Client needs to implement this interface to get access to data services notifications like onNewDataCall, onDataCallStatusChanged and onDataCallFailure.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

The notification delivery mechanism uses the same thread to deliver all the queued notifications to ensure

they are delivered in order. Considering this, the thread on which the notifications are delivered should not be blocked for longer operations since this would result in delay in delivery of further notifications that are in the queue waiting to be dispatched.

Public member functions

- virtual void [onDataCallInfoChanged](#) (const std::shared_ptr< [IDataCall](#) > &dataCall)
- virtual void [onHwAccelerationChanged](#) (const [ServiceState](#) state)
- virtual void [onTrafficFlowTemplateChange](#) (const std::shared_ptr< [IDataCall](#) > &dataCall, const std::vector< std::shared_ptr< [TftChangeInfo](#) >> &tft)
- virtual [~IDataConnectionListener](#) ()

5.42.2.8.1 Constructors and Destructors

5.42.2.8.1.1 virtual telux::data::IDataConnectionListener::~~IDataConnectionListener () [virtual]

Destructor for [IDataConnectionListener](#)

5.42.2.8.2 Member Function Documentation

5.42.2.8.2.1 virtual void telux::data::IDataConnectionListener::onDataCallInfoChanged (const std::shared_ptr< [IDataCall](#) > & *dataCall*) [virtual]

This function is called when there is a change in the data call.

Parameters

| | | |
|----|-----------------|--------------------------------------|
| in | <i>dataCall</i> | Pointer to IDataCall |
|----|-----------------|--------------------------------------|

5.42.2.8.2.2 virtual void telux::data::IDataConnectionListener::onHwAccelerationChanged (const [ServiceState](#) *state*) [virtual]

This function is called when a change occur in hardware acceleration service.

Parameters

| | | |
|----|--------------|--|
| in | <i>state</i> | New state of hardware Acceleration service (Active/Inactive) |
|----|--------------|--|

5.42.2.8.2.3 virtual void telux::data::IDataConnectionListener::onTrafficFlowTemplateChange (const std::shared_ptr< [IDataCall](#) > & *dataCall*, const std::vector< std::shared_ptr< [TftChangeInfo](#) >> & *tft*) [virtual]

This function is called when the TFT's parameters are changed for a packet data session.

Parameters

| | | |
|----|-----------------|---|
| in | <i>dataCall</i> | Pointer to IDataCall |
| in | <i>tft</i> | vector of TftChangeInfo TftChangeInfo |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.9 struct telux::data::DataRestrictMode

Defines the supported powersave filtering mode and autoexit for the packet data session. [DataRestrictFilter](#)

Data fields

| Type | Field | Description |
|--------------------------------------|----------------|--|
| DataRestrictModeType | filterMode | Disable or enable data filter mode. When disabled all the data packets will be forwarded from modem to the apps. When enabled only the data matching the filters will be forwarded from modem to the apps. |
| DataRestrictModeType | filterAutoExit | Disable or enable autoexit feature. When enabled, once an incoming packet matching the filter is received, filter mode will be disabled automatically and any packet will be allowed to be forwarded from modem to apps. |

5.42.2.10 struct telux::data::PortInfo

Used to define the Port number and range (number of ports following port value) Ex- for ports ranging from 1000-3000 port = 1000 and range= 2000

for single port 5000 port = 5000 and range= 0

Data fields

| Type | Field | Description |
|----------|-------|-------------|
| uint16_t | port | Port. |
| uint16_t | range | Range. |

5.42.2.11 struct telux::data::ProfileParams

Profile Parameters used for profile creation, query and modify

Data fields

| Type | Field | Description |
|--------|-------------|------------------------|
| string | profileName | Profile Name |
| string | apn | APN name |
| string | userName | APN user name (if any) |
| string | password | APN password (if any) |

| Type | Field | Description |
|--|--------------|--|
| TechPreference | techPref | Technology preference, default is TechPreference::UNKNOWN |
| AuthProtocol↔ Type | authType | Authentication protocol type, default is AuthProtocolType::AUTH_NONE |
| IpFamilyType | ipFamilyType | Preferred IP family for the call, default is IpFamilyType::UNKNOWN |

5.42.2.12 struct telux::data::DataCallStats

Data transfer statistics structure.

Data fields

| Type | Field | Description |
|----------|-----------------------|------------------------------------|
| uint64_t | packetsTx | Number of packets transmitted |
| uint64_t | packetsRx | Number of packets received |
| uint64_t | bytesTx | Number of bytes transmitted |
| uint64_t | bytesRx | Number of bytes received |
| uint64_t | packets↔ DroppedTx | Number of transmit packets dropped |
| uint64_t | packets↔ DroppedRx | Number of receive packets dropped |

5.42.2.13 struct telux::data::IpAddrInfo

IP address information structure

Data fields

| Type | Field | Description |
|--------------|--------------------------|------------------------|
| string | ifAddress | Interface IP address. |
| unsigned int | ifMask | Subnet mask. |
| string | gwAddress | Gateway IP address. |
| unsigned int | gwMask | Subnet mask. |
| string | primaryDns↔ Address | Primary DNS address. |
| string | secondary↔ DnsAddress | Secondary DNS address. |

5.42.2.14 struct telux::data::DataCallEndReason

Structure represents data call failure reason type and code.

Data fields

| Type | Field | Description |
|-------------------------------------|-------|--|
| EndReason↔ Type | type | Data call terminated due to reason type, default is CE_UNKNOWN |

| Type | Field | Description |
|---|-----------------------------------|-------------|
| union Data ↔ CallEndReason | __unnamed_ ↔ _ | |

5.42.2.15 struct telux::data::VlanConfig

Structure for vlan configuration

Data fields

| Type | Field | Description |
|-------------------------------|---------------|--|
| InterfaceType | iface | PHY interfaces (i.e. ETH, ECM and RNDIS) |
| int16_t | vlanId | Vlan identifier (i.e 1-4094) |
| bool | isAccelerated | is acceleration allowed |

5.42.2.16 struct telux::data::FlowDataRate

QOS Flow data min max rate bits per seconds

Data fields

| Type | Field | Description |
|----------|---------|----------------------------|
| uint64_t | maxRate | QOS Flow maximum data rate |
| uint64_t | minRate | QOS Flow minimum data rate |

5.42.2.17 struct telux::data::QosIPFlowInfo

QOS Flow IP info

Data fields

| Type | Field | Description |
|--|----------|---|
| QosIPFlow ↔ Mask | mask | Valid parameters of QosIPFlowInfo ref |
| IpTraffic ↔ ClassType | tfClass | IP Traffic class type IpFamilyType |
| FlowDataRate | dataRate | Flow data rate FlowDataRate |

5.42.2.18 class telux::data::DataFactory

[DataFactory](#) is the central factory to create all data classes.

Public member functions

- `std::shared_ptr< IDataConnectionManager > getDataConnectionManager (SlotId slotId=DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< IDataProfileManager > getDataProfileManager (SlotId slotId=DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< IServingSystemManager > getServingSystemManager (SlotId slotId=DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< IDataFilterManager > getDataFilterManager (SlotId slotId=DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< telux::data::net::INatManager > getNatManager (telux::data::OperationType oprType, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< telux::data::net::IFirewallManager > getFirewallManager (telux::data::OperationType oprType, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< telux::data::net::IFirewallEntry > getNewFirewallEntry (IpProtocol proto, Direction direction, IpFamilyType ipFamilyType)`
- `std::shared_ptr< IipFilter > getNewIpFilter (IpProtocol proto)`
- `std::shared_ptr< telux::data::net::IVlanManager > getVlanManager (telux::data::OperationType oprType, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< telux::data::net::ISocksManager > getSocksManager (telux::data::OperationType oprType, telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< telux::data::net::IBridgeManager > getBridgeManager (telux::common::InitResponseCb clientCallback=nullptr)`
- `std::shared_ptr< telux::data::net::IL2tpManager > getL2tpManager (telux::common::InitResponseCb clientCallback=nullptr)`

Static Public Member Functions

- static `DataFactory & getInstance ()`

5.42.2.18.1 Member Function Documentation**5.42.2.18.1.1 static DataFactory& telux::data::DataFactory::getInstance () [static]**

Get Data Factory instance.

5.42.2.18.1.2 std::shared_ptr<IDataConnectionManager> telux::data::DataFactory::getDataConnectionManager (SlotId slotId = DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback = nullptr)

Get Data Connection Manager

Parameters

| | | |
|----|-----------------------|---|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
| in | <i>clientCallback</i> | Optional callback to get the initialization status of DataConnectionManager telux::data::DataInitSlotIdResponseCb. |

Returns

instance of [IDataConnectionManager](#)

5.42.2.18.1.3 `std::shared_ptr<IDataProfileManager> telux::data::DataFactory::getDataProfileManager (SlotId slotId = DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback = nullptr)`

Get Data Profile Manager

Parameters

| | | |
|----|-----------------------|---|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
| in | <i>clientCallback</i> | Optional callback to get the initialization status of DataProfileManager telux::data::DataInitSlotIdResponseCb. |

Returns

instance of [IDataProfileManager](#)

5.42.2.18.1.4 `std::shared_ptr<IServingSystemManager> telux::data::DataFactory::getServingSystemManager (SlotId slotId = DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback = nullptr)`

Get Serving System Manager

Parameters

| | | |
|----|-----------------------|--|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
| in | <i>clientCallback</i> | Callback to be called with initialization result |

Returns

instance of [IServingSystemManager](#)

5.42.2.18.1.5 `std::shared_ptr<IDataFilterManager> telux::data::DataFactory::getDataFilterManager (SlotId slotId = DEFAULT_SLOT_ID, telux::common::InitResponseCb clientCallback = nullptr)`

Get Data Filter Manager instance

Parameters

| | | |
|----|-----------------------|--|
| in | <i>slotId</i> | Unique identifier for the SIM slot |
| in | <i>clientCallback</i> | Callback to be called with initialization result |

Returns

instance of [IDataFilterManager](#).

5.42.2.18.1.6 `std::shared_ptr<telux::data::net::INatManager> telux::data::DataFactory::getNatManager (telux::data::OperationType oprType, telux::common::InitResponseCb clientCallback = nullptr)`

Get Network Address Translation(NAT) Manager

Parameters

| | | |
|----|-----------------------|---|
| in | <i>oprType</i> | Required operation type telux::data::OperationType |
| in | <i>clientCallback</i> | Optional callback to get the initialization status of NAT manager telux::common::InitResponseCb |

Returns

instance of [INatManager](#)

5.42.2.18.1.7 `std::shared_ptr<telux::data::net::IFirewallManager> telux::data::DataFactory::getFirewallManager (telux::data::OperationType oprType, telux::common::InitResponseCb clientCallback = nullptr)`

Get Firewall Manager

Parameters

| | | |
|----|-----------------------|--|
| in | <i>oprType</i> | Required operation type telux::data::OperationType |
| in | <i>clientCallback</i> | Optional callback to get the initialization status of Firewall manager telux::common::InitResponseCb |

Returns

instance of [IFirewallManager](#)

5.42.2.18.1.8 `std::shared_ptr<telux::data::net::IFirewallEntry> telux::data::DataFactory::getNewFirewallEntry (IpProtocol proto, Direction direction, IpFamilyType ipFamilyType)`

Get Firewall entry based on IP protocol and set respective filter (i.e. TCP or UDP)

Parameters

| | | |
|----|---------------------|---|
| in | <i>proto</i> | telux::data::IpProtocol |
| in | <i>direction</i> | telux::data::Direction |
| in | <i>ipFamilyType</i> | Identifies IP family type telux::data::IpFamilyType |

Returns

instance of [IFirewallEntry](#)

5.42.2.18.1.9 std::shared_ptr<IipFilter> telux::data::DataFactory::getNewIipFilter (IpProtocol *proto*)

Get [IipFilter](#) instance based on IP Protocol, This can be used in Firewall Manager and Data Filter Manager

Parameters

| | | |
|----|--------------|--|
| in | <i>proto</i> | telux::data::IpProtocol Some sample protocol values are ICMP = 1 # Internet Control Message Protocol - RFC 792 IGMP = 2 # Internet Group Management Protocol - RFC 1112 TCP = 6 # Transmission Control Protocol - RFC 793 UDP = 17 # User Datagram Protocol - RFC 768 ESP = 50 # Encapsulating Security Payload - RFC 4303 |
|----|--------------|--|

Returns

instance of [IipFilter](#) based on IpProtocol filter (i.e TCP, UDP)

5.42.2.18.1.10 std::shared_ptr<telux::data::net::IVlanManager> telux::data::DataFactory::getVlanManager (telux::data::OperationType *oprType*, telux::common::InitResponseCb *clientCallback* = nullptr)

Get VLAN Manager

Parameters

| | | |
|----|-----------------------|--|
| in | <i>oprType</i> | Required operation type telux::data::OperationType |
| in | <i>clientCallback</i> | Optional callback to get the initialization status of Vlan manager telux::common::InitResponseCb |

Returns

instance of [IVlanManager](#)

5.42.2.18.1.11 std::shared_ptr<telux::data::net::ISocksManager> telux::data::DataFactory::getSocksManager (telux::data::OperationType *oprType*, telux::common::InitResponseCb *clientCallback* = nullptr)

Get Socks Manager

Parameters

| | | |
|----|-----------------------|---|
| in | <i>oprType</i> | Required operation type telux::data::OperationType |
| in | <i>clientCallback</i> | Optional callback to get the initialization status of Socks manager telux::common::InitResponseCb |

Returns

instance of ISocksManager

```
5.42.2.18.1.12 std::shared_ptr<telux::data::net::IBridgeManager> telux::data::DataFactory<←
::getBridgeManager ( telux::common::InitResponseCb clientCallback = nullptr
)
```

Get Software Bridge Manager

Parameters

| | | |
|----|-----------------------|--|
| in | <i>clientCallback</i> | Optional callback to get the initialization status of Bridge manager telux::common::InitResponseCb |
|----|-----------------------|--|

Returns

instance of IBridgeManager

```
5.42.2.18.1.13 std::shared_ptr<telux::data::net::IL2tpManager> telux::data::DataFactory<←
::getL2tpManager ( telux::common::InitResponseCb clientCallback = nullptr
)
```

Get L2TP Manager

Parameters

| | | |
|----|-----------------------|--|
| in | <i>clientCallback</i> | Optional callback to get the initialization status of L2TP manager telux::common::InitResponseCb |
|----|-----------------------|--|

Returns

instance of IL2tpManager

5.42.2.19 class telux::data::IDataFilterListener

Listener class for listening to filtering mode notifications, like Data filtering mode change. Client need to implement these methods. The methods in listener can be invoked from multiple threads. So the client needs to make sure that the implementation is thread-safe.

Public member functions

- virtual void [onDataRestrictModeChange](#) ([DataRestrictMode](#) mode)
- virtual [~IDataFilterListener](#) ()

5.42.2.19.1 Constructors and Destructors

5.42.2.19.1.1 virtual [telux::data::IDataFilterListener::~~IDataFilterListener](#) () [[virtual](#)]

Destructor of [IDataFilterListener](#)

5.42.2.19.2 Member Function Documentation

5.42.2.19.2.1 virtual void [telux::data::IDataFilterListener::onDataRestrictModeChange](#) ([DataRestrictMode](#) *mode*) [[virtual](#)]

This function is called when the data filtering mode is changed for the packet data session.

Parameters

| | | |
|-----------|--------------|------------------------------|
| <i>in</i> | <i>state</i> | the current data filter mode |
|-----------|--------------|------------------------------|

5.42.2.20 class [telux::data::IDataFilterManager](#)

[IDataFilterManager](#) class provides interface to enable/disable the data restrict filters and register for data restrict filter. The filtering can be done at any time. One such use case is to do it when we want the AP to suspend so that we are not waking up the AP due to spurious incoming messages. Also to make sure the DataRestrict mode is enabled.

In contrary to when DataRestrict mode is disabled, modem will forward all the incoming data packets to AP and might wake up AP unnecessarily.

Public member functions

- virtual [telux::common::ServiceStatus](#) [getServiceStatus](#) ()=0
- virtual bool [isReady](#) ()=0
- virtual std::future< bool > [onReady](#) ()=0
- virtual [telux::common::Status](#) [registerListener](#) (std::weak_ptr< [IDataFilterListener](#) > listener)=0
- virtual [telux::common::Status](#) [deregisterListener](#) (std::weak_ptr< [IDataFilterListener](#) > listener)=0
- virtual [telux::common::Status](#) [setDataRestrictMode](#) ([DataRestrictMode](#) mode, [telux::common::ResponseCallback](#) callback=nullptr, int profileId=[PROFILE_ID_MAX](#), [IpFamilyType](#) ipFamilyType=[IpFamilyType::UNKNOWN](#))=0
- virtual [telux::common::Status](#) [requestDataRestrictMode](#) (std::string ifaceName, [DataRestrictModeCb](#) callback)=0
- virtual [telux::common::Status](#) [addDataRestrictFilter](#) (std::shared_ptr< [IipFilter](#) > &filter,

[telux::common::ResponseCallback](#) callback=nullptr, int profileId=PROFILE_ID_MAX, [IpFamilyType](#) ipFamilyType=[IpFamilyType::UNKNOWN](#))=0

- virtual [telux::common::Status](#) [removeAllDataRestrictFilters](#) ([telux::common::ResponseCallback](#) callback=nullptr, int profileId=PROFILE_ID_MAX, [IpFamilyType](#) ipFamilyType=[IpFamilyType::UNKNOWN](#))=0
- virtual int [getSlotId](#) ()=0
- virtual [~IDataFilterManager](#) ()

5.42.2.20.1 Constructors and Destructors

5.42.2.20.1.1 virtual [telux::data::IDataFilterManager::~IDataFilterManager](#) () [[virtual](#)]

Destructor of [IDataFilterManager](#)

5.42.2.20.2 Member Function Documentation

5.42.2.20.2.1 virtual [telux::common::ServiceStatus](#) [telux::data::IDataFilterManager::getServiceStatus](#) () [[pure virtual](#)]

Checks the status of data filter manager and returns the result.

Returns

the status of sensor sub-system status [telux::common::ServiceStatus](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.20.2.2 virtual bool [telux::data::IDataFilterManager::isReady](#) () [[pure virtual](#)]

Checks the status of Data Filter Service and if the other APIs are ready for use, and returns the result.

Returns

True if the services are ready otherwise false.

Deprecated Use [getServiceStatus](#) API.

5.42.2.20.2.3 `virtual std::future<bool> telux::data::IDataFilterManager::onReady () [pure virtual]`

Wait for Data Filter Service to be ready.

Returns

A future that caller can wait on to be notified when Data Filter Service are ready.

Deprecated Use InitResponseCb callback in factory API getDataFilterManager.

5.42.2.20.2.4 `virtual telux::common::Status telux::data::IDataFilterManager::registerListener (std::weak_ptr< IDataFilterListener > listener) [pure virtual]`

Register a listener for powersave filtering mode notifications.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Pointer of IDataFilterListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener i.e success or suitable status code.

5.42.2.20.2.5 `virtual telux::common::Status telux::data::IDataFilterManager::deregisterListener (std::weak_ptr< IDataFilterListener > listener) [pure virtual]`

Remove a previously registered listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | - Previously registered IDataFilterListener that needs to be removed |
|----|-----------------|--|

Returns

Status of deregisterListener, success or suitable status code

5.42.2.20.2.6 `virtual telux::common::Status telux::data::IDataFilterManager::setDataRestrictMode (DataRestrictMode mode, telux::common::ResponseCallback callback = nullptr, int profileId = PROFILE_ID_MAX, IpFamilyType ipFamilyType = IpFamilyType::UNKNOWN) [pure virtual]`

Changes the Data Powersave filter mode and auto exit feature.

This API enables or disables the powersave filtering mode of the running packet data session. If a data connection is torn down and brought up again, then previous filter mode setting does not persist for that data call session, and requires to be enabled again.

Parameters

| | | |
|----|---------------------|---|
| in | <i>mode</i> | - Enable or disable the powersave filtering mode. |
| in | <i>callback</i> | - Optional callback to get the response for the change in filter mode. |
| in | <i>profileId</i> | - Optional Profile ID for data connection. If user does not specify the profile id, then the API applies to all the currently running data connection. If user wants to apply the changes to any specific data connection, then its profile id can be specified as input. |
| in | <i>ipFamilyType</i> | - Optional IP Family type IpFamilyType.If user does not specify the ip family type, then the API applies to all the currently running data connection. If user wants to apply the changes to any specific data connection, then its ip family type can be specified as input. |

Returns

Status of setDataRestrictMode i.e. success or suitable status code.

5.42.2.20.2.7 `virtual telux::common::Status telux::data::IDataFilterManager::requestDataRestrictMode (std::string ifaceName, DataRestrictModeCb callback) [pure virtual]`

Get the current Data Powersave filter mode

Parameters

| | | |
|----|------------------|--|
| in | <i>ifaceName</i> | - Interface name for data connection. Note: For global pdn , ifaceName must be empty, as global restrict mode is reported. Per-pdn requests are not supported. |
| in | <i>callback</i> | - callback function to get the result of API. |

Returns

Status of requestDataRestrictMode i.e. success or suitable status code.

5.42.2.20.2.8 `virtual telux::common::Status telux::data::IDataFilterManager::addDataRestrictFilter (std::shared_ptr< llpFilter > & filter, telux::common::ResponseCallback callback = nullptr, int profileId = PROFILE_ID_MAX, IpFamilyType ipFamilyType = IpFamilyType::UNKNOWN) [pure virtual]`

This API adds a filter rules for a packet data session to achieve power savings. In case when DataRestrict mode is enabled and AP is in suspended state, Modem will filter all the incoming data packet and route them to AP only if filter rules added via addDataRestrictFilter API matches the criteria, else they are queued at Modem itself and not forwarded to AP, until filter mode is disabled.

Parameters

| | | |
|----|---------------------|---|
| in | <i>filter</i> | - Filter rule. |
| in | <i>callback</i> | - Optional callback to get the response. |
| in | <i>profileId</i> | - Optional Profile ID for data connection. If user does not specify the profile id, then the API applies to all the currently running data connection. If user wants to apply the changes to any specific data connection, then its profile id can be specified as input. |
| in | <i>ipFamilyType</i> | - Optional IP Family type IpFamilyType . If user does not specify the ip family type, then the API applies to all the currently running data connection. If user wants to apply the changes to any specific data connection, then its ip family type can be specified as input. |

Returns

Status of addDataRestrictFilter i.e. success or suitable status code.

5.42.2.20.2.9 `virtual telux::common::Status telux::data::IDataFilterManager::removeAllDataRestrictFilters (telux::common::ResponseCallback callback = nullptr, int profileId = PROFILE_ID_MAX, IpFamilyType ipFamilyType = IpFamilyType::UNKNOWN) [pure virtual]`

This API removes all the previous added powersave filter for a packet data session

Parameters

| | | |
|----|---------------------|---|
| in | <i>callback</i> | - Optional callback to get the response. |
| in | <i>profileId</i> | - Optional Profile ID for data connection. If user does not specify the profile id, then the API applies to all the currently running data connection. If user wants to apply the changes to any specific data connection, then its profile id can be specified as input. |
| in | <i>ipFamilyType</i> | - Optional IP Family type IpFamilyType . If user does not specify the ip family type, then the API applies to all the currently running data connection. If user wants to apply the changes to any specific data connection, then its ip family type can be specified as input. |

Returns

Status of removeAllDataRestrictFilters i.e. success or suitable status code.

5.42.2.20.2.10 virtual int telux::data::IDataFilterManager::getSlotId () [pure virtual]

Get associated slot id for the Data Filter Manager.

Returns

SlotId

5.42.2.21 class telux::data::DataProfile

[DataProfile](#) class represents single data profile on the modem.

Public member functions

- [DataProfile](#) (int id, const std::string &name, const std::string &apn, const std::string &username, const std::string &password, [IpFamilyType](#) ipFamilyType, [TechPreference](#) techPref, [AuthProtocolType](#) authType)
- int [getId](#) ()
- std::string [getName](#) ()
- std::string [getApn](#) ()
- std::string [getUserName](#) ()
- std::string [getPassword](#) ()
- [TechPreference](#) [getTechPreference](#) ()
- [AuthProtocolType](#) [getAuthProtocolType](#) ()
- [IpFamilyType](#) [getIpFamilyType](#) ()
- std::string [toString](#) ()

Static Public Attributes

- static constexpr int [PROFILE_ID_INVALID](#) = -1

5.42.2.21.1 Constructors and Destructors

5.42.2.21.1.1 **telux::data::DataProfile::DataProfile** (int *id*, const std::string & *name*, const std::string & *apn*, const std::string & *username*, const std::string & *password*, [IpFamilyType](#) *ipFamilyType*, [TechPreference](#) *techPref*, [AuthProtocolType](#) *authType*)

5.42.2.21.2 Member Function Documentation

5.42.2.21.2.1 int telux::data::DataProfile::getid ()

Get profile identifier.

Returns

profile id

5.42.2.21.2.2 std::string telux::data::DataProfile::getName ()

Get profile name.

Returns

profile name

5.42.2.21.2.3 std::string telux::data::DataProfile::getApn ()

Get Access Point Name (APN) name.

Returns

APN name

5.42.2.21.2.4 std::string telux::data::DataProfile::getUserName ()

Get profile user name.

Returns

user name

5.42.2.21.2.5 std::string telux::data::DataProfile::getPassword ()

Get profile password.

Returns

profile password

5.42.2.21.2.6 TechPreference telux::data::DataProfile::getTechPreference ()

Get technology preference.

Returns

TechPreference [TechPreference](#)

5.42.2.21.2.7 AuthProtocolType telux::data::DataProfile::getAuthProtocolType ()

Get authentication preference.

Returns

AuthProtocolType [AuthProtocolType](#)

5.42.2.21.2.8 IpFamilyType telux::data::DataProfile::getIpFamilyType ()

Get IP Family type.

Returns

IpFamilyType [IpFamilyType](#)

5.42.2.21.2.9 std::string telux::data::DataProfile::toString ()

Get the text related informative representation of this object.

Returns

String containing informative string.

5.42.2.21.3 Field Documentation

5.42.2.21.3.1 constexpr int telux::data::DataProfile::PROFILE_ID_INVALID = -1 [static]

5.42.2.22 class telux::data::IDataProfileListener

Listener class for getting profile change notification.

The methods in the listener can be invoked from multiple threads. It is client's responsibility to make sure the implementation is thread safe.

Public member functions

- virtual void [onServiceStatusChange](#) (telux::common::ServiceStatus status)
- virtual void [onProfileUpdate](#) (int profileId, [TechPreference](#) techPreference, [ProfileChangeEvent](#) event)
- virtual [~IDataProfileListener](#) ()

5.42.2.22.1 Constructors and Destructors

5.42.2.22.1.1 virtual telux::data::IDataProfileListener::~~IDataProfileListener () [virtual]

Destructor of [IDataProfileListener](#)

5.42.2.22.2 Member Function Documentation

5.42.2.22.2.1 virtual void telux::data::IDataProfileListener::onServiceStatusChange (telux::common::ServiceStatus *status*) [virtual]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.42.2.22.2.2 virtual void telux::data::IDataProfileListener::onProfileUpdate (int *profileId*, TechPreference *techPreference*, ProfileChangeEvent *event*) [virtual]

This function is called when profile change happens.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>profileId</i> | - ID of the updated profile. |
| in | <i>techPreference</i> | - TechPreference. |
| in | <i>event</i> | - Event that caused the change in profile. |

5.42.2.23 class telux::data::IDataProfileManager

[IDataProfileManager](#) is a primary interface for profile management.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual bool isSubsystemReady ()=0
- virtual std::future< bool > onSubsystemReady ()=0
- virtual [telux::common::Status](#) requestProfileList (std::shared_ptr< [IDataProfileListCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) createProfile (const [ProfileParams](#) &profileParams, std::shared_ptr< [IDataCreateProfileCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) deleteProfile (uint8_t profileId, [TechPreference](#) techPreference, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) modifyProfile (uint8_t profileId, const [ProfileParams](#) &profileParams, std::shared_ptr< [telux::common::ICommandResponseCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) queryProfile (const [ProfileParams](#) &profileParams, std::shared_ptr< [IDataProfileListCallback](#) > callback=nullptr)=0
- virtual [telux::common::Status](#) requestProfile (uint8_t profileId, [TechPreference](#) techPreference, std::shared_ptr< [IDataProfileCallback](#) > callback=nullptr)=0
- virtual int getSlotId ()=0

- virtual `telux::common::Status registerListener (std::weak_ptr< telux::data::IDataProfileListener > listener)=0`
- virtual `telux::common::Status deregisterListener (std::weak_ptr< telux::data::IDataProfileListener > listener)=0`
- virtual `~IDataProfileManager ()`

5.42.2.23.1 Constructors and Destructors

5.42.2.23.1.1 `virtual telux::data::IDataProfileManager::~IDataProfileManager () [virtual]`

Destructor for `IDataProfileManager`

5.42.2.23.2 Member Function Documentation

5.42.2.23.2.1 `virtual telux::common::ServiceStatus telux::data::IDataProfileManager::getServiceStatus () [pure virtual]`

Checks the status of Data profile manager and returns the result.

Returns

`SERVICE_AVAILABLE` If Data profile manager is ready for service. `SERVICE_UNAVAILABLE` If Data profile manager is temporarily unavailable. `SERVICE_FAILED` - If Data profile manager encountered an irrecoverable failure.

5.42.2.23.2.2 `virtual bool telux::data::IDataProfileManager::isSubsystemReady () [pure virtual]`

Checks if the data profile manager is ready.

Returns

True if data profile subsystem is ready for service otherwise false.

Deprecated Use `getServiceStatus` API.

5.42.2.23.2.3 `virtual std::future<bool> telux::data::IDataProfileManager::onSubsystemReady () [pure virtual]`

Waits for data profile subsystem to be ready.

Returns

A future that caller can wait on to be notified when data profile subsystem is ready.

Deprecated Use `InitResponseCb` callback in factory API `getDataProfileManager`.

5.42.2.23.2.4 `virtual telux::common::Status telux::data::IDataProfileManager::requestProfileList (std::shared_ptr< IDataProfileListCallback > callback = nullptr) [pure virtual]`

Request list of profiles supported by the device.

Parameters

| | | |
|----------------|-----------------|---------------------------------------|
| <i>in, out</i> | <i>callback</i> | Callback pointer to get the response. |
|----------------|-----------------|---------------------------------------|

Returns

Status of request profile i.e. success or suitable error code.

5.42.2.23.2.5 `virtual telux::common::Status telux::data::IDataProfileManager::createProfile (const ProfileParams & profileParams, std::shared_ptr< IDataCreateProfileCallback > callback = nullptr) [pure virtual]`

Create profile based on data profile params.

Parameters

| | | |
|----------------|----------------------|--|
| <i>in</i> | <i>profileParams</i> | profileParams configuration to be passed for creating profile either for 3GPP or 3GPP2 |
| <i>in, out</i> | <i>callback</i> | Callback pointer to get the result of create profile |

Returns

Status of create profile i.e. success or suitable error code.

5.42.2.23.2.6 `virtual telux::common::Status telux::data::IDataProfileManager::deleteProfile (uint8_t profileId, TechPreference techPreference, std::shared_ptr< telux::common::ICommandResponseCallback > callback = nullptr) [pure virtual]`

Delete profile corresponding to profile identifier.

The deletion of a profile does not affect profile index assignments.

Parameters

| | | |
|-----------|-----------------------|--|
| <i>in</i> | <i>profileId</i> | Profile identifier |
| <i>in</i> | <i>techPreference</i> | Technology Preference like 3GPP / 3GPP2 |
| <i>in</i> | <i>callback</i> | Callback pointer to get the result of delete profile |

Returns

Status of delete profile i.e. success or suitable error code.

5.42.2.23.2.7 virtual telux::common::Status telux::data::IDataProfileManager::modifyProfile (uint8_t *profileId*, const ProfileParams & *profileParams*, std::shared_ptr< telux::common::ICommandResponseCallback > *callback* = nullptr) [pure virtual]

Modify existing profile with new profile params.

Parameters

| | | |
|----|----------------------|--|
| in | <i>profileId</i> | Profile identifier of profile to be modified |
| in | <i>profileParams</i> | New profileParams configuration passed for updating existing profile |
| in | <i>callback</i> | Callback pointer to get the result of modify profile |

Returns

Status of modify profile i.e. success or suitable error code.

5.42.2.23.2.8 virtual telux::common::Status telux::data::IDataProfileManager::queryProfile (const ProfileParams & *profileParams*, std::shared_ptr< IDataProfileListCallback > *callback* = nullptr) [pure virtual]

Lookup modem profile/s based on given profile params.

Parameters

| | | |
|----|----------------------|--|
| in | <i>profileParams</i> | ProfileParams configuration to be passed |
| in | <i>callback</i> | Callback pointer to get the result of query profile |

Returns

Status of query profile i.e. success or suitable error code.

5.42.2.23.2.9 virtual telux::common::Status telux::data::IDataProfileManager::requestProfile (uint8_t *profileId*, TechPreference *techPreference*, std::shared_ptr< IDataProfileCallback > *callback* = nullptr) [pure virtual]

Get data profile corresponding to profile identifier.

Parameters

| | | |
|----|-----------------------|--|
| in | <i>profileId</i> | Profile identifier |
| in | <i>techPreference</i> | Technology preference <ul style="list-style-type: none"> TechPreference |
| in | <i>callback</i> | Callback pointer to get the result of get profile by ID |

Returns

Status of requestProfile i.e. success or suitable error code.

5.42.2.23.2.10 virtual int telux::data::IDataProfileManager::getSlotId () [pure virtual]

Get associated slot id for the Data Profile Manager.

Returns

SlotId

5.42.2.23.2.11 virtual telux::common::Status telux::data::IDataProfileManager::registerListener (std::weak_ptr< telux::data::IDataProfileListener > listener) [pure virtual]

Listen for create, delete and modify profile events.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | - Listener that processes the notification. |
|----|-----------------|---|

Returns

Status.

5.42.2.23.2.12 virtual telux::common::Status telux::data::IDataProfileManager::deregisterListener (std::weak_ptr< telux::data::IDataProfileListener > listener) [pure virtual]

De-register listener.

Parameters

| | | |
|----|-----------------|---------------------------------|
| in | <i>listener</i> | - Listener to be de-registered. |
|----|-----------------|---------------------------------|

Returns

Status.

5.42.2.24 class telux::data::IDataCreateProfileCallback

Interface for create profile callback object. Client needs to implement this interface to get single shot responses for command like create profile.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onResponse](#) (int profileId, [telux::common::ErrorCode](#) error)

5.42.2.24.1 Member Function Documentation

5.42.2.24.1.1 `virtual void telux::data::IDataCreateProfileCallback::onResponse (int profileId, telux::common::ErrorCode error) [virtual]`

This function is called with the response to [IDataProfileManager::createProfile](#) API.

Parameters

| | | |
|----|------------------|--|
| in | <i>profileId</i> | created profile Id for the response. Use IDataProfileManager::requestProfile to get the data profile |
| in | <i>error</i> | telux::common::ErrorCode |

5.42.2.25 class telux::data::IDataProfileListCallback

Interface for getting list of [DataProfile](#) using callback. Client needs to implement this interface to get single shot responses for commands like get profile list and query profile.

The methods in callback can be invoked from different threads. The implementation should be thread safe.

Public member functions

- virtual void [onProfileListResponse](#) (const std::vector< std::shared_ptr< [DataProfile](#) >> &profiles, [telux::common::ErrorCode](#) error)

5.42.2.25.1 Member Function Documentation

5.42.2.25.1.1 `virtual void telux::data::IDataProfileListCallback::onProfileListResponse (const std::vector< std::shared_ptr< DataProfile >> & profiles, telux::common::ErrorCode error) [virtual]`

This function is called with the response to [requestProfileList](#) API or [queryProfile](#) API.

Parameters

| | | |
|----|-----------------|--|
| in | <i>profiles</i> | List of profiles supported by the device |
| in | <i>error</i> | telux::common::ErrorCode |

5.42.2.26 class telux::data::IDataProfileCallback

Interface for getting [DataProfile](#) using callback. Client needs to implement this interface to get single shot responses for command like create profile.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onResponse](#) (const std::shared_ptr< [DataProfile](#) > &profile, [telux::common::ErrorCode](#) error)

5.42.2.26.1 Member Function Documentation

5.42.2.26.1.1 virtual void [telux::data::IDataProfileCallback::onResponse](#) (const std::shared_ptr< [DataProfile](#) > & *profile*, [telux::common::ErrorCode](#) *error*) [virtual]

This function is called with the response to [IDataProfileManager::requestProfile](#) API.

Parameters

| | | |
|----|----------------|--|
| in | <i>profile</i> | Response of data profile |
| in | <i>error</i> | telux::common::ErrorCode |

5.42.2.27 struct [telux::data::IPv4Info](#)

IPv4 header info

Data fields

| Type | Field | Description |
|-------------------------------|---------------------|--|
| string | srcAddr | address of the device that sends the packet. |
| string | srcSubnetMask | |
| string | destAddr | address of receiving end |
| string | destSubnet↔ Mask | |
| TypeOfService | value | level of throughput, reliability, and delay |
| TypeOfService | mask | |
| IpProtocol | nextProtoId | Protocol ID (i.e TCP, UDP or ICMP) |

5.42.2.28 struct [telux::data::IPv6Info](#)

IPv6 header info

Data fields

| Type | Field | Description |
|------------------------------|--------------|---|
| string | srcAddr | address of the device that sends the packet. |
| uint8_t | srcPrefixLen | source prefix length used to create subnet |
| string | destAddr | address of receiving end |
| uint8_t | dstPrefixLen | destination prefix length used to create subnet |
| IpProtocol | nextProtoId | Protocol ID (i.e TCP, UDP or ICMP) |
| TrafficClass | val | indicates the class or priority of the IPv6 packet, enables the ability to track specific traffic flows at the network layer. |
| TrafficClass | mask | |

| Type | Field | Description |
|---------------------------|------------|---|
| FlowLabel | flowLabel | Indicates that this packet belongs to a specific sequence of packets between a source and destination, requiring special handling by intermediate IPv6 routers. |
| uint8_t | natEnabled | |

5.42.2.29 struct telux::data::UdplInfo

UDP header info

Data fields

| Type | Field | Description |
|--------------------------|-------|----------------------------|
| PortInfo | src | Source port and range |
| PortInfo | dest | Destination port and range |

5.42.2.30 struct telux::data::TcplInfo

TCP header info

Data fields

| Type | Field | Description |
|--------------------------|-------|----------------------------|
| PortInfo | src | Source port and range |
| PortInfo | dest | Destination port and range |

5.42.2.31 struct telux::data::IcmlInfo

Internet Control Message Protocol (ICMP)

Data fields

| Type | Field | Description |
|---------|-------|-----------------------------|
| uint8_t | type | ICMP message type - RFC2780 |
| uint8_t | code | ICMP message code - RFC2780 |

5.42.2.32 struct telux::data::EsplInfo

Encapsulating Security Payload

Data fields

| Type | Field | Description |
|----------|-------|---------------------------|
| uint32_t | spi | Security Parameters Index |

5.42.2.33 class telux::data::IIPFilter

A IP filter class to add specific filters like what data will be allowed from the modem to the application processor. Only data packets that match the filter will be sent to the apps processor. Also used to configure Firewall rules.

Public member functions

- virtual [IPv4Info](#) `getIPv4Info ()=0`
- virtual `telux::common::Status` `setIPv4Info (const IPv4Info &ipv4Info)=0`
- virtual [IPv6Info](#) `getIPv6Info ()=0`
- virtual `telux::common::Status` `setIPv6Info (const IPv6Info &ipv6Info)=0`
- virtual [IpProtocol](#) `getIpProtocol ()=0`
- virtual [IpFamilyType](#) `getIpFamily ()=0`
- virtual `~IIPFilter ()`

5.42.2.33.1 Constructors and Destructors

5.42.2.33.1.1 virtual `telux::data::IIPFilter::~~IIPFilter () [virtual]`

Destructor for [IIPFilter](#)

5.42.2.33.2 Member Function Documentation

5.42.2.33.2.1 virtual `IPv4Info` `telux::data::IIPFilter::getIPv4Info () [pure virtual]`

Get the IPv4 header info

Returns

[telux::data::IPv4Info](#)

5.42.2.33.2.2 virtual `telux::common::Status` `telux::data::IIPFilter::setIPv4Info (const IPv4Info & ipv4Info) [pure virtual]`

sets the IPv4 header info

Parameters

| | | |
|----|-----------------|--|
| in | <i>ipv4Info</i> | IPv4 structure telux::data::IPv4Info |
|----|-----------------|--|

Returns

Immediate status of `setIPv4Info()` request sent i.e. success or suitable status code.

5.42.2.33.2.3 virtual IPv6Info telux::data::IIPFilter::getIPv6Info () [pure virtual]

Get the IPv6 header info

Returns

[telux::data::IPv6Info](#)

5.42.2.33.2.4 virtual telux::common::Status telux::data::IIPFilter::setIPv6Info (const IPv6Info & ipv6Info) [pure virtual]

sets the IPv6 header info

Parameters

| | | |
|----|-----------------|--|
| in | <i>ipv6Info</i> | IPv6 structure telux::data::IPv6Info |
|----|-----------------|--|

Returns

Immediate status of [setIPv6Info\(\)](#) request sent i.e. success or suitable status code.

5.42.2.33.2.5 virtual IpProtocol telux::data::IIPFilter::getIpProtocol () [pure virtual]

Get the IpProtocol Number

Returns

[telux::data::IpProtocol](#)

5.42.2.33.2.6 virtual IpFamilyType telux::data::IIPFilter::getIpFamily () [pure virtual]

Get the IP family type

Returns

[telux::data::IpFamilyType](#)

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.34 class telux::data::IUDPFilter

This class represents a IP Filter for the UDP, get the new instance from [telux::data::DataFactory](#).

Public member functions

- virtual [UdpInfo](#) `getUdpInfo ()=0`
- virtual `telux::common::Status setUdpInfo (const UdpInfo &udpInfo)=0`
- virtual `~IUdpFilter ()`

5.42.2.34.1 Constructors and Destructors

5.42.2.34.1.1 virtual `telux::data::IUdpFilter::~IUdpFilter () [virtual]`

Destructor for [IUdpFilter](#)

5.42.2.34.2 Member Function Documentation

5.42.2.34.2.1 virtual `UdpInfo telux::data::IUdpFilter::getUdpInfo () [pure virtual]`

Get the UDP header info

Returns

[telux::data::UdpInfo](#)

5.42.2.34.2.2 virtual `telux::common::Status telux::data::IUdpFilter::setUdpInfo (const UdpInfo & udpInfo) [pure virtual]`

sets the UDP header info

Parameters

| | | |
|----|----------------|--|
| in | <i>udpInfo</i> | UdpInfo structure telux::data::UdpInfo |
|----|----------------|--|

Returns

Immediate status of `setUdpInfo()` request sent i.e. success or suitable status code.

5.42.2.35 class telux::data::ITcpFilter

This class represents a IP Filter for the TCP, get the new instance from [telux::data::DataFactory](#).

Public member functions

- virtual [TcpInfo](#) `getTcpInfo ()=0`
- virtual `telux::common::Status setTcpInfo (const TcpInfo &tcpInfo)=0`
- virtual `~ITcpFilter ()`

5.42.2.35.1 Constructors and Destructors

5.42.2.35.1.1 virtual `telux::data::ITcpFilter::~ITcpFilter () [virtual]`

Destructor for [ITcpFilter](#)

5.42.2.35.2 Member Function Documentation

5.42.2.35.2.1 virtual `TcpInfo telux::data::ITcpFilter::getTcpInfo () [pure virtual]`

Get the TCP header info

Returns

[telux::data::TcpInfo](#)

5.42.2.35.2.2 virtual `telux::common::Status telux::data::ITcpFilter::setTcpInfo (const TcpInfo & tcpInfo) [pure virtual]`

sets the TCP header info

Parameters

| | | |
|----|----------------|--|
| in | <i>tcpInfo</i> | TcpInfo structure telux::data::TcpInfo |
|----|----------------|--|

Returns

Immediate status of [setTcpInfo\(\)](#) request sent i.e. success or suitable status code.

5.42.2.36 class `telux::data::IcmpFilter`

This class represents a IP Filter for the ICMP, get the new instance from [telux::data::DataFactory](#).

Public member functions

- virtual `IcmpInfo getIcmpInfo ()=0`
- virtual `telux::common::Status setIcmpInfo (const IcmpInfo &icmpInfo)=0`
- virtual `~IcmpFilter ()`

5.42.2.36.1 Constructors and Destructors

5.42.2.36.1.1 virtual `telux::data::IcmpFilter::~IcmpFilter () [virtual]`

Destructor for [IcmpFilter](#)

5.42.2.36.2 Member Function Documentation

5.42.2.36.2.1 virtual `lcmplInfo` `telux::data::lcmplFilter::getlcmplInfo ()` [pure virtual]

Get the ICMP header info

Returns

[telux::data::lcmplInfo](#)

5.42.2.36.2.2 virtual `telux::common::Status` `telux::data::lcmplFilter::setlcmplInfo (const lcmplInfo & lcmplInfo)` [pure virtual]

sets the ICMP header info

Parameters

| | | |
|----|------------------|---|
| in | <i>lcmplInfo</i> | <code>TcpInfo</code> structure telux::data::lcmplInfo |
|----|------------------|---|

Returns

Immediate status of [setlcmplInfo\(\)](#) request sent i.e. success or suitable status code.

5.42.2.37 class `telux::data::IEspFilter`

This class represents a IP Filter for the ESP, get the new instance from [telux::data::DataFactory](#).

Public member functions

- virtual `EspInfo` `getEspInfo ()=0`
- virtual `telux::common::Status` `setEspInfo (const EspInfo &espInfo)=0`
- virtual `~IEspFilter ()`

5.42.2.37.1 Constructors and Destructors

5.42.2.37.1.1 virtual `telux::data::IEspFilter::~IEspFilter ()` [virtual]

Destructor for [IEspFilter](#)

5.42.2.37.2 Member Function Documentation

5.42.2.37.2.1 virtual `EspInfo` `telux::data::IEspFilter::getEspInfo ()` [pure virtual]

Get the ESP header info

Returns

[telux::data::EspInfo](#)

5.42.2.37.2 virtual telux::common::Status telux::data::IEspFilter::setEspInfo (const EspInfo & espInfo) [pure virtual]

sets the ICMP header info

Parameters

| | | |
|----|---------|--|
| in | espInfo | EspInfo structure telux::data::EspInfo |
|----|---------|--|

Returns

Immediate status of [setEspInfo\(\)](#) request sent i.e. success or suitable status code.

5.42.2.38 struct telux::data::RoamingStatus

Roaming Status.

Data fields

| Type | Field | Description |
|-----------------------------|-----------|---|
| bool | isRoaming | True: Roaming on, False: Roaming off |
| RoamingType | type | International/Domestic. Valid only if roaming is on |

5.42.2.39 struct telux::data::ServiceStatus

Data Service Status Info.

Data fields

| Type | Field | Description |
|----------------------------------|--------------|-------------|
| DataServiceState | serviceState | |
| NetworkRat | networkRat | |

5.42.2.40 class telux::data::IServingSystemManager

Serving System Manager class provides APIs related to the serving system for data functionality. For example, ability to query or be notified about the state of the platform's WWAN PS data serving information.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual [DrbStatus](#) getDrbStatus ()=0
- virtual [telux::common::Status](#) requestServiceStatus (RequestServiceStatusResponseCb callback)=0
- virtual [telux::common::Status](#) requestRoamingStatus (RequestRoamingStatusResponseCb callback)=0

- virtual `telux::common::Status registerListener (std::weak_ptr< IServingSystemListener > listener)=0`
- virtual `telux::common::Status deregisterListener (std::weak_ptr< IServingSystemListener > listener)=0`
- virtual `SlotId getSlotId ()=0`
- virtual `~IServingSystemManager ()`

5.42.2.40.1 Constructors and Destructors

5.42.2.40.1.1 `virtual telux::data::IServingSystemManager::~IServingSystemManager () [virtual]`

Destructor of `IServingSystemManager`

5.42.2.40.2 Member Function Documentation

5.42.2.40.2.1 `virtual telux::common::ServiceStatus telux::data::IServingSystemManager::getService↔Status () [pure virtual]`

Checks the status of serving manager object and returns the result.

Returns

`SERVICE_AVAILABLE` - If serving manager object is ready for service.

`SERVICE_UNAVAILABLE` - If serving manager object is temporarily unavailable.

`SERVICE_FAILED` - If serving manager object encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.40.2.2 `virtual DrbStatus telux::data::IServingSystemManager::getDrbStatus () [pure virtual]`

Get the dedicated radio bearer (DRB) status

Returns

current `DrbStatus` `DrbStatus`.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.40.2.3 `virtual telux::common::Status telux::data::IServingSystemManager::requestServiceStatus (RequestServiceStatusResponseCb callback) [pure virtual]`

Queries the current serving network status

Parameters

| | | |
|-----------|-----------------|---|
| <i>in</i> | <i>callback</i> | callback to get response for requestServiceStatus |
|-----------|-----------------|---|

Returns

Status of requestServiceStatus i.e. success or suitable status code. if requestServiceStatus returns failure, callback will not be invoked.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.40.2.4 `virtual telux::common::Status telux::data::IServingSystemManager::requestRoaming↔ Status (RequestRoamingStatusResponseCb callback) [pure virtual]`

Queries the current roaming status

Parameters

| | | |
|-----------|-----------------|---|
| <i>in</i> | <i>callback</i> | callback to get response for requestRoamingStatus |
|-----------|-----------------|---|

Returns

Status of requestRoamingStatus i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

5.42.2.40.2.5 `virtual telux::common::Status telux::data::IServingSystemManager::registerListener (std::weak_ptr< IServingSystemListener > listener) [pure virtual]`

Register a listener for specific updates from serving system.

Parameters

| | | |
|-----------|-----------------|--|
| <i>in</i> | <i>listener</i> | Pointer of IServingSystemListener object that processes the notification |
|-----------|-----------------|--|

Returns

Status of registerListener i.e success or suitable status code.

5.42.2.40.2.6 `virtual telux::common::Status telux::data::IServingSystemManager::deregisterListener (std::weak_ptr< IServingSystemListener > listener) [pure virtual]`

Deregister the previously added listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | Previously registered IServingSystemListener that needs to be removed |
|----|-----------------|---|

Returns

Status of removeListener i.e. success or suitable status code

5.42.2.40.2.7 `virtual SlotId telux::data::IServingSystemManager::getSlotId () [pure virtual]`

Get associated slot id for the Serving System Manager.

Returns

SlotId

5.42.2.41 class telux::data::IServingSystemListener

Listener class for data serving system change notification.

The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe.

Public member functions

- virtual void [onServiceStatusChange](#) ([telux::common::ServiceStatus](#) status)
- virtual void [onDrbStatusChanged](#) ([DrbStatus](#) status)
- virtual void [onServiceStateChanged](#) ([ServiceStatus](#) status)
- virtual void [onRoamingStatusChanged](#) ([RoamingStatus](#) status)
- virtual [~IServingSystemListener](#) ()

5.42.2.41.1 Constructors and Destructors

5.42.2.41.1.1 `virtual telux::data::IServingSystemListener::~~IServingSystemListener () [virtual]`

Destructor of [IServingSystemListener](#)

5.42.2.41.2 Member Function Documentation

5.42.2.41.2.1 virtual void telux::data::IServingSystemListener::onServiceStatusChange (telux↔
::common::ServiceStatus *status*) [virtual]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.42.2.41.2.2 virtual void telux::data::IServingSystemListener::onDrbStatusChanged (DrbStatus *status*
) [virtual]

This function is called whenever Drb status is changed.

Parameters

| | | |
|----|---------------|---------------------------|
| in | <i>status</i> | DrbStatus |
|----|---------------|---------------------------|

5.42.2.41.2.3 virtual void telux::data::IServingSystemListener::onServiceStateChanged (ServiceStatus
status) [virtual]

This function is called whenever service state is changed.

Parameters

| | | |
|----|---------------|-------------------------------|
| in | <i>status</i> | ServiceStatus |
|----|---------------|-------------------------------|

5.42.2.41.2.4 virtual void telux::data::IServingSystemListener::onRoamingStatusChanged (
RoamingStatus *status*) [virtual]

This function is called whenever roaming status is changed.

Parameters

| | | |
|----|---------------|-------------------------------|
| in | <i>status</i> | RoamingStatus |
|----|---------------|-------------------------------|

5.42.2.42 union telux::data::DataCallEndReason. __unnamed__

Data fields

| Type | Field | Description |
|--|--------------|-------------|
| MobileIp↔ ReasonCode | IpCode | |
| Internal↔ ReasonCode | internalCode | |

| Type | Field | Description |
|---------------------------------------|-------------|-------------|
| CallManagerReasonCode | cmCode | |
| SpecReasonCode | specCode | |
| PPPReasonCode | pppCode | |
| EHRPDReasonCode | ehrpCode | |
| Ipv6ReasonCode | ipv6Code | |
| HandoffReasonCode | handOffCode | |

5.42.3 Enumeration Type Documentation

5.42.3.1 enum telux::data::IpFamilyType [strong]

Preferred IP family for the connection

Enumerator

UNKNOWN

IPV4 IPv4 data connection

IPV6 IPv6 data connection

IPV4V6 IPv4 and IPv6 data connection

5.42.3.2 enum telux::data::TechPreference [strong]

Technology Preference

Enumerator

UNKNOWN

TP_3GPP UMTS, LTE

TP_3GPP2 CDMA

TP_ANY ANY (3GPP or 3GPP2)

5.42.3.3 enum telux::data::AuthProtocolType [strong]

Authentication protocol preference type to be used for PDP context.

Enumerator

AUTH_NONE

AUTH_PAP Password Authentication Protocol

AUTH_CHAP Challenge Handshake Authentication Protocol

AUTH_PAP_CHAP

5.42.3.4 enum telux::data::DataRestrictModeType [strong]

Defines the supported filtering mode of the packet data session. DataRestrictFilter

Enumerator

UNKNOWN
DISABLE
ENABLE

5.42.3.5 enum telux::data::DataCallStatus [strong]

Data call event status

Enumerator

INVALID Invalid
NET_CONNECTED Call is connected
NET_NO_NET Call is disconnected
NET_IDLE Call is in idle state
NET_CONNECTING Call is in connecting state
NET_DISCONNECTING Call is in disconnecting state
NET_RECONFIGURED Interface is reconfigured, IP Address got changed
NET_NEWADDR A new IP address was added on an existing call
NET_DELADDR An IP address was removed from the existing interface

5.42.3.6 enum telux::data::DataBearerTechnology [strong]

Bearer technology types (returned with getCurrentBearerTech).

Enumerator

UNKNOWN Unknown bearer.
CDMA_1X 1X technology.
EVDO_REV0 CDMA Rev 0.
EVDO_REVA CDMA Rev A.
EVDO_REVB CDMA Rev B.
EHRPD EHRPD.
FMC Fixed mobile convergence.
HRPD HRPD
BEARER_TECH_3GPP2_WLAN IWLAN
WCDMA WCDMA.
GPRS GPRS.
HSDPA HSDPA.
HSUPA HSUPA.
EDGE EDGE.
LTE LTE.
HSDPA_PLUS HSDPA+.
DC_HSDPA_PLUS DC HSDPA+.
HSPA HSPA
BEARER_TECH_64_QAM 64 QAM.

TDSCDMA TD-SCDMA.
GSM GSM
BEARER_TECH_3GPP_WLAN IWLAN
BEARER_TECH_5G 5G

5.42.3.7 enum telux::data::EndReasonType [strong]

Data call end/termination due to reason type.

Enumerator

CE_UNKNOWN
CE_MOBILE_IP
CE_INTERNAL
CE_CALL_MANAGER_DEFINED
CE_3GPP_SPEC_DEFINED
CE_PPP
CE_EHRPD
CE_IPV6
CE_HANDOFF

5.42.3.8 enum telux::data::MobileIpReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_MOBILE_IP](#)

Enumerator

CE_MIP_FA_ERR_REASON_UNSPECIFIED
CE_MIP_FA_ERR_ADMINISTRATIVELY_PROHIBITED
CE_MIP_FA_ERR_INSUFFICIENT_RESOURCES
CE_MIP_FA_ERR_MOBILE_NODE_AUTHENTICATION_FAILURE
CE_MIP_FA_ERR_HA_AUTHENTICATION_FAILURE
CE_MIP_FA_ERR_REQUESTED_LIFETIME_TOO_LONG
CE_MIP_FA_ERR_MALFORMED_REQUEST
CE_MIP_FA_ERR_MALFORMED_REPLY
CE_MIP_FA_ERR_ENCAPSULATION_UNAVAILABLE
CE_MIP_FA_ERR_VJHC_UNAVAILABLE
CE_MIP_FA_ERR_REVERSE_TUNNEL_UNAVAILABLE
CE_MIP_FA_ERR_REVERSE_TUNNEL_IS_MANDATORY_AND_T_BIT_NOT_SET
CE_MIP_FA_ERR_DELIVERY_STYLE_NOT_SUPPORTED
CE_MIP_FA_ERR_MISSING_NAI
CE_MIP_FA_ERR_MISSING_HA
CE_MIP_FA_ERR_MISSING_HOME_ADDR
CE_MIP_FA_ERR_UNKNOWN_CHALLENGE
CE_MIP_FA_ERR_MISSING_CHALLENGE
CE_MIP_FA_ERR_STALE_CHALLENGE
CE_MIP_HA_ERR_REASON_UNSPECIFIED
CE_MIP_HA_ERR_ADMINISTRATIVELY_PROHIBITED
CE_MIP_HA_ERR_INSUFFICIENT_RESOURCES
CE_MIP_HA_ERR_MOBILE_NODE_AUTHENTICATION_FAILURE

CE_MIP_HA_ERR_FA_AUTHENTICATION_FAILURE
CE_MIP_HA_ERR_REGISTRATION_ID_MISMATCH
CE_MIP_HA_ERR_MALFORMED_REQUEST
CE_MIP_HA_ERR_UNKNOWN_HA_ADDR
CE_MIP_HA_ERR_REVERSE_TUNNEL_UNAVAILABLE
CE_MIP_HA_ERR_REVERSE_TUNNEL_IS_MANDATORY_AND_T_BIT_NOT_SET
CE_MIP_HA_ERR_ENCAPSULATION_UNAVAILABLE
CE_MIP_ERR_REASON_UNKNOWN

5.42.3.9 enum telux::data::InternalReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_INTERNAL](#)

Enumerator

CE_RETRY
CE_INTERNAL_ERROR
CE_CALL_ENDED
CE_INTERNAL_UNKNOWN_CAUSE_CODE
CE_UNKNOWN_CAUSE_CODE
CE_CLOSE_IN_PROGRESS
CE_NW_INITIATED_TERMINATION
CE_APP_PREEMPTED
CE_ERR_PDN_IPV4_CALL_DISALLOWED
CE_ERR_PDN_IPV4_CALL_THROTTLED
CE_ERR_PDN_IPV6_CALL_DISALLOWED
CE_ERR_PDN_IPV6_CALL_THROTTLED
CE_MODEM_RESTART
CE_PDP_PPP_NOT_SUPPORTED
CE_UNPREFERRED_RAT
CE_PHYS_LINK_CLOSE_IN_PROGRESS
CE_APN_PENDING_HANDOVER
CE_PROFILE_BEARER_INCOMPATIBLE
CE_MMGSDI_CARD_EVT
CE_LPM_OR_PWR_DOWN
CE_APN_DISABLED
CE_MPIT_EXPIRED
CE_IPV6_ADDR_TRANSFER_FAILED
CE_TRAT_SWAP_FAILED
CE_EHRPD_TO_HRPD_FALLBACK
CE_MANDATORY_APN_DISABLED
CE_MIP_CONFIG_FAILURE
CE_INTERNAL_PDN_INACTIVITY_TIMER_EXPIRED
CE_MAX_V4_CONNECTIONS
CE_MAX_V6_CONNECTIONS
CE_APN_MISMATCH
CE_IP_VERSION_MISMATCH
CE_DUN_CALL_DISALLOWED
CE_INVALID_PROFILE
CE_INTERNAL_EPC_NONEPC_TRANSITION

CE_INVALID_PROFILE_ID
CE_INTERNAL_CALL_ALREADY_PRESENT
CE_IFACE_IN_USE
CE_IP_PDP_MISMATCH
CE_APN_DISALLOWED_ON_ROAMING
CE_APN_PARAM_CHANGE
CE_IFACE_IN_USE_CFG_MATCH
CE_NULL_APN_DISALLOWED
CE_THERMAL_MITIGATION
CE_SUBS_ID_MISMATCH
CE_DATA_SETTINGS_DISABLED
CE_DATA_ROAMING_SETTINGS_DISABLED
CE_APN_FORMAT_INVALID
CE_DDS_CALL_ABORT
CE_VALIDATION_FAILURE
CE_PROFILES_NOT_COMPATIBLE
CE_NULL_RESOLVED_APN_NO_MATCH
CE_INVALID_APN_NAME

5.42.3.10 enum telux::data::CallManagerReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_CALL_MANAGER_DEFINED](#)

Enumerator

CE_CDMA_LOCK
CE_INTERCEPT
CE_REORDER
CE_REL_SO_REJ
CE_INCOM_CALL
CE_ALERT_STOP
CE_ACTIVATION
CE_MAX_ACCESS_PROBE
CE_CCS_NOT_SUPPORTED_BY_BS
CE_NO_RESPONSE_FROM_BS
CE_REJECTED_BY_BS
CE_INCOMPATIBLE
CE_ALREADY_IN_TC
CE_USER_CALL_ORIG_DURING_GPS
CE_USER_CALL_ORIG_DURING_SMS
CE_NO_CDMA_SRV
CE_MC_ABORT
CE_PERSIST_NG
CE_UIM_NOT_PRESENT
CE_RETRY_ORDER
CE_ACCESS_BLOCK
CEACCESS_BLOCK_ALL
CE_IS707B_MAX_ACC
CE_THERMAL_EMERGENCY
CE_CALL_ORIG_THROTTLED

CE_USER_CALL_ORIG_DURING_VOICE_CALL
CE_CONF_FAILED
CE_INCOM_REJ
CE_NEW_NO_GW_SRV
CE_NEW_NO_GPRS_CONTEXT
CE_NEW_ILLEGAL_MS
CE_NEW_ILLEGAL_ME
CE_NEW_GPRS_SERVICES_AND_NON_GPRS_SERVICES_NOT_ALLOWED
CE_NEW_GPRS_SERVICES_NOT_ALLOWED
CE_NEW_MS_IDENTITY_CANNOT_BE_DERIVED_BY_THE_NETWORK
CE_NEW_IMPLICITLY_DETACHED
CE_NEW_PLMN_NOT_ALLOWED
CE_NEW_LA_NOT_ALLOWED
CE_NEW_GPRS_SERVICES_NOT_ALLOWED_IN_THIS_PLMN
CE_NEW_PDP_DUPLICATE
CE_NEW_UE_RAT_CHANGE
CE_NEW_CONGESTION
CE_NEW_NO_PDP_CONTEXT_ACTIVATED
CE_NEW_ACCESS_CLASS_DSAC_REJECTION
CE_PDP_ACTIVATE_MAX_RETRY_FAILED
CE_RAB_FAILURE
CE_ESM_UNKNOWN_EPS_BEARER_CONTEXT
CE_DRB_RELEASED_AT_RRC
CE_NAS_SIG_CONN_RELEASED
CE_REASON_EMM_DETACHED
CE_EMM_ATTACH_FAILED
CE_EMM_ATTACH_STARTED
CE_LTE_NAS_SERVICE_REQ_FAILED
CE_ESM_ACTIVE_DEDICATED_BEARER_REACTIVATED_BY_NW
CE_ESM_LOWER_LAYER_FAILURE
CE_ESM_SYNC_UP_WITH_NW
CE_ESM_NW_ACTIVATED_DED_BEARER_WITH_ID_OF_DEF_BEARER
CE_ESM_BAD_OTA_MESSAGE
CE_ESM_DS_REJECTED_THE_CALL
CE_ESM_CONTEXT_TRANSFERED_DUE_TO_IRAT
CE_DS_EXPLICIT_DEACT
CE_ESM_LOCAL_CAUSE_NONE
CE_LTE_NAS_SERVICE_REQ_FAILED_NO_THROTTLE
CE_ACL_FAILURE
CE_LTE_NAS_SERVICE_REQ_FAILED_DS_DISALLOW
CE_EMM_T3417_EXPIRED
CE_EMM_T3417_EXT_EXPIRED
CE_LRRRC_UL_DATA_CNF_FAILURE_TXN
CE_LRRRC_UL_DATA_CNF_FAILURE_HO
CE_LRRRC_UL_DATA_CNF_FAILURE_CONN_REL
CE_LRRRC_UL_DATA_CNF_FAILURE_RLF
CE_LRRRC_UL_DATA_CNF_FAILURE_CTRL_NOT_CONN
CE_LRRRC_CONN_EST_FAILURE
CE_LRRRC_CONN_EST_FAILURE_ABORTED
CE_LRRRC_CONN_EST_FAILURE_ACCESS_BARRED

CE_LRRRC_CONN_EST_FAILURE_CELL_RESEL
CE_LRRRC_CONN_EST_FAILURE_CONFIG_FAILURE
CE_LRRRC_CONN_EST_FAILURE_TIMER_EXPIRED
CE_LRRRC_CONN_EST_FAILURE_LINK_FAILURE
CE_LRRRC_CONN_EST_FAILURE_NOT_CAMPED
CE_LRRRC_CONN_EST_FAILURE_SI_FAILURE
CE_LRRRC_CONN_EST_FAILURE_CONN_REJECT
CE_LRRRC_CONN_REL_NORMAL
CE_LRRRC_CONN_REL_RLF
CE_LRRRC_CONN_REL_CRE_FAILURE
CE_LRRRC_CONN_REL_OOS_DURING_CRE
CE_LRRRC_CONN_REL_ABORTED
CE_LRRRC_CONN_REL_SIB_READ_ERROR
CE_DETACH_WITH_REATTACH_LTE_NW_DETACH
CE_DETACH_WITH_OUT_REATTACH_LTE_NW_DETACH
CE_ESM_PROC_TIME_OUT
CE_INVALID_CONNECTION_ID
CE_INVALID_NSAPI
CE_INVALID_PRI_NSAPI
CE_INVALID_FIELD
CE_RAB_SETUP_FAILURE
CE_PDP_ESTABLISH_MAX_TIMEOUT
CE_PDP_MODIFY_MAX_TIMEOUT
CE_PDP_INACTIVE_MAX_TIMEOUT
CE_PDP_LOWERLAYER_ERROR
CE_PPD_UNKNOWN_REASON
CE_PDP_MODIFY_COLLISION
CE_PDP_MBMS_REQUEST_COLLISION
CE_MBMS_DUPLICATE
CE_SM_PS_DETACHED
CE_SM_NO_RADIO_AVAILABLE
CE_SM_ABORT_SERVICE_NOT_AVAILABLE
CE_MESSAGE_EXCEED_MAX_L2_LIMIT
CE_SM_NAS_SRV_REQ_FAILURE
CE_RRC_CONN_EST_FAILURE_REQ_ERROR
CE_RRC_CONN_EST_FAILURE_TAI_CHANGE
CE_RRC_CONN_EST_FAILURE_RF_UNAVAILABLE
CE_RRC_CONN_REL_ABORTED_IRAT_SUCCESS
CE_RRC_CONN_REL_RLF_SEC_NOT_ACTIVE
CE_RRC_CONN_REL_IRAT_TO_LTE_ABORTED
CE_RRC_CONN_REL_IRAT_FROM_LTE_TO_G_CCO_SUCCESS
CE_RRC_CONN_REL_IRAT_FROM_LTE_TO_G_CCO_ABORTED
CE_IMSI_UNKNOWN_IN_HSS
CE_IMEI_NOT_ACCEPTED
CE_EPS_SERVICES_AND_NON_EPS_SERVICES_NOT_ALLOWED
CE_EPS_SERVICES_NOT_ALLOWED_IN_PLMN
CE_MSC_TEMPORARILY_NOT_REACHABLE
CE_CS_DOMAIN_NOT_AVAILABLE
CE_ESM_FAILURE
CE_MAC_FAILURE

CE_SYNCH_FAILURE
CE_UE_SECURITY_CAPABILITIES_MISMATCH
CE_SECURITY_MODE_REJ_UNSPECIFIED
CE_NON_EPS_AUTH_UNACCEPTABLE
CE_CS_FALLBACK_CALL_EST_NOT_ALLOWED
CE_NO_EPS_BEARER_CONTEXT_ACTIVATED
CE_EMM_INVALID_STATE
CE_NAS_LAYER_FAILURE
CE_MULTI_PDN_NOT_ALLOWED
CE_EMBMS_NOT_ENABLED
CE_PENDING_REDIAL_CALL_CLEANUP
CE_EMBMS_REGULAR_DEACTIVATION
CE_TLB_REGULAR_DEACTIVATION
CE_LOWER_LAYER_REGISTRATION_FAILURE
CE_DETACH_EPS_SERVICES_NOT_ALLOWED
CE_SM_INTERNAL_PDP_DEACTIVATION
CE_UNSUPPORTED_1X_PREV
CE_CD_GEN_OR_BUSY
CE_CD_BILL_OR_AUTH
CE_CHG_HDR
CE_EXIT_HDR
CE_HDR_NO_SESSION
CE_HDR_ORIG_DURING_GPS_FIX
CE_HDR_CS_TIMEOUT
CE_HDR_RELEASED_BY_CM
CE_COLLOC_ACQ_FAIL
CE_OTASP_COMMIT_IN_PROG
CE_NO_HYBR_HDR_SRV
CE_HDR_NO_LOCK_GRANTED
CE_HOLD_OTHER_IN_PROG
CE_HDR_FADE
CE_HDR_ACC_FAIL
CE_CLIENT_END
CE_NO_SRV
CE_FADE
CE_REL_NORMAL
CE_ACC_IN_PROG
CE_ACC_FAIL
CE_REDIR_OR_HANDOFF
CE_CM_UNKNOWN_ERROR
CE_OFFLINE
CE_EMERGENCY_MODE
CE_PHONE_IN_USE
CE_INVALID_MODE
CE_INVALID_SIM_STATE
CE_NO_COLLOC_HDR
CE_CALL_CONTROL_REJECTED
CE_UNKNOWN

5.42.3.11 enum telux::data::SpecReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_3GPP_SPEC_DEFINED](#)

Enumerator

CE_OPERATOR_DETERMINED_BARRING
CE_NAS_SIGNALLING_ERROR
CE_LLC_SNDPCP_FAILURE
CE_INSUFFICIENT_RESOURCES
CE_UNKNOWN_APN
CE_UNKNOWN_PDP
CE_AUTH_FAILED
CE_GGSN_REJECT
CE_ACTIVATION_REJECT
CE_OPTION_NOT_SUPPORTED
CE_OPTION_UNSUBSCRIBED
CE_OPTION_TEMP_OOO
CE_NSAPI_ALREADY_USED
CE_REGULAR_DEACTIVATION
CE_QOS_NOT_ACCEPTED
CE_NETWORK_FAILURE
CE_UMTS_REACTIVATION_REQ
CE_FEATURE_NOT_SUPPORTED
CE_TFT_SEMANTIC_ERROR
CE_TFT_SYNTAX_ERROR
CE_UNKNOWN_PDP_CONTEXT
CE_FILTER_SEMANTIC_ERROR
CE_FILTER_SYNTAX_ERROR
CE_PDP_WITHOUT_ACTIVE_TFT
CE_IP_V4_ONLY_ALLOWED
CE_IP_V6_ONLY_ALLOWED
CE_SINGLE_ADDR_BEARER_ONLY
CE_ESM_INFO_NOT_RECEIVED
CE_PDN_CONN_DOES_NOT_EXIST
CE_MULTI_CONN_TO_SAME_PDN_NOT_ALLOWED
CE_MAX_ACTIVE_PDP_CONTEXT_REACHED
CE_UNSUPPORTED_APN_IN_CURRENT_PLMN
CE_INVALID_TRANSACTION_ID
CE_MESSAGE_INCORRECT_SEMANTIC
CE_INVALID_MANDATORY_INFO
CE_MESSAGE_TYPE_UNSUPPORTED
CE_MSG_TYPE_NONCOMPATIBLE_STATE
CE_UNKNOWN_INFO_ELEMENT
CE_CONDITIONAL_IE_ERROR
CE_MSG_AND_PROTOCOL_STATE_UNCOMPATIBLE
CE_PROTOCOL_ERROR
CE_APN_TYPE_CONFLICT
CE_INVALID_PCSCF_ADDRESS
CE_INTERNAL_CALL_PREEMPT_BY_HIGH_PRIO_APN

CE_EMM_ACCESS_BARRED
CE_EMERGENCY_IFACE_ONLY
CE_IFACE_MISMATCH
CE_COMPANION_IFACE_IN_USE
CE_IP_ADDRESS_MISMATCH
CE_IFACE_AND_POL_FAMILY_MISMATCH
CE_EMM_ACCESS_BARRED_INFINITE_RETRY
CE_AUTH_FAILURE_ON_EMERGENCY_CALL
CE_INVALID_DNS_ADDR
CE_INVALID_PCSCF_DNS_ADDR
CE_TEST_LOOPBACK_MODE_A_OR_B_ENABLED
CE_UNKNOWN

5.42.3.12 enum telux::data::PPPReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_PPP](#)

Enumerator

CE_PPP_TIMEOUT
CE_PPP_AUTH_FAILURE
CE_PPP_OPTION_MISMATCH
CE_PPP_PAP_FAILURE
CE_PPP_CHAP_FAILURE
CE_PPP_CLOSE_IN_PROGRESS
CE_PPP_NV_REFRESH_IN_PROGRESS
CE_PPP_UNKNOWN

5.42.3.13 enum telux::data::EHRPDReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_EHRPD](#)

Enumerator

CE_EHRPD_SUBS_LIMITED_TO_V4
CE_EHRPD_SUBS_LIMITED_TO_V6
CE_EHRPD_VSNCP_TIMEOUT
CE_EHRPD_VSNCP_FAILURE
CE_EHRPD_VSNCP_3GPP2I_GEN_ERROR
CE_EHRPD_VSNCP_3GPP2I_UNAUTH_APN
CE_EHRPD_VSNCP_3GPP2I_PDN_LIMIT_EXCEED
CE_EHRPD_VSNCP_3GPP2I_NO_PDN_GW
CE_EHRPD_VSNCP_3GPP2I_PDN_GW_UNREACH
CE_EHRPD_VSNCP_3GPP2I_PDN_GW_REJ
CE_EHRPD_VSNCP_3GPP2I_INSUFF_PARAM
CE_EHRPD_VSNCP_3GPP2I_RESOURCE_UNAVAIL
CE_EHRPD_VSNCP_3GPP2I_ADMIN_PROHIBIT
CE_EHRPD_VSNCP_3GPP2I_PDN_ID_IN_USE
CE_EHRPD_VSNCP_3GPP2I_SUBSCR_LIMITATION
CE_EHRPD_VSNCP_3GPP2I_PDN_EXISTS_FOR_THIS_APN

CE_EHRPD_VSNCP_3GPP2I_RECONNECT_NOT_ALLOWED
CE_EHRPD_UNKNOWN

5.42.3.14 enum telux::data::Ipv6ReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_IPV6](#)

Enumerator

CE_PREFIX_UNAVAILABLE
CE_IPV6_ERR_HRPD_IPV6_DISABLED
CE_IPV6_DISABLED

5.42.3.15 enum telux::data::HandoffReasonCode [strong]

Data call end/termination reason code for [EndReasonType::CE_HANDOFF](#)

Enumerator

CE_VCER_HANDOFF_PREF_SYS_BACK_TO_SRAT

5.42.3.16 enum telux::data::ProfileChangeEvent [strong]

Event due to which change in profile happened.

Enumerator

CREATE_PROFILE_EVENT Profile was created
DELETE_PROFILE_EVENT Profile was deleted
MODIFY_PROFILE_EVENT Profile was modified

5.42.3.17 enum telux::data::OperationType [strong]

This applies in architectures where the modem is attached to an External Application Processor(EAP). An API, like start/stop data call, INatManager, IFirewallManager can be invoked from the EAP or from the modems Internal Application Processor (IAP). This type specifies where the operation should be carried out.

Enumerator

DATA_LOCAL Perform the operation on the processor where the API is invoked.
DATA_REMOTE Perform the operation on the application processor other than where the API is invoked.

5.42.3.18 enum telux::data::Direction [strong]

Direction of firewall rule

Enumerator

UPLINK Uplink Direction
DOWNLINK Downlink Direction

5.42.3.19 enum telux::data::InterfaceType [strong]

Peripheral Interface type

Enumerator

UNKNOWN UNKNOWN interface
WLAN Wireless Local Area Network (WLAN)
ETH Ethernet (ETH)
ECM Ethernet Control Model (ECM)
RNDIS Remote Network Driver Interface Specification (RNDIS)
MHI Modem Host Interface (MHI)

5.42.3.20 enum telux::data::ServiceState [strong]

State of Service

Enumerator

INACTIVE Service is inactive
ACTIVE Service is Active

5.42.3.21 enum telux::data::QosFlowStateChangeEvent [strong]

QOS flow state change type

Enumerator

UNKNOWN UNKNOWN state
ACTIVATED Flow activated
MODIFIED Flow modified
DELETED Flow deleted

5.42.3.22 enum telux::data::IpTrafficClassType [strong]

QOS flow IP traffic class type

Enumerator

UNKNOWN UNKNOWN type
CONVERSATIONAL Conversational IP Traffic class
STREAMING Streaming IP Traffic class
INTERACTIVE Interactive IP Traffic class
BACKGROUND Background IP Traffic class

5.42.3.23 enum telux::data::QosIPFlowMaskType

Specifies QOS IP Flow parameter mask

Enumerator

MASK_IP_FLOW_NONE

MASK_IP_FLOW_TRF_CLASS No parameters set
MASK_IP_FLOW_DATA_RATE_MIN_MAX Traffic class

5.42.3.24 enum telux::data::QosFlowMaskType

Specifies QOS Flow parameter mask

Enumerator

MASK_FLOW_NONE
MASK_FLOW_TX_GRANTED No parameters set
MASK_FLOW_RX_GRANTED TX Granted flow set
MASK_FLOW_TX_FILTERS RX Granted flow set
MASK_FLOW_RX_FILTERS TX filters set

5.42.3.25 enum telux::data::DrbStatus [strong]

Dedicated Radio Bearer (DRB) status.

Enumerator

ACTIVE At least one of the physical links across all PDNs is UP
DORMANT All the Physlinks across all PDNs are DOWN
UNKNOWN No PDN is active

5.42.3.26 enum telux::data::RoamingType [strong]

Roaming Type.

Enumerator

UNKNOWN Device roaming mode is unknown
DOMESTIC Device is in Domestic roaming network
INTERNATIONAL Device is in International roaming network

5.42.3.27 enum telux::data::DataServiceState [strong]

Data Service State. Indicates whether data service is ready to setup a data call or not.

Enumerator

UNKNOWN Service State not available
IN_SERVICE Service Available
OUT_OF_SERVICE Service Not Available

5.42.3.28 enum telux::data::NetworkRat [strong]

Data Network RATs.

Enumerator

UNKNOWN UNKNOWN

CDMA_1X CDMA_1X
CDMA_EVDO CDMA_EVDO
GSM GSM
WCDMA WCDMA
LTE LTE
TDSCDMA TDSCDMA
NR5G NR5G

5.43 net

This section contains APIs related to data network configuration.

5.43.1 Data Structure Documentation

5.43.1.1 struct telux::data::net::BridgeInfo

Structure to configure a software bridge for an interface

Data fields

| Type | Field | Description |
|--------------------------------|-----------|---|
| string | ifaceName | Interface name |
| BridgeInfoType | ifaceType | Interface type |
| uint32_t | bandwidth | Bandwidth(in Mbps) required for software bridge |

5.43.1.2 class telux::data::net::IBridgeManager

[IBridgeManager](#) provides APIs to enable/disable and set/get/delete software bridges for various WLAN and Ethernet interfaces. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready.

Public member functions

- virtual [telux::common::ServiceStatus getServiceStatus](#) ()=0
- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status enableBridge](#) (bool enable, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status addBridge](#) ([BridgeInfo](#) config, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status requestBridgeInfo](#) ([BridgeInfoResponseCb](#) callback)=0
- virtual [telux::common::Status removeBridge](#) (std::string ifaceName, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [IBridgeListener](#) > listener)=0
- virtual [telux::common::Status deregisterListener](#) (std::weak_ptr< [IBridgeListener](#) > listener)=0
- virtual [~IBridgeManager](#) ()

5.43.1.2.1 Constructors and Destructors

5.43.1.2.1.1 virtual telux::data::net::IBridgeManager::~IBridgeManager () [virtual]

Destructor for [IBridgeManager](#)

5.43.1.2.2 Member Function Documentation**5.43.1.2.2.1 virtual telux::common::ServiceStatus telux::data::net::IBridgeManager::getServiceStatus () [pure virtual]**

Checks the status of Bridge manager and returns the result.

Returns

SERVICE_AVAILABLE If Bridge manager object is ready for service. SERVICE_UNAVAILABLE If Bridge manager object is temporarily unavailable. SERVICE_FAILED If Bridge manager object encountered an irrecoverable failure.

5.43.1.2.2.2 virtual bool telux::data::net::IBridgeManager::isSubsystemReady () [pure virtual]

Checks if the Bridge manager subsystem is ready.

Returns

True if the Bridge Manager is ready for service, otherwise returns false.

Deprecated Use getServiceStatus API.

5.43.1.2.2.3 virtual std::future<bool> telux::data::net::IBridgeManager::onSubsystemReady () [pure virtual]

Wait for Bridge manager subsystem to be ready.

Returns

A future that caller can wait until the Bridge Manager succeed/fail to be ready.

Deprecated Use InitResponseCb callback in factory API getBridgeManager.

5.43.1.2.2.4 virtual telux::common::Status telux::data::net::IBridgeManager::enableBridge (bool *enable*, telux::common::ResponseCallback *callback* = nullptr) [pure virtual]

Enable/Disable the software bridge in the system. It will affect all the configured software bridges for various interfaces.

Parameters

| | | |
|----|-----------------|--|
| in | <i>enable</i> | TRUE to enable, FALSE to disable the bridge |
| in | <i>callback</i> | Optional callback to get the response for enableBridge |

Returns

Status of enableBridge request i.e. success or suitable status code.

5.43.1.2.2.5 `virtual telux::common::Status telux::data::net::IBridgeManager::addBridge (BridgeInfo config, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Add software bridge configuration for an interface.

Parameters

| | | |
|----|-----------------|---|
| in | <i>config</i> | configuration for an interface |
| in | <i>callback</i> | Optional callback to get the response for addBridge |

Returns

Status of addBridge request i.e. success or suitable status code.

5.43.1.2.2.6 `virtual telux::common::Status telux::data::net::IBridgeManager::requestBridgeInfo (BridgeInfoResponseCb callback) [pure virtual]`

Request information about all the software bridge configurations in the system

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Response callback with list of bridge configurations |
|----|-----------------|--|

Returns

Status of requestBridgeInfo request i.e. success or suitable status code.

5.43.1.2.2.7 `virtual telux::common::Status telux::data::net::IBridgeManager::removeBridge (std::string ifaceName, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Delete a software bridge configuration for an interface.

Parameters

| | | |
|----|------------------|---|
| in | <i>ifaceName</i> | Name of the interface whose configuration needs to be deleted |
| in | <i>callback</i> | Optional callback to get the response for removeBridge |

Returns

Status of removeBridge request i.e. success or suitable status code.

5.43.1.2.2.8 `virtual telux::common::Status telux::data::net::IBridgeManager::registerListener (std::weak_ptr< IBridgeListener > listener) [pure virtual]`

Register Bridge Manager as listener for Data Service health events like data service available or data service not available.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | pointer of IBridgeListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener success or suitable status code

5.43.1.2.2.9 `virtual telux::common::Status telux::data::net::IBridgeManager::deregisterListener (std::weak_ptr< IBridgeListener > listener) [pure virtual]`

Removes a previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | pointer of IBridgeListener object that needs to be removed |
|----|-----------------|--|

Returns

Status of deregisterListener success or suitable status code

5.43.1.3 class telux::data::net::IBridgeListener

Interface for Bridge listener object. Client needs to implement this interface to get access to Bridge services notifications like onServiceStatusChange.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onServiceStatusChange](#) ([telux::common::ServiceStatus](#) status)
- virtual [~IBridgeListener](#) ()

5.43.1.3.1 Constructors and Destructors

5.43.1.3.1.1 `virtual telux::data::net::IBridgeListener::~~IBridgeListener () [virtual]`

Destructor for [IBridgeListener](#)

5.43.1.3.2 Member Function Documentation

5.43.1.3.2.1 virtual void telux::data::net::IBridgeListener::onServiceStatusChange (telux::common::↔ ServiceStatus status) [virtual]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.43.1.4 class telux::data::net::IFirewallManager

FirewallManager is a primary interface that filters and controls the network traffic on a pre-configured set of rules. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual bool isSubsystemReady ()=0
- virtual std::future< bool > onSubsystemReady ()=0
- virtual [telux::common::Status](#) setFirewall (int profileId, bool enable, bool allowPackets, [telux::common::ResponseCallback](#) callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) requestFirewallStatus (int profileId, [FirewallStatusCb](#) callback, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) addFirewallEntry (int profileId, std::shared_ptr< [IFirewallEntry](#) > entry, [telux::common::ResponseCallback](#) callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) requestFirewallEntries (int profileId, [FirewallEntriesCb](#) callback, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) removeFirewallEntry (int profileId, uint32_t handle, [telux::common::ResponseCallback](#) callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) enableDmz (int profileId, const std::string ipAddr, [telux::common::ResponseCallback](#) callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) disableDmz (int profileId, const [telux::data::IpFamilyType](#) ipType, [telux::common::ResponseCallback](#) callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) requestDmzEntry (int profileId, [DmzEntriesCb](#) dmzCb, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status](#) registerListener (std::weak_ptr< [IFirewallListener](#) > listener)=0
- virtual [telux::common::Status](#) deregisterListener (std::weak_ptr< [IFirewallListener](#) > listener)=0
- virtual [telux::data::OperationType](#) getOperationType ()=0
- virtual ~[IFirewallManager](#) ()

5.43.1.4.1 Constructors and Destructors

5.43.1.4.1.1 `virtual telux::data::net::IFirewallManager::~IFirewallManager () [virtual]`

Destructor for [IFirewallManager](#)

5.43.1.4.2 Member Function Documentation

5.43.1.4.2.1 `virtual telux::common::ServiceStatus telux::data::net::IFirewallManager::getServiceStatus () [pure virtual]`

Checks the status of Firewall manager and returns the result.

Returns

SERVICE_AVAILABLE If Firewall manager object is ready for service.

SERVICE_UNAVAILABLE If Firewall manager object is temporarily unavailable.

SERVICE_FAILED If Firewall manager object encountered an irrecoverable failure.

5.43.1.4.2.2 `virtual bool telux::data::net::IFirewallManager::isSubsystemReady () [pure virtual]`

Checks if the Firewall manager subsystem is ready.

Returns

True if Firewall Manager is ready for service, otherwise returns false.

Deprecated Use getServiceStatus API.

5.43.1.4.2.3 `virtual std::future<bool> telux::data::net::IFirewallManager::onSubsystemReady () [pure virtual]`

Wait for Firewall manager subsystem to be ready.

Returns

A future that caller can wait on to be notified when firewall manager is ready.

Deprecated Use InitResponseCb callback in factory API getFirewallManager.

5.43.1.4.2.4 `virtual telux::common::Status telux::data::net::IFirewallManager::setFirewall (int profileId, bool enable, bool allowPackets, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Sets firewall configuration to enable or disable and update configuration to drop or accept the packets matching the rules.

Parameters

| | | |
|----|---------------------|--|
| in | <i>profileId</i> | Profile identifier on which firewall will be set. |
| in | <i>enable</i> | Indicates whether the firewall is enabled |
| in | <i>allowPackets</i> | Indicates whether to accept or drop packets matching the rules |
| in | <i>callback</i> | optional callback to get the response setFirewall |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of setFirewall i.e. success or suitable status code.

5.43.1.4.2.5 `virtual telux::common::Status telux::data::net::IFirewallManager::requestFirewallStatus (int profileId, FirewallStatusCb callback, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Request status of firewall

Parameters

| | | |
|----|------------------|--|
| in | <i>profileId</i> | Profile identifier for which firewall status is requested. |
| in | <i>callback</i> | callback to get the response of requestFirewallStatus |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of requestFirewallStatus i.e. success or suitable status code.

5.43.1.4.2.6 `virtual telux::common::Status telux::data::net::IFirewallManager::addFirewallEntry (int profileId, std::shared_ptr< IFirewallEntry > entry, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Adds the firewall rule

Parameters

| | | |
|----|------------------|--|
| in | <i>profileId</i> | Profile identifier on which firewall rule will be added. |
| in | <i>entry</i> | Firewall entry based on protocol type |
| in | <i>callback</i> | optional callback to get the response addFirewallEntry |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of addFirewallEntry i.e. success or suitable status code.

5.43.1.4.2.7 `virtual telux::common::Status telux::data::net::IFirewallManager::requestFirewallEntries (int profileId, FirewallEntriesCb callback, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Request Firewall rules

Parameters

| | | |
|----|------------------|---|
| in | <i>profileId</i> | Profile identifier on which firewall entries are retrieved. |
| in | <i>callback</i> | callback to get the response requestFirewallEntries. |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of requestFirewallEntries i.e. success or suitable status code.

5.43.1.4.2.8 `virtual telux::common::Status telux::data::net::IFirewallManager::removeFirewallEntry (int profileId, uint32_t handle, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Remove firewall entry

Parameters

| | | |
|----|------------------|---|
| in | <i>profileId</i> | Profile identifier on which firewall entry will be removed. |
| in | <i>handle</i> | handle of Firewall entry to be removed. To retrieve the handle, first use requestFirewallEntries() to get the list of entries added in the system. And then use IFirewallEntry::getHandle() |
| in | <i>callback</i> | callback to get the response removeFirewallEntry |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of removeFirewallEntry i.e. success or suitable status code.

5.43.1.4.2.9 `virtual telux::common::Status telux::data::net::IFirewallManager::enableDmz (int profileId, const std::string ipAddr, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Enable demilitarized zone (DMZ)

Parameters

| | | |
|----|------------------|--|
| in | <i>profileId</i> | Profile identifier on which DMZ will be enabled. |
| in | <i>ipAddr</i> | IP address for which DMZ will be enabled |
| in | <i>callback</i> | optional callback to get the response addDmz |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of enableDmz i.e. success or suitable status code.

5.43.1.4.2.10 `virtual telux::common::Status telux::data::net::IFirewallManager::disableDmz (int profileId, const telux::data::IpFamilyType ipType, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Disable demilitarized zone (DMZ)

Parameters

| | | |
|----|------------------|--|
| in | <i>profileId</i> | Profile identifier on which DMZ will be disabled. |
| in | <i>ipType</i> | Specify IP type of the DMZ to be disabled |
| in | <i>callback</i> | optional callback to get the response removeDmz |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of disableDmz i.e. success or suitable status code.

5.43.1.4.2.11 `virtual telux::common::Status telux::data::net::IFirewallManager::requestDmzEntry (int profileId, DmzEntriesCb dmzCb, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Request DMZ entry that was previously set using enableDmz API

Parameters

| | | |
|----|------------------|--|
| in | <i>profileId</i> | Profile identifier on which DMZ entries are requested. |
| in | <i>dmzCb</i> | callback to get the response requestDmzEntry |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of requestDmzEntry i.e. success or suitable status code.

5.43.1.4.2.12 `virtual telux::common::Status telux::data::net::IFirewallManager::registerListener (std::weak_ptr< IFirewallListener > listener) [pure virtual]`

Register Firewall Manager as listener for Data Service health events like data service available or data service not available.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | pointer of IFirewallListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener success or suitable status code

5.43.1.4.2.13 `virtual telux::common::Status telux::data::net::IFirewallManager::deregisterListener (std::weak_ptr< IFirewallListener > listener) [pure virtual]`

Removes a previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | pointer of IFirewallListener object that needs to be removed |
|----|-----------------|--|

Returns

Status of deregisterListener success or suitable status code

5.43.1.4.2.14 `virtual telux::data::OperationType telux::data::net::IFirewallManager::getOperationType () [pure virtual]`

Get the associated operation type for this instance.

Returns

OperationType of getOperationType i.e. LOCAL or REMOTE.

5.43.1.5 class telux::data::net::IFirewallEntry

Firewall entry class is used for configuring firewall rules.

Public member functions

- virtual `std::shared_ptr< IipFilter > getIPProtocolFilter ()=0`
- virtual `telux::data::Direction getDirection ()=0`
- virtual `telux::data::IpFamilyType getIpFamilyType ()=0`
- virtual `uint32_t getHandle ()=0`
- virtual `~IFirewallEntry ()`

Static Public Attributes

- static const `uint32_t INVALID_HANDLE = 0`

5.43.1.5.1 Constructors and Destructors

5.43.1.5.1.1 `virtual telux::data::net::IFirewallEntry::~IFirewallEntry () [virtual]`

Destructor for [IFirewallEntry](#)

5.43.1.5.2 Member Function Documentation

5.43.1.5.2.1 `virtual std::shared_ptr<IpFilter> telux::data::net::IFirewallEntry::getProtocolFilter ()`
[pure virtual]

Get IPProtocol filter type

Returns

[telux::data::IpFilter](#).

5.43.1.5.2.2 `virtual telux::data::Direction telux::data::net::IFirewallEntry::getDirection ()` [pure virtual]

Get firewall direction

Returns

[telux::data::Direction](#).

5.43.1.5.2.3 `virtual telux::data::IpFamilyType telux::data::net::IFirewallEntry::getIpFamilyType ()`
[pure virtual]

Get Ip FamilyType

Returns

[telux::data::IpFamilyType](#).

5.43.1.5.2.4 `virtual uint32_t telux::data::net::IFirewallEntry::getHandle ()` [pure virtual]

Get the unique handle identifying this Firewall entry in the system

Returns

uint32_t handle if initialized or INVALID_HANDLE otherwise

5.43.1.5.3 Field Documentation

5.43.1.5.3.1 `const uint32_t telux::data::net::IFirewallEntry::INVALID_HANDLE = 0` [static]

5.43.1.6 class telux::data::net::IFirewallListener

Interface for Firewall listener object. Client needs to implement this interface to get access to Firewall services notifications like onServiceStatusChange.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onServiceStatusChange](#) ([telux::common::ServiceStatus](#) status)
- virtual [~IFirewallListener](#) ()

5.43.1.6.1 Constructors and Destructors

5.43.1.6.1.1 virtual [telux::data::net::IFirewallListener::~IFirewallListener](#) () [[virtual](#)]

Destructor for [IFirewallListener](#)

5.43.1.6.2 Member Function Documentation

5.43.1.6.2.1 virtual void [telux::data::net::IFirewallListener::onServiceStatusChange](#) ([telux::common::ServiceStatus](#) *status*) [[virtual](#)]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.43.1.7 struct [telux::data::net::L2tpSessionConfig](#)

L2TP tunnel sessions configuration

Data fields

| Type | Field | Description |
|----------|--------|------------------|
| uint32_t | locId | Local session id |
| uint32_t | peerId | Peer session id |

5.43.1.8 struct [telux::data::net::L2tpTunnelConfig](#)

L2TP tunnel configuration

Data fields

| Type | Field | Description |
|------------------------------|--------------|--|
| L2tpProtocol | prot | Encapsulation protocols |
| uint32_t | locId | Local tunnel id |
| uint32_t | peerId | Peer tunnel id |
| uint32_t | localUdpPort | Local udp port - if UDP encapsulation is used |
| uint32_t | peerUdpPort | Peer udp port - if IP encapsulation is used |
| string | peerIpv6Addr | Peer IPv6 Address - for Ipv6 tunnels |
| string | peerIpv4Addr | Peer IPv4 Address - for Ipv4 tunnels |
| string | locIface | interface name to create L2TP tunnel on |
| IpFamilyType | ipType | Ip family type telux::data::IpFamilyType |

| Type | Field | Description |
|---|---------------|------------------------------|
| vector< L2tpSessionConfig > | sessionConfig | List of L2tp tunnel sessions |

5.43.1.9 struct telux::data::net::L2tpSysConfig

L2TP Configuration

Data fields

| Type | Field | Description |
|--|--------------|--|
| vector< L2tpTunnelConfig > | configList | List of L2tp tunnel configurations |
| bool | enableMtu | Enable MTU size setting on underlying interfaces to avoid segmentation |
| bool | enableTcpMss | Enable TCP MSS clamping on L2TP interfaces to avoid segmentation |
| uint32_t | mtuSize | Current MTU size in bytes |

5.43.1.10 class telux::data::net::IL2tpManager

L2tpManager is a primary interface for configuring L2TP Service. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready.

Public member functions

- virtual [telux::common::ServiceStatus getServiceStatus](#) ()=0
- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status setConfig](#) (bool enable, bool enableMss, bool enableMtu, [telux::common::ResponseCallback](#) callback=nullptr, uint32_t mtuSize=0)=0
- virtual [telux::common::Status addTunnel](#) (const [L2tpTunnelConfig](#) &l2tpTunnelConfig, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status requestConfig](#) ([L2tpConfigCb](#) l2tpConfigCb)=0
- virtual [telux::common::Status removeTunnel](#) (uint32_t tunnelId, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [IL2tpListener](#) > listener)=0
- virtual [telux::common::Status deregisterListener](#) (std::weak_ptr< [IL2tpListener](#) > listener)=0
- virtual [~IL2tpManager](#) ()

5.43.1.10.1 Constructors and Destructors

5.43.1.10.1.1 `virtual telux::data::net::IL2tpManager::~~IL2tpManager () [virtual]`

Destructor for [IL2tpManager](#)

5.43.1.10.2 Member Function Documentation

5.43.1.10.2.1 `virtual telux::common::ServiceStatus telux::data::net::IL2tpManager::getServiceStatus () [pure virtual]`

Checks the status of L2tp manager and returns the result.

Returns

SERVICE_AVAILABLE If L2tp manager is ready for service. SERVICE_UNAVAILABLE If L2tp manager is temporarily unavailable. SERVICE_FAILED - If L2tp manager encountered an irrecoverable failure.

5.43.1.10.2.2 `virtual bool telux::data::net::IL2tpManager::isSubsystemReady () [pure virtual]`

Checks if the L2tp manager subsystem is ready.

Returns

True if L2tp Manager is ready for service, otherwise returns false.

Note

This API will be deprecated. getServiceStatus API is recommended as an alternative

5.43.1.10.2.3 `virtual std::future<bool> telux::data::net::IL2tpManager::onSubsystemReady () [pure virtual]`

Wait for L2tp manager subsystem to be ready.

Returns

A future that caller can wait on to be notified when L2tp manager is ready.

Note

This API will be deprecated. Callback of type InitResponseCb argument in data factory API getL2tpManager is recommended as an alternative.

5.43.1.10.2.4 virtual telux::common::Status telux::data::net::IL2tpManager::setConfig (bool *enable*, bool *enableMss*, bool *enableMtu*, telux::common::ResponseCallback *callback* = *nullptr*, uint32_t *mtuSize* = 0) [pure virtual]

Enable L2TP for unmanaged Tunnel State

Parameters

| | | |
|----|------------------|--|
| in | <i>enable</i> | Enable/Disable L2TP for unmanaged tunnels. |
| in | <i>enableMss</i> | Enable/Disable TCP MSS to be clamped on L2TP interfaces to avoid Segmentation |
| in | <i>enableMtu</i> | Enable/Disable MTU size to be set on underlying interfaces to avoid fragmentation |
| in | <i>callback</i> | optional callback to get the response setConfig |
| in | <i>mtuSize</i> | optional MTU size in bytes. If not set, MTU size will be set to default 1422 bytes |

Returns

Status of setConfig i.e. success or suitable status code.

5.43.1.10.2.5 virtual telux::common::Status telux::data::net::IL2tpManager::addTunnel (const L2tpTunnelConfig & *l2tpTunnelConfig*, telux::common::ResponseCallback *callback* = *nullptr*) [pure virtual]

Set L2TP Configuration for one tunnel

Parameters

| | | |
|----|-------------------------|--|
| in | <i>l2tpTunnelConfig</i> | Configuration to be set telux::net::L2tpTunnelConfig |
| in | <i>callback</i> | Optional callback to get the response addTunnel |

Returns

Status of addTunnel i.e. success or suitable status code.

5.43.1.10.2.6 virtual telux::common::Status telux::data::net::IL2tpManager::requestConfig (L2tpConfigCb *l2tpConfigCb*) [pure virtual]

Get Current L2TP Configuration

Parameters

| | | |
|----|---------------------|--|
| in | <i>l2tpConfigCb</i> | Asynchronous callback to get current L2TP configurations |
|----|---------------------|--|

Returns

Status of requestConfig i.e. success or suitable status code.

5.43.1.10.2.7 virtual telux::common::Status telux::data::net::IL2tpManager::removeTunnel (uint32_t *tunnelId*, telux::common::ResponseCallback *callback = nullptr*) [pure virtual]

Remove L2TP Tunnel

Parameters

| | | |
|----|-----------------|--|
| in | <i>tunnelId</i> | Tunnel ID to be removed |
| in | <i>callback</i> | optional callback to get the response removeConfig |

Returns

Status of removeTunnel i.e. success or suitable status code.

5.43.1.10.2.8 virtual telux::common::Status telux::data::net::IL2tpManager::registerListener (std::weak_ptr< IL2tpListener > *listener*) [pure virtual]

Register L2TP Manager as listener for Data Service health events like data service available or data service not available.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | pointer of IL2tpListener object that processes the notification |
|----|-----------------|---|

Returns

Status of registerListener success or suitable status code

5.43.1.10.2.9 virtual telux::common::Status telux::data::net::IL2tpManager::deregisterListener (std::weak_ptr< IL2tpListener > *listener*) [pure virtual]

Removes a previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | pointer of IL2tpListener object that needs to be removed |
|----|-----------------|--|

Returns

Status of deregisterListener success or suitable status code

5.43.1.11 class telux::data::net::IL2tpListener

Interface for L2TP listener object. Client needs to implement this interface to get access to L2TP services notifications like onServiceStatusChange.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onServiceStatusChange](#) ([telux::common::ServiceStatus](#) status)
- virtual [~IL2tpListener](#) ()

5.43.1.11.1 Constructors and Destructors

5.43.1.11.1.1 virtual [telux::data::net::IL2tpListener::~~IL2tpListener](#) () [[virtual](#)]

Destructor for [IL2tpListener](#)

5.43.1.11.2 Member Function Documentation

5.43.1.11.2.1 virtual void [telux::data::net::IL2tpListener::onServiceStatusChange](#) ([telux::common::ServiceStatus](#) *status*) [[virtual](#)]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.43.1.12 struct telux::data::net::NatConfig

Structure represents Network Address Translation (NAT) configuration

Data fields

| Type | Field | Description |
|----------------------------|------------|--|
| string | addr | Private IP address |
| uint16_t | port | Private port |
| uint16_t | globalPort | Global port |
| IpProtocol | proto | IP protocol telux::net::IpProtocol |

5.43.1.13 class telux::data::net::INatManager

NatManager is a primary interface for configuring static network address translation(SNAT) and DMZ (demilitarized zone). It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready.

Public member functions

- virtual [telux::common::ServiceStatus](#) [getServiceStatus](#) ()=0
- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status](#) [addStaticNatEntry](#) (int profileId, const [NatConfig](#) &snatConfig,

`telux::common::ResponseCallback` callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0

- virtual `telux::common::Status removeStaticNatEntry` (int profileId, const `NatConfig` &snatConfig, `telux::common::ResponseCallback` callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual `telux::common::Status requestStaticNatEntries` (int profileId, `StaticNatEntriesCb` snatEntriesCb, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual `telux::common::Status registerListener` (std::weak_ptr< `INatListener` > listener)=0
- virtual `telux::common::Status deregisterListener` (std::weak_ptr< `INatListener` > listener)=0
- virtual `telux::data::OperationType getOperationType` ()=0
- virtual `~INatManager` ()

5.43.1.13.1 Constructors and Destructors

5.43.1.13.1.1 virtual `telux::data::net::INatManager::~INatManager` () [virtual]

Destructor for `INatManager`

5.43.1.13.2 Member Function Documentation

5.43.1.13.2.1 virtual `telux::common::ServiceStatus telux::data::net::INatManager::getServiceStatus` () [pure virtual]

Checks the status of NAT manager and returns the result.

Returns

`SERVICE_AVAILABLE` If Nat manager object is ready for service. `SERVICE_UNAVAILABLE` If Nat manager object is temporarily unavailable. `SERVICE_FAILED` - If Nat manager object encountered an irrecoverable failure.

5.43.1.13.2.2 virtual `bool telux::data::net::INatManager::isSubsystemReady` () [pure virtual]

Checks if the NAT manager subsystem is ready.

Returns

True if NAT Manager is ready for service, otherwise returns false.

Deprecated Use `getServiceStatus` API.

5.43.1.13.2.3 `virtual std::future<bool> telux::data::net::INatManager::onSubsystemReady () [pure virtual]`

Wait for NAT manager subsystem to be ready.

Returns

A future that caller can wait on to be notified when NAT manager is ready.

Deprecated Use InitResponseCb callback in factory API `getNatManager`.

5.43.1.13.2.4 `virtual telux::common::Status telux::data::net::INatManager::addStaticNatEntry (int profileId, const NatConfig & snatConfig, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Adds a static Network Address Translation (NAT) entry in the NAT table, these entries are persistent across object, connection and reboot lifetimes. To remove an entry it needs a explicit call to `removeStaticNatEntry()` API, it supports both IPv4 and IPv6

Parameters

| | | |
|----|-------------------|--|
| in | <i>profileId</i> | Profile identifier to which static entry will be mapped to. |
| in | <i>snatConfig</i> | snatConfiguration <code>telux::net::NatConfig</code> |
| in | <i>callback</i> | optional callback to get the response <code>addStaticNatEntry</code> |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of `addStaticNatEntry` i.e. success or suitable status code.

5.43.1.13.2.5 `virtual telux::common::Status telux::data::net::INatManager::removeStaticNatEntry (int profileId, const NatConfig & snatConfig, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Removes a static Network Address Translation (NAT) entry in the NAT table, it supports both IPv4 and IPv6

Parameters

| | | |
|----|-------------------|---|
| in | <i>profileId</i> | Profile identifier to which static entry will be removed from. |
| in | <i>snatConfig</i> | snatConfiguration <code>telux::net::NatConfig</code> |
| in | <i>callback</i> | optional callback to get the response <code>removeStaticNatEntry</code> |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of `removeStaticNatEntry` i.e. success or suitable status code.

5.43.1.13.2.6 virtual telux::common::Status telux::data::net::INatManager::requestStaticNatEntries (int *profileId*, StaticNatEntriesCb *snatEntriesCb*, SlotId *slotId* = *DEFAULT_SLOT_ID*) [pure virtual]

Request list of static nat entries available in the NAT table

Parameters

| | | |
|----|----------------------|---|
| in | <i>profileId</i> | Profile identifier to which static entries will be retrieved. |
| in | <i>snatEntriesCb</i> | Asynchronous callback to get the list of static Network Address Translation (NAT) entries |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id |

Returns

Status of requestStaticNatEntries i.e. success or suitable status code.

5.43.1.13.2.7 virtual telux::common::Status telux::data::net::INatManager::registerListener (std::weak_ptr< INatListener > *listener*) [pure virtual]

Register Nat Manager as listener for Data Service health events like data service available or data service not available.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | pointer of INatListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener success or suitable status code

5.43.1.13.2.8 virtual telux::common::Status telux::data::net::INatManager::deregisterListener (std::weak_ptr< INatListener > *listener*) [pure virtual]

Removes a previously added listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | pointer of INatListener object that needs to be removed |
|----|-----------------|---|

Returns

Status of deregisterListener success or suitable status code

5.43.1.13.2.9 virtual telux::data::OperationType telux::data::net::INatManager::getOperationType () [pure virtual]

Get the associated operation type for this instance.

Returns

OperationType of getOperationType i.e. LOCAL or REMOTE.

5.43.1.14 class telux::data::net::INatListener

Interface for Nat listener object. Client needs to implement this interface to get access to Nat services notifications like onServiceStatusChange.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onServiceStatusChange](#) (telux::common::ServiceStatus status)
- virtual [~INatListener](#) ()

5.43.1.14.1 Constructors and Destructors

5.43.1.14.1.1 virtual telux::data::net::INatListener::~~INatListener () [virtual]

Destructor for [INatListener](#)

5.43.1.14.2 Member Function Documentation

5.43.1.14.2.1 virtual void telux::data::net::INatListener::onServiceStatusChange (telux::common::↔ ServiceStatus *status*) [virtual]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.43.1.15 class telux::data::net::ISocksManager

SocksManager is a primary interface for configuring legacy Socks proxy server. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready.

Public member functions

- virtual `telux::common::ServiceStatus getServiceStatus ()=0`
- virtual `bool isSubsystemReady ()=0`
- virtual `std::future< bool > onSubsystemReady ()=0`
- virtual `telux::common::Status enableSocks (bool enable, telux::common::ResponseCallback callback=nullptr)=0`
- virtual `telux::common::Status registerListener (std::weak_ptr< ISocksListener > listener)=0`
- virtual `telux::common::Status deregisterListener (std::weak_ptr< ISocksListener > listener)=0`
- virtual `telux::data::OperationType getOperationType ()=0`
- virtual `~ISocksManager ()`

5.43.1.15.1 Constructors and Destructors

5.43.1.15.1.1 `virtual telux::data::net::ISocksManager::~ISocksManager () [virtual]`

Destructor for Socks Manager

5.43.1.15.2 Member Function Documentation

5.43.1.15.2.1 `virtual telux::common::ServiceStatus telux::data::net::ISocksManager::getServiceStatus () [pure virtual]`

Checks the status of SocksManager and returns the result.

Returns

`SERVICE_AVAILABLE` If Socks manager object is ready for service. `SERVICE_UNAVAILABLE` If Socks manager object is temporarily unavailable. `SERVICE_FAILED` - If Socks manager object encountered an irrecoverable failure.

5.43.1.15.2.2 `virtual bool telux::data::net::ISocksManager::isSubsystemReady () [pure virtual]`

Checks if the SocksManager subsystem is ready.

Returns

True if SocksManager is ready for service, otherwise returns false.

Deprecated Use `getServiceStatus` API..

5.43.1.15.2.3 `virtual std::future<bool> telux::data::net::ISocksManager::onSubsystemReady ()`
[pure virtual]

Wait for SocksManager subsystem to be ready.

Returns

A future that caller can wait on to be notified when Socksanager is ready.

Deprecated Use InitResponseCb callback in factory API getSocksManager.

5.43.1.15.2.4 `virtual telux::common::Status telux::data::net::ISocksManager::enableSocks (bool`
`enable, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Enable or Disable Socks proxy service.

Parameters

| | | |
|----|-----------------|--|
| in | <i>enable</i> | true: enable proxy, false: disable proxy |
| in | <i>callback</i> | optional callback to get the operation error code if any |

Returns

Status of proxy enablement i.e. success or suitable status code.

5.43.1.15.2.5 `virtual telux::common::Status telux::data::net::ISocksManager::registerListener (`
`std::weak_ptr< ISocksListener > listener) [pure virtual]`

Register Socks Manager as listener for Data Service health events like data service available or data service not available.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | pointer of ISocksListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener success or suitable status code

5.43.1.15.2.6 `virtual telux::common::Status telux::data::net::ISocksManager::deregisterListener (`
`std::weak_ptr< ISocksListener > listener) [pure virtual]`

Removes a previously added listener.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | pointer of ISocksListener object that needs to be removed |
|----|-----------------|---|

Returns

Status of deregisterListener success or suitable status code

5.43.1.15.2.7 `virtual telux::data::OperationType telux::data::net::ISocksManager::getOperationType ()`
`[pure virtual]`

Get the associated operation type for this instance.

Returns

OperationType of getOperationType i.e. LOCAL or REMOTE.

5.43.1.16 class telux::data::net::ISocksListener

Interface for Socks listener object. Client needs to implement this interface to get access to Socks services notifications like onServiceStatusChange.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void [onServiceStatusChange](#) ([telux::common::ServiceStatus](#) status)
- virtual [~ISocksListener](#) ()

5.43.1.16.1 Constructors and Destructors

5.43.1.16.1.1 `virtual telux::data::net::ISocksListener::~~ISocksListener ()` `[virtual]`

Destructor for [ISocksListener](#)

5.43.1.16.2 Member Function Documentation

5.43.1.16.2.1 `virtual void telux::data::net::ISocksListener::onServiceStatusChange (telux::common::↔`
`ServiceStatus status)` `[virtual]`

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.43.1.17 class telux::data::net::IVlanManager

VlanManager is a primary interface for configuring VLAN (Virtual Local Area Network). It provides APIs for create, query, remove VLAN interfaces and associate or disassociate with profile IDs. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready.

Public member functions

- virtual [telux::common::ServiceStatus getServiceStatus](#) ()=0
- virtual bool [isSubsystemReady](#) ()=0
- virtual std::future< bool > [onSubsystemReady](#) ()=0
- virtual [telux::common::Status createVlan](#) (const [VlanConfig](#) &vlanConfig, [CreateVlanCb](#) callback=nullptr)=0
- virtual [telux::common::Status removeVlan](#) (int16_t vlanId, [InterfaceType](#) ifaceType, [telux::common::ResponseCallback](#) callback=nullptr)=0
- virtual [telux::common::Status queryVlanInfo](#) ([QueryVlanResponseCb](#) callback)=0
- virtual [telux::common::Status bindWithProfile](#) (int profileId, int vlanId, [telux::common::ResponseCallback](#) callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status unbindFromProfile](#) (int profileId, int vlanId, [telux::common::ResponseCallback](#) callback=nullptr, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status queryVlanMappingList](#) ([VlanMappingResponseCb](#) callback, SlotId slotId=DEFAULT_SLOT_ID)=0
- virtual [telux::common::Status registerListener](#) (std::weak_ptr< [IVlanListener](#) > listener)=0
- virtual [telux::common::Status deregisterListener](#) (std::weak_ptr< [IVlanListener](#) > listener)=0
- virtual [telux::data::OperationType getOperationType](#) ()=0
- virtual [~IVlanManager](#) ()

5.43.1.17.1 Constructors and Destructors

5.43.1.17.1.1 virtual [telux::data::net::IVlanManager::~~IVlanManager](#) () [[virtual](#)]

Destructor for [IVlanManager](#)

5.43.1.17.2 Member Function Documentation

5.43.1.17.2.1 virtual telux::common::ServiceStatus telux::data::net::IVlanManager::getServiceStatus () [pure virtual]

Checks the status of Vlan manager and returns the result.

Returns

SERVICE_AVAILABLE If Vlan manager object is ready for service. SERVICE_UNAVAILABLE If Vlan manager object is temporarily unavailable. SERVICE_FAILED - If Vlan manager object encountered an irrecoverable failure.

5.43.1.17.2.2 virtual bool telux::data::net::IVlanManager::isSubsystemReady () [pure virtual]

Checks if the Vlan manager subsystem is ready.

Returns

True if VLAN Manager is ready for service, otherwise returns false.

Deprecated Use getServiceStatus API.

5.43.1.17.2.3 virtual std::future<bool> telux::data::net::IVlanManager::onSubsystemReady () [pure virtual]

Wait for Vlan manager subsystem to be ready.

Returns

A future that caller can wait on to be notified when VLAN manager is ready.

Deprecated Use InitResponseCb callback in factory API getVlanManager.

5.43.1.17.2.4 virtual telux::common::Status telux::data::net::IVlanManager::createVlan (const VlanConfig & vlanConfig, CreateVlanCb callback = nullptr) [pure virtual]

Create a VLAN associated with multiple interfaces

Note

if interface configured as VLAN for the first time, it may trigger auto reboot.

Parameters

| | | |
|-----|-------------------|--|
| in | <i>vlanConfig</i> | vlan configuration |
| out | <i>callback</i> | optional callback to get the response createVlan |

Returns

Immediate status of [createVlan\(\)](#) request sent i.e. success or suitable status code.

5.43.1.17.2.5 `virtual telux::common::Status telux::data::net::IVlanManager::removeVlan (int16_t vlanId, InterfaceType ifaceType, telux::common::ResponseCallback callback = nullptr) [pure virtual]`

Remove VLAN configuration

Note

This will delete all clients associated with interface

Parameters

| | | |
|-----|------------------|--|
| in | <i>vlanId</i> | VLAN ID |
| in | <i>ifaceType</i> | telux::net::InterfaceType |
| out | <i>callback</i> | optional callback to get the response removeVlan |

Returns

Immediate status of [removeVlan\(\)](#) request sent i.e. success or suitable status code.

5.43.1.17.2.6 `virtual telux::common::Status telux::data::net::IVlanManager::queryVlanInfo (QueryVlanResponseCb callback) [pure virtual]`

Query information about all the VLANs in the system

Parameters

| | | |
|-----|-----------------|---|
| out | <i>callback</i> | Response callback with list of configured VLANs |
|-----|-----------------|---|

Returns

Immediate status of [queryVlanInfo\(\)](#) request sent i.e. success or suitable status code.

5.43.1.17.2.7 `virtual telux::common::Status telux::data::net::IVlanManager::bindWithProfile (int profileId, int vlanId, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Bind a Vlan with a particular profile ID and slot ID. When a WWAN network interface is brought up using [IDataConnectionManager::startDataCall](#) on that profile ID and slot ID, that interface will be accessible from this Vlan

Parameters

| | | |
|-----|------------------|---|
| in | <i>profileId</i> | profile id for vlan association |
| in | <i>vlanId</i> | sets vlan id |
| out | <i>callback</i> | callback to get the response of associateWithProfileId API |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id. |

Returns

Immediate status of [associateWithProfileId\(\)](#) request sent i.e. success or suitable status code.

5.43.1.17.2.8 `virtual telux::common::Status telux::data::net::IVlanManager::unbindFromProfile (int profileId, int vlanId, telux::common::ResponseCallback callback = nullptr, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Unbind VLAN id from given slot id and profile id

Parameters

| | | |
|----|------------------|---|
| in | <i>profileId</i> | profile id for vlan association |
| in | <i>vlanId</i> | vlan id |
| in | <i>callback</i> | callback to get the response of <code>associateWithProfileId</code> API |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id . |

Returns

Immediate status of `disassociateFromProfileId()` request sent i.e. success or suitable status code

5.43.1.17.2.9 `virtual telux::common::Status telux::data::net::IVlanManager::queryVlanMappingList (VlanMappingResponseCb callback, SlotId slotId = DEFAULT_SLOT_ID) [pure virtual]`

Query VLAN mapping of profile id and vlan id on specified sim

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | callback to get the response of <code>queryVlanMappingList</code> API |
| in | <i>slotId</i> | Specify slot id which has the sim that contains profile id mapping to vlan id. |

Returns

Immediate status of `queryVlanMappingList()` request sent i.e. success or suitable status code

5.43.1.17.2.10 `virtual telux::common::Status telux::data::net::IVlanManager::registerListener (std::weak_ptr< IVlanListener > listener) [pure virtual]`

Register Vlan Manager as a listener for Data Service health events like data service available or data service not available.

Parameters

| | | |
|----|-----------------|---|
| in | <i>listener</i> | pointer of IVlanListener object that processes the notification |
|----|-----------------|---|

Returns

Status of `registerListener` success or suitable status code

5.43.1.17.2.11 virtual `telux::common::Status telux::data::net::IVlanManager::deregisterListener (std::weak_ptr< IVlanListener > listener)` [pure virtual]

Removes a previously added listener.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | pointer of IVlanListener object that needs to be removed |
|----|-----------------|--|

Returns

Status of deregisterListener success or suitable status code

5.43.1.17.2.12 virtual `telux::data::OperationType telux::data::net::IVlanManager::getOperationType ()` [pure virtual]

Get the associated operation type for this instance.

Returns

OperationType of getOperationType i.e. LOCAL or REMOTE.

5.43.1.18 class `telux::data::net::IVlanListener`

Interface for Vlan listener object. Client needs to implement this interface to get access to Socks services notifications like onServiceStatusChange.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

Public member functions

- virtual void `onServiceStatusChange (telux::common::ServiceStatus status)`
- virtual void `onHwAccelerationChanged (const ServiceState state)`
- virtual `~IVlanListener ()`

5.43.1.18.1 Constructors and Destructors

5.43.1.18.1.1 virtual `telux::data::net::IVlanListener::~~IVlanListener ()` [virtual]

Destructor for [IVlanListener](#)

5.43.1.18.2 Member Function Documentation

5.43.1.18.2.1 `virtual void telux::data::net::IVlanListener::onServiceStatusChange (telux::common::↔ ServiceStatus status) [virtual]`

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

5.43.1.18.2.2 `virtual void telux::data::net::IVlanListener::onHwAccelerationChanged (const ServiceState state) [virtual]`

This function is called when there is a change in IPA Connection Manager daemon state.

Parameters

| | | |
|----|--------------|--|
| in | <i>state</i> | New state of IPA connection Manager daemon Active/Inactive |
|----|--------------|--|

5.43.2 Enumeration Type Documentation

5.43.2.1 `enum telux::data::net::BridgeFaceType [strong]`

Interface types supported for bridge configuration

Enumerator

UNKNOWN

WLAN_AP Wireless Local Area Network (WLAN) in AP mode

WLAN_STA Wireless Local Area Network (WLAN) in STA mode

ETH Ethernet (ETH)

5.43.2.2 `enum telux::data::net::L2tpProtocol [strong]`

L2TP encapsulation protocols

Enumerator

NONE

IP IP Protocol used for encapsulation

UDP UDP Protocol used for encapsulation

5.44 cv2x

- [C APIs](#)
- [CPP APIs](#)

This section contains APIs related to Cellular-V2X operation. The SDK has C and C++ APIs. The C APIs are legacy and are being maintained for backwards compatibility purposes. These APIs are mostly wrappers over the C++ APIs. New features and functionality will be added to C++ APIs. For anyone writing new Cv2x software, it is recommended to use the C++ APIs.

6 Namespace Documentation

6.1 telux Namespace Reference

DeviceConfig provides utility functions to get device configuration details such as multi SIM support.

Namespaces

- [audio](#)
- [common](#)
- [config](#)
- [cv2x](#)
- [data](#)
- [loc](#)
- [platform](#)
- [power](#)
- [sensor](#)
- [tel](#)
- [therm](#)

DeviceConfig provides utility functions to get device configuration details such as multi SIM support.

Cv2x Rx packets helper class - Help to parse the received packets' meta data at the beginning of the payload, any applications that have enabled the received packets' meta data should use this helper class before using the real payload.

6.2 telux::audio Namespace Reference

Data Structures

- struct [AmrwbpParams](#)
- class [AudioFactory](#)
AudioFactory allows creation of audio manager. [More...](#)
- struct [ChannelVolume](#)
- struct [DtmfTone](#)

- struct [FormatInfo](#)
- struct [FormatParams](#)
- class [IAudioBuffer](#)

Stream Buffer manages the buffer to be used for read and write operations on Audio Streams. For write operations, applications should request a stream buffer, populate it with the data and then pass it to the write operation and set the dataSize that is to be written to the stream. Similarly for read operations, the application should request a stream buffer and use that in the read operation. At the end of the read, the stream buffer will contain the data read. Once an operation (read/write) has completed, the stream buffer could be reused for a subsequent read/write operation, provided [reset\(\)](#) API called on stream buffer between subsequent calls. [More...](#)

- class [IAudioCaptureStream](#)

[IAudioCaptureStream](#) represents single audio capture stream. [More...](#)

- class [IAudioDevice](#)

Audio device and it's characteristics like Direction (Sink or Source), type. [More...](#)

- class [IAudioListener](#)

- class [IAudioLoopbackStream](#)

[IAudioLoopbackStream](#) represents audio loopback stream. [More...](#)

- class [IAudioManager](#)

Audio Manager is a primary interface for audio operations. It provide APIs to manage Streams (like voice, play, record etc) and sound cards. [More...](#)

- class [IAudioPlayStream](#)

[IAudioPlayStream](#) represents single audio playback stream. [More...](#)

- class [IAudioStream](#)

[IAudioStream](#) represents single audio stream with base properties. [More...](#)

- class [IAudioToneGeneratorStream](#)

[IAudioToneGeneratorStream](#) represents tone generator stream. [More...](#)

- class [IAudioVoiceStream](#)

[IAudioVoiceStream](#) represents single voice stream. [More...](#)

- class [IPlayListener](#)

- class [IStreamBuffer](#)

- class [ITranscodeListener](#)

- class [ITranscoder](#)

[ITranscoder](#) is used to convert one audio format to another audio format using the transcoding operation. [More...](#)

- class [IVoiceListener](#)

Listener class for getting notifications related to DTMF tone detection. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe. [More...](#)

- struct [StreamBuffer](#)
- struct [StreamConfig](#)
- struct [StreamMute](#)
- struct [StreamVolume](#)

6.2.1 Variable Documentation

6.2.1.1 `const uint16_t telux::audio::INFINITE_DTMF_DURATION = 0xFFFF`

Duration to play DTMF tone for infinite time

6.2.1.2 `const uint16_t telux::audio::INFINITE_TONE_DURATION = 0xFFFF`

6.3 telux::common Namespace Reference

Data Structures

- class [DeviceConfig](#)
- class [ICommandCallback](#)
- class [ICommandResponseCallback](#)

General command response callback for most of the requests, client needs to implement this interface to get single shot response. [More...](#)

- class [IServiceStatusListener](#)
- class [Log](#)
- struct [SdkVersion](#)
- class [Version](#)

Provides version of SDK. [More...](#)

6.3.1 Typedef Documentation

6.3.1.1 `using telux::common::ResponseCallback = typedef std::function<void(telux↔ ::common::ErrorCode errorCode)>`

General response callback for most of the requests, client needs to implement this function to get the asynchronous response.

The methods in callback can be invoked from multiple different threads. The implementation should be thread safe.

Parameters

| | | |
|----|------------------|---------------------------|
| in | <i>errorCode</i> | ErrorCode |
|----|------------------|---------------------------|

6.3.1.2 using telux::common::InitResponseCb = typedef std::function<void(telux← ::common::ServiceStatus status)>

This API is invoked when the initialization of an object completes.

Parameters

| | | |
|----|--------|------------------|
| in | status | - Service status |
|----|--------|------------------|

6.4 telux::config Namespace Reference

Data Structures

- class [ConfigFactory](#)
ConfigFactory allows creation of config related classes. [More...](#)
- struct [ConfigInfo](#)
- class [IModemConfigListener](#)
Listener class for getting notifications related to configuration change detection. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe. [More...](#)
- class [IModemConfigManager](#)
IModemConfigManager provides interface to list config files present in modem's storage. load a new config file in modem, activate a config file, get active config file information, deactivate a config file, delete config file from the modem's storage, get and set mode of config auto selection, register and deregister listener for config update in modem. The config files are also referred to as MBNs. [More...](#)

6.5 telux::cv2x Namespace Reference

Data Structures

- struct [ConfigEventInfo](#)
- class [Cv2xFactory](#)
Cv2xFactory is the factory that creates the Cv2x Radio. [More...](#)
- struct [Cv2xPoolStatus](#)
- struct [Cv2xRadioCapabilities](#)
- class [Cv2xRxMetaDataHelper](#)
- struct [Cv2xStatus](#)
- struct [Cv2xStatusEx](#)
- class [Cv2xUtil](#)
- struct [DataSessionSettings](#)

- struct [EventFlowInfo](#)
- struct [GlobalIPUnicastRoutingInfo](#)
- class [ICv2xConfig](#)
 - Cv2xConfig provide operations to update or request cv2x configuration. [More...](#)*
- class [ICv2xConfigListener](#)
 - Listeners for ICv2xConfig must implement this interface. [More...](#)*
- class [ICv2xListener](#)
 - Cv2x Radio Manager listeners implement this interface.*
- class [ICv2xRadio](#)
- class [ICv2xRadioListener](#)
 - Listeners for Cv2xRadio must implement this interface. [More...](#)*
- class [ICv2xRadioManager](#)
 - Cv2xRadioManager manages instances of Cv2xRadio. [More...](#)*
- class [ICv2xRxSubscription](#)
- class [ICv2xThrottleManager](#)
 - ThrottleManager provides throttle manager client interface. [More...](#)*
- class [ICv2xThrottleManagerListener](#)
 - Listener class for getting filter rate update notification. [More...](#)*
- class [ICv2xTxFlow](#)
- class [ICv2xTxRxSocket](#)
- class [ICv2xTxStatusReportListener](#)
 - Listeners for CV2X Tx status report must implement this interface. [More...](#)*
- struct [IPv6Address](#)
- struct [IPv6AddrType](#)
- struct [L2FilterInfo](#)
- struct [MacDetails](#)
- struct [RFTxInfo](#)
- struct [RxPacketMetaDataReport](#)
- struct [SocketInfo](#)
- struct [SpsFlowInfo](#)
- struct [SpsSchedulingInfo](#)
- struct [TrustedUEInfo](#)
- struct [TrustedUEInfoList](#)
- struct [TxPoolIdInfo](#)

- struct [TxStatusReport](#)

6.5.1 Typedef Documentation

6.5.1.1 `using telux::cv2x::CreateRxSubscriptionCallback = typedef std::function<void (std::shared_ptr<ICv2xRxSubscription> rxSub, telux::common::ErrorCode error)>`

This function is called as a response to createRxSubscription.

Parameters

| | | |
|----|--------------|--|
| in | <i>rxSub</i> | - Rx Subscription |
| in | <i>error</i> | - Indicates whether socket creation succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.2 `using telux::cv2x::CreateTxSpsFlowCallback = typedef std::function<void (std::shared_ptr<ICv2xTxFlow> txSpsFlow, std::shared_ptr<ICv2xTxFlow> txEventFlow, telux::common::ErrorCode spsError, telux::common::ErrorCode eventError)>`

This function is called as a response to createTxSpsFlow

Parameters

| | | |
|----|------------------|---|
| in | <i>spsFlow</i> | - Sps flow |
| in | <i>eventFlow</i> | - Optional event flow. Will be nullptr if event flow was not specified in the request |
| in | <i>error</i> | - Indicates whether Tx SPS flow creation succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |
| in | <i>error</i> | - Indicates whether optional Tx Event flow creation succeeded <ul style="list-style-type: none"> • SUCCESS |

6.5.1.3 `using telux::cv2x::CreateTxEventFlowCallback = typedef std::function<void (std::shared_ptr<ICv2xTxFlow> txEventFlow, telux::common::ErrorCode error)>`

This function is called with the response to createTxEventFlow

Parameters

| | | |
|----|--------------------|---|
| in | <i>txEventFlow</i> | - Event flow |
| in | <i>error</i> | - Indicates whether Tx event flow creation succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.4 using telux::cv2x::CloseTxFlowCallback = typedef std::function<void (std::shared_ptr<ICv2xTxFlow> txFlow, telux::common::ErrorCode error)>

This function is called with the response to closeTxFlow.

Parameters

| | | |
|----|---------------|--|
| in | <i>txFlow</i> | - Closed tx flow |
| in | <i>error</i> | - Indicates whether close operation succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.5 using telux::cv2x::CloseRxSubscriptionCallback = typedef std::function<void (std::shared_ptr<ICv2xRxSubscription> rxSub, telux::common::ErrorCode error)>

This function is called with the response to closeRxSubscription.

Parameters

| | | |
|----|--------------|--|
| in | <i>rxSub</i> | - Closed rx subscription |
| in | <i>error</i> | - Indicates whether Rx subscription close succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.6 using telux::cv2x::ChangeSpsFlowInfoCallback = typedef std::function<void (std::shared_ptr<ICv2xTxFlow> txFlow, telux::common::ErrorCode error)>

This function is called with the response to changeSpsFlowInfo.

Parameters

| | | |
|----|---------------|---|
| in | <i>txFlow</i> | - Sps flow that requested reservation change |
| in | <i>error</i> | - SUCCESS if Tx reservation change succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.7 using telux::cv2x::RequestSpsFlowInfoCallback = typedef std::function<void (std::shared_ptr<ICv2xTxFlow> txFlow, const SpsFlowInfo & spsInfo, telux::common::ErrorCode error)>

This function is called with the response to requestSpsFlowInfo.

Parameters

| | | |
|----|----------------|---|
| in | <i>txFlow</i> | - SPS flow that requested info |
| in | <i>spsInfo</i> | - SPS flow reservation info |
| in | <i>error</i> | - SUCCESS if Tx reservation change succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.8 using telux::cv2x::ChangeEventFlowInfoCallback = typedef std::function<void (std::shared_ptr<ICv2xTxFlow> txFlow, telux::common::ErrorCode error)>

This function is called with the response to changeEventFlowInfo.

Parameters

| | | |
|----|---------------|---|
| in | <i>txFlow</i> | - Event flow that requested reservation change |
| in | <i>error</i> | - SUCCESS if Tx parameter change succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.9 using telux::cv2x::RequestCapabilitiesCallback = typedef std::function<void(const Cv2xRadioCapabilities & capabilities, telux::common::ErrorCode error)>

This function is called with the response to requestCapabilities.

Parameters

| | | |
|----|---------------------|--|
| in | <i>capabilities</i> | - Capability info |
| in | <i>error</i> | - SUCCESS if capabilities request succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

**6.5.1.10 using telux::cv2x::RequestDataSessionSettingsCallback = typedef std::function<void (const DataSessionSettings & settings, telux::common::←
ErrorCode error)>**

This function is called with the response to requestDataSessionSettings.

Parameters

| | | |
|----|-----------------|---|
| in | <i>settings</i> | - Data session settings |
| in | <i>error</i> | - SUCCESS if data session settings request succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.11 using telux::cv2x::UpdateTrustedUelistCallback = typedef std::function<void(telux::common::ErrorCode error)>

This function is called with the response to updateTrustedUelist.

Parameters

| | | |
|----|--------------|--|
| in | <i>error</i> | - SUCCESS if update succeeded <ul style="list-style-type: none"> • INVALID_ARGUMENTS if trustedUEs or maliciousIds length greater than maximum value • SUCCESS • GENERIC_FAILURE • INVALID_ARGUMENTS |
|----|--------------|--|

6.5.1.12 using telux::cv2x::UpdateSrcL2InfoCallback = typedef std::function<void (telux::common::ErrorCode error)>

This function is called with the response to updateSrcL2Info.

Parameters

| | | |
|----|--------------|---|
| in | <i>error</i> | - SUCCESS if Tx reservation change succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |
|----|--------------|---|

6.5.1.13 using telux::cv2x::CreateTcpSocketCallback = typedef std::function<void (std::shared_ptr<ICv2xTxRxSocket> sock, telux::common::ErrorCode error)>

This function is called with the response to createCv2xTcpSocket.

Parameters

| | | |
|----|--------------|--|
| in | <i>sock</i> | - TCP socket |
| in | <i>error</i> | - Indicates whether TCP socket creation succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.14 using telux::cv2x::CloseTcpSocketCallback = typedef std::function<void (std::shared_ptr<ICv2xTxRxSocket> sock, telux::common::ErrorCode error)>

This function is called with the response to closeCv2xTcpSocket.

Parameters

| | | |
|----|--------------|--|
| in | <i>sock</i> | - Closed TCP socket |
| in | <i>error</i> | - Indicates whether close operation succeeded <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |

6.5.1.15 using telux::cv2x::StartCv2xCallback = typedef std::function<void (telux::common::ErrorCode error)>

This function is called as a response to startCv2x

Parameters

| | | |
|----|--------------|--|
| in | <i>error</i> | - SUCCESS if Cv2x mode successfully started <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |
|----|--------------|--|

6.5.1.16 using telux::cv2x::StopCv2xCallback = typedef std::function<void (telux::common::ErrorCode error)>

This function is called as a response to stopCv2x

Parameters

| | | |
|----|--------------|--|
| in | <i>error</i> | - SUCCESS if Cv2x mode successfully stopped <ul style="list-style-type: none"> • SUCCESS • GENERIC_FAILURE |
|----|--------------|--|

6.5.1.17 using telux::cv2x::RequestCv2xStatusCallback = typedef std::function<void (Cv2xStatus status, telux::common::ErrorCode error)>

This function is called as a response to requestCv2xStatus

Parameters

| | | |
|----|---------------|---|
| in | <i>status</i> | - Cv2x status |
| in | <i>error</i> | - SUCCESS if Cv2x status was successfully retrieved • SUCCESS • GENERIC_FAILURE |

Deprecated use RequestCv2xStatusCallbackEx

6.5.1.18 using telux::cv2x::RequestCv2xStatusCallbackEx = typedef std::function<void (Cv2xStatusEx status, telux::common::ErrorCode error)>

This function is called as a response to requestCv2xStatus

Parameters

| | | |
|----|---------------|---|
| in | <i>status</i> | - Cv2x status |
| in | <i>error</i> | - SUCCESS if Cv2x status was successfully retrieved • SUCCESS • GENERIC_FAILURE |

6.5.1.19 using telux::cv2x::UpdateConfigurationCallback = typedef std::function<void (telux::common::ErrorCode error)>

This function is called with the response to updateConfiguration

Parameters

| | | |
|----|--------------|---|
| in | <i>error</i> | - SUCCESS if configuration was updated successfully • SUCCESS • GENERIC_FAILURE |
|----|--------------|---|

6.6 telux::data Namespace Reference**Namespaces**

- [net](#)

Data Structures

- struct [BitRateInfo](#)
- struct [DataCallEndReason](#)
- union [DataCallEndReason.__unnamed__](#)

- struct [DataCallStats](#)
- class [DataFactory](#)

DataFactory is the central factory to create all data classes. [More...](#)
- class [DataProfile](#)

DataProfile class represents single data profile on the modem. [More...](#)
- struct [DataRestrictMode](#)
- struct [EspInfo](#)
- struct [FlowDataRate](#)
- struct [IcmpInfo](#)
- class [IDataCall](#)

Represents single established data call on the device. [More...](#)
- class [IDataConnectionListener](#)
- class [IDataConnectionManager](#)

IDataConnectionManager is a primary interface for cellular connectivity This interface provides APIs for start and stop data call connections, get data call information and listener for monitoring data calls. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready. [More...](#)
- class [IDataCreateProfileCallback](#)
- class [IDataFilterListener](#)

Listener class for listening to filtering mode notifications, like Data filtering mode change. Client need to implement these methods. The methods in listener can be invoked from multiple threads. So the client needs to make sure that the implementation is thread-safe. [More...](#)
- class [IDataFilterManager](#)

IDataFilterManager class provides interface to enable/disable the data restrict filters and register for data restrict filter. The filtering can be done at any time. One such use case is to do it when we want the AP to suspend so that we are not waking up the AP due to spurious incoming messages. Also to make sure the DataRestrict mode is enabled. [More...](#)
- class [IDataProfileCallback](#)
- class [IDataProfileListCallback](#)

Interface for getting list of [DataProfile](#) using callback. Client needs to implement this interface to get single shot responses for commands like get profile list and query profile. [More...](#)
- class [IDataProfileListener](#)

Listener class for getting profile change notification. [More...](#)
- class [IDataProfileManager](#)
- class [IEspFilter](#)

This class represents a IP Filter for the ESP, get the new instance from [telux::data::DataFactory](#). [More...](#)
- class [IicmpFilter](#)

This class represents a IP Filter for the ICMP, get the new instance from [telux::data::DataFactory](#). [More...](#)

- class [IipFilter](#)

A IP filter class to add specific filters like what data will be allowed from the modem to the application processor. Only data packets that match the filter will be sent to the apps processor. Also used to configure Firewall rules. [More...](#)
- struct [IpAddrInfo](#)
- struct [IpFamilyInfo](#)
- struct [IPv4Info](#)
- struct [IPv6Info](#)
- class [IServingSystemListener](#)

Listener class for data serving system change notification. [More...](#)
- class [IServingSystemManager](#)

Serving System Manager class provides APIs related to the serving system for data functionality. For example, ability to query or be notified about the state of the platform's WWAN PS data serving information. [More...](#)
- class [ITcpFilter](#)

This class represents a IP Filter for the TCP, get the new instance from [telux::data::DataFactory](#). [More...](#)
- class [IUdpFilter](#)

This class represents a IP Filter for the UDP, get the new instance from [telux::data::DataFactory](#). [More...](#)
- struct [PortInfo](#)
- struct [ProfileParams](#)
- struct [QosFilterRule](#)
- struct [QosIPFlowInfo](#)
- struct [RoamingStatus](#)

Roaming Status. [More...](#)
- struct [ServiceStatus](#)

Data Service Status Info. [More...](#)
- struct [TcpInfo](#)
- struct [TftChangeInfo](#)
- struct [TrafficFlowTemplate](#)
- struct [UdpInfo](#)
- struct [VlanConfig](#)

6.7 telux::data::net Namespace Reference

Data Structures

- struct [BridgeInfo](#)
- class [IBridgeListener](#)
- class [IBridgeManager](#)

IBridgeManager provides APIs to enable/disable and set/get/delete software bridges for various WLAN and Ethernet interfaces. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready. [More...](#)
- class [IFirewallEntry](#)

Firewall entry class is used for configuring firewall rules. [More...](#)
- class [IFirewallListener](#)
- class [IFirewallManager](#)

FirewallManager is a primary interface that filters and controls the network traffic on a pre-configured set of rules. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready. [More...](#)
- class [IL2tpListener](#)
- class [IL2tpManager](#)

L2tpManager is a primary interface for configuring L2TP Service. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready. [More...](#)
- class [INatListener](#)
- class [INatManager](#)

NatManager is a primary interface for configuring static network address translation(SNAT) and DMZ (demilitarized zone). It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready. [More...](#)
- class [ISocksListener](#)
- class [ISocksManager](#)

SocksManager is a primary interface for configuring legacy Socks proxy server. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready. [More...](#)
- class [IVlanListener](#)
- class [IVlanManager](#)

VlanManager is a primary interface for configuring VLAN (Virtual Local Area Network). it provide APIs for create, query, remove VLAN interfaces and associate or disassociate with profile IDs. It also provides interface to Subsystem Restart events by registering as listener. Notifications will be received when modem is ready/not ready. [More...](#)
- struct [L2tpSessionConfig](#)
- struct [L2tpSysConfig](#)
- struct [L2tpTunnelConfig](#)
- struct [NatConfig](#)

6.8 telux::loc Namespace Reference

Data Structures

- struct [BodyToSensorMountParams](#)
- struct [DREngineConfiguration](#)
- struct [GlonassTimeInfo](#)
- struct [GnssData](#)
- struct [GnssEnergyConsumedInfo](#)
- struct [GnssKinematicsData](#)
- struct [GnssMeasurementInfo](#)
- struct [GnssMeasurements](#)
- struct [GnssMeasurementsClock](#)
- struct [GnssMeasurementsData](#)
- class [IDgnssManager](#)

IRtcManager provides interface to inject RTCM data into modem, register event listener reported by cdfw(correction data framework). [More...](#)
- class [IDgnssStatusListener](#)

Listener class for getting RTCM injection event notification information. [More...](#)
- class [IGnssSignalInfo](#)

IGnssSignalInfo provides interface to retrieve GNSS data information like jammer metrics and automatic gain control for satellite signal type. [More...](#)
- class [IGnssSVInfo](#)

IGnssSVInfo provides interface to retrieve the list of SV info available and whether altitude is assumed or calculated. [More...](#)
- class [ILocationConfigurator](#)

ILocationConfigurator allows for the enablement/disablement of the APIs such as CTunc, PACE, deleteAllAidingData, configureLeverArm, configureConstellations, configureRobustLocation, configureMinGpsWeek, requestMinGpsWeek, deleteAidingData, configureMinSVElevation, requestMinSVElevation, requestRobustLocation, configureSecondaryBand, requestSecondaryBandConfig, configureDR. ILocationConfigurator APIs strictly adheres to the principle of single client per process. ILocationConfigurator APIs follow the non persistence scheme, meaning when the processor crashes/reboots the settings need to be set again via the respective APIs. [More...](#)
- class [ILocationInfoBase](#)

ILocationInfoBase provides interface to get basic position related information like latitude, longitude, altitude, timestamp. [More...](#)
- class [ILocationInfoEx](#)

ILocationInfoEx provides interface to get richer position related information like latitude, longitude, altitude and other information like time stamp, session status, dop, reliabilities, uncertainties etc. [More...](#)
- class [ILocationListener](#)

Listener class for getting location updates and satellite vehicle information. [More...](#)

- class [ILocationManager](#)

[ILocationManager](#) provides interface to register and remove listeners. It also allows to set and get configuration/ criteria for position reports. The new APIs([registerListenerEx](#), [deRegisterListenerEx](#), [startDetailedReports](#), [startBasicReports](#)) and old/deprecated APIs([registerListener](#), [removeListener](#), [setPositionReportTimeout](#), [setHorizontalAccuracyLevel](#), [setMinIntervalForReports](#)) should not be used interchangeably, either the new APIs should be used or the old APIs should be used. [More...](#)

- class [ILocationSystemInfoListener](#)

- class [ISVInfo](#)

[ISVInfo](#) provides interface to retrieve information about Satellite Vehicles, their position and health status. [More...](#)

- struct [LeapSecondChangeInfo](#)

- struct [LeapSecondInfo](#)

- struct [LeverArmParams](#)

- struct [LLAInfo](#)

- class [LocationFactory](#)

[LocationFactory](#) allows creation of location manager. [More...](#)

- struct [LocationSystemInfo](#)

- struct [RobustLocationConfiguration](#)

- struct [RobustLocationVersion](#)

- struct [SvBlackListInfo](#)

- struct [SvUsedInPosition](#)

- struct [SystemTime](#)

- union [SystemTimeInfo](#)

- struct [TimeInfo](#)

6.9 telux::platform Namespace Reference

Data Structures

- struct [EfsEventInfo](#)

- class [IFsListener](#)

Listener class for getting notifications related to EFS backup/restore operations. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe. [More...](#)

- class [IFsManager](#)

[IFsManager](#) provides interface to to control and get notified about file system operations. This includes Embedded file system (EFS) operations. [More...](#)

- class [PlatformFactory](#)

PlatformFactory allows creation of Platform services related classes. [More...](#)

6.10 telux::power Namespace Reference

Data Structures

- class [ITcuActivityListener](#)

Listener class for getting notifications related to TCU-activity state and also the updates related to TCU-activity service status. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe. [More...](#)

- class [ITcuActivityManager](#)

ITcuActivityManager provides interface to register and de-register listeners to get TCU-activity state updates. And also API to initiate TCU-activity state transition. The system can be configured to be operated in ACTIVE or PASSIVE mode with respect to TcuActivity management. In ACTIVE mode, the TCU-activity management service leads the system into desired activity state after receiving the acknowledgements from all the clients or after the configured timeout. In PASSIVE mode, the management service just notifies the clients about the state transition and conveys their acknowledgement status back to the Master application that triggered the state transition. [More...](#)

- class [PowerFactory](#)

PowerFactory allows creation of TCU-activity manager instance. [More...](#)

6.11 telux::sensor Namespace Reference

Data Structures

- class [ISensor](#)

ISensor interface is used to access the different services provided by the sensor to configure, activate and get sensor data. [More...](#)

- class [ISensorEventListener](#)

This file hosts the sensor interfaces to configure, activate or get data from the individual sensors available - Gyroscope, Accelerometer, etc. [More...](#)

- class [ISensorFeatureEventListener](#)

ISensorFeatureEventListener interface is used to receive notifications related to sensor feature events. [More...](#)

- class [ISensorFeatureManager](#)

Sensor Feature Manager class provides APIs to interact with the sensor framework to list the available features, enable them or disable them. The availability of sensor features depends on the capabilities of the underlying hardware. [More...](#)

- class [ISensorManager](#)

Sensor Manager class provides APIs to interact with the sensor sub-system and get access to other sensor objects which can be used to configure, activate or get data from the individual sensors available - Gyro,

Accelerero, etc. [More...](#)

- struct [MotionSensorData](#)

Structure of a single sample from a motion sensor. [More...](#)

- struct [SensorConfiguration](#)

Configurable parameters of a sensor. [More...](#)

- struct [SensorEvent](#)

Structure of a single sensor event. [More...](#)

- union [SensorEvent.__unnamed__](#)

- class [SensorFactory](#)

[SensorFactory](#) is the central factory to create instances of sensor objects. [More...](#)

- struct [SensorFeature](#)

Feature offered by sensor hardware and/or software framework. [More...](#)

- struct [SensorFeatureEvent](#)

Structure of an event that is generated from a sensor feature. [More...](#)

- struct [SensorInfo](#)

Information related to sensor. [More...](#)

- struct [UncalibratedMotionSensorData](#)

Structure of a single sample from uncalibrated motion sensor. [More...](#)

6.12 telux::tel Namespace Reference

Data Structures

- struct [CardReaderStatus](#)

- class [CdmaCellIdentity](#)

- class [CdmaCellInfo](#)

- class [CdmaSignalStrengthInfo](#)

- struct [CellBroadcastFilter](#)

- class [CellBroadcastMessage](#)

Cell Broadcast message. [More...](#)

- class [CellInfo](#)

- struct [CellularCapabilityInfo](#)

- class [Circle](#)

- class [CmasInfo](#)

- struct [CustomHeader](#)

- struct [DcStatus](#)
- struct [ECallHlapTimerEvents](#)
- struct [ECallHlapTimerStatus](#)
- struct [ECallModeInfo](#)
- struct [ECallMsdcControlBits](#)
- struct [ECallMsdcData](#)
- struct [ECallMsdcOptionals](#)
- struct [ECallOptionalPdu](#)
- struct [ECallVehicleIdentificationNumber](#)
- struct [ECallVehicleLocation](#)
- struct [ECallVehicleLocationDelta](#)
- struct [ECallVehiclePropulsionStorageType](#)
- class [EtwInfo](#)
- class [Geometry](#)
- class [GsmCellIdentity](#)
- class [GsmCellInfo](#)
- class [GsmSignalStrengthInfo](#)
- class [IAttrResponseCallback](#)
- class [ICall](#)

ICall represents a call in progress. An *ICall* cannot be directly created by the client, rather it is returned as a result of instantiating a call or from the *PhoneListener* when receiving an incoming call. [More...](#)

- class [ICallListener](#)

A listener class for monitoring changes in call, including call state change and ECall state change. Override the methods for the state that you wish to receive updates for. [More...](#)

- class [ICallManager](#)

Call Manager is the primary interface for call related operations Allows to conference calls, swap calls, make normal voice call and emergency call, send and update MSD pdu. [More...](#)

- class [ICard](#)

ICard represents currently inserted UICC or eUICC. [More...](#)

- class [ICardApp](#)

Represents a single card application. [More...](#)

- class [ICardChannelCallback](#)
- class [ICardCommandCallback](#)
- class [ICardListener](#)
- class [ICardManager](#)

- class [ICardReaderCallback](#)
- struct [IccResult](#)
- class [ICellBroadcastListener](#)

A listener class which monitors cell broadcast messages. [More...](#)
- class [ICellBroadcastManager](#)

CellBroadcastManager class is primary interface to configure and activate emergency broadcast messages and receive broadcast messages. [More...](#)
- class [ICellularCapabilityCallback](#)
- class [IHttpTransactionListener](#)

The interface listens for indication to perform HTTP request and send back the response for HTTP request to modem. [More...](#)
- class [IHttpTransactionManager](#)

IHttpTransactionManager is the interface to service HTTP related requests from the modem for SIM profile update related operations. [More...](#)
- class [IimsServingSystemListener](#)

A listener class for monitoring changes in IMS Serving System manager, including IMS registration status change. Override the methods for the state that you wish to receive updates for.
- class [IimsServingSystemManager](#)

IMS Serving System Manager is the primary interface for IMS related operations Allows to query IMS registration status.
- class [IimsSettingsListener](#)

Listener class for getting IMS service configuration change notifications. The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe. [More...](#)
- class [IimsSettingsManager](#)

ImsSettingsManager allows IMS settings. For example enabling or disabling IMS service, VOIMS service. [More...](#)
- class [IMakeCallCallback](#)

Interface for Make Call callback object. Client needs to implement this interface to get single shot responses for commands like make call. [More...](#)
- struct [ImsRegistrationInfo](#)
- struct [ImsServiceConfig](#)
- class [IMultiSimListener](#)

Listener class for getting high capability change notification. The listener method can be invoked from multiple different threads. Client needs to make sure that implementation is thread-safe. [More...](#)
- class [IMultiSimManager](#)

MultiSimManager allows to perform operation pertaining to devices which have more than one SIM/UICC card. Clients should check if the subsystem is ready before invoking any of the APIs as follows. [More...](#)

- class [INetworkSelectionListener](#)

Listener class for getting network selection mode change notification. [More...](#)
- class [INetworkSelectionManager](#)

Network Selection Manager class provides the interface to get and set network selection mode, preferred network list and scan available networks. [More...](#)
- class [IOperatingModeCallback](#)
- class [IPhone](#)

This class allows getting system information and registering for system events. Each Phone instance is associated with a single SIM. So on a dual SIM device you would have 2 Phone instances. [More...](#)
- class [IPhoneListener](#)

A listener class for monitoring changes in specific telephony states on the device, including service state and signal strength. Override the methods for the state that you wish to receive updates for. [More...](#)
- class [IPhoneManager](#)

Phone Manager creates one or more phones based on SIM slot count, it allows clients to register for notification of system events. Clients should check if the subsystem is ready before invoking any of the APIs. [More...](#)
- class [IRemoteSimListener](#)

A listener class for getting remote SIM notifications. [More...](#)
- class [IRemoteSimManager](#)

[IRemoteSimManager](#) provides APIs for remote SIM related operations. This allows a device to use a SIM card on another device for its WWAN modem functionality. The SIM provider service is the endpoint that interfaces with the SIM card (e.g. over bluetooth) and sends/receives data to the other endpoint, the modem. The modem sends requests to the SIM provider service to interact with the SIM card (e.g. power up, transmit APDU, etc.), and is notified of events (e.g. card errors, resets, etc.). This API is used by the SIM provider endpoint to provide a SIM card to the modem. [More...](#)
- class [ISapCardCommandCallback](#)
- class [ISapCardListener](#)
- class [ISapCardManager](#)

[ISapCardManager](#) provide APIs for SAP related operations. [More...](#)
- class [IServingSystemListener](#)

Listener class for getting radio access technology mode preference change notification. [More...](#)
- class [IServingSystemManager](#)

Serving System Manager class provides the API to request and set service domain preference and RAT preference. [More...](#)
- class [ISignalStrengthCallback](#)

Interface for Signal strength callback object. Client needs to implement this interface to get single shot responses for commands like get signal strength. [More...](#)
- class [ISimProfileListener](#)

The interface listens for profile download indication and keep track of download and install progress of

profile. [More...](#)

- class [ISimProfileManager](#)

[ISimProfileManager](#) is a primary interface for remote eUICCs (eSIMs or embedded SIMs) provisioning. This interface provides APIs to add, delete, set profile, update nickname, provide user consent, get Eid on the eUICC. [More...](#)

- class [ISmsAddressCallback](#)

- class [ISmsListener](#)

A listener class for monitoring incoming SMS and notify subsystem status changes. Override the methods for the state that you wish to receive updates for. [More...](#)

- class [ISmsManager](#)

SMS Manager class is the primary interface to send and receive SMS messages. It allows to send an SMS in several formats and sizes. [More...](#)

- class [ISubscription](#)

Subscription returns information about network operator subscription details pertaining to a SIM card. [More...](#)

- class [ISubscriptionListener](#)

A listener class for receiving device subscription information. The methods in listener can be invoked from multiple different threads. The implementation should be thread safe. [More...](#)

- class [ISubscriptionManager](#)

- class [IVoiceServiceStateCallback](#)

Interface for voice service state callback object. Client needs to implement this interface to get single shot responses for commands like request voice radio technology. [More...](#)

- class [LteCellIdentity](#)

- class [LteCellInfo](#)

- class [LteSignalStrengthInfo](#)

- struct [MessageAttributes](#)

Contains structure of message attributes like encoding type, number of segments, characters left in last segment. [More...](#)

- struct [NetworkScanInfo](#)

- class [Nr5gCellIdentity](#)

- class [Nr5gCellInfo](#)

- class [Nr5gSignalStrengthInfo](#)

- class [OperatorInfo](#)

- struct [OperatorStatus](#)

- class [PhoneFactory](#)

[PhoneFactory](#) is the central factory to create all Telephony SDK Classes and services. [More...](#)

- struct [Point](#)

- class [Polygon](#)
- struct [PreferredNetworkInfo](#)
- class [SignalStrength](#)
- class [SimProfile](#)
 - SimProfile class represents single eUICC profile on the card. [More...](#)*
- struct [SimRatCapability](#)
- struct [SlotStatus](#)
- class [SmsMessage](#)
 - A Short Message Service message. [More...](#)*
- class [TdsdmaCellIdentity](#)
- class [TdsdmaCellInfo](#)
- class [TdsdmaSignalStrengthInfo](#)
- class [VoiceServiceInfo](#)
- class [WarningAreaInfo](#)
- class [WcdmaCellIdentity](#)
- class [WcdmaCellInfo](#)
- class [WcdmaSignalStrengthInfo](#)

6.12.1 Data Structure Documentation

6.12.1.1 struct telux::tel::ImsRegistrationInfo

Defines the IMS registration status parameters and the error code value

Data fields

| Type | Field | Description |
|--|--------------|--|
| Registration↔ Status | imsRegStatus | The status of the IMS registration with the network |
| int | errorCode | An error code is returned when the IMS registration status is RegistrationStatus::NOT_REGISTERED . Values(Defined in SIP-RFC3261 section 13.2.2.2 and section 13.2.2.3): <ul style="list-style-type: none"> • 3xx – Redirection responses • 4xx – Client failure responses • 5xx – Server failure responses • 6xx – Global failure responses |
| string | errorString | Registration failure error string when the IMS is not registered. |

6.12.2 Typedef Documentation

6.12.2.1 using `telux::tel::ImsRegistrationInfoCb = typedef std::function<void(ImsRegistrationInfo status, telux::common::ErrorCode error)>`

This function is called in the response to requestRegistrationInfo API.

The callback can be invoked from multiple different threads. The implementation should be thread safe.

Parameters

| | | |
|----|---------------|---|
| in | <i>status</i> | Indicates the IMS registration status and the error code telux::tel::ImsRegistrationInfo . |
| in | <i>error</i> | Return code which indicates whether the operation succeeded or not telux::common::ErrorCode . |

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

6.12.2.2 using `telux::tel::RatMask = typedef std::bitset<16>`

16 bit mask that denotes which of the radio access technologies defined in RatType enum are used for preferred networks.

6.12.2.3 using `telux::tel::SelectionModeResponseCallback = typedef std::function<void(NetworkSelectionMode mode, telux::common::ErrorCode error)>`

This function is called with the response to requestNetworkSelectionMode API.

The callback can be invoked from multiple different threads. The implementation should be thread safe.

Parameters

| | | |
|----|--------------|--|
| in | <i>mode</i> | NetworkSelectionMode |
| in | <i>error</i> | Return code which indicates whether the operation succeeded or not ErrorCode |

6.12.2.4 using `telux::tel::PreferredNetworksCallback = typedef std::function<void(std::vector<PreferredNetworkInfo> info, std::vector<PreferredNetworkInfo> staticInfo, telux::common::ErrorCode error)>`

This function is called with the response to requestPreferredNetworks API.

The callback can be invoked from multiple different threads. The implementation should be thread safe.

Parameters

| | | |
|----|-------------------|---|
| in | <i>info</i> | 3GPP preferred networks list i.e PLMN list. |
| in | <i>staticInfo</i> | Static 3GPP preferred networks list i.e OPLMN list. |
| in | <i>error</i> | Return code which indicates whether the operation succeeded or not. ErrorCode |

6.12.2.5 using telux::tel::NetworkScanCallback = typedef std::function<void(std↵ ::vector<OperatorInfo> operatorInfos, telux::common::ErrorCode error)>

This function is called with the response to performNetworkScan API.

The callback can be invoked from multiple different threads. The implementation should be thread safe.

Parameters

| | | |
|----|----------------------|---|
| in | <i>operatorInfos</i> | Operators info with details of network operator name, MCC, MNC and status. |
| in | <i>error</i> | Return code which indicates whether the operation succeeded or not. ErrorCode |

6.12.3 Enumeration Type Documentation

6.12.3.1 enum telux::tel::RegistrationStatus [strong]

Defines the IMS registration status parameters

Enumerator

UNKOWN_STATE Unknown status for IMS
NOT_REGISTERED Not registered status for IMS
REGISTERING Registering status for IMS
REGISTERED Registered status for IMS
LIMITED_REGISTERED Limited registration status for IMS

6.13 telux::therm Namespace Reference

Data Structures

- struct [BoundCoolingDevice](#)
- class [ICoolingDevice](#)

ICoolingDevice provides interface to get type of the cooling device, the maximum throttle state and the currently requested throttle state of the cooling device. [More...](#)
- class [IThermalManager](#)

IThermalManager provides interface to get thermal zone and cooling device information. [More...](#)
- class [IThermalShutdownListener](#)

Listener class for getting notifications when automatic thermal shutdown mode is enabled/ disabled or will be enabled imminently. The client needs to implement these methods as briefly as possible and avoid blocking calls in it. The methods in this class can be invoked from multiple different threads. Client needs to make sure that the implementation is thread-safe. [More...](#)

- class [IThermalShutdownManager](#)

[IThermalShutdownManager](#) class provides interface to enable/disable automatic thermal shutdown. Additionally it facilitates to register for notifications when the automatic shutdown mode changes. [More...](#)

- class [IThermalZone](#)

[IThermalZone](#) provides interface to get type of the sensor, the current temperature reading, trip points and the cooling devices binded etc. [More...](#)

- class [ITripPoint](#)

[ITripPoint](#) provides interface to get trip point type, trip point temperature and hysteresis value for that trip point. [More...](#)

- class [ThermalFactory](#)

[ThermalFactory](#) allows creation of thermal manager. [More...](#)

7 Data Structure Documentation

7.1 telux::cv2x::ICv2xListener Class Reference

Cv2x Radio Manager listeners implement this interface.

Public member functions

- virtual void [onStatusChanged](#) (Cv2xStatus status)
- virtual void [onStatusChanged](#) (Cv2xStatusEx status)
- virtual [~ICv2xListener](#) ()

Cv2x Radio Manager listeners implement this interface.

7.1.1 Constructors and Destructors

7.1.1.1 virtual telux::cv2x::ICv2xListener::~~ICv2xListener () [virtual]

Destructor for [ICv2xListener](#)

7.1.2 Member Function Documentation

7.1.2.1 virtual void telux::cv2x::ICv2xListener::onStatusChanged (Cv2xStatus *status*) [virtual]

Called when the status of the CV2X radio has changed.

Parameters

| | | |
|----|---------------|----------------------|
| in | <i>status</i> | - CV2X radio status. |
|----|---------------|----------------------|

Deprecated use [onStatusChanged\(Cv2xStatusEx status\)](#)

7.1.2.2 virtual void telux::cv2x::ICv2xListener::onStatusChanged (Cv2xStatusEx *status*) [virtual]

Called when the status of the CV2X radio has changed.

Parameters

| | | |
|----|---------------|----------------------|
| in | <i>status</i> | - CV2X radio status. |
|----|---------------|----------------------|

7.2 telux::tel::IImServingSystemListener Class Reference

A listener class for monitoring changes in IMS Serving System manager, including IMS registration status change. Override the methods for the state that you wish to receive updates for.

Public member functions

- virtual void [onServiceStatusChange](#) ([telux::common::ServiceStatus](#) status)
- virtual void [onImSRegStatusChange](#) ([ImSRegistrationInfo](#) status)
- virtual [~IImServingSystemListener](#) ()

A listener class for monitoring changes in IMS Serving System manager, including IMS registration status change. Override the methods for the state that you wish to receive updates for.

The methods in listener can be invoked from multiple different threads. The implementation should be thread safe.

7.2.1 Constructors and Destructors

7.2.1.1 virtual telux::tel::IImServingSystemListener::~~IImServingSystemListener () [virtual]

7.2.2 Member Function Documentation

7.2.2.1 virtual void telux::tel::IImServingSystemListener::onServiceStatusChange ([telux::common::ServiceStatus](#) *status*) [virtual]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|--|
| in | <i>status</i> | - telux::common::ServiceStatus |
|----|---------------|--|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

Reimplemented from [telux::common::IServiceStatusListener](#).

7.2.2.2 virtual void telux::tel::ImsServingSystemListener::onImsRegStatusChange (ImsRegistrationInfo status) [virtual]

This function is called whenever any IMS service configuration is changed.

Parameters

| | | |
|----|---------------|--|
| in | <i>status</i> | Indicates which registration status is the IMS service changed to. telux::tel::ImsRegistrationInfo . |
|----|---------------|--|

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

7.3 telux::tel::ImsServingSystemManager Class Reference

IMS Serving System Manager is the primary interface for IMS related operations Allows to query IMS registration status.

Public member functions

- virtual [telux::common::ServiceStatus](#) getServiceStatus ()=0
- virtual [telux::common::Status](#) requestRegistrationInfo (ImsRegistrationInfoCb callback)=0
- virtual [telux::common::Status](#) registerListener (std::weak_ptr< [telux::tel::ImsServingSystemListener](#) > listener)=0
- virtual [telux::common::Status](#) deregisterListener (std::weak_ptr< [telux::tel::ImsServingSystemListener](#) > listener)=0
- virtual [~ImsServingSystemManager](#) ()

IMS Serving System Manager is the primary interface for IMS related operations Allows to query IMS registration status.

7.3.1 Constructors and Destructors

7.3.1.1 virtual telux::tel::ImsServingSystemManager::~~ImsServingSystemManager () [virtual]

7.3.2 Member Function Documentation

7.3.2.1 virtual telux::common::ServiceStatus telux::tel::IImServingSystemManager↔ ::getServiceStatus () [pure virtual]

This status indicates whether the [IImServingSystemManager](#) object is in a usable state.

Returns

SERVICE_AVAILABLE - If IMS Serving System manager is ready for service.

SERVICE_UNAVAILABLE - If IMS Serving System manager is temporarily unavailable.

SERVICE_FAILED - If IMS Serving System manager encountered an irrecoverable failure.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

7.3.2.2 virtual telux::common::Status telux::tel::IImServingSystemManager↔ ::requestRegistrationInfo (ImsRegistrationInfoCb *callback*) [pure virtual]

Request IMS registration information.

Parameters

| | | |
|----|-----------------|--|
| in | <i>callback</i> | Callback pointer to get the response of requestRegistrationInfo. |
|----|-----------------|--|

Returns

Status of requestRegistrationInfo i.e. success or suitable status code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

7.3.2.3 virtual telux::common::Status telux::tel::IImServingSystemManager↔ ::registerListener (std::weak_ptr< telux::tel::IImServingSystemListener > *listener*) [pure virtual]

Add a listener to listen for specific events in the IMS Serving System subsystem.

Parameters

| | | |
|----|-----------------|--|
| in | <i>listener</i> | Pointer to IImServingSystemListener object that processes the notification |
|----|-----------------|--|

Returns

Status of registerListener i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

**7.3.2.4 virtual telux::common::Status telux::tel::IImServingSystemManager↔
::deregisterListener (std::weak_ptr< telux::tel::IImServingSystemListener >
listener) [pure virtual]**

Remove a previously added listener.

Parameters

| | | |
|----|-----------------|-------------------------|
| in | <i>listener</i> | Listener to be removed. |
|----|-----------------|-------------------------|

Returns

Status of deregisterListener i.e. success or suitable error code.

Note

Eval: This is a new API and is being evaluated. It is subject to change and could break backwards compatibility.

7.4 telux::common::IServiceStatusListener Class Reference

Public member functions

- virtual void [onServiceStatusChange](#) ([ServiceStatus](#) status)
- virtual [~IServiceStatusListener](#) ()

7.4.1 Constructors and Destructors

**7.4.1.1 virtual telux::common::IServiceStatusListener::~~IServiceStatusListener ()
[virtual]**

7.4.2 Member Function Documentation

7.4.2.1 virtual void telux::common::IServiceStatusListener::onServiceStatusChange ([ServiceStatus](#) status) [virtual]

This function is called when service status changes.

Parameters

| | | |
|----|---------------|---------------------------------|
| in | <i>status</i> | - ServiceStatus |
|----|---------------|---------------------------------|

Reimplemented in [telux::tel::IImServingSystemListener](#).